Parts Catalogue

Part No. RTC9840CC April 1987





Land Rover
Series IIA
Bonneted Control Models



Parts Catalogue

Part No RTC9840CC

April 1987

Whilst every effort is made to ensure the accuracy of the particulars contained in this Catalogue, modifications and vehicle specification changes may affect the information specified. No responsibility is accepted for the incorrect supply of parts or any other consequence that may arise as a result of information in this Catalogue not being in accord with modifications or vehicle specification changes which are subsequent to the date of this Catalogue. Also no responsibility is accepted for the incorrect supply of parts or any other consequence that may arise as a result of any misinterpretation of the information specified in this Catalogue.

C LAND ROVER UK LTD 1987

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from Land Rover Parts Ltd.

Land Rover Series IIA Bonneted Control Models



GROUP A

Tachometer

Rev-counter

Body parts, brake parts, chassis parts, electrical equipment, instruments, motor and clutch parts, rear axle and transmission parts, steering parts, tools and accessories, transmission parts and tyres.

-			
USA	ENGLISH	USA	ENGL I SH
Body parts		Motor and clutch parts -	
Bumper guard	Overrider	Carburetor	Carburetter
Cowl	Scuttle	Clutch throwout bearing	Clutch release bearing
Dashboard	Facia panel	Cylinder crankcase	Cylinder block
Door post	Door pillar	Hose clamp	Hose clip
Door stop	Check strap	Pan	Sump
Door vent	Quarter light	Piston or wrist pin	Gudgeon pin
Fander	Wing	, , , , , , , , , , , , , , , , , , ,	, , , , , , , , , , , , , , , , , , ,
Firewail	Bulkhead	Rear axle and transmission	on parts
Hood	Bonnet	Axle shaft	Half shaft
License plate	Number plate	Orive shaft	Propeller shaft
Rear seat back or	Rear seat squab	Grease fitting	Grease nipple
backrest		Ring gear and pinion	Crown wheel and pinion
Rocker panel	Valance		•
Skirt	Apron	Steering parts	
Tailgate	Tailboard	Control arm	Wishbone
Toe p an	Toe board	King pin	Swivel pin
Тор	Hood	Pitman arm	Drop arm
Trunk	Boot	Steering idler	Steering relay
Windshield	Windscreen	Steering knuckle	Stub axle
Wheelhouse or	Whee!arch	Steering post	Steering column
housing		Tie bar or track bar	Track rod
Brake parts		Tools and accessories	
Parking brake	Hand brake	Antenna	Aerial
Tarking brake	Hand Drake	Crank handle	Starting handle
Chassis parts		Wheel wrench	Wheel brace
Muffler	Exhaust silencer	Wrench	Spanner
Side rail	Side member	W GUCH	Spanner
Spring clamp	U-bolt	Transmission parts	Gearbox parts
op: mg cramp	0 0011	Auxiliary gearbox	Transfer box
Electrical equipmen	+	Counter shaft	Layshaft
Back up lamp	Reverse lamp	Gear shift lever	Gear lever
Dimmer switch	Dip switch	Output shaft	Main shaft
Dome lamp	Roof lamp	Parking lock	Parking brake
Gas pump or fuel	Petrol pump	Shift bar	Selector rod
pump	remot pump	Transmission casing	Gearbox housing
Generator	Dynamo	Transmission Casing	Gear box housing
Ignition set	Ignition harness	Tyres	
Parking lamp	Side lamp	Tire	Tyre
Rear lamp	Tail lamp	Tread	Track
Spark plug	Sparking plug		
Turn signal	Trafficator		
Voltage regulator	Control box		
lank			
Instruments			

LAND ROVER COMMENCING VEHICLE NUMBERS PETROL MODELS, 21 LITRE 4 CYLINDER SERIES 11A

Home, RH Stg Export, RH Stg Export, RH Stg,CKD Export, LH Stg Export, LH Stg,CKD)) 88)	24100001A 24200001A 24300001A 24400001A 24500001A	Home, RH Stg Export, RH Stg Export, RH Stg,CKD Export, LH Stg Export, LH Stg,CKD))) 109)	25100001A 25200001A 25300001A 25400001A 25500001A
Home, RH Stg Export, RH Stg Export, RH Stg, CKD Export, LH Stg Export, LH Stg, CKD) Wagon	31500001B* 31600001B* 31700001B* 31800001B*	Home, RH Stg Export, RH Stg Export, RH Stg, CKI Export, LH Stg Export, LH Stg, CKI) Wagon	26100001A 26200001A 26300001A 26400001A 26500001A

^{*} From March, 1965 onwards. Vehicle numbers prior to this date are the same as for 88

PETROL MODELS, 2.6 LITRE 6 CYLINDER SERIES 11A

Home, RH Stg)	34500001D	Home, RH Stg)		35000001D
Export, RH Stg)	34600001D	Export, RH Stg)		35100001D
Export, RH Stg,	CKD) 109	34700001D	Export, RH Stg,	CKD)	109	35200001D
Export, LH Stg)	34800001D	Export, LH Stg)	Station	353000010
Export, LH Stg,	CKD)	34900001D	Export, LH Stg,	CKD)	Wagon	35400001D

DIESEL MODELS 21 LITRE 4 CYLINDER SERIES-11A

Home, RH Stg) Export, RH Stg) Export, RH Stg, CKD) 88 Export, LH Stg) Export, LH Stg, CKD)	2710001A 2720001A 2730001A 2740001A 27500001A	Home, RH Stg) Export, RH Stg) Export, RH Stg, CKD) 109 Export, LH Stg) Export, LH Stg, CKD)	27600001A 27700001A 27800001A 27900001A 28000001A
Home, RH Stg) Export, RH Stg) Export, RH Stg, CKD) 88 Export, LH Stg) Sta Export, LH Stg, CKD) Wag		Home, RH Stg) Export, RH Stg) Export, RH Stg, CKD) 109 Export, LH Stg) Statio Export, LH Stg, CKD) Wagon	28100001A 28200001A 28300001A n 28400001A 28500001A

^{*} From March, 1965 onwards. Vehicle numbers prior to this date are the same as for 88

Some of the information in this Publication is based on illustration and script type of presentation and the remainder is part-numbered illustrations with no script.

As the list covers both Home and Export models, reference is made throughout to the 'left-hand' (LH) and 'right-hand' (RH) sides of the vehicle, rather than to 'near-side' and 'off-side'. The 'left-hand side' is that to the left hand when the vehicle is viewed from the rear, similarly, 'left-hand steering' (LH Stg) models are those having the driving controls on the left-hand side, again when the vehicle is viewed from the rear.

The part numbers quoted are common to all Land Rover models, unless otherwise stated, either against the part number or in the remarks section on the page or illustration, as applicable.

Script and illustrations

Assemblies are printed in capitals, and all the parts comprising that assembly are shown by indenting the alignment of the description column, the indentation reverting to the original alignment when the assembly is complete. The indentation is clearly shown by the numbers 1, 2, 3, 4 at the top of each page.

It will be seen that the 'ROCKER COVER, TOP, ASSEMBLY' 10 10, includes the 'tappet clearance plate' and 'drive screw fixing plate' (indentation 1), while the 'joint washer', by reverting to alignment with 'ROCKER', is excluded from the assembly.

In all cases where the entire assembly is required, quote only the assembly number.

Part - numbered illustrations

A new presentation of parts information is used for certain parts of this Publication. That is, part numbered illustrations with no description, this gives a quicker look-up time and obviates the need for Parts Catalogue translation.

Information about assemblies and the components which comprise an assembly together with part numbers of gasket sets etc. will be found at the bottom of the illustration.

Figures in brackets represent the quantity used per vehicle.

No longer serviced

The code 'NLS' against an existing part number denotes that this part is no longer serviced

GROUP A

OBSERVATIONS GENERALES

Pour une partie de ce catalogue nous utilisons des illustrations accompagnées d'un texte, tandis que le reste est constitué par des illustrations auxquelles les references ont été incorporées.

Vu que cette fiche est valable bien pour les véhicules destinés au marché intérieur que pour ceux prévus pour l'exportation, nous avons recours à la spécification gauche et droite, droite et gauche étant définis par rapport au vehicule, lorsque celui-ci est examiné de l'arrière.

Sauf avis contraire, toutes les références sont valables pour tous les modèles Land-Rover. Toute exception sera indiquée soit au bas de la page, soit sur la gravure même.

Texte et illustrations

Les ensembles sont imprimés en lettres majuscules et toutes les pièces comprises dans un ensemble sont indiquées en deplacant la désignation de ces pièces d'une colonne vers la droite par rapport à la position qu'occupe la désignation de l'ensemble. La désignation de la pièce suivante non comprise dans I'ensemble est ramenée a l'alignement des désignations et clairement montrée par les numéros 1, 2, 3 et 4 en haut de chaque page.

Far example, l'on remarquera que l'ensemble 'ROCKER COVER, TOP, ASSEMBLY' 10, lo, comprend la 'tappet clearance plate' et la 'drive screw fixing plate' (colone 2), tandis que le 'joint washer' est exclu de l'ensemble, la désignation de celle-ci étant ramenée à la colonne 1, en ligne avec 'ROCKER'.

Lorsqu'un ensemble complet est requis, il suffira d'indiquer le numéro de l'ensemble.

Illustrations numérotées

Certaines parties du catalogue sont présentées sous une nouvelle form. C'est-à-dire, les références sont incorporées aux illustrations sans en utiliser une désignation, ce qui permet de rechercher une pièce plus rapidement. Ainsi, aucune traduction du catalogue de pièces detachées s'imposera.

Tous les détails au sujet des ensembles et de leurs pièces constituantes sont donnés en bas de la page avec les références des pochettes de joints.

Les chiffres entre parenthèses indiquent la quantité requise par vehicule.

ALLGEMEINE ERKLAERUNGEN

Ein Teil dieses Kataloges ist in der bisherigen Aufmachung gehalten, d.h. die Abbildung auf der einen und der Text auf der gegenüberliegenden Seite, d.h. die Textseite fällt weg und die Ersatzteilnummern sind direkt in der Abbildung enthalten.

Das Transparent hat für Fahrzeuge für den Binnen- und Exportmarkt Geltung. Es wird deshalb stets auf die linke oder rechte Fahrzeugseite Bezug genommen. Unter der linken oder rechten Seite ist diejenige Seite zu verstehen, wenn das Fahrzeug von hinten her betrachtet wird. Bei einem linksgesteuerten Fahrzeug ist das Lenkrad demnach auf der linken Fahrzeugseite angeordnet, wenn dieses von hinten betrachtet wird.

Falls dies nicht anderweitig angegeben ist, haben alle aufgeführten Teilnummern für alle Land-Rover Modelle Geltung. Allfällige Abweichungen sind entweder am Fuss der Seite oder in der Abbildung selbst angegeben.

Text und Abbildung

Die Baugruppen sind in Grossbuchstaben gedruckt. Alle in der Baugruppe enthaltenen Teile sind eingerückt. Der Schluss der Baugruppe wird durch das Vorrücken an den Rand angegeben. Die Einrückung wird am oberen Seitenrand durch die Zahlen 1, 2, 3 und 4 angezeigt.

So umfasst die Baugruppe 'ROCKER COVER, TOP, ASSEMBLY' 10 10, die 'tappet clearance plate' und die 'drive screw' (eingerückt), während der 'joint washer' in der Baugruppe nicht eingeschlossen ist, und wieder an den Rand vorgerückt wird.

Wo die ganze Baugruppe benötigt wird, ist ausschliesslich die Teilnummer dieser Baugruppe aufzuführen.

Abbildungen mit Teilnummern

Ein gewisser Teil dieses Kataloges ist in der neuen Aufmachung dargestellt. Bei dieser Darstellung sind die Teilnummern in der Abbildung eingetragen. Auf eine Bezeichnung der abgebildeten Teile wird verzichtet, um ein rascheres Auffinden der Teile zu ermöglichen. Mit dieser Methode erübrigt sich auch das Uebersetzen der Ersatzteilliste.

Die entsprechenden Angaben über Baugruppen und die darin enthaltenen Teile sind jeweils mit den Teilnummern für Dichtungssätze, etc. am Fuss der Seite aufgeführt.

Die in Klammern aufgeführten Zahlen geben die pro Fahrzeug benötigte Anzahl an.

GROUP A

EXPLICACIONES GENERALES

Algunos de los datos en la presente son basados sobre la presentación tipo de ilustración y texto; por lo que se refiere al resto, esto consta de ilustraciones con número de pieza sin título.

Como la lista comprende modelos para la exportación y para el mercado británico, se refiere, en todas partes, al lado izquierdo (LH) y al lado derecho (RH) del vehículo, en vez de 'near side' (lado mas cercano al solado) y de 'off side' (lado mas lejos del solado). El lado izquierdo es el lado izquierdo visto desde la parte trasera del vehículo; igualmente, los modelos con volante a la izquierda, son los modelos que tienen el volante de dirección a la izquierda, visto también desde la parte trasera del vehículo.

Los Pieza Nos. citados son comunes para todos los modelos Land-Rover, salvo indicaciones contrarias, que están ubicados sea contra el Pieza No., sea en la sección de observaciones en la pagina o ilustración, según aplicable.

Títulos e ilustraciones

Los conjuntos están imprimidos en letras mayusculas y todas las piezas que comprenden dicho conjunto vienen indicadas sangrando (haciendo entrar) la alineación de la columna de descripción, volviendo el sangrado a la alineación primitiva cuando el conjunto está completo. El sangrado está indicado con claridad por los numeros 1, 2, 3, 4 en la parte superior de cada página.

Se vera que 'ROCKER COVER, TOP, ASSEMBLY' 10 10, (CONJUNTO DE TAPA DE BALANCIN SUPERIOR), incluye la 'placa de huelgo de taque' (tappet clearance plate) y 'drive screw fixing plate' (placa de sujecion de tornillo), mientras que la 'joint washer' (arandela de junta), volviendo a alinearse con el 'ROCKER' (BALANCIN), se excluye del conjunto.

En todos casos casos donde se requiere el conjunto completo, sólo se citará el número del conjunto.

Illustraciones con Pieza Nos.

Se usa una presentación nueva de datos pertinentes a piezas para ciertas partes del presente texto, es decir, ilustraciones con Pieza Nos., sin descripción, lo que proporciona tiempo de investigación más breve y evita la necesidad de traducir el Catalogo de Piezas.

Datos pertinentes a conjuntos y a componentes que comprenden un conjunto, conjuntamente con pieza nos. de juegos de juntas, etc., se encontrarán al pie de la ilustración.

Las cifras entre parentesis representan la cantidad usada por vehículo.

EXPLICAÇÃO GERAL

Alguns dos dados neste texto estão baseados sobre a presentação do tipo de ilustração e títulos, sendo o resto representado por ilustrações sem títulos.

Como a lista compreende os modelos para o mercado britanico e para exportação refere-se, em todas partes, aos lados esquerdos e direitos (left-hand LH) é (right-hand RH) do veículo, em lugar de 'lado mais perto do pavimento' (near-side) e 'lado mais distante do pavimento' (off-side). O 'lado esquerdo' e o lado esquerdo visto quando ve-se o veículo desde à parte traseira; similarmente, os modelos com volante à esquerda são os modelos com volante à esquerda, os modelos com os comandos de condução situados no lado esquerdo, também quando ve-se o veículo desde a parte traseira.

Titulos e ilustracoes

Os conjuntos impressos em letras maiusculas e todas as peças que formam este conjunto, são indicados com recortes dentados do alinhamento da coluna de direção, o recorte revertendo ao alinhamento primitivo quando o conjunto está completo. O recorte e indicado claramente pelos numeros 1, 2, 3, 4 na parte superior da página.

É possível observar que a 'ROCKER COVER, TOP, ASSEMBLY' 10 10 (TAPA SUPERIOR DE BALANCEIRO' CONJUNTO DE'), compreende a 'tappet clearance plate' (chapa da folga de tucho) e a 'drive screw fixing plate' (chapa de segurança de parafuso regulador (recorte 1), mas a 'joint washer' (arruela de junta), revertendo ao alinhamento com o 'ROCKER' (BALANCEIRO), é excluido do conjunto.

Em todos casos onde precisa-se do conjunto completo, citar somente o numero do conjunto.

Ilustrações com Peca Nos.

Emprega-se uma presentação nova de dados de peças, para certas secções dêste texto do Land-Rover, quer dizer, ilustrações com Peca Nos. sem descrição, o que proporciona tempo de investigação mais breve, assim evitando a necessidade de tradução do Catalogo de Pecas.

Dados acerca de conjuntos e componentes, que compreendem um conjunto, juntamente com Peça Nos. de jôgos de juntas, etc., acharam-se ao pé da ilustração.


As cifras em parenteses representam a quantidade empregada por veículo.

GROUP INDEX. TABLE DES SECTIONS. GRUPPENVERZEICHNIS.

Bremsen und Bedienungsorgane Group A Pictorial Index Table des Matières illustrée Verzeichnis der Abbildungen Group A Alphabetical Index Table alphabetique Alphabetisches Verzeichnis Group B Engine Motor Group C Flywheel and Clutch Volant Et Embrayage Schwungrad und Kupplüng Group D Gearbox and Propshaft Boite de Vitessee et Cardan Getriebe und Antriebswelle Group E Akes, Suspension, Drive Shafts, Wheels Axe, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Aches and Group P Steering Group F Steering Group E Arreitson Group B Fuel, Exhaust, Emission Systems Systèmes d'alimentation en carbon and relation en carbon and clautch Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Group K Electricité, Essuie Glace, Instruments Elektrische, Scheibenwischer, Instruments Elektrische, Scheibenwischer, Instruments Chassis, Subbrames, Bodyshell, Fittings Chassis, Subbrames, Bodyshel				
Second S	Introduction Introduction	_	Brakes and Brake Controls Freins Et Commandes	1J - K
Group A Alphabetical Index Table alphabétique Alphabetisches Verzeichnis B 09 Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Luftung Cooling, Heating Aeration Kuhlüng, Heizung, Luftung Cooling, Heizung, Leftung Cooling, Heizung, Leftung Cooling, Heating Refroidissement, Chauffage, Aeration Kuhlüng, Heizung, Leftung Cooling, Heizung, Leftung	Pictorial Index Table des Matières illustrée		Fuel, Exhaust, Emission Systems Systèmes d'alimentation en carburant, d'échappement et d'anti-pollution Kraftstoff-, Auspuff- und	1L - N
Group B Engine Moteur Motor IC - E Electricité, Essuie Glace, Instruments Elektrische, Scheibenwischer, Instrumente Group C Flywheel and Clutch Volant Et Embrayage Schwungrad und Kupplüng Group D Gearbox and Propshaft Boîte de Vitesses et Cardan Getriebe und Antriebswelle Group E Axles, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Achse, Aufhangung, Antriebswelle, Rad Electrical, Washers-Wipers, Instruments Elektrische, Scheibenwischer, Instruments Group L Chassis, Subframes, Bodyshell, Fittings Chassis, Soubassement, Cabine Chassis Teile, Hilfsrahmen, Kabine Group M Fascia, Trim, Seats and Fixings Tableau de Bord, Garnitures Intérieure, Sièges Armaturenbrett, Polsterung und Sitz 21 Group E Axles, Suspension, Arbre de Commande, Roues Achse, Aufhangung, Antriebswelle, Rad TH Group F Steering Direction 11 Group P Numerical Index Index Numérique 2M - 6	Alphabetical Index Table alphabétique		Cooling, Heating and Air Conditioning Refroidissement, Chauffage, Aeration	1Φ
Group C Flywheel and Clutch Volant Et Embrayage Schwungrad und Kupplüng Group D Gearbox and Propshaft Boite de Vitesses et Cardan Getriebe und Antriebswelle Group E Axles, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Achse, Aufhangung, Antriebswelle, Rad Group F Steering Direction The Chassis, Subframes, Bodyshell, Fittings Chassis, Soubassement, Cabine Chassis, Subframes, Bodyshell, Fittings Chassis, Full Chassis, Full Chassis, Fittings Chassis, Fittings Chassis, Full Chassis, Full Chassis, Full Chassis, Full Chassis, Fittings Chassis, Full Chassis, F	Engine Moteur	1C - E	Electrical, Washers-Wipers, Instruments Electricité, Essuie Glace, Instruments Elektrische, Scheibenwischer,	2C - E
Group D Gearbox and Propshaft Boîte de Vitesses et Cardan Getriebe und Antriebswelle IG Group E Axles, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Achse, Aufhangung, Antriebswelle, Rad Group F Steering Direction IG Fascia, Trim, Seats and Fixings Tableau de Bord, Garnitures Intérieure, Sièges Armaturenbrett, Polsterung und Sitz 21 Group N Miscellaneous Divers Vermischt Group P Numerical Index Index Numérique 2M —	Flywheel and Clutch Volant Et Embrayage	1F	Chassis, Subframes, Bodyshell, Fittings Chassis, Soubassement, Cabine Chassis Teile, Hilfsrahmen,	2F-H
Axles, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Achse, Aufhangung, Antriebswelle, Rad Group F Steering Direction Group P Numerical Index Index Numérique Axles, Suspension, Drive Shafts, Miscellaneous Divers Vermischt 2 J - L Antriebswelle, Rad 2 J - L Antriebswelle, Rad	Gearbox and Propshaft Boite de Vitesses et Cardan	1G	Fascia, Trim, Seats and Fixings Tableau de Bord, Garnitures Intérieure, Sièges Armaturenbrett, Polsterung	21
Steering Direction Numerical Index Index Numérique 2M -	Axles, Suspension, Drive Shafts, Wheels Axe, Suspension, Arbre de Commande, Roues Achse, Aufhangung,	1H	Miscellaneous Divers	2J-L
	Steering Direction	11	Numerical Index Index Numérique	2M-Ø

GROUP A

PICTORIAL INDEX, TABLE DES MATIERES ILLUSTREE, VERZEICHNIS DER ABBILDUNGEN.

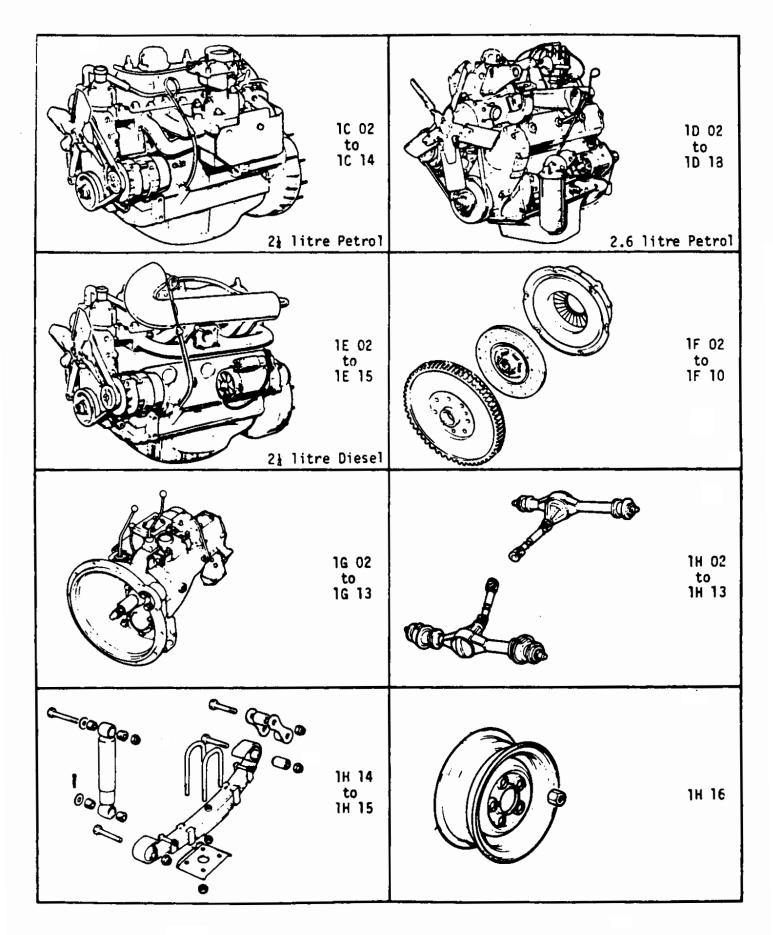

GROUP A

PICTORIAL INDEX, TABLE DES MATIERES ILLUSTREE, VERZEICHNIS DER ABBILDUNGEN.

11 02 to 11 08	1J 02 to 1J 14 1K 02 to 1K 10
1L 02 to 1L 18 1M 02 to 1M 12 1N 02 to 1N 10	1N 11 to 1N 15
10 02 to 10 05	2C 02 to 2C 15
2D C2 to 2D 15 2E 02 to 2E 08	2F 02

GROUP A

PICTORIAL INDEX, TABLE DES MATIERES ILLUSTREE, VERZEICHNIS DER ABBILDUNGEN.

2F 93 to 2F 13 2G 02 to 2G 08	20	F 14 to F 16 G 09 to G 11 H 02 to H 10
21 02 to 21 05		I 02 to I 05
2I 06 to 2I 15		J 02 to J 07
2K C2 to 2K 16 2L 92 to 2L 17 One Ton Model		

'A' Accelerator lever, 2½ Petrol 1N 02- Accelerator lever, 2½ Diesel 1N 07-8 Accelerator lever, 2½ Diesel 1N 07-8 Accelerator pedal, 2½ Petrol 1N 05 Accelerator pedal, 2½ Petrol 1N 05 Accelerator pedal, 2½ Petrol 1N 05 Accelerator pedal, 2½ Diesel 2N 07-8 Bearings, camshaft, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Petrol 1C 07 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E	Description	Page No	Description	Page No
Accelerator lever, 2; Petrol 1N 02-4 Accelerator lever, 2; Diesel 1N 07-8 Accelerator lever, 2; Diesel 1N 07-8 Accelerator pedal, 2; Petrol 1N 05-8 Accelerator pedal, 2; Diesel 1N 07-8 Accelerator pedal, 2; Diesel 1N 07-8 Accelerator pedal, 2; Diesel 1N 07-8 Activator 2N 25-20, 2N 25-2			IDI mandal	
Accelerator lever, 2.6 Petrol 1N 05- Accelerator lever, 2.1 piesel 1N 07-8 Accelerator pedal, 2.2 Petrol 1N 02-8 Accelerator pedal, 2.2 Petrol 1N 02-8 Accelerator pedal, 2.2 Dessel 1N 07-8 Activator 2E 02,04 Adaptor, carburetter, 2.5 Petrol 1M 07-8 Adaptor, carburetter, 2.5 Petrol 1M 07-8 Adjuster, timing chain, 2.2 Dessel 1E 06-8 Adjuster, timing chain, 2.2 Dessel 1E 06-8 Adjuster, timing chain, 2.2 Dessel 1E 06-8 Air cleaner, 2.1 Petrol 1L 08-8 Air cleaner, 2.2 Petrol 1N 07-8 Air cleaner, 2.2 Petrol 1N 07-8 Air cleaner, 2.2 Petrol 1N 07-8 Air cleaner, 2.3 Petrol 1N 07-8 Air cleaner, 2.4 Petrol 1N 07-8 Air cleaner, 2.5 Petrol 1N 07-8 All-synchromesh gearbox 1G 02-8 Annchor plate, transmission brake 1D 06-8 Anchor plate, transmission brake 1D 06-8 Anchor plate, transmission brake 1D 06-8 Axle shaft, rear axle, 1N 06-8 Backrest, front seats 2I 06-8 Backrest, front seats		14 02 4		
Accelerator lever, 2½ Diesel 1N 07-8 Accelerator pedal, 2½ Detrol 1N 02 Accelerator pedal, 2½ Diesel 1N 07 Accilerator pedal, 2½ Diesel 1N 07 Adaptor, carburetter, 2½ Petrol 1C 1C 12 Adaptor, carburetter, 2½ Petrol 2C 02 Addyuster, timing chain, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Diesel 1E 06 Adjuster, timing chain, 2½ Diesel 1E 06 Adjuster, timing chain, 2½ Diesel 1E 06 Afir cleaner, 2½ Petrol 1N 07 Afir cleaner, 2½ Petrol 1N 07 Afir cleaner, 2½ Petrol 1N 07 Afir cleaner, 2½ Diesel 1L 15 Afir cleaner, 2½ Diesel 1N 07 All-synchromesh gearbox 1G 02 Afir cleaner, 2½ Diesel 1N 07 All-synchromesh gearbox 1G 02 Anchor plate, transmission brake 1N 06 Ancelerator pedal, 2½ Diesel 1N 07 Axle shaft, rear axle, Salisbury 2N 2D 00 Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 03 Bearings, camshaft, 2½ Petrol 1C 03 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1D 05 Bearings, crankshaft, 2½ Diesel 1D 04 Bearings, rear hub, one ton 2L 04 Bearings, r				30.06
Accelerator pedal, 2½ Petrol 1N 02 Accelerator pedal, 2½ Diesel 1N 05 Accelerator pedal, 2½ Diesel 1N 05 Activator Adaptor, carburetter, 2½ Petrol 2C 02 Adaptor, carburetter, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Diesel 1E 06 Alir cleaner, 2½ Diesel 1E 06 Anchor plate, transmission brake 10 06 Bearings, camshaft, 2½ Diesel 1E 06 Battery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Diesel 1E 06 Battery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, comshaft, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Petrol 1D 07 Bearings, conn.rod, 2½ Petrol 1D 07 Bearings, conn.rod, 2½ Detrol 1D 05 Bearings, conn.rod, 2½ Detrol 1D 05 Bearings, conn.rod, 2½ Detrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Detrol 1D 05 Bearings, conn.rod, 2½ Detrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D				
Accelerator pedal, 2½ Diesel 1N 05 Accelerator pedal, 2½ Diesel 1N 07 Activator 2E 02,04 Adaptor, carburetter, 2; Petrol 1C 12 Adaptor, carburetter, 2; Petrol 2C 02 Addptor, carburetter, 2; Petrol 1C 05 Adfir cleaner, 2; Diesel 1L 15 Africleaner, 2; Diesel 1L 08 Africleaner, 2; Diesel 1L 08 Africleaner, 2; Diesel 1C 05 Anchor plate, transmission brake 1D 06 Anchor plate, transmission brake 1D 06 Anchor plate, transmission brake 1D 06 Axle shaft, rear axle, Salisbury 1R 13 Axle shaft, rear axle, Salisbury 1R 13 Backrest, front seats 2D 06 Battery - see activator 2C 02 Bearings, camshaft, 2; Petrol 1C 03 Bearings, camshaft, 2; Petrol 1C 03 Bearings, conn. rod, 2; Diesel 1C 06 Bearings, conn. rod, 2; Diesel 1C 06 Bearings, conn. rod, 2; Diesel 1C 08 Bearings, conn. rod, 2; Diesel 1C 08 Bearings, conn. rod, 2; Diesel 1C 08 Bearings, crankshaft, 2; Petrol 1C 03 Bearings, crankshaft, 2; Petrol				
Activator Activator Activator Activator Activator Adaptor, carburetter, 2½ Petrol 1				10 04
Activator 2E 02.04 Adaptor, carburetter, 2; Petrol 1C 12 Adaptor, carburetter, 2; Petrol 1C 12 Adaptor, carburetter, 2; Petrol 1C 12 Adaptor, darburetter, 2; Petrol 1C 05 Addyster, timing chain, 2; Petrol 1C 05 Adjuster, timing chain, 2; Petrol 1C 05 Adjuster, timing chain, 2; Diesel 1E 06 Air cleaner, 2; Diesel 1L 15 Anchor plate, transmission brake 1J 06 Ammeter 2D 10 Ammeter 2D 10 Ammeter 2D 10 Axle shaft, rear axle 1B 06 Axle shaft, rear axle 1H 06 Axle shaft, rear axle 1H 06 Backrest, front seats 2D 08 Battery casing/air cleaner support2F 02 Bearings, camshaft, 2; Diesel 1E 06 Bearings, camshaft, 2; Diesel 1E 06 Bearings, camshaft, 2; Diesel 1E 06 Bearings, camshaft, 2; Petrol 1C 07 Bearings, camshaft, 2; Petrol 1C 07 Bearings, camshaft, 2; Petrol 1D 07 Bearings, conn.rod, 2; Petrol 1D 07 Bearings, conn.rod, 2; Petrol 1D 05 Bearings, crankshaft, 2; Petrol 2D 05 Bearings, crankshaft,				16.06
Adaptor, carburetter, 2½ Petrol 1C 12 Adaptor, carburetter, 2½ Petrol 1C 02 Adaptor, distributor, 2½ Petrol 1C 02 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Diesel 1E 06 Adjuster, unit, transmission brake 1J 06 Air cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Diesel 1L 15 Afr cleaner, 2½ Diesel 1L 15 Afr cleaner, 2½ Petrol 1M 07 All-synchromesh gearbox 1G 02 Ammeter Anchor plate, transmission brake 1J 06 Axle shaft, rear axle 2D 10 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2D 16 Backrest, fr			•	
Adaptor, carburetter, 2½ Petrol 1C 12 Adaptor, carburetter, 2.6 Petrol 1M 07 Adaptor, distributor, 2½ Petrol 2C 02 Adjuster, timing chain, 2½ Diesel 1E 06 Adjuster timing chain, 2½ Diesel 1E 06 Adjuster unit, transmission brake 1J 06 Air cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Diesel 1L 08 Anchor plate, transmission brake 1J 06 Anchor plate, transmission brake 1J 06 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle, Salisbury 1k 13 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Battery - see activator 21 Battery - see activator 22 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, rear hub, 5alisbury 1M 13 Bearings, rear hub, 6alisbury 1M 13 Beari	ACCIVACOI			
Adaptor, carburetter, 2.6 Petrol 1M 07 Adaptor, distributor, 2½ Petrol 2C 02 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster unit, transmission brake 1J 06 Air cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2½ Detrol 1M 07 All-synchromesh gearbox 1G 02 Ammeter 2D 10 Anchor plate, transmission brake 1J 06 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, one ton 2L 05 Bactrings, camshaft, 2½ Diesel 1E 06 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, canshaft, 2½ Petrol 1C 07 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 2D 04 Bearings, rear hub 1H 06 Bearings, rear hub 2D 05 Bearings, rear hub 2D	Adaptor carburetter 21 Petrol		bearings, mainshare	
Addjuster, timing chain, 2½ Petrol 2C 02 Adjuster, timing chain, 2½ Petrol 1C 05 Adjuster unit, transmission brake lJ 06 Adric cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Petrol 1L 15 Air cleaner, 2½ Petrol 1M 07 All-synchromesh gearbox 1G 02 Anchorp age kit, safety harness 2I 08 Axle shaft, rear axle 1H 06 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, salisbury 1H 07 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Diesel 1E 06 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, rear hub, 5alisbury 1H 13 Bearings, rear hub, 5al			Rearings, mainshaft, all syn-	
Adjuster, timing chain, 2½ Diesel IE 06 Adjuster unit, transmission brake IJ 06 Air cleaner, 2½ Petrol IL 08 Air cleaner, 2½ Olesel IL 05 Air inlet elbow, 2.6 Petrol IM 07 All-synchromesh gearbox IG 02 Ammeter IL 08 Axle shaft, rear axle one ton II 06 Axle shaft, rear axle, one ton II 06 Backrest, front seats II 06 Backrest, camshaft, 2½ Diesel II 06 Bearings, camshaft, 2½ Diesel II 06 Bearings, conn.rod, 2½ Diesel II 06 Bearings, crankshaft, 2½ Diesel II 03 Bearings, crankshaft, 2½ Diesel II 03 Bearings, rear hub II 06 Bearings, rear loutput shaft II 08				1G 05.06
Adjuster, timing chain, 2½ Diesel 1E 06 Adjuster unit, transmission brake 1J 06 Adjuster unit, transmission brake 1J 06 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2½ Diesel 1B 07 Air cleaner, 2½ Diesel 1D 07 Air inlet elbow, 2.6 Petrol 1D 06 Anchor plate, transmission brake 1J 06 Bearing, primary pinion 1G 05 Bearing, steering inner column 1I 03 Bearing, steering inner column 1I 03 Bearing, swivel pin 1H 03 Bearing, camshaft, 2½ Petrol 1D 07 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, conn.rod, 2½ Petrol 1D 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front bub 1H 05 Bearings, front bub 1H 05 Bearings, front bub 1H 06 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 05 Bearings, intermediate gear shaft 1G 07 Bearings, intermediate gear shaft				
Adjuster unit, transmission brake 1J 06 Air cleaner, 2½ Petrol 1L 08 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2½ Diesel 1L 15 Air inlet elbow, 2.6 Petrol 1M 07 All-synchromesh gearbox 1G 02 Anmeter Anchor plate, transmission brake 1J 06 Anchor plate, transmission brake 1J 06 Anchor plate, transmission brake 1J 06 Axle shaft, rear axle 1H 06 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Backrest, front seats 2I 08 Backrest, front seats 2I 06 Backrest, fr			Rearings, mainshaft, one ton	
Air cleaner, 2½ Detrol 1L 08 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2.6 Petrol 1M 12 Air inlet elbow, 2.6 Petrol 1M 07 All-synchromesh gearbox 1G 02 Anmeter 2D 10 Anchoroplate, transmission brake 1J 06 Bearing, shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, Salisbury 1H 13 Bearings, camshaft, rear axle, Salisbury 1H 13 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 03 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07				
Air cleaner, 2½ Diesel 1L 15 Air cleaner, 2.6 Petrol 1M 12 Air inlet elbow, 2.6 Petrol 1M 07 All-synchromesh gearbox 1G 02 Anchor plate, transmission brake 1J 06 Anchor plate, transmission brake 1J 06 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle 1H 06 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Backrest, front seats 2I 06 Battery - see activator 2L 05 Battery - see activator 3Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, clutch withdrawal 1F 07 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 03 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 05 Bearings, intermediate gear shaft, 000 Bearing, rear bub, one ton 2L 03 Bearings, cacelerator cross shaft, 000 Bearings, intermediate gear shaft, 000 Bearings, intermediate gear shaft, 000 B				
Air cleaner, 2.6 Petrol 1M 07 Air inlet elbow, 2.6 Petrol 1M 07 All-synchromesh gearbox 1G 02 Ammeter 2D 10 Anchor plate, transmission brake 1M 06 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle, Salisbury 1M 13 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Battery - see activator 2B activator 2B actings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, clutch withdrawal 1F 07 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, rear hub, one ton 2L 03 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 05 Bearings, rear hub, one ton 2L 05 Bearings, rear hub, one ton 2L 05 Bearings, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, intermediate gear shaft, one ton 2L 08 Bearings, cacelerator cross shaft, 24 Bearings, rear hub, one ton 2L 08 Bearing				2K 12
Air inlet elbow, 2.6 Petrol 1M 07 All-synchromesh gearbox 1G 02 Ammeter 2D 10 Anchor plate, transmission brake 1J 06 Anchor plate, transmission brake 2D 10 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle 3H 06 Axle shaft, rear axle, one ton 2L 05 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Backrest, front seats 2I 06 Battery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, cranksh			_	_
Anmeter 2D 10 Anchor plate, transmission brake 1J 06 Bearings, cranskaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 03 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft 1B 07 Bearing, cranshaft, 2½ Diesel 1E 04 Bearings, cranshaft 1D 05 Bearings, cranskaft 1D 05 Bearings, cranskaft 1D 05 Bearings, cranskaft 1D 05 Bearings, cranskaft 1			Bearings, rear output shaft, one	
Ammeter 2D 10 Bearing, primary pinion 1G 05 Anchor plate, transmission brake 1J 06 Anchorage kit, safety harness 2I 08 Anchorage kit, safety harness 2I 08 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle 1H 06 Axle shaft, rear axle, one ton 2L 05 Bearing, steering inner column 1I 03 Axle shaft, rear axle, one ton 2L 05 Bearing, swivel pin 1H 03 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Diesel 1E 06 Bearing, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 02 Diesel 02 Diesel 02 Diesel 02 Diese				2K 08
Anchor plate, transmission brake IJ 06 Anchorage kit, safety harness 2I 08 Axle shaft, rear axle 1H 06 Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Backrest, front seats 2I 06 Battery - see activator 2L 07 Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Diesel 1E 06 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2.6 Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearings, intermediate gear shaft, one ton 2L 05 Bearing, swivel pin, one ton 2L 06 Bearing, swivel pin, one ton 2L 03 Bearing, swivel pin,				1G 05
Anchorage kit, safety harness 2I 08 Axle shaft, rear axle	Anchor plate, transmission brake		Bearing, primary pinion, one ton	2K 07
Axle shaft, rear axle			Bearing, steering inner column	11 03
Axle shaft, rear axle, Salisbury 1H 13 Axle shaft, rear axle, one ton 2L 05 Backrest, front seats 2I 06 Battery - see activator Battery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearing, clutch withdrawal, one ton 2L 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08- Bearings, differential, 1H 08- Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 07 Bearing, intermediate gear shaft, one ton 2L 07 Bearing, intermediate gear shaft, one ton 2L 07 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, intermediate gear shaft, one ton 2L 09 Bearing, intermediate gear shaft, one ton 2L 04 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 03 Bearing, wivel pin, one ton 2L 03 Bearing housing, swivel pin, one ton 2L 03 Bearing housing, swiv				
Axle shaft, rear axle, one ton 2L 05 Bearing, swivel pin, one ton 2L 03 Bearing, swivel pin, one ton 2L 03 Bearings, camshaft cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal, one ton 2K 04 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearings, intermediate gear shaft, one ton 2K 08 Bearings, swivel pin, one ton 2L 03 Bearing housing, swivel pin, one ton 2L 03 Bearing housing, swivel pin, one ton 2L 03 Beall crank lever, accelerator, 2½ Bearing housing, swivel pin, one ton 2L 03 Beall crank lever, accelerator, 26 Petrol 1N 08 Bearing housing, swi				2L 10
Bearing, swivel pin, one ton 2L 03 Bearing housing, swivel pin 1H 03 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Petrol 1D 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1D 05 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft Bearing, halfshaft Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2K 08 Bearing, intermediate gear shaft, one ton 2K 08 Bearings, intermediate gear shaft, one ton 2K 08 Bearing housing, swivel pin, one ton 2L 03 Beal crank lever, accelerator, 2½ Beall crank lever, accelerator, 2½ Beall crank lever, accelerator, 2½ Beall crank lever, accelerator, 2½ Beal crank lever, accelerator, 2½ Bea		2L 05	Bearing, swivel pin	1H 03
Backrest, front seats attery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 1H,10,12,2L 07 Bearing, halfshaft Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 03 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft 1B 07 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, intermediate gear shaft, one ton 2L 09 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, intermediate gear shaft, 2L 08 Bearing neural lever, accelerator, 2L 03 Beall crank lever, accelerator, 2L 08 Bell cr	·			2L 03
Battery - see activator Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearings, clutch withdrawal 1F 07 Bearings, clutch withdrawal, one ton 2k 04 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, front hub 1H 08-9 Bearings, halfshaft 1H 03 Bearings, front hub, one ton 2L 03 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, Salisbury 1H 13 Bearings, intermediate gear shaft 16 07 Bearing, intermediate gear shaft 18 07 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft 16 07 Bearing, intermediate gear shaft, one ton 2L 05 Beari	'B'			1H 03
Battery casing/air cleaner support2F 02 Bearings, camshaft, 2½ Petrol 1C 07 Bearings, camshaft, 2.6 Petrol 1D 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearing, clutch withdrawal, one ton 2k 04 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearings, halfshaft 1H 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, intermediate gear shaft 1B 07 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, intermediate gear shaft, one ton 2L 09 Bearing, conn.rod, 2½ Petrol 1D 04 Bearing, conn.rod, 2½ Petrol 1D 05 Bearing, conn.rod, 2½ Petrol 1D 05 Beari	Backrest, front seats	2I 06		
Bearings, camshaft, 2½ Petrol 1D 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearings, halfshaft Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bearing, camks lever, accelerator, 2.6 Petrol 1N 08 Bell crank lever, accelerator, 2.6 Petrol 2D Bear one ton 2L 08 Bell crank lever, accelerator, 2.6 Bel	Battery - see activator			2L 03
Bearings, camshaft, 2.6 Petrol 1D 07 Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearing, clutch withdrawal 1F 07 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, camkshaft, 2½ Diesel 1E 03 Bearing, crankshaft, 2½ Diesel 1E 03 Bearings, cr		t2F 02	Bell crank lever, accelerator,21	
Bearings, camshaft, 2½ Diesel 1E 06 Bearing, clutch withdrawal 1F 07 Bearing, clutch withdrawal, one ton 2K 04 Bearings, conn.rod, 2½ Petrol 1C 03 Bearings, conn.rod, 2½ Petrol 1D 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, conn.rod, 2½ Diesel 1E 04 Bearing, conn.rod, 2½ Diesel 1E 04 Bearing, conn.rod, 2½ Diesel 1E 04 Bearing, conn.rod, 2½ Di	Bearings, camshaft, 21 Petrol	1C 07		
Bearing, clutch withdrawal 1F 07 Bell crank lever, accelerator, Bearing, clutch withdrawal, one ton 2K 04 Bell housing 1G 02 Bearings, conn.rod, 2½ Petrol 1C 03 Bell housing, one ton 2K 06 Bearings, conn.rod, 2½ Diesel 1E 04 Bonnet, one ton 2L 17 Bearings, crankshaft, 2½ Petrol 1C 03 Bennet catch 2F 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bonnet prop 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bottom plate, fr and rr spring 1H 15 Bearings, differential, 1H 08-9 Bottom plate, fr and rr spring, one ton 2L 09 Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, 2½ Petrol 1D 04 Bearings, front hub, one ton 2L 03 Bracket, accelerator cross shaft, 2½ Petrol 1D 04 Bearings, rear hub, Salisbury 1H 13 Searings, rear hub, one ton 2L 05 Bracket, accelerator cross shaft, 2½ Diesel 1D 05 Bracket, accelerator pedal, 2.6 Petrol 1D 05 Bracket, accelerator shaft, 2½ Diesel 1D 05 Brack			Bell crank lever, accelerator, 2.	
Bearing, clutch withdrawal, one ton 2K 04 Bell housing 1G 02 Bearings, conn.rod, 2½ Petrol 1C 03 Bell housing, one ton 2K 06 Bearings, conn.rod, 2½ Diesel 1E 04 Bonnet, one ton 2L 17 Bearings, crankshaft, 2½ Petrol 1C 03 Bennet catch 2F 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bonnet catch 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bonnet prop 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bottom plate, fr and rr spring 1H 15 Bearings, differential, 1H 08-9 Bottom plate, fr and rr spring, one ton 2L 09 Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, 2½ Petrol 1N 02 Bearings, front hub 1H 05 Bracket, accelerator cross shaft, 2½ Petrol 1N 06 Bearings, rear hub, one ton 2L 04 Bracket, accelerator cross shaft, 2½ Diesel 1N 07 Bearings, rear hub, one ton 2L 05 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft 1G 07 Petrol 1N 05 Bearing, intermediate gear shaft, one ton 2K 08 Bearing, intermediate gear shaft, one ton 2K 08 Bell housing 1G 02 Bell housing, one ton 2K 06 Bell housing, one ton 2K 06 Bennet catch 2F 03 Bonnet				1N 06
Bearings, conn.rod, 2½ Petrol 1C 03 Bell housing 1G 02 Bearings, conn.rod, 2.6 Petrol 1D 05 Bonnet 2F 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bonnet, one ton 2L 17 Bearings, crankshaft, 2½ Petrol 1C 03 Bonnet catch 2F 03 Bearings, crankshaft, 2.6 Petrol 1D 04 Bonnet prop 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bottom plate, fr and rr spring 1H 15 Bearings, differential, 1H 08-9 Bottom plate, fr and rr spring, one ton 2L 03 Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, 2½ Petrol 1H 05 Bearings, front hub 1H 05 Bracket, accelerator cross shaft, 2½ Petrol 1N 02 Bearings, rear hub, one ton 2L 04 Bracket, accelerator cross shaft, 2½ Diesel 1N 07 Bearings, rear hub, Salisbury 1H 13 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft 1G 07 Petrol 1N 05 Bearing, intermediate gear shaft, 08 Bearing, intermediate gear shaft, 08 Bearing, intermediate gear shaft, 09 Bearing, conn.rod, 2L 03		1F 07		• • • • •
Bearings, conn.rod, 2½ Petrol 1C 03 Bell housing, one ton 2K 06 Bearings, conn.rod, 2.6 Petrol 1D 05 Bonnet 2F 03 Bearings, conn.rod, 2½ Diesel 1E 04 Bonnet, one ton 2L 17 Bearings, crankshaft, 2½ Petrol 1C 03 Bonnet catch 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bonnet prop 2F 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bottom plate, fr and rr spring 1H 15 Bearings, differential, 1H 08-9 Bottom plate, fr and rr spring, one ton 2L 09 Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, 2½ Petrol 1H 05 Bracket, accelerator cross shaft, 2½ Petrol 1N 02 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Petrol 1N 05 Bracket, accelerator shaft, 2½ Diesel 1N 05 Bearing, intermediate gear shaft 1G 07 Petrol 1N 05 Bracket, accelerator shaft, 2½ Diesel 1N 0	Bearing, clutch withdrawal, one			
Bearings, conn.rod, 2.6 Petrol 10 05 Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2L 04 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft 3L 07 Bearings, crankshaft, one ton 2L 05 Bearings, crankshaft, one ton 2L		_		
Bearings, conn.rod, 2½ Diesel 1E 04 Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear		_		
Bearings, crankshaft, 2½ Petrol 1C 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L				
Bearings, crankshaft, 2.6 Petrol 1D 04 Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearing, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bottom plate, fr and rr spring 1H 15 Bottom plate, fr and rr spring, one ton 2L 09 Bracket, accelerator cross shaft, 2½ Diesel 1N 07 Bracket, accelerator pedal, 2.6 Bracket, accelerator shaft, 2½ Diesel 1N 02		_		
Bearings, crankshaft, 2½ Diesel 1E 03 Bearings, differential, 1H 08-9 Bearings, halfshaft 1H 03 Bearing, halfshaft, one ton 2L 03 Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub 1H 06 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bearings, remediate gear shaft, one ton 2L 05 Bearing, intermediate gear shaft, one ton 2L 08 Bracket, accelerator pedal, 2.6 Bracket, accelerator shaft, 2½ Bracket, accelerator pedal, 2.6		_		
Bearings, differential, 1H 08-9 Bottom plate, fr and rr spring, one ton 2L 09 Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, 2½ Petrol 1N 02 Bearings, front hub, one ton 2L 04 Bracket, accelerator cross shaft, 2.6 Petrol 1N 06 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft, 0ne ton 2L 05 Bearing, intermediate gear shaft, 0ne ton 2L 08 Bracket, accelerator pedal, 2.6 Bracket, accelerator shaft, 2½ Bracket, accelerator pedal, 2.6				
Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, Bearings, front hub 1H 05 Bracket, accelerator cross shaft, Bearings, front hub, one ton 2L 04 Bracket, accelerator cross shaft, Bearings, rear hub 1H 06 Bracket, accelerator cross shaft, Bearings, rear hub, Salisbury 1H 13 Bracket, accelerator cross shaft, Bearings, rear hub, one ton 2L 05 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft 1G 07 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft, one ton 2K 08 Petrol 1N 05 Bracket, accelerator shaft, 2i Petrol 1N 02				IH 15
Bearing, halfshaft 1H 03 Bracket, accelerator cross shaft, Bearings, front hub 1H 05 Bracket, accelerator cross shaft, Bearings, front hub, one ton 2L 04 Bracket, accelerator cross shaft, Bearings, rear hub 1H 06 Bracket, accelerator cross shaft, Bearings, rear hub, Salisbury 1H 13 Bracket, accelerator cross shaft, Bearings, rear hub, Salisbury 1H 13 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft 1G 07 Bracket, accelerator pedal, 2.6 Bearing, intermediate gear shaft 1G 07 Bracket, accelerator shaft, 2i One ton 2K 08 Petrol 1N 02			_ ·	21 00
Bearings, front hub Bearings, front hub, one ton Bearings, rear hub, one ton Bearings, rear hub, Salisbury Bearings, rear hub, one ton Bearing, intermediate gear shaft One ton 2L 03 Bracket, accelerator cross shaft, 2.6 Petrol Bracket, accelerator pedal, 2.6 Petrol Bracket, accelerator shaft, 2.6 Petrol Bracket, accelerator pedal, 2.6 Petrol Bracket, accelerator shaft, 2.6 Petrol Bracket, accelerator shaft, 2.6 Petrol Bracket, accelerator pedal, 2.6 Petrol Bracket, accelerator pedal, 2.6 Petrol Bracket, accelerator pedal, 2.6 Petrol		· • · · · • •		
Bearings, front hub 1H 05 Bearings, front hub, one ton 2L 04 Bearings, rear hub 1H 06 Bearings, rear hub, Salisbury 1H 13 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2K 08 Bearing intermediate gear shaft, one ton 2K 08 Bracket, accelerator cross shaft, 2½ Diesel 1N 07 Bracket, accelerator pedal, 2.6 Petrol 1N 05 Bracket, accelerator shaft, 2½ Petrol 1N 02				, 1N U5
Bearings, front hub, one ton 2L 04 2.6 Petrol 1N 06 Bearings, rear hub 1H 06 Bracket, accelerator cross shaft, Bearings, rear hub, Salisbury 1H 13 2½ Diesel 1N 07 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2K 08 2.6 Petrol 1N 06 Bracket, accelerator pedal, 2.6 Petrol 1N 05 Bracket, accelerator shaft, 2½ Petrol 1N 02			24 PETROI	
Bearings, rear hub Bearings, rear hub, Salisbury Bearings, rear hub, Salisbury Bearings, rear hub, one ton Bearing, intermediate gear shaft One ton 1H 06 Bracket, accelerator cross shaft, 2½ Diesel Bracket, accelerator pedal, 2.6 Petrol Bracket, accelerator shaft, 2½ One ton 2K 08 Petrol IN 02				1N 06
Bearings, rear hub, Salisbury 1H 13 2½ Diesel 1N 07 Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2K 08 Bearings, rear hub, Salisbury 1H 13 2½ Diesel 1N 07 Bracket, accelerator pedal, 2.6 Petrol 1N 05 Bracket, accelerator shaft, 2½ Petrol 1N 02				
Bearings, rear hub, one ton 2L 05 Bearing, intermediate gear shaft 1G 07 Bearing, intermediate gear shaft, one ton 2K 08 Bracket, accelerator pedal, 2.6 Petrol 1N 05 Bracket, accelerator shaft, 21 Petrol 1N 02			the state of the s	
Bearing, intermediate gear shaft 1G 07 Petrol 1N 05 Bearing, intermediate gear shaft, Bracket, accelerator shaft, 21 one ton 2K 08 Petrol 1N 02				,
Bearing, intermediate gear shaft, Bracket, accelerator shaft, 21 one ton 2K 08 Petrol 1N 02				1N 05
one ton 2K 08 Petrol 1N 02				••
	•		_ *	1N 02
	Bearing, layshaft front	1G 05	. 30. 01	

Description	Page No	Description	Page No
'B' - contd		·c·	
Bracket, accelerator shaft, 2.6		Cables, 2½ Petrol	2E 03,06
Petro1	1N 05	Course 64 01 Datus 1	&07
Bracket, accelerator shaft, 2	1 N A7	Camshaft, 21 Petrol Camshaft, 2.6 Petrol	10 05
Diesel Bracket, safety harness, 109 SW	1N 07 2G 07	Camshaft, 21 Diesel	1D 07 1E 06
Brake anchor plate	1J 02-05	Cap, fuel filler	1L 17
Brake drums	1J 02-05		im io
Brake drum, transmission brake	1J 07	Cappings, rear body 88	2G 03
Brake hose, 4 cyl	1K 02	Cappings, rear body 109	2G 05
Brake hose, 6 cyl	1K 04,06	Cappings, rear body 109 SW	2G 08
Brake hose, one ton 4 cyl Brake hose, one ton 6 cyl	2L 14 2L 16	Carburetter, Solex, 21 Petrol Carburetter, SU, 2.6 Petrol	1L 02 1M 02
Brake master cylinder	15 09,13	Carburetter, Zenith, 2½ Petrol	1H 0Z
Brake pedal and bracket	1J 08,13	Carburetter, Zenith, 2.6 Petrol	1M 05
Brake pipes, 4 cyl	1K 02,03	Carburetter conversion kit, Sole	
Brake pipes, 6 cyl		6 21 Petrol	1L 05
Brake pipes, one ton 4 cyl	2L 14,15 2L 16	Carburetter gasket kit, Solex, 2; Petrol	
Brake pipes, one ton 6 cyl Brake pipe, wheel cylinder	1J 03,04	Carburetter gasket kit, SU, 2.6	1L 05
Brake rod, handbrake relay	1J 06	Petrol	1M 04
Brake servo unit, 6 cyl	1K 04	Carburetter gasket set, Zenith, 2	
	1J 13	Petrol	1L 07
Brake servo unit, one ton 4 cyl	2L 14	Carburetter gasket set, Zenith, 2	
Brake shoes Brake shoes, transmission brake	1J 02-05 1J 06	Petrol Carburetter overhaul kit, Solex,	1M 06
Breather, rear axle	1H 06	21 Petrol	1L 05
Breather, rear axle, one ton	2L 05	Carburetter overhaul kit, Zenith,	
Breather, front axle	1H 02	2½ Petrol	1L 07
Breather, front axle, one ton	2L 02	Carburetter overhaul kit, Zenith,	
Breather filter, engine, 21	10.11	2.6 Petrol	1M 06
Petrol Breather filter, engine, 2.6	10 11	Casing, front axle Casing, front axle, one ton	1H 02 2L 02
Petrol	1D 14	Casing, rear axle	1H 06
Breather filter, engine, 21	-	Casing, rear axle, Salisbury	1H 12
Diesel	1E 12	Casing, rear axle, one ton	2L 05
Breather pipe, crankcase, 2.6		Casing, gearbox	1G 03
Petrol 21 Petrol	1D 10	Casing, gearbox, one ton	2K 06
Brush set, dynamo, 21 Petrol Brush set, dynamo, 2.6 Petrol	2C 10,12 2C 13	Centre seats, 109 SW ten-seater Centre seats, 109 SW twelve-	2I 10
Brush set, dynamo, 21 Diesel	2C 14,15	seater	21 11
Brush set, starter, 21 Petrol	2C 04	Centre tool tray	2F 11
Brush set, starter, 2.6 Petrol	2C 07	Chainwheel, camshaft, 21 Petrol	1C 05
Brush set, starter, 21 Diesel	20 08,09	Chainwheel, camshaft, 2.6 Petrol	10 07
Bulbs, instrument panel Bump rubber	2D 10,11 2F 02	Chainwheel, camshaft, 21 Diesel Chainwheel, crankshaft, 21 Petrol	1E 06
Bush, chassis frame	1H 15	Chainwheel, crankshaft, 2.6	10 03
Bush, first speed mainshaft gear	=	Petrol	1D 04
all synchromesh	1G 06	Chainwheel, crankshaft, 21 Diesel	
Bush, front spring	1H 15	Chassis frame	2F 02
Bush, front spring, one ton	2L 09	Chassis frame, one ton	2L 09
Bush, rear spring one ton	1H 15 2L 09	Check strap, axle Check strap, axle, one ton	2F 02
Bush, rear spring, one ton Bush, shock absorber	1H 14	Clevis, handbrake relay	2L 09 1J 06,07
Bush, shock absorber, one ton	2L 09	Clutch assy, 21 Petrol	1F 02,03
By-pass pipe, thermostat , 21		Clutch assy, 2.6 Petrol	1F 04
Petrol	1C 09	Clutch assy, 21 Diesel	1F 05,06
By-pass pipe, thermostat, 21	15.10	Clutch assy, one ton	2K 03
Diesel	1E 10	Clutch cover, all synchromesh gearbox	15 02
		342,000	1F 03

Description	Page No	Description	Page No
'C' - contd		'C' - contd	
	1F 10	Cylinder block, 2.6 Petrol	1D 03
Clutch master cylinder	1J 09,14	Cylinder block, 21 Diesel	1E 02
Clutch pedal and bracket	1J 09,13	Cylinder head, 21 Petrol	1C 10
Clutch pipes	1F 10	Cylinder head, 2.6 Petrol	1D 13
• •	1J 10,11		1E 11
	& 14	Cylinder liner, 21 Petrol	1C 02
Clutch plate, 21 Petrol	1F 03	Cylinder liner, 2.6 Petrol	1D 03
Clutch plate, 2.6 Petrol	1F 04	Cylinder liner, 21 Diesel	1E 02
Clutch plate, 21 Diesel	1F 06		
Clutch plate, one ton	2K 03	'ם'	
Clutch slave cylinder	1F 08.10	Dash complete	2F 05
Clutch withdrawal housing	1F 07	Decarb gasket set, 2½ Petrol	1C 02
Clutch withdrawal housing, one		Decarb gasket set, 2.6 Petrol	10 03
ton	2K 04	Decarb gasket set, 21 Diesel	1E 02
Cold start control	2D 10,11	Differential assembly, Rover	1H 08
Condenser, distributor, 21 Petrol	2C 02	Differential assembly, ENV	1H 10
Condenser, distributor, 2.6	20. 20	Differential assembly, one ton	2L 07
Petrol	2C 05	Diff pinion, Rover	1H 09
Conn. rod, 21 Petrol	10 03	Diff pinion, ENV	1H 10
Conn. rod, 2.6 Petrol	1D.05		1H 12
Conn. rod, 21 Diesel	1E 04	Diff pinion, one ton	2L 07
Connector, by-pass, water pump,	10.10		1H 09
2.6 Petrol	1D 12 1G 12		1H 10
Connector, four wheel drive	16 12		1H 12
Connector, four wheel drive, one	24 1E	Diff wheel, one ton	2L 07
ton	2K 15	Dip switch	11 04
Contact points, distributor, 21	20.02	Dip switch, one ton	2L 11
Petrol	2C 02	Distance sleeve, mainshaft	1G 04
Contact points, distributor, 2.6	20 05	Distance sleeve, mainshaft, all	1G 05
Petrol	20 13	sychromesh	10 05
Contact set, horn	2E 04,07	Distance sleeve, mainshaft, one ton	2K 07
Control rod, accelerator, 21	26 04,07	Distributor, 21 Petrol	2C 02
Petrol	1N 03	Distributor, 2.6 Petrol	2C 05
Control rod, accelerator, 2.6	111 03	Distributor gear shaft, 2.6	20 03
Petrol	1N 06	Petrol	1D 06
Control rod, accelerator, 21	··· 00	Distributor Teads, 21 Petrol	2C 03
Diesel	1N 07,08	Distributor leads, 2.6 Petrol	2C 06
Conversion kit, brake servo	1J 12	Distributor pump, 21 Diesel	1L 09
Cover panels, front wings	2F 04	Distributor pump, 24 Dieser	1L 12
Cover panels, rear body, 88	2G 02	Door lock, front door	2F 08
Cover panels, rear body, 109	2G 04	Door check, rear door, 88 SW	2H 03
Cover panels, rear body, 109SW	2G 07	Door check, rear door, 109 SW	2H 08
Crankcase sump, 21 Petrol	10 08	Door check, rear side door, 109	-
Crankcase sump, 2.6 Petrol	1D 10	SW	2F 15
Crankcase sump, 21 Diesel	1E 09	Door hinges	2F 13
Crankshaft, 21 Petrol	1C 03	Door locks	2F 13
Crankshaft, 2.6 Petrol	1D 04	Door lock and handle, rear door,	
Crankshaft, 21 Diesel	1E 03	88 SW	2H 02
Cross shaft, accelerator, 21		Door lock and handle, rear door,	
Petrol	1N 02	109 SW	2H 07
Cross shaft, accelerator, 2.6		Door lock and handle, rear side	
Petro1	1N 06	door, 109 SW	2F 14
Cross shaft, accelerator, 2}		Door pull, 88 SW	21 03
Diesel	1N 07	Door pull, 109 SW	21 05
Crown wheel and pinion, Rover	1H 09	Drain plug, gearbox	1G 03,08
Crown wheel and pinion, ENV	1H 10	Drain plug, gearbox, one ton	2K 06,10
Crown wheel and pinion, Salisbury		Brain plug, radiator	10 05
Crown wheel and pinion, one ton			
`ylinder block, 2∤ diesel	1E 02		

Description	Page No	Description	Page No
'D' - contd		'E' - contd	
Drain tap, engine	1C 02	Exhaust manifold, 21 Petrol	10 13
or a fit cap; and the	1D 03	Exhaust manifold, 2.6 Petrol	1D 16
	1E 02	Exhaust manifold, 21 Diesel	1E 14
Drain tap, radiator	10 05	Exhaust manifold, heat shield,	
Drive coupling, distributor, 21	.0 03	4 cy1	1N 11
Petrol	2C 03	Exhaust manifold, heat shield,	
Driving dog, distributor, 2.6 Pe		6 cyl	1N 15
Petrol	2C 05	Exhaust silencer 6 cyl	1N 14
Driving member, front hub	1H 05	Exhaust silencer and tailpipe,	111 14
Driving member, front hub, one	1H 03	4 cyl	1N 13
ton	2L 04	Exhaust tailpipe 6 cyl	1N 14
	1H 07	Exhaust valve, 21 Petrol	1C 06
Driving member, rear hub	IR U/	Exhaust valve, 2.6 Petrol	1D 08
Driving member, rear hub, Salis-	14 12	Exhaust valve, 21 Diesel	1E 07
bury	1H 13	Expander unit, transmission brake	
Driving member, rear hub, one to	N 2L U5	Extension shaft and lever, 2.6	10 00
Driving shaft, distributor, 21	00.00	Petrol	1N 05
Petrol	2C 03	recrui	111 05
Driving shaft, distributor, 2.6	10.00	'F'	
Petrol	1D 06	Fan belt, 21 Petrol	1C 09
Drop arm	11 03	Fan belt, 2.6 Petrol	10 12
Drop arm, one ton	2L 10		1E 10
Dynamo, 21 Petrol	20 10,12	Fan belt, 21 Diesel	
Dynamo, 2.6 Petrol	2C 13	Fan blade, 2½ Petrol	10 09
Dynamo, 21 Diesel	20 14,15	Fan blade, 2.6 Petrol	1D 12
161		Fan blade, 21 Diesel	1E 10
'E'	31 00	Fan, dynamo, 21 Petrol	20 10,12
Elbow, air cleaner, 21 Petrol	1L 08	Fan, dynamo, 2.6 Petrol	20 13
Elbow, fuel tank, 4 cyl	1L 18	Fan, dynamo, 2½ Diesel	2C 14,15
Elbow, fuel tank, 6 cyl	1M 10	Fan cowl	10 02
Element, air cleaner, 2.6 Petrol	1M 12	Fan pulley, 2½ Petrol	10 09
Element and seal, fuel filter, 2		Fan pulley, 2.6 Petrol	1D 12
Petrol	1M 11	Fan pulley, 2½ Diesel	1E 10
Element, oil filler, engine, 21	10.11	Filler cap, radiator	10 02
Petrol	10 11	Filter for crankcase breather, 2	
Element, oil filler, engine, 2.6	10.10	Petrol	1D 10
Petrol	10 15	First speed gear, all synchromes	
Element, oil filler, engine, 21		First speed gear, layshaft	1G 04
Diesel	1E 12	First speed gear, layshaft, one	24 07
Engine assy, 21 Petrol	1C 02	ton	2K 07
Engine assy, 2.6 Petrol	1D 03	First speed gear, mainshaft	1G 04
Engine assy, 21 Diesel	1E 02	First speed gear, mainshaft, one	24 07
Engine assy, one ton	2K 03	ton	2K 07
Engine O/H gasket set, 21 Petrol	1C 02	Flame trap crankcase breather, 2	
Engine O/H gasket set, 2.6 Petro		Petrol	1D 10
Engine O/H gasket set, 21 Diesel		Flange, differential, Rover	1H 08
Engine foot, 21 Petrol	1C 02	Flange, differential, ENV	1H, 10
Engine foot, 2.6 Petrol	1D 03	Flange, differential, Salisbury	1H 12
Engine foor, 21 Diesel	1E 02	Flange, differential, one ton	2L 08
Engine mountings and rubbers	1C 14	Flange, front output shaft	1G 09
P	1E 15	Flange, front output shaft, one	27 12
Engine stop control, 21 Diesel	1N 08	ton	2K 12
Engine tie rod, 2.6 Petrol	1D 17	Flange, rear output shaft	1G 07
Exhaust pipe front, 4 cyl	1N 11	Flange, rear output shaft, one	04 60
Exhaust pipe front, 6 cyl	1N 14	ton	2K 08
Exhaust pipe front, one ton	2L 16	Flashing indicator assy	20 06
Exhaust pipe, intermediate, 4 cy		Flasher lamps	2D 06, 0
Exhaust pipe, intermediate, 6 cy	1 1N 14	P1	& 09
		Flasher switch	20 06, 08
		Flasher unit	2D 06,08

From the properties 2F 99	Description	Page No	Description	Page No
Floor panels	'F' - contd		'G' - contd	
Section Sect		2F 09.		16 03
Flywheel assy, 2½ Petrol Fo	The second secon			
Flywheel assy, 2½ Petrol Flywheel assy, 2½ Diesel Flywheel housing, 2½ Diesel Fork, clutch withdrawal Fork, clutch withdrawal Fork, clutch withdrawal Fork, clutch withdrawal Fort apron panel Fornt apron panel Fornt apron panel Fornt avide assy Front avide assy Front avide assy Front cover, engine, 2½ Petrol Front cover, engine, 2½ Petrol Front cover, engine, 2½ Petrol Front cover, engine, 2½ Diesel Front bub Front door Front bub Front door Front output shaft, one ton Front output shaft housing Front output shaft housing Front output shaft housing Front output shaft housing Front output shaft nor ton Front propshaft Front propshaft Front propshaft Front seat, adjustable Front sea			Gauge unit, fuel tank, 4 cvl	
Flywheel assy, 2; Diesel F 04 Gearbox assembly, one ton 2K 06 Flywheel housing, 2; Petrol F 02 Gearbox assembly, one ton 2K 06 Flywheel housing, 2; Diesel F 05 Gearbox assembly, one ton 2K 06 Flywheel housing, 2; Diesel F 05 F 07 Grase nipple for universal joint, one ton F 04 Grase nipple for universal joint, one ton F 04 Grase nipple for universal joint, one ton F 04 Grase nipple for universal joint, one ton F 06 Grab rail, 109 SM twelve-seater Zl 15 F 07 Grase nipple for universal joint, one ton F 07 F 07 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton F 08 Grase nipple for universal joint, one ton E 00 Graile for radiator 10 04 Grase nipple for universal joint, one ton E 00 Graile for radiator 10 04 Grase nipple for universal joint, one ton E 00 Graile for radiator 10 04 Grase nipple for universal joint, one ton E 00 Graile for radiator 10 04 Grase nipple for universal joint, in the provided in the prov	Flywheel assy, 2½ Petrol			
Flywheel housing, 2, 2 petrol Flowed housing, 2, 2 petrol Flowed housing, 2, 2 petrol Flowed housing, 2, 2 piesel Flowed housing, 2 piesel p		_		
Flywheel housing, 2; Petrol Flowing plousing, 2; Operation F		1F 05		
Flywheel housing, 2.6 Petrol Flywheel housing, 2.10 jesel Fork, clutch withdrawal Fork, clutch withdrawal, one ton Front apron panel Fork apron panel Front apron panel Front apron panel Front ayer apron panel Front apron panel Front ayer apron panel Front ayer apron panel Front capron panel Front capron Front bub Front occup, engine, 2½ Petrol Front occup, engine, 2½ Petrol Front occup, engine, 2½ Petrol Front toutput shaft nous panel Front door Front output shaft housing Front output shaft housing Front propshaft Front propshaft Front propshaft Front propshaft Front wings Front propshaft Front wings Front propshaft Front wings Front wings	Flywheel housing, 21 Petrol	1F 02	Grab rail, 109 SW twelve-seater	
Flywheel housing, 2½ Diesel Fork, clutch withdrawal Fork, clutch withdrawal Fork, clutch withdrawal For Fork, clutch withdrawal For Forn For	Flywheel housing, 2.6 Petrol			
Fork, clutch withdrawal 1F 07				
Fork Clutch withdrawal, one ton Front apron panel 10 04				
Front apron panel Front axle assy Front axle assy, one ton Front axle assy, one ton Front cover, engine, 2½ Petrol Front cover, engine, 2½ Desel Front cover, engine, 2½ Desel Front door Front door Front hub Front hub Front hub Front hub Front output shaft Front output shaft Front output shaft, one ton Front output shaft housing Front output shaft housing Front output shaft housing Front output shaft housing Front propshaft Front seat, adjustable Front seat, adjustable Front seat, andjustable Front seat, non-adjustable Front wings Fuel filter, complete, 2.6 Petrol Fuel pipes, 2½ Pet	Fork, clutch withdrawal, one ton		Grille for radiator	
Front axle assy, one ton			Grille panel, radiator	10 04
Front bumper Front cover, engine, 2½ Petrol Front cover, engine, 2½ Desel Front cover, gearbox, all synchromesh Front door Front door Front door Front hub, one ton Front output shaft Front output shaft, one ton Front output shaft, one ton Front output shaft, one ton Front output shaft housing Front output shaft housing, one ton Front propshaft, one ton Event seat, adjustable Front seat, adjustable Front seat, adjustable Front seat, adjustable Front seat, anon-adjustable Front seat, anon-adjustable Front seat, anon-adjustable Front seat, pone ton Event seat, anon-adjustable Front seat, pone ton Front seat, anon-adjustable Front wings Fuel filter, 2½ Diesel Front wings Fuel pipes, 2½ Petrol Fuel tank, 6 cyl Fuel tank, 6 cyl Fuel tank, 6 cyl Fuel tank, 6 cyl Fuel				
Front bumper Front cover, engine, 2½ Petrol Front cover, engine, 2½ Petrol Front cover, engine, 2½ Diesel Front dovorre, engine, 2½ Diesel Front seat, adjustable Front seat, adjustabl			**	
Front cover, engine, 2½ Petrol 10 10 10 Handbrake assy, LH stg 1k 07,08 Front cover, engine, 2½ Diesel 1E 08 Handbrake assy, LH stg 1k 09 Front cover, gearbox, all synchromesh 16 03 Handbrake mountings, LH stg 1k 09 Front door 2F 12 Diesel 1 10 08 Handbrake mountings, LH stg 1k 09 Front hub 1 14 05 Handbrake mountings, LH stg 1k 09 Handbrake untines, LH stg 1k 09 Headtrapae mountings, L	Front axie assy, one ton			
Front cover, engine, 2.6 Petrol Front cover, engine, 2.2 Diesel Front cover, engine, 2.2 Diesel Front cover, gearbox, all synchromesh Front door Front door Front hub Front hub, one ton Front bub, one ton Front output shaft, one ton Front output shaft housing Front output shaft housing, one ton Front propshaft Front propshaft, one ton Front propshaft, one ton Front propshaft, one ton Event wings Front seat, adjustable Front seat, non-adjustable Front seat, non-adjustable Front seat, non-adjustable Front seat, consequence Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel pipes, 2½ Petrol Fuel pipes, 2½ Petrol Fuel pump, 2½ Diesel Fuel tank, 4 cyl Fuel tank, 6 cyl Fuel tank, 6 cyl Fuel tank, 6 cyl Fuel box Fuel bo				
Front cover, engine, 2½ Diesel Front cover, gearbox, all synch- romesh Front door Front hub Front hub Front hub Front output shaft Front output shaft, one ton Front output shaft housing Front output shaft housing Front output shaft housing Front propshaft Front propshaft Front propshaft Front seat, adjustable Front seat, adjustable Front seat, adjustable Front seat, andjustable Front seat, andjustable Front seat, one-adjustable Front seat, one-adjustable Front seat, andjustable Front wings Fro				
Front cover, gearbox, all synchromesh romesh front door 2F 12 Diesel 1H of 1H	Front cover engine 21 Discol			
Section Sect	Front cover, engine, 28 bieser	15 00		
Front door Front hub Front hub Front hub Front hub, one ton Front output shaft, one ton Front output shaft housing Front output shaft housing Front output shaft housing, one ton Front propshaft Front propshaft, one ton Front propshaft, one ton Front seat, adjustable Front seat, adjustable Front wings Fuel filter, 2½ Diesel Fuel pipes, 2½ Petrol Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pipes, 2½ Diesel Fuel pump, 2½		16.02		1K 09
Front hub, one ton Front output shaft Front output shaft Front output shaft Front output shaft, one ton Front output shaft, one ton Front output shaft housing, one ton Front propshaft Front propshaft Front propshaft, one ton Front seat, adjustable Front seat, adjustable Front seat, non-adjustable Front seat, non-adjustable Front seat, non-adjustable Front seat, non-adjustable Front seat, pront wings Front propshaft Front propshaft Front seat, adjustable Front seat, non-adjustable Front seat, adjustable Front on, 85 M Freat door, 109				111 00 10
Front hub, one ton Front output shaft, one ton Front output shaft, one ton Front output shaft, one ton Front output shaft housing Front output shaft housing, one ton Front propshaft Front propshaft, one ton Front propshaft, one ton Front propshaft, one ton Front propshaft, one ton Front seat, adjustable Front seat, non-adjustable Front seat, non-adjustable Front wings Front propshaft Headlamps Front wings Heater plug, 2½ Diesel IE 12 Winge, rear door, 109 SW Hinge, rear door, 109 SW Horn Front wings Front propshaft Hoose, water inlet pipe, 2.6 Petrol Hose, radiator to overflow bot				
Front output shaft, one ton Front output shaft housing Front propshaft High gear wheel Fig Or Flug gaar wheel High gear wheel High gear wheel High gear wheel Fig Or Flug are wheel High gear wheel Fig Or Flug are wheel High gear wheel Hose, rear door, 88 SW Hose, radiator to overflow bottle Hose, water inlet pipe, 2.6 Petrol Hose, radiator to overflow bottle Hose, water inlet pipe, 2.6 Petrol Hose, radiator to overflow bottle Hose, water inlet pipe, 2.6 Petrol Hose, radiator to overflow bottle Hose, water inlet pipe, 2.6 Petrol Hose for crankcase breather, 2.6 Petrol Hose, radiator to overflow			na rriess	
Front output shaft, one ton Front output shaft housing Front output shaft housing, one ton front propshaft front propshaft, one ton Front seat, adjustable Front seat, non-adjustable Front wings Fuel filter, 2½ Diesel Fuel filter, 2½ Diesel Fuel pipes, 2½ Petrol Fuel pipes, 2½ Petrol Fuel pipes, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel sediment bowl complete, 2.6 Petrol Fuse Fuse box F			Headlamne	
Front output shaft housing Front output shaft housing, one ton			uead tamps	
Front output shaft housing, one ton ton ton ton propshaft			Heater nlug 21 Diesel	
front propshaft front propshaft, one ton front propshaft, one ton front seat, adjustable front seat, non-adjustable front seat, adjustable front props SW front prop SW fron	Front output shaft housing, one	05		
Front propshaft Front propshaft, one ton Front propshaft, one ton Front propshaft, one ton Front seat, adjustable Front seat, andjustable Front seat, adjustable Front propshaft Horn push Hose, air cleaner, 2½ Petrol IL 08 Hose, breather, fuel filler IL 15 Hose, breather, fuel filler IL 16 Hose, breather, fuel filler IL 17 Hose, breather, fuel filler IL 16 Hose, breather, fuel filler IL 16 Hose, breather, 2½ Diesel IE 10 Hose, clutch slave cylinder IE 10 Hose, oranterior, 2½ Petrol IL 08 Hos	ton	2K 12		
Front propshaft, one ton Front seat, adjustable 21 06 Hinge, rear door, 109 SW 2H 08 Front seat, non-adjustable 2I 07 Horn seat, non-adjustable 2I 07 Front wings 2F 03 Front wings 2F 03 Fuel filler tube assy 1L 17 Horn push 11 04 Fuel filter, 2½ Diesel 1L 09,11 Hose, air cleaner, 2½ Petrol 1L 08 Fuel gauge 2D 10,11 Hose, air cleaner, 2½ Diesel 1L 15 Fuel pipes, 2½ Petrol 1L 16 Fuel pipes, 2½ Diesel 1L 16 Fuel pipes, 2½ Diesel 1L 16 Fuel pipes, 2½ Diesel 1L 09,11 Hose, breather, fuel filler 1L 17 Fuel pipes, 2½ Diesel 1L 09,11 Hose, breather, fuel filler 1L 17 Fuel pump, 2½ Diesel 1L 09,11 Hose, by-pass pipe, 2½ Petrol 1C 09 Fuel pump, 2½ Diesel 1L 09,12 Hose, by-pass pipe, 2½ Diesel 1E 10 Fuel pump, 2½ Diesel 1L 09,12 Hose, clutch slave cylinder 1F 08,09 Fuel pump, 2½ Petrol 1L 08 Hose, engine breather, 2.6 Petrol 1D 14 Fuel pump, 2½ Petrol 1L 08 Hose, engine breather, 2½ Diesel 1E 12 Fuel pump, 2½ Petrol 1L 18 Hose, fuel filler 1L 17 Fuel tank, 4 cyl 1L 18 Hose, fuel filler 1L 17 Fuel tank, 6 cyl 1M 10 Hose, manifold to servo, 6 cyl 1K 04,06 Fuse box 2E 02,04 Hose, radiator top 10 05,06 Fuse box 1G G' Gaiter, front propshaft 1H 02 Hose, plug, 2½ Diesel 1E 12 Fuel pung, 2½ Diesel 1D 14 Fuel tank, 6 cyl 1D 12 Fuel tank, 6 cyl 1D 12 Fuse box 1G Fuse box 1D Fuse box 1D Fuse box 2L 10 Fuse box	Front propshaft			
Front seat, adjustable Front seat, non-adjustable Front seat, non-adjustable Front wings Front wings Fuel filler tube assy Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel pipes, 2½ Petrol Fuel pipes, 2½ Diesel Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Fuse Fuse Fuse Fuse	Front propshaft, one ton			-
Front seat, non-adjustable Front wings Fuel filler tube assy IL 17 Horn push Horn push, one ton LL 11 Hose, air cleaner, 2½ Petrol IL 08 Hose, air cleaner, 2½ Diesel IL 15 Hose, air cleaner, 2½ Diesel IL 16 Fuel pipes, 2½ Petrol IL 16 Fuel pipes, 2½ Diesel IL 09-11 Hose, by-pass pipe, 2½ Petrol IL 09-11 Hose, by-pass pipe, 2½ Diesel IL 09-11 Hose, clutch slave cylinder Hose, clutch slave cylinder IF 08,09 Hose, engine breather, 2.6 Petrol IM 10 Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel sediment bowl complete, 2.6 Petrol IM 11 Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse IM 10 Fuse IM 10 Fuse IM 1	Front seat, adjustable	21 06		
Front wings Fuel filler tube assy Fuel filler tube assy Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel gauge Fuel pipes, 2½ Petrol Fuel pipes, 2½ Petrol Fuel pipes, 2½ Diesel Fuel pipes, 2½ Diesel Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse box Fuse box Fuse box Fuse box Fuse box Fuse for crankcase breather Fuse box Fuse for crankcase breather Fuse box Fuse for crankcase breather, 2½ Diesel Fuse box F	Front seat, non-adjustable	21 07		
Fuel filter tube assy Fuel filter, 2½ Diesel Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel gauge Fuel pipes, 2½ Petrol, Fuel pipes, 2½ Diesel Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse box Fuse box Fuse box Fuse box IL 17 Horn push Horn push, one ton Place air cleaner, 2½ Petrol IL 08 Hose, air cleaner, 2½ Diesel IL 15 Hose, breather, fuel filler IL 16 IM 11 Hose, breather, fuel filler IL 17 Hose, by-pass pipe, 2½ Petrol IM 10 Hose, by-pass pipe, 2½ Diesel IE 10 Hose, by-pass pipe, 2½ Diesel IE 10 Hose, by-pass pipe, 2½ Diesel IE 10 Hose, clutch slave cylinder IF 08,09 Hose, engine breather, 2½ Diesel IE 12 Hose, fuel filler Hose, manifold to servo, 6 cyl Hose, manifold to servo, one ton EE 02,04 A 07 Hose, radiator top Hose, radiator to overflow bottle ID 05,06 Hose, radiator to overflow bottle ID 03 Hose, water inlet pipe, 2.6 Petrol ID 12 ID 12 In 11	Front wings	2F 03		
Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel gauge Fuel pipes, 2½ Petrol, Fuel pipes, 2½ Petrol Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse box Fuse box Fuse box Fuse box Fuse box Fuse box Fuse diater, front propshaft IM 10 Fuse fuel filler Fuse box Fuse box Fuse box Fuse box Fuse box Fuse box Fuse fuse fuse filler Fuse fuse fuse fuse fuse filler Fuse fuse fuse fuse fuse fuse fuse fuse f	Fuel filler tube assy	1L 17	Horn push	
Fuel filter, 2½ Diesel Fuel filter, complete, 2.6 Petrol Fuel gauge Fuel pipes, 2½ Petrol, 1	F 3 613.		Horn push, one ton	2L 11
Fuel filter, complete, 2.6 Petrol M 11 Hose, air cleaner, 2½ Diesel IL 15 Hose, air cleaner, 2.6 Petrol M 12 Hose, breather, fuel filler IL 17 IL 16 IM 10 IM	ruel filter, 21 Diesel	-		
Fuel pipes, 2½ Petrol . IL 16 Fuel pipes, 2.6 Petrol IL 16 Fuel pipes, 2.6 Petrol IL 16 Fuel pipes, 2.6 Petrol IL 19 Fuel pipes, 2½ Diesel IL 09-11 Hose, by-pass pipe, 2½ Petrol IC 09 Fuel pump, 2½ Diesel IL 09-11 Hose, by-pass pipe, 2½ Diesel IE 10 Fuel pump, 2½ Petrol IL 08 Hose, clutch slave cylinder IF 08,09 Fuel pump, 2½ Petrol IL 08 Hose, engine breather, 2.6 Petrol ID 10 Fuel pump, 2½ Petrol IL 08 Hose, engine breather, 2½ Diesel IE 12 Fuel sediment bowl complete, 2.6 Petrol IL 18 Hose, fuel filler IL 17 Fuse IL 18 Hose, fuel filler IL 17 Fuse IL 18 Hose, manifold to servo, 6 cyl IK 04,06 Fuse IL 18 Hose, manifold to servo, one ton Fuse IL 18 Hose, manifold to servo, one ton Fuse IL 19 Fuse IL 19 Fuse IL 10 Fu	First 6434		Hose, air cleaner, 21 Diesel	1L 15
Fuel pipes, 2½ Petrol . Fuel pipes, 2.6 Petrol IM 12 Hose, by-pass pipe, 2½ Petrol IC 09 Fuel pipes, 2½ Diesel IL 09-11 Hose, by-pass pipe, 2½ Diesel IE 10 & 13 Hose, clutch slave cylinder IF 08,09 Fuel pump, 2½ Petrol IL 08 Hose, engine breather, 2.6 Petrol ID 14 Fuel pump, 2.6 Petrol IM 08 Hose, engine breather, 2½ Diesel IE 12 Fuel sediment bowl complete, 2.6 Petrol IM 11 Hose, fuel filler IL 17 Fuel tank, 4 cyl IL 18 Hose, manifold to servo, 6 cyl IK 04,06 Fuse box IM 10 Hose, manifold to servo, one ton Fuse Dox IM 10 Hose, radiator top ID 05,06 & 07 Hose, radiator top ID 05,06 Fuse box IM 10 Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol ID 12 Gaiter, front propshaft IH 02 Hot plug, 2½ Diesel IE 11	ruel filter, complete, 2.6 Petrol			1M 12
Fuel pipes, 2.6 Petrol Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse box IM 12 IL 09-11 A 13 Hose, by-pass pipe, 2½ Diesel IE 10 Hose, by-pass pipe, 2½ Diesel IE 10 Hose, clutch slave cylinder IF 08,09 Hose, engine breather, 2.6 Petrol ID 10 Hose, engine breather, 2½ Diesel IE 12 Hose, fuel filler IL 17 Hose, fuel filler IN 10 Hose, manifold to servo, 6 cyl IM 10 Hose, manifold to servo, one ton 2£ 02,04 A cyl Fuse box IG Gi			Hose, breather, fuel filler	
Fuel pipes, 2½ Diesel Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse box IL 09-11 Hose, by-pass pipe, 2½ Diesel IL 08 Hose, clutch slave cylinder IF 08,09 Hose for crankcase breather ID 10 Hose, engine breather, 2.6 Petrol IM 10 Hose, engine breather, 2½ Diesel IE 10 A 13 Hose, clutch slave cylinder IF 08,09 Hose, engine breather, 2½ Diesel IE 10 Hose, clutch slave cylinder IF 08,09 ID 10 ID 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 ID 10 II 18 Hose, engine breather, 2½ Diesel IE 10 II 10	Fuel pipes, 24 Petrol .			-
Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2.6 Petrol Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Fuse Fuse Fuse Fuse				
Fuel pump, 2½ Diesel Fuel pump, 2½ Petrol Fuel pump, 2½ Petrol Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Fuse Fuse Fuse Fuse	inger hihes? of nigger			
Fuel pump, 2½ Petrol Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Fuse Fuse Fuse Fuse	Fuel nump. 21 Diesel			
Fuel pump, 2.6 Petrol Fuel sediment bowl complete, 2.6 Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Fuse Fuse Fuse Fuse				
Fuel sediment bowl complete, 2.6 Petrol Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse Petrol Fuse Petr	Fuel pump, 2.6 Petrol		Hose engine breather, 2.6 Petrol	
Petrol Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse Fuse Fuse Fuse DM 11 Bose, fuel filler Bose, manifold to servo, 6 cyl Hose, manifold to servo, one ton EE 02.04 A cyl Fuse Do 7 Bose, radiator top Bose, radiator bottom Bose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol Fuse Petrol Bose, Petrol Bose, Petrol Bose, Water inlet pipe, 2.6 Petrol Bose, Pe	Fuel sediment bowl complete 2 6	111 00	Hose fuel fillow	
Fuel tank, 4 cyl Fuel tank, 6 cyl Fuse IL 18 Hose, manifold to servo, 6 cyl Hose, manifold to servo, one ton 2E 02,04 Fuse box Fuse box Fuse A 07 Hose, radiator top 2E 02,04 Hose, radiator bottom A 07 Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol Gaiter, front propshaft IL 18 Hose, manifold to servo, 6 cyl IK 04,06 Hose, manifold to servo, one ton 2L 14 IV 05,06 Hose, radiator top 10 05,06 Hose, water inlet pipe, 2.6 Petrol ID 12 IT 11	Petrol	1M 11		
Fuse box Fuse box Fuse box G'G' Gaiter, front propshaft IM 10 Hose, manifold to servo, one ton 2E 02,04 4 cyl A 07 Hose, radiator top 10 05,06 4 cyl A 07 Hose, radiator bottom 10 05,06 Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol Hot plug, 23 Diesel 17 11				
Fuse box E 02,04 4 cyl A 07 Hose, radiator top 10 05,06 E 02,04 Hose, radiator bottom 10 05,06 B 07 Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol 10 12 Gaiter, front propshaft 1H 02 Hot plug, 23 Diesel 1F 13	Fuel tank, 6 cyl		Hose, manifold to serve one ton	סט, דיט או
Fuse box 2E 02,04 A 07 Bose, radiator top Bose, radiator bottom Bose, radiator bottom Bose, radiator to overflow bottle 10 03 Bose, water inlet pipe, 2.6 Petrol Bose, radiator to pipe, 2.6 Petrol Bose, water inlet pipe, 2.6 Petrol Bose, Petrol				21 14
Fuse box 2E 02,04 Hose, radiator bottom 10 05,06 8 07 Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol 10 12 Gaiter, front propshaft 11 02 Hot plug, 23 Diesel	_			
Hose, radiator to overflow bottle 10 03 Hose, water inlet pipe, 2.6 Petrol 10 12 Gaiter, front propshaft 1H 02 Hot plug, 23 Diesel 1F 13	Fuse box			
'G' Gaiter, front propshaft Hose, water inlet pipe, 2.6 Petrol Hot plug, 21 Diesel 10 12				10 03
Gaiter, front propshaft 10 12 Hot plug 23 Diesel 15 13	101		Hose, water inlet pipe. 2.6	
Galter, front propshaft 1H 02 Hot plug. 21 Diesel 1f 11	-		Petrol	10 12
uaiter, front propshaft, one ton 2L 02	Gaiter, front propshaft	1H 02	Hot plug, 21 Diesel	
	daiter, front propshaft, one ton	2L 02		

Description	Page No	Description	Page No
'H' - contd		'L' - contd	
Housing, accelerator shaft, 21		Lining, transmission brake shoes	1J 06
Petrol	1N 02	Link, transfer gear change	1G 13
Housing, accelerator shaft, 21		Link, transfer gear change, one	
Diesel	1N 07	ton	2K 15
Housing, swivel pin	1H 03	Locking dog, front output shaft	1G 09
Housing, swivel pin, one ton	2L 03	Locking dog, front output shaft,	-
Hub cap, front, Hub cap, front, one ton	1H 05 2L 04	one ton	2K 12
Hub cap, rear	1H 07	Longitudinal steering tube Low gear wheel	1I 08
Hub cap, rear, Salisbury	1H 13	Low gear wheel, one ton	1G 07 2K 08
Hub cap, rear, one ton	2L 05	con gear micely one con	ZR 00
		'M'	
'1'		Main gear lever	1G 10
Idler wheel, timing chain, 2}		Main gear lever, one ton	2K 13
Petrol	10 05	Main leaf, front spring	1H 15
Idler wheel, timing chain, 21 Diesel	1E 06	Main leaf, front spring, one ton	
Ignition coil	2E 02,04	Main leaf, rear spring Main leaf, rear spring, one ton	1H 15
.g	8 07	Main nut, steering	2L 09 11 03
Ignition key	20 10,11	Main nut, steering, one ton	2L 10
Injector, 21 Diesel	1L 10,12	Mainshaft	1G 04
Injector pipes, 2} Diesel	1L 10,12	Mainshaft, all synchromesh	1G 05
Inlet manifold, 21 Petrol	10 12	Mainshaft, one ton	2K 07
Inlet manifold, 21 Diesel	1E 14	Mainshaft gear	1G 04
Inlet valve, 21 Petrol Inlet valve, 2.6 Petrol	1C 06 1D 08	Mainshaft gear, all synchromesh	
Inlet valve, 21 Diesel	1E 07	Mainshaft gear, one ton Miscellaneous, cleats	2K 08 2J 05
Inner column	11 02	Miscellaneous clips	2J 05 2J 04
Inner column, one ton	2L 10	Miscellaneous, grommets	2J 05
Inner and outer member, all		Miscellaneous, 'Lucar' connectors	
Synchromesh	1G 06	Miscellaneous, plugs	2J 05
Inner member, one ton gearbox	2K 08	Mounting bracket, extension shaft	
Inner tubes	1H 16	2.6 Petrol	1N 05
Inner tubes, one ton Instrument panel	2L 09 2D 10,11	'N'	•
Intermediate gear	1G 07	Number plate lamp	20 02 05
Intermediate gear, one ton	2K 08	Mamber Prace Tamp	2D 02,05 & 08
Interior mirror, 88 SW	21 13		a 00
·		'0'	
'J'		Oil filler cap, 2.6 Petrol	1D 10
Junction piece, brake pipes, 4	34 00	Oil filler cap, 21 Diesel	1E 09
Cyl	1K 02	Oil filler cap and breather filte	
Junction piece, brake pipes, 6 cyl	1K 04,06	21 Petrol Oil filler cap and breather filte	10 08
Junction piece, brake pipes, one		2½ Diesel	1E 09
ton 4 cyl	2L 14	Oil filter, engine, 21 Petrol	10 11
		Oil filter, engine, 2.6 Petrol	10 15
1L1		Oil filter, engine, 21 Diesel	1E 12
Layshaft	1G 04	Oil level plug, gearbox	1G 03,08
Layshaft, one ton	2K 07	Oil level plug, gearbox, one ton	2K 06,10
Layshaft cluster, all synchromesh	1G 06	Oil level rod, 21 Petrol	1C 08
Lever, four wheel drive	16 12	Oil level rod, 2.6 Petrol Oil level rod, 21 Diesel	1D 11
Lever, four wheel drive, one to		Oil pipe to cyl head, 2% Petrol	1E 09 1C 11
License holder, windscreen	2F 08	Oil pipe to cyl head, 2.6 Petrol	10 06
Linings, brake shoes	1J 02-05	Oil pipe to cyl head, 21 Diesel	1E 12
Lining, clutch, 21 Petrol	1F 03	Oil pressure switch, 21 Petrol	ic ii
Lining, clutch, 2.6 Petrol	1F 04	Oil pressure switch, 2.6 Petrol	1D 06
Lining, clutch, 21 Diesel	1F 06	Oil pressure switch, 21 Diesel	1E 13
Lining, clutch, one ton	2K 03		


Description	Page No	Description	Page No
'0' - contd		10' - cont	
Oil pump assy, 21 Petrol	1C 04	Overhaul kit, brake servo poppet	21 15
Oil pump assy, 2.6 Petrol	1D 06	valve, one ton 4 cyl.	2L 15
Oil pump assy, 21 Diesel	1E 05	Overhaul kit, brake servo non- return valve	1K 05
Oil seal, front axle casing	1H 02	Overhaul kit, brake servo non-	17 02
Oil seal, front axle casing,	2L 02	return valve, one ton 4 cyl.	2L 15
one ton Oil seal, clutch withdrawal	1F 07	Overhaul kit, clutch slave cyl.	1F 10
Oil seal, clutch withdrawal,	07	Overhaul kit, fuel pump,	
one ton	2K 04	21 Diesel	1L 11, 14
Oil seal, crankshaft, 21 Petrol	1C 03	Overhaul kit, fuel pump,	
Oil seal, crankshaft, 2.6 Petrol	1D 04	21 Petrol	1L 08
Oil seal, crankshaft, 2½ Diesel	1E 03	Overhaul kit, master cyl.	1J 12, 14
Oil seal, front cover, 21 Petrol		'p'	
Oil seal, front cover, 2.6 Petrol		Packing carburettor, 2½ Petrol	1C 12
Oil seal, front cover, 21 Diesel	1E 08	Paints	2J 06
Oil seal, differential, Rover	1H 08 1H 10	Panel light switch	2D 10,11
Oil seal, differential, ENV Oil seal, differential, Salisbury	1H 12	Pinion retaining kit, starter,	
Oil seal, differential, one ton	2L 08	21 Petrol	2C 04
Oil seal, gearbox front cover	1G 03	Pinion retaining kit, starter	
Oil seals, front hub	1H 05	2.6 Petrol	2C 06
Oil seals, front hub, one ton	2L 04	Pinion and sleeve, starter,	
Oil seal, rear hub	1H 06	21 Petrol	2C 04
Oil seal, rear hub, Salisbury	1H 13	Pinion sleeve, starter,	00.00
Oil seal, rear hub, one ton	2L 05	2.6 Petrol	2C 06
Oil seal, mainshaft	1G 04	Pinion, speedometer drive	1G 07
Oil seal, mainshaft,		Pinion, speedometer drive, 1 ton	1C 03
all synchromesh	1G 06	Piston assy, 2½ Petrol Piston assy, 2.6 Petrol	1D 05
Oil seal, mainshaft, one ton	2K 08	Piston assy, 21 Diesel	1E 04
Oil seal, front output shaft	1G 09	Pivot shaft, four wheel drive	1G 12
Oil seal, front output shaft, one ton	2K 12	Pivot shaft, four wheel drive,	, , , ,
Oil seal, rear output shaft	1G 07	one ton	2K 15
Oil seal, rear output shaft,	10 07	Primary pinion and constant gear	1G 05
one ton	2K 08	Primary pinion and constant gear	
Oil seal, speedometer pinion	1G 07	one ton	2K 07
Oil seal, speedometer pinion,		Pulley, crankshaft, 21 Petrol	10 03
one ton	2K 09	Pulley, crankshaft, 2.6 Petrol	1D 04
Oil seal, steering relay	1 I 07	Pulley, crankshaft, 21 Diesel	1E 03 2C 10,12
Oil seal, steering rocker shaft	11 03	Pulley, dynamo, 21 Petrol Pulley, dynamo, 2.6 Petrol	2C 13
Oil seal, steering rocker shaft,		Pulley, dynamo, 21 Diesel	2C 14,15
one ton	2L 10	Push rod, 21 Petrol	1C 06
Oil seal, S.P. brg. hsg Oil seal, S.P. brg hsg, one ton	1H 05 2L 03	Push rod, 2.6 Petrol	1D 08
One ton Land Rover	2K 02	Push rod, 21 Diesel	1E 07
Outer column	11 02	•	
Outer column, one ton	2L 10	'R'	
Outer member, one ton gearbox	2K 08	Radiator block	10 02
Outlet pipe, thermostat,21 Petro		Rear axle	1H 06
Outlet pipe, thermostat,			1H 12
2.6 Petrol	1D 12	Rear axle, one ton	2L 05 2G 02
Outlet pipe, thermostat,	15.10	Rear body, 88 Rear body, 109	2G 02
21 Diesel	1E 10	Rear body, 109 SW	2G 06
Overflow bottle, radiator Overhaul kits	10 03 2J 02	Rear door, 88 SW	2H 02
Overhaul kit, brake servo	25 02 1K 05	Rear door, 109 SW	2H 07
Overhaul kit, brake servo,	17 03	Rear door trim, 88 SW	21 03
one ton 4 cyl	2L 15	Rear door trim, 109 SW	21 05
Overhaul kit, brake servo			
poppet valve	1K 05		

Description	Page No	Description	Pag	e No
'R' - contd		Rotor arm, distributor, 21 Petrol	2C	02
Rear hub	1H 06	Rotor arm, distributor 2.6 Petrol		
Rear hub, Salisbury	1H 13	Rubber mat, intermediate floor.	LC	05
Rear hub, one ton	2L 05	109SW	21	ሰፍ
Rear hub bearing sleeve	1H 06		21	
Rear hub bearing sleeve, Salisbury		Rubber mat, rear floor 109SW	21	-
Rear hub bearing sleeve, one ton	2L 05	Rubber mat, rear froot 1035#	21	05
Rear mainshaft bearing housing	1G 08	'S'		
Rear mainshaft bearing hsg,1 ton		Safety harness	21	08,09
Rear mounting foot, all synchro	1G 08	Salisbury type rear axle	ìΗ	
Rear mounting foot, one ton	2K 11	Seat base	2F	
Rear name plate, 88	2G 03	Seat base lids	2F	
Rear name plate, 109,109 SW	2G 06,07		2 I	
Rear output shaft	1G 07	Second leaf, front spring	ĪH	
Rear output shaft, one ton	2K 08	Second leaf, front spring, one tor		
Rear Propshaft	1H 07	, ,,		
Rear Propshaft, one ton	2L 05	Second leaf, rear spring	1H	15
Rear seats, 88 SW	21 12	Second leaf, rear spring, one ton	2L	09
109 SW ten seater	21 14	Second speed gear, all synchromesh		
109 SW twelve seater	2I 15	Second speed gears, layshaft		
Rear side door, 109 SW	2F 14	and mainshaft	1G	04
Rear side door trim, 109 SW	21 05	Second speed gears, layshaft		
Rear side windows, 88 and 109 SW	2G 09	and mainshaft, one ton	2K	07
Rear step, 88 SW	2H 04,05	Sedimentor, 21 Diesel	1L	14
Rear step 109 SW	2H 09,10	Selector fork, first and second	1G	11
Rear support bracket, gearbox	1G 08	Selector fork, first & second, 1 tor	12K	14
Red reflector	2D 05,08	Selector fork, third and fourth	1G	11
Relay lever, handbrake	1J 06	Selector fork, third & fourth, 1 tor	12K	14
Relay levers, steering relay	11 07	Selector fork, reverse	1G	11
Relay shaft, handbrake	1J 06	Selector fork, reverse, one ton	2K	14
Repair kits	2J 02	Selector fork, four wheel drive	1 G	12
Repair kit, adjuster unit	1J 06	Selector fork, four wheel drive,		
Repair kit, expander unit	1J 06	one ton	2K	
Repair kit, fuel pump, 21 Diesel		Selector fork, transfer gearlever		13
Repair kit, fuel pump, 21 Petrol	1L 08	Selector fork, transfer gearlever,		
Repair kit, wheel cylinders	1J 02,03	one ton	2K	_
	1J 04,05	Selector rod, four wheel drive	1 G	12
Reservoir tank, clutch and brake	13 10	Selector rod, four wheel drive,		
Resistor, Diesel	2E 02,05	one ton	2K	
Restrictor, accelerator pedal,	241 00	Selector shaft, first and second	1G	11
21 Petrol	1N 02	Selector shaft, first and second,		
Reverse wheel	1G 04	one ton	2K	
Reverse wheel, all synchromesh	1G 06	•	1G	11
Reverse wheel, one ton	2K 08	Selector shaft, third & fourth,	20	
Road wheel	1H 16		2K	
Road wheel, one ton	2L 09		1G	
Road spring, front	1H 15		2K	
Road spring, front, one ton	2L 09		1G	12
Road spring, rear Road spring, rear, one ton	1H 15 2L 09	Selector shaft, four wheel drive,	22	16
Rocker cover, 21 Petrol	IC 10		2K	
Rocker cover, 2.6 Petrol	10 14	Selector shaft, transfer gearlever, Selector shaft, transfer gearlever,	10	13
Rocker cover, 21 Diesel	1E 12			1 5
Rockershaft, 21 Petrol	10 06		2K 1H	
Rockershaft, 2.6 Petrol	10 00 10 09		1n 1H	
Rockershaft, 21 Diesel	1E 07		1n 1H	
Roof assy, 88 SW	2G 11	Shackle plate, front spring, l ton		
Roof assy, 109 SW	2G 11		2L '	
Roof lamp, 88 SW	21 13	Shackle plate, rear spring, one ton		
Roof trim, 88 SW	21 02	Successed Spring, one ton	£L.	. ,
Roof trim, 109 SW	21 04			
with two wa				

Description	Page No	Description	Page No
'S' - cont		'S' - cont	
Shaft, accelerator pedal, 21 Petro		Steering damper, one ton	2L 13
Shaft, accelerator pedal, 2.6 Petro		Steering drag link	11 08
Shaft, accelerator pedal, 21 Diesel		Steering drag link, one ton	2L 13
Shaft, clutch withdrawal	1F 07	Steering relay	11 07
Shaft, clutch withdrawal, one ton		Steering track rod	11 07
Shaft and lever, clutch Shaft, intermediate gear	1F 09	Steering track rod, one ton	2L 13 11 02
Shaft, intermediate gear, one ton	1G 07	Steering unit Steering unit, one ton	2L 10
Shaft, reverse gear	1G 04	Steering wheel	1I 04
Shaft, reverse gear, all	10 04	Steering wheel, one ton	2L 11
synchromesh	1G 06	Stiffener brackets, steering	1I 06
Shaft, reverse gear, one ton	2K 08	Stiffener brackets, steering, 1 ton	
Shock absorbers	1H 14	Stop/tail lamps	2D 02,05
Shock absorbers, one ton	2L 09	000p/ 00 / / / / / / / / / / / / / / / /	2D 08
Shroud for cow1	10 03	Stowage clips 88	2G 02
Side cover and oil filler pipe,	.,	Stowage clips 109	2G 04
2 Petrol	10 08		1H 05
Side cover and oil filler pipe,			2L 04
2.6 Petrol	10 10		1H 06,07
Side cover and oil filler pipe,		Stud for road wheel, one ton	2L 04
2} Diesel	1E 08	Suction pipe, carburetter, 21 Petro	11C 12
Sidelamps	2D 02,03,	Suction pipe, carburetter	
	2D 04,08	2.6 Petrol	1M 07
Side panel, 88 and 109 SW	2G 09	Sundries	2J 02
Side panel, rear body 88	2G 02	Support bracket, clutch slave cyl	
Side panel, rear body 109	2G 04	Support bracket, clutch slave cyl	
Side panel, rear body 109 SW	2G 06	one ton	2K 05
Sidescreen	2F 12	Supports, front seats	2I 06
Sill panels	2F 11		1I 05
Sleeve, clutch withdrawal Sleeve, clutch withdrawal, 1 ton	1F 07	Support brackets, steering 1 ton	
	2N 04 2D 10,11	Switch, stop lamp IJ 08,13 Switch, head and side lamp	
Spacer, Salisbury axle	1H 12		1H 03
Spare wheel carrier, one ton	2L 17	Swivel pin upper, one ton	2L 03
Spare wheel clamp, 88	2G 02	Swivel pin and steering lever	
Spare wheel clamp, 109	2G 05	Swivel pin and steering lever,	· · · · · · · · · · · · · · · · · · ·
Spare wheel support, 88SW	2H 03	one ton	2L 03
	2H 08	Synchronising clutch	1G 05
Sparking plug, 21 Petrol	2C 03	Synchronising clutch, one ton	2K 07
Sparking plug, 2.6 Petrol	2C 06	Synchronising cone, all synchromes	h1G 06
Speedometer	2D 10,11	•	
Speedometer, one ton	2L 16	<u>'</u> T'	
Speedometer cable	2D 10,12	T - piece, brake pipes, 4 cyl.	1K 02
Speedometer pinion housing	1G 08	T - piece, brake pipes, 6 cyl.	
Speedometer pinion housing, 1 ton		I - piece, one ton 4 cyl.	2L 14
Starter drive, 21 Diesel	20 08,09		2L 16
Starter motor, 21 Petrol	2C 04	Tailboard assembly	2G 08
Starter motor, 2.6 Petrol	2C 06	Tailboard assembly Tailboard fixings, 88 Tailboard fixings, 109	2G 03
Starter motor, 2½ Diesel Starter solenoid, 2½ Diesel	2C 08,09 2C 08,09	Tappet assembly, 21 Petrol	2G 06 1C 06
Starter solenoid switch	2E 04,07	Tappet assembly, 21 Diesel	1E 07
	2D 10,11	Tensioner, timing chain, 2.6 Petro	
	20 10,11		10 09
	1C 03		10 12
	1D 04	Thermostat 21 Diesel	1E 10
	1E 03	Thermostat housing, 21 Petrol	
Steering box	11 02	Thermostat housing, 21 Diesel	
Steering box, one ton	2L 10		1C 11
Steering ball joints	11 07,08	Thermostat switch, 2.6 Petrol	1D 13

Description	Pa	ge No	Description	Page No
'T'-cont			'W' - cont	
Third speed gear, all synchromesh	10	O.E.	Water temp.transmitter,	
Third speed gear, layshaft &	10	05	2.6 Petrol	10.10
mainshaft	16	05	21 Diesel	1D 13
Third speed gear, layshaft &	10	US	Water pump, 21 Petrol	1E 13
mainshaft, one ton	24	07	Water pump, 2.6 Petrol	IC 09
Tie bar, dash support	_	08		10 12
Timing chain, 2½ Petrol		05	Water pump, 2½ Diesel Water pump O/H kit,2½ Petrol	1E 10
Timing chain, 2, recroi		05	Water pump 0/H kit, 2.6 Petrol	IC 09
Timing chain, 21 Diesel		06	Water pump O/H Kit, 21 Diesel	10 12
Toe Panel, 109 SW		07	Wheel cylinders	1E 10
Tools	_	07	wheel cylinders	1J 02,03, 1J 04,05
Tools, one ton		17	Wheel nut	16 04,05 1H 16
Transfer box casing		08	Window, rear side door, 109SW	2F 15
Transfer box casing, one ton		10	Windscreen assembly	2F 07
Transfer gear change lever		13	Wiper blade	2D 13,14,15
Transfer gear change lever,1 ton			Wiper motor	2D 13,14,15
Trimming raw materials		03	Wiper motor switch	2D 11
Tyres		16	Worm gear, speedometer drive	1G 07
Tyres, one ton		09	Worm gear, speedometer drive,1	
•			,	337121X 33
'U'	,	10		
U-bolt, front spring		15		
U-bolt, front spring, one ton U-bolt, rear spring		09		
U-bolt, rear spring, one ton		15 09		
Universal joint, front axle				
Universal joint, front axle, ton		03		
Universal joint, front propshaft	14	03		
Universal joint, front propshaft,		O.L		
one ton	21	02		
Universal joint, rear propshaft		07		
Universal joint, rear propshaft,	• • • •	•		
one ton	2L	05		
'V'				
•		00		
Vacuum unit, distributor,21 Petro	120	02		
Vacuum unit, distributor, 2.6 Petrol	20	00		
Valve guide, 21 Petrol	20	10		
Valve guide, 2.6 Petrol Valve guide, 2½ Diesel	1D 1E			
Valve rocker, 21 Petrol		06		
Valve rocker 2.6 Petrol		09		
Valve rocker 21 Diesel	ìE			
Ventilator, dash	2F			
Vertical drive shaft assy, 21				
Petrol	IC	04		
Vertical drive shaft assy, 21				
Diesel	1E			
Vibration damper, 2↓ Petrol	10			
Vibration damper 2.6 Petrol	10			
Vibration damper 21 Diesel		06		
Voltage control box		02,04,07	1	
Voltage regulator, instruments	2E	04,07		
``' \ "				
Warning lights	20	10,11		
Water temperature gauge	2D	-		
Water temp.transmitter, 21 Petrol				
	•			

		·

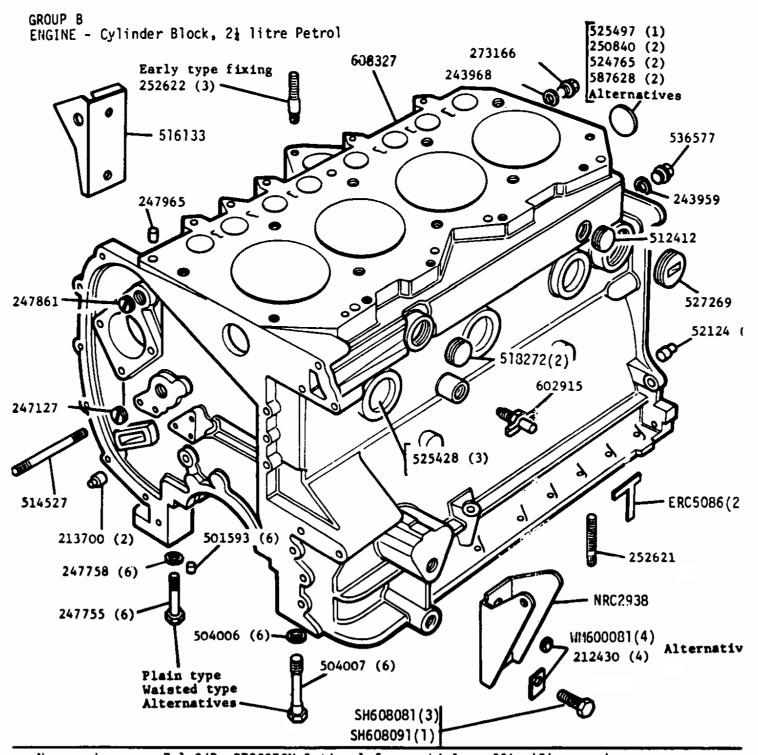

New engine assy 7:1 C/R, RTC2379N Optional from vehicle suffix 'G' onwards New engine assy 8:1 C/R, 607308N Standard from vehicle suffix 'G' onwards

Rebuilt engine assy 7:1 C/R RTC2379R Rebuilt engine assy 8:1 C/R RTC2352R Short engine assembly RTC2663 8:1 C/R

Engine assemblies do not include ancillaries


Decarbonising gasket set GEG162

Engine overhaul gasket set 608124

Stud kit for cylinder block 600245

Cylinder liner 527351 (4)

GROUP B
ENGINE - Crankshaft 21 Litre Petrol

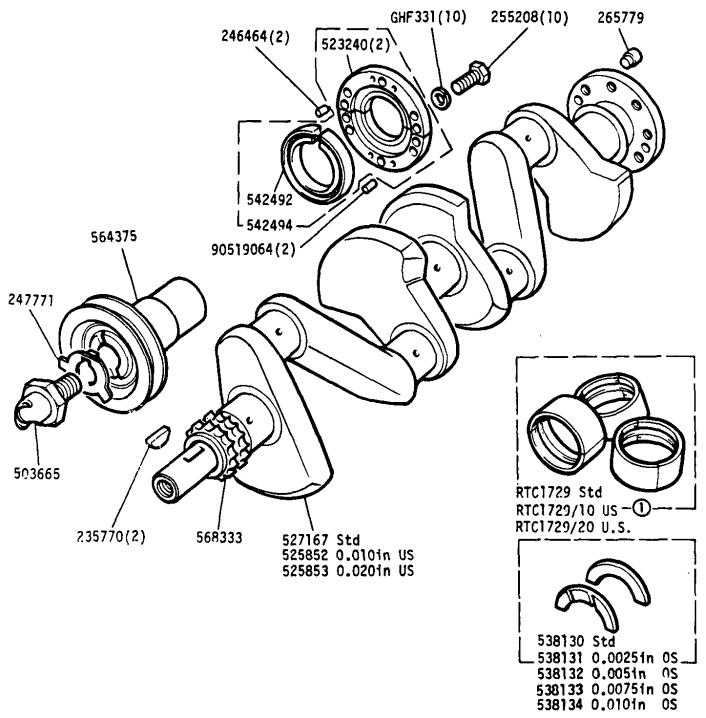

Off Seal and Retainer Assy 542494 and Off Seal Assy 542492 includes loz tube silicone grease 270656


(1) Engine set

SIIA LAND ROVER

1C 03

1RE 103

GROUP B
ENGINE - Connecting rod and piston 2} litre petrol

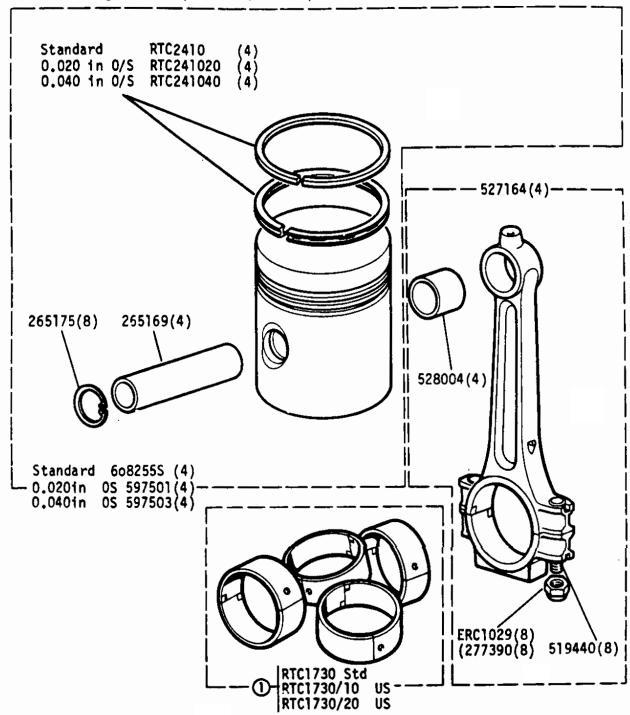

① Engine set		
		:
SIIA LAND ROVER	1C 03	1RE 99



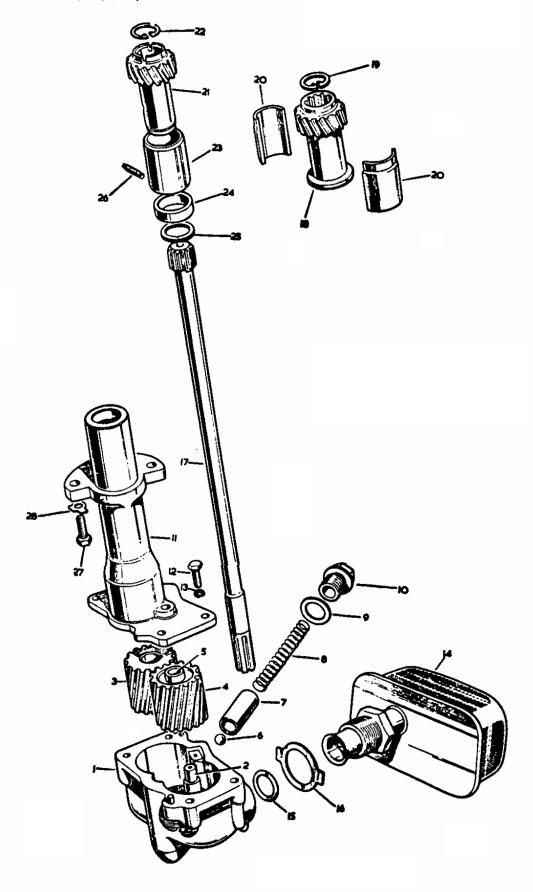


PLATE REF.	1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16	OIL PUMP ASSEMBLY Oil pump body Spindle for idler gear Oil pump gear, driver Oil pump gear, idler Bush for idler gear Steel ball Plunger Spring Washer, inside dia 55/64" Washer, inside dia 49/64" Plug Oil pump cover Set bolt (5/16" UNF x z") Spring washer Oil filter for pump Sealing ring Lockwasher Drive shaft for oil pump	1 513640 1 513641 1 90502209 1 240555 1 278109 1 214995 1 3748 1 273711 1 564456 1 243970 Alternatives. 1 232044 1 549909 1 513639 4 255227 4 GHF332 1 244488 1 244488 1 244487 1 511680
18 19 20	VERTICAL DRIVE SHAFT ASSEMBLY Circlip for drive shaft Split bush for drive shaft gear	1 503266 With split bush 1 247742 1 247653
21	VERTICAL DRIVE SHAFT ASSEMBLY VERTICAL DRIVE SHAFT ASSEMBLY	1 530175* Up to engine With one suffix 'F' piece bush inclusive 7:1 compression ratio only 1 ERC6105 From Engine With one suffix 'G' piece bush onwards 7:1 compression ratio Engine suffix 'A' onwards 8:1 compression ratio
22 23 24 25 26 27 28	Circlip for drive shaft One piece bush for drive shaft gear Thrust washer for drive shaft Retaining ring for washer and bush Locating screw for drive shaft bush Set bolt (5/16" UNF x 1") Fixing oil pump Lockwasher	ion ratio 1 247742 1 522745 1 530178* 1 530179 1 524769 2 GHF103 2 247665


^{*} NO LONGER SERVICED

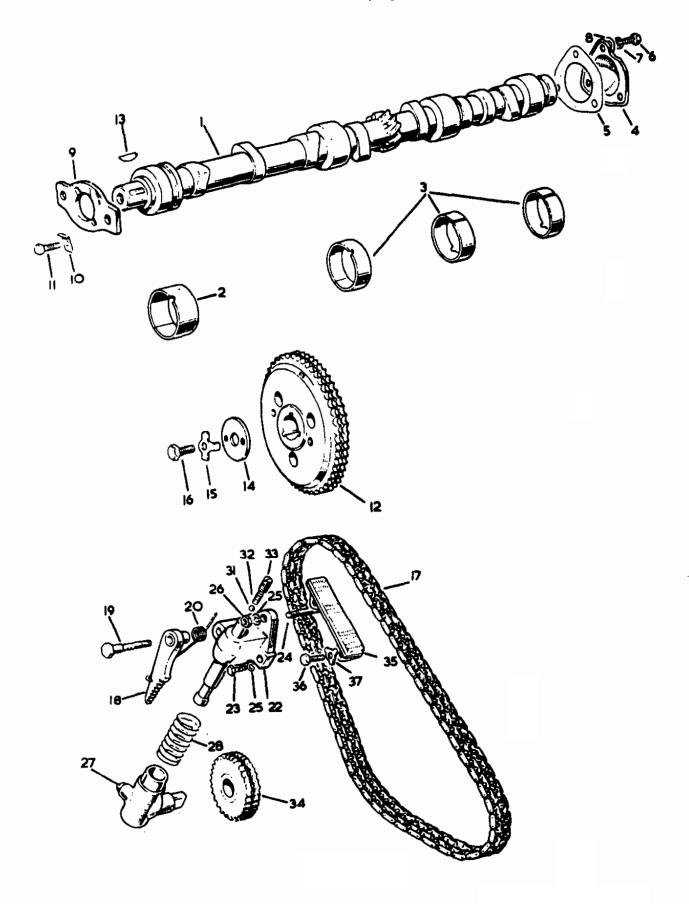


ENGINE - Valve Gear and Rockershafts, 21 litre Petrol

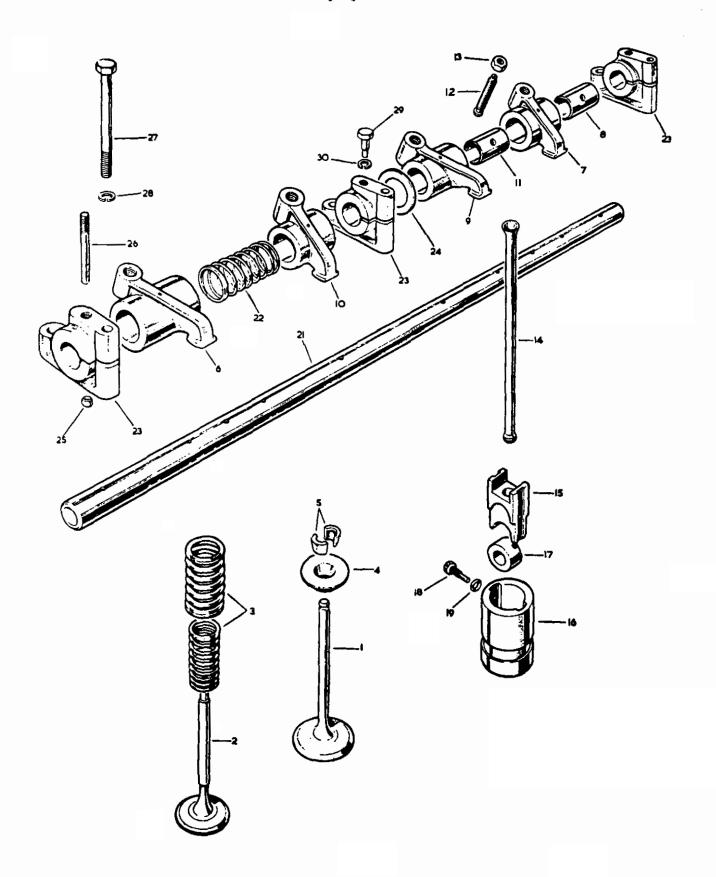

PLAT REF.	E 1 2 3 4 DESCRIPTION	017	. PART No.	REMARKS
1	Inlet valve	4	277593	
2	Exhaust valve	4	557967	
3	Valve spring, inner and outer	8	568550	
	Valve spring cup		268292	
5	Split cone for valve, halves	16	268293	
6	Valve rocker, exhaust LH	2	512207	
7	Valve rocker, exhaust RH	2	90512208	
8	Bush for exhaust valve rocker	4	247614	
9	Valve rocker, inlet, LH		90512205	
10	Valve rocker, inlet, RH	2	512206	
11	Bush for inlet valve rocker	4	247614	
12	Tappet adjusting screw	8	506814	
13	Locknut for tappet adjusting screw	8	NT605061	
14	Tappet push rod	8	546798	
	Tappet, tappet guide, roller and set bolt			
	assembly	_	507829	
15	Tappet		507026	
16	Tappet guide		502473	
17	Roller	_	90517429	
18	Special set bolt	_	507025	
19	Aluminium washer for tappet guide set bolt	8	273069	
21	Valve rocker shaft	1	554070	
22	Spring for rocker shaft		247040	
23	Rocker bracket	5	554602	
24	Washer for rocker bracket	5	525389 277956	
25	Locating dowel for rocker bracket	3	277956	4 off on early models
26	Stud in rocker bracket for rocker cover	3	502656	
27	Set bolt (5/16" UNF x 21")) Fixing rocker		525500	
28	Spring washer) bracket to) cylinder head	5	GHF332	
29	Locating screw) For rocker shaft	1	525390	2 off any early models
30	Spring washer) at bracket	i	GHF332	
		•	•••	

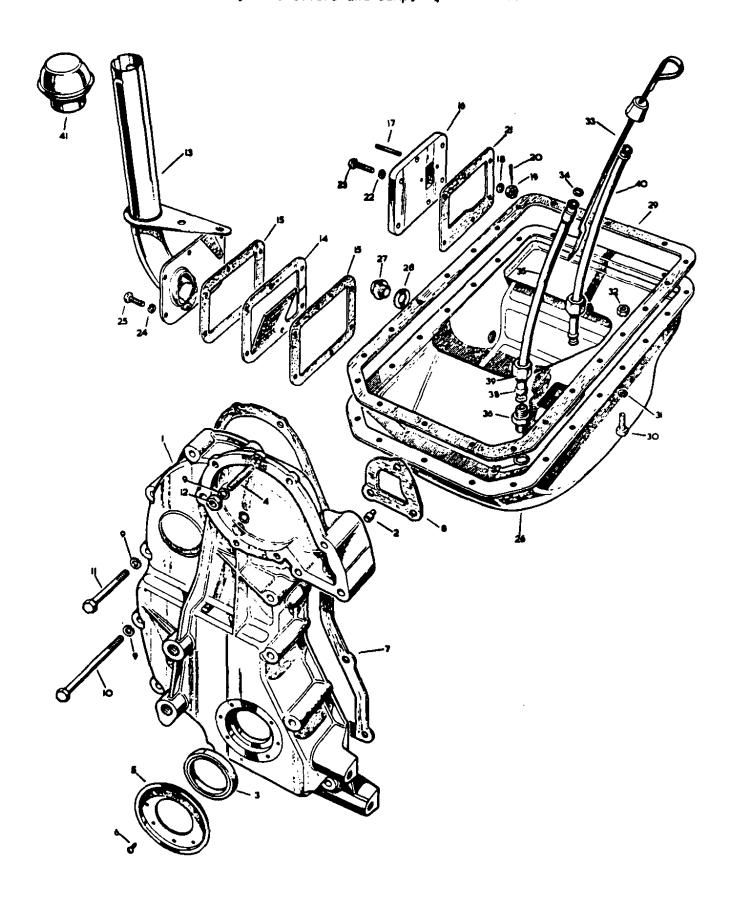


)pression)ratio.

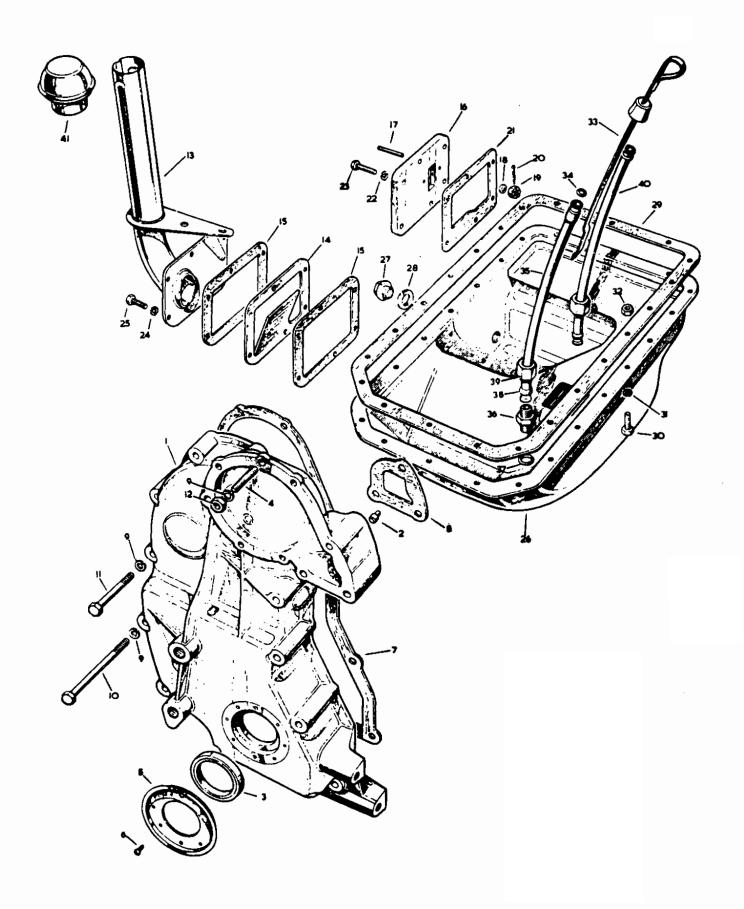

PLAT REF.	E 1 2 3 4 DESCRIPTION	ΩΤΥ	. PART No.	REMARKS
	Timing pointer at front cover	1	564362	From engine suffix 'K' onwards 7:1 compression ratio. Engine suffix 'A' onwards 8:1 compression ratio.
13	Side cover and oil filler pipe for engine, front	1	90510730	Not part of engine assy
14	Baffle plate for side cover, front	1	529394	
15	Joint washer for side cover, front	2	247555	
16	SIDE COVER ASSEMBLY, REAR	1	542600	
17	Stud for fuel pump	2	500792*)	
18	Plain washer)	2	4047)	Nut and split pin type
19	Nut (5/16" UNF)) Fixing stud	2	GHF201)	fixing
20	Split pin)	2	2422)	
	Stud for fuel pump	_	542601	Plain type stud fixing
21	Joint washer for side cover, rear]		
22	Spring washer) Fixing rear side		GHF332	
23	Set bolt (5/16" UNF x 1")) cover plate		GHF103	
24	Spring washer) Fixing front	7	GHF332 GHF120	
25	Set bolt (5/16" UNF x ₹")) side cover plate	1	529823	
26 27	Crankcase sump	i	536577	
28	Drain plug for crankcase sump Washer for drain plug	i	243959	
29	Joint washer for crankcase sump	i		
30	Set bolt (5/16" UNF x 2")) Fixing sump	21	255227	
31	Spring washer) to	22		
32	Nut (5/16" UNF) for stud) cylinder block	ī		
33	Oil level rod	1)
34	Sealing ring for rod	1	532387)Not
35	Tube for oil level rod	1	504032	Alternative)part
36	Double-ended union)	1	236060)	to one-piece type)of
37	Washer) Fixing tube to	1		type oil level rod)engine
38	Olive) cylinder block	3		tube.)assembl
39	Union nut)	1	,	
40	Tube for oil level rod	1	541860	One-piece type.) Alternative to) tube with separate) union.
41	Oil filler cap and breather filter	1	546440)


^{*} NO LONGER SERVICED

GROUP B ENGINE - Water Pump and Fan, 21 litre Petrol

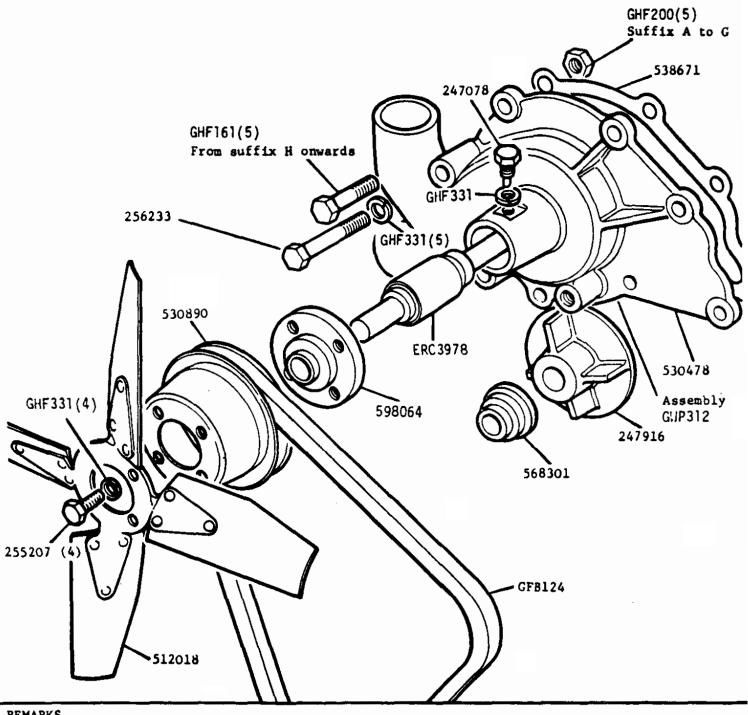


Water pump overhaul Kit 530590

GROUP B ENGINE - Thermostat and Housing, 21 litre Petrol

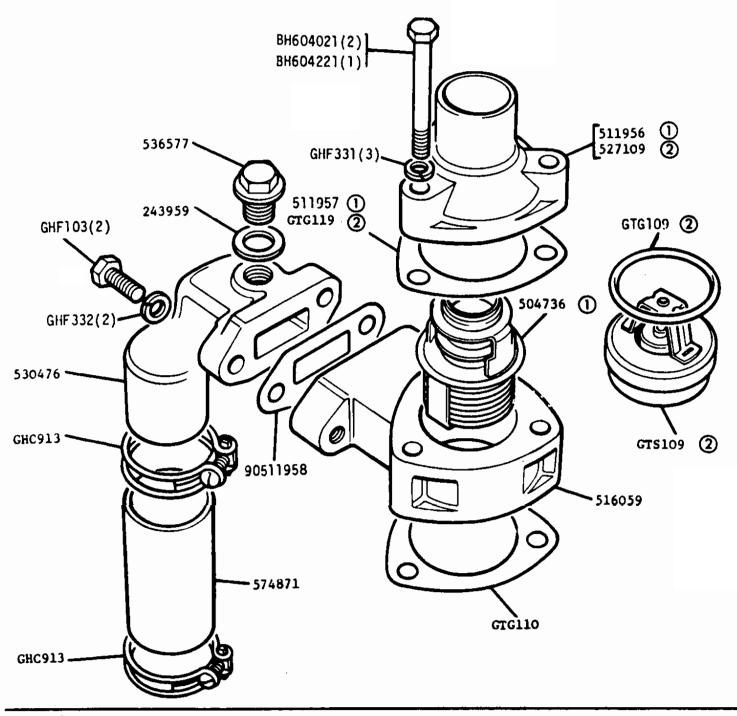


① Engine Suffix A to C 7.0:1 ② Engine Suffix D 7.0:1 Suffix A onwards 8.0:1

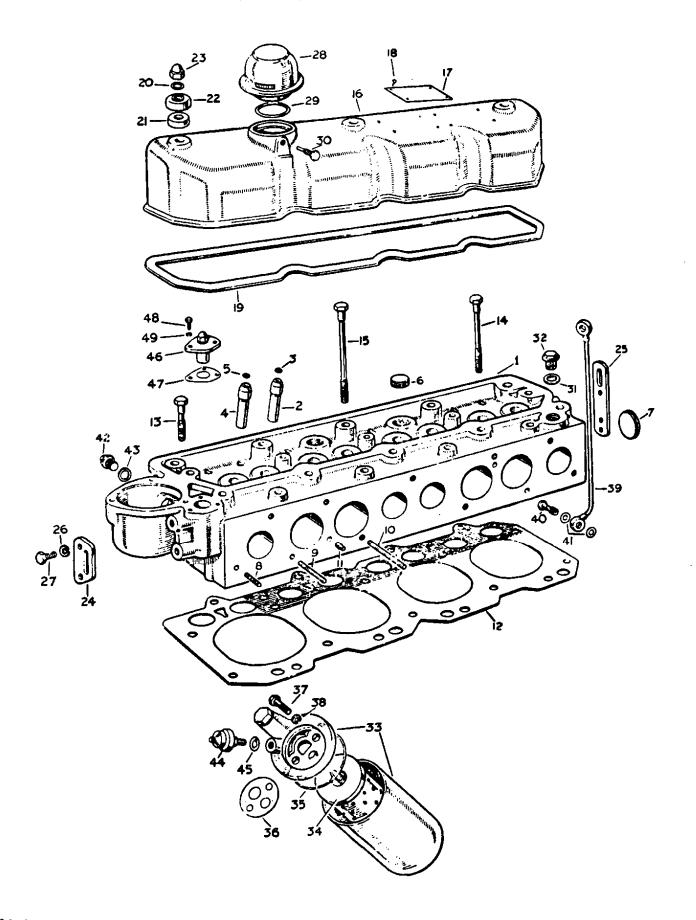

PLAT REF.	_	OTV BART No. PENA PE
ngr.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1	CYLINDER HEAD ASSEMBLY 7:1 COMPRESSION RATIO	1 598086
	CYLINDER HEAD ASSEMBLY 8:1 COMPRESSION RATIO	1 598089
2	Valve guide, inlet, and sealing ring	4 500144) with '0' ring type seal.
3	Sealing ring for inlet valve guide	4 2471860) Up to engine suffix 'J'
4	Valve guide, exhaust and sealing ring	4 500145) inclusive. 7:1 compression
5	Sealing ring for exhaust valve guide	4 2334190) ratio only
	Valve guide, inlet,	4 568686) With lip type oil seal.
	Oil seal for inlet valve guide	4 5547270) From engine suffix 'K'
	Valve guide, exhaust,	4 568687) onwards 7:1 compression
	Oil seal for exhaust valve guide	4 554728) ratio. Engine suffix 'A'
) onwards 8:1 compression) ratio
	Comp mlug 7" diameton	1 250830) Alternatives
	Core plug, ¼" diameter Cup plug, 15/16" diameter	1 525497)
6	Core plug, 1" diameter	4 518272
7	Core plug, 13" diameter	1 230250
8	Stud, short, for manifold	2 247144
·	Stud for manifold flange, centre	1 564574
11	Dowel for cylinder head	2 213700
12	Cylinder head gasket	1 GEG3308
13	Special set bolt, short)	4 279648
14	Special set bolt, medium)	9 247051
15	Special set bolt (6.11/16" long) Fixing	5 279650 Up to engine suffix "H"
) cylinder head	inclusive 7:1 compression
) to	ratio
	Special set bolt (5.3/16" long)) cylinder block	5 554621 From engine suffix 'J'
		onwards 7:1 compression
		ratio. Engine suffix 'A'
		onwards 8:1 compression
10	DOCKED COMED TOD ACCEMBLY	ratio 1 524846
16	ROCKER COVER, TOP, ASSEMBLY	1 524846 1 247634
17 18	Tappet clearance plate Drive screw fixing plate	4 AB606021
19		1 GEG431
20	Sealing washer)	3 273069
	Rubber washer	3 506069
	Cover for rubber washer) rocker cover	3 247624
23	Special nut	3 247121

@ Not included in cylinder head assembly


ENGINE - Cylinder Head, 2% litre Petrol

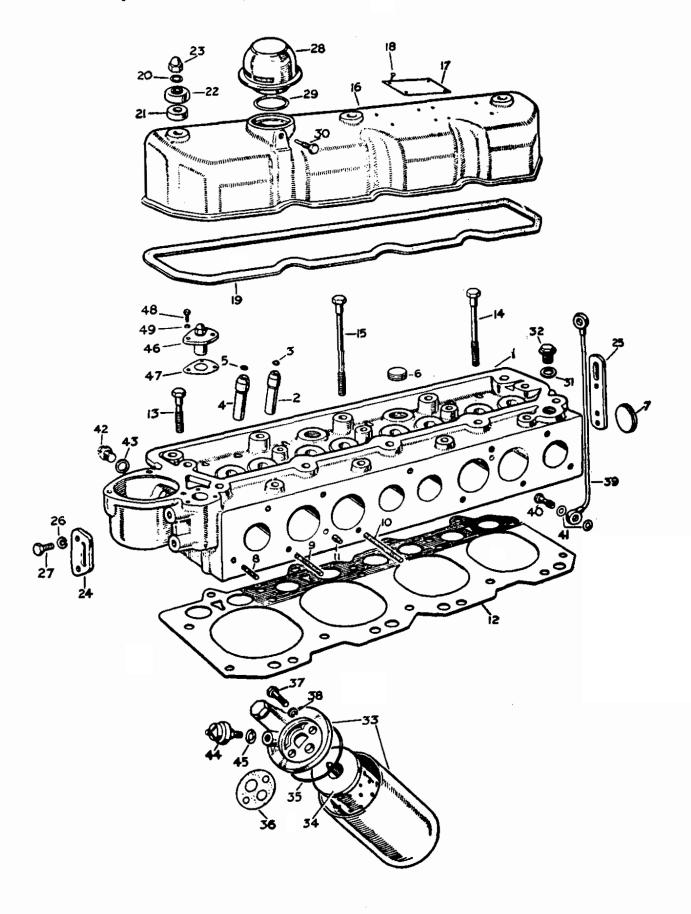


PLA1				
REF.	1 2 3 4 DESCRIPTION	מח	. PART No.	REMARKS
	Lifting bracket for engine, front]	525131	
25	Lifting bracket for engine, rear	1	ERC2686	
26	Spring washer) Fixing brackets	4	GHF332	
27	Set bolt $(5/16" \text{ UNF x }))$ to cylinder head	4	GHF120	
28	Breather filter for engine	1	247631	Not sout of ongine
29	Sealing ring for filter	1	268887	Not part of engine assembly
30	Special set screw fixing breather filter]	515291	
	Sealing washer for set screw]	232037	
31	Joint washer) For heater valve hole Plug (% BSP)) in cylinder head]	243959	
32	Plug (a BSP)) in cylinder head	1	536577	
33	Engine oil filter	1	537229	Short type
34	Element for filter, overall length 6.13/16"	1		For long type filter
	Element for filter, overall length 4g"	1		For short type filter
35	Gasket for filter	1	272539	
	Rubber washer for centre bolt	1	269889*	
36	Joint washer for filter	1	598354	
37	Set bolt (7/16" UNF x 12")) Fixing filter to	2	SH60710	1
38	Spring washer) cylinder block	2	WM60007	1
39	Oil pipe complete to cylinder head	ī	275679	
40	Banjo bolt fixing oil pipe	2	597563	
41	Joint washer for banjo bolts	4	232039	
42	Plug for thermometer hole in cylinder head	1	536577	Up to engine suffix 'H' inclusive 7:1 compression ratio only
	Unton bomonostinos busadanibban	1	GTR111	
	Water temperature transmitter	1	568457	onwards 7:1 compression
	Adaptor for water temperature transmitter	'	306 4 37	ratio. Engine suffix 'A' onwards 8:1 compression ratio
43	Joint washer for plug or adaptor	1	231577	
	Oil pressure switch	1	GPS102	
45	Joint washer for switch	1	232039	
, •	Shakeproof washer for switch terminal	i	GHF321	
46	Thermostat switch for mixture warning light	ĺ	BHA5252	
47	Joint washer for switch, 1/16" thick	j	236022	
48	Set bolt (2BA x]")) Fixing	•		Alternatives
,,,	Set bolt (2BA x 7/16")) switch		251002	
49	Spring washer) to head	3	WM70200	1
,,,	Valve guide oil control kit	ĺ		To convert early engines with 'O' ring type valve guide seals to lip type oil seals

^{*} NO LONGER SERVICED

ENGINE - Manifolds, 21 litre Petrol

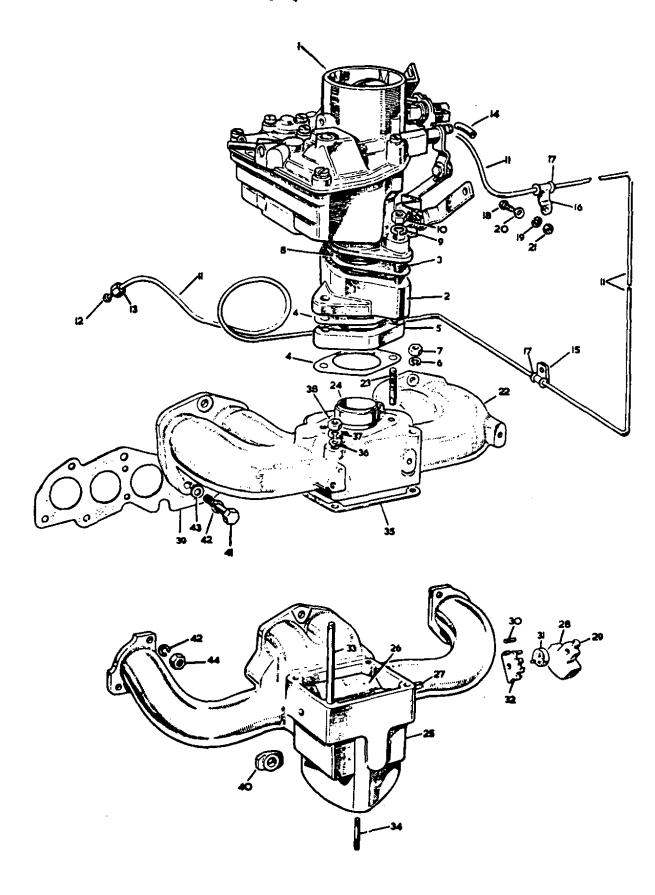

REF.	TE 1 2 3 4 DESCRIPTION	QŦ	Y. PART No.	REMARKS
		-) See row 1L 02
	Carburetter complete	1) Up to engine suffix
	Joint washer for carburetter	ż	278163) 'H' inclusive 7:1
	Packing for carburetter	ຳ	278162) compression ratio
		•		
	Spring washer) Fixing	2	GHF333) only
	Nut (a" UNF) carburetter	2	GHF202)
]	Carburetter complete	1)	See row 1L 06
2	Adaptor for carburetter	1	554175)	
3	Stud for carburetter	2	252514)	
4	Joint washer for adaptor and packing piece	2	278163)	
5	Packing for adaptor	1	278162)	
6	Spring washer) Fixing adaptor and packing	2	GHF333)	"J' onwards 7:1
7	Nut (a" UNF)) to inlet manifold	2	GHF202)	compression ratio
8	Joint washer for carburetter	1	554163)	From engine suffix
9	Spring washer) Fixing carburetter	2	GHF332)	'A' onwards 8:1
0	Nut (5/16" UNF)) to adaptor	2	GHF201)	compression ratio
	Suction pipe complete, carburetter to			•
	distributor	1	527349	Up to engine suffix 'H' inclusivé 7:1 compression ratio only
1	Suction pipe complete, carburetter to			compression racto only
I	distributor	1	554145	From engine suffix 'J' onwards 7:1 compression ratio. From engine suffix 'A' onwards 8:1 compressi ratio
2	Ninnla) Sustian mine	1	RTC607	racio
3	Nipple) Suction pipe,	1		•
. 3	Nut) carburetter end]	3783	Un to angine suffice 191
	Screwed union) Suction pipe,	1	260707	Up to engine suffix "H'
	Olive) carburetter end	7	260708	'H' inclusive 7:1
	Dallan A. Language and Company of the Company of th	•		compression ratio only
14	Rubber tube, suction pipe to carburetter	1	574878	From engine suffix 'J'
				onwards 7:1 compression
				ratio. From engine suffi
				'A' onwards 8:1 compressi
				ratio
15	Clip for suction pipe	1	214228	
16	Clip, suction pipe to manifold stud	1	514580	Up to engine suffix 'H'
	,,			inclusive 7:1 compression
				ratio
	Clip, suction pipe to cylinder head stud	1	90512646	
17	Rubber grommet for clip	3	214229	
8	Bolt (1 UNF x 1)) Fixing clip	ĭ	255206	
19	Spring washer) to rear	i	GHF331	
20	Plain washer) lifting	i	RTC609	
21	Nut (1" UNF)) bracket	7	GHF 200	
22	INLET MANIFOLD ASSEMBLY	1		With tanning for comes
23		-	596000 597726	With tapping for servo
_3	Stud for carburetter or adaptor	2	587726	
	Plug for inlet manifold (servo connection)	1	596069	
	Washer for plug	1	243958	

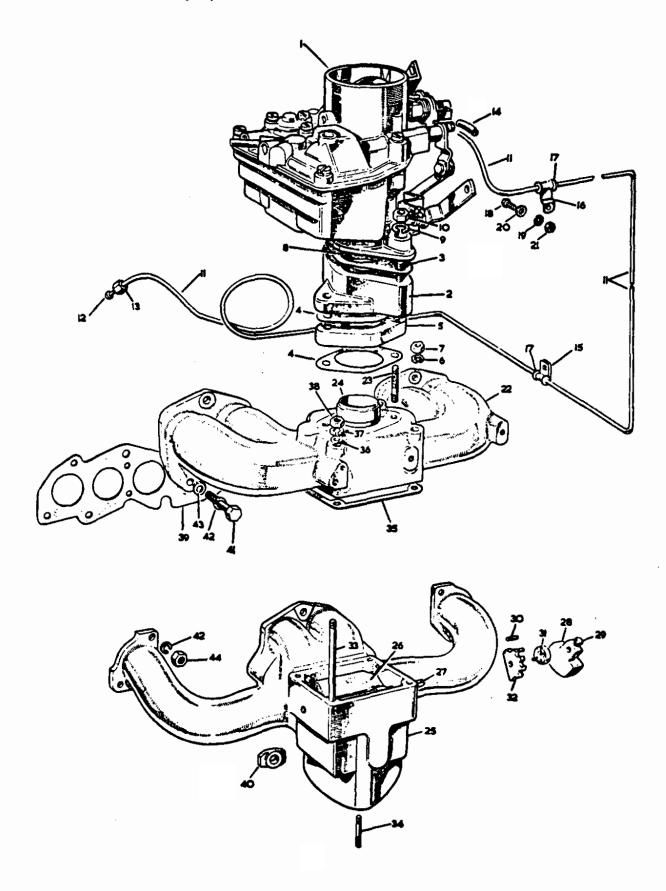


PLA'		an	r. PART No.	REMARKS
24	Liner for inlet manifold	1	278161	
	Exhaust manifold	1	598473	
26	Butterfly valve	1	247811*)
27	Spindle for butterfly valve	1	279168*	j
	Counterbalance weight	1	279169	j
29	Set screw (2BA x 3") fixing weight to spindle	1	237119) For early type manifold
30	Stop pin for adjusting plate	1	247819) with butterfly valve
31	Bi-metal spring for butterfly	1	247818	}
32	Adjusting plate and pin for spring	ĺ	536646	j
33	Stud (3.11/16")) For inlet	3	574048	•
	Stud (3½")) manifold	ĺ	530135	
	Special set bolt) Fixing inlet to	2	BX605161	
	Special set bolt) exhaust manifold	2	256429 *	
34	Stud for exhaust pipe	3		
	Joint washer)	1	247824	
36	Plain washer) Fixing inlet to	4	RTC613	
37	Spring washer) exhaust manifold	4	GHF 332	RH Stg
	Nut (5/16" UNF))	4	GHF 201	•
39	Joint washer, inlet and exhaust manifold to			
	cylinder head	1	GEG639	Metal and fibre type. Up to engines numbered 25283642J except Switzer- land, 25282861J Switzer- land
	Joint washer, inlet manifold to cylinder head	2	GEG661@	Corrugated tin plate type From engines numbered 25283643J onwards except Switzerland 25282862J onwards Switzerland.
40	Clamp for manifold	2	564308	Not part of engine assembly
41	Set bolt (5/16" UNF x 22"))	4	BH605221	
• •	Set bolt (5/16" UNF x 2")) Fixing	ž		
	Set bolt (5/16" UNF x 1%")) manifold	2		
42		ากั		
	Plain washer) cylinder	5		
. 3	Plain washer, thick) head	4		
44		3	GHF201	
	Exhaust manifold fixing kit	ĭ	606988	
	the second secon	•		


^{*} NO LONGER SERVICED

With corrugated tin plate inlet manifold joint washer, the exhaust manifold and cylinder head are in metal-to-metal contact.

iROUP B
Ingine Mountings and Rubbers, 21 litre Petrol

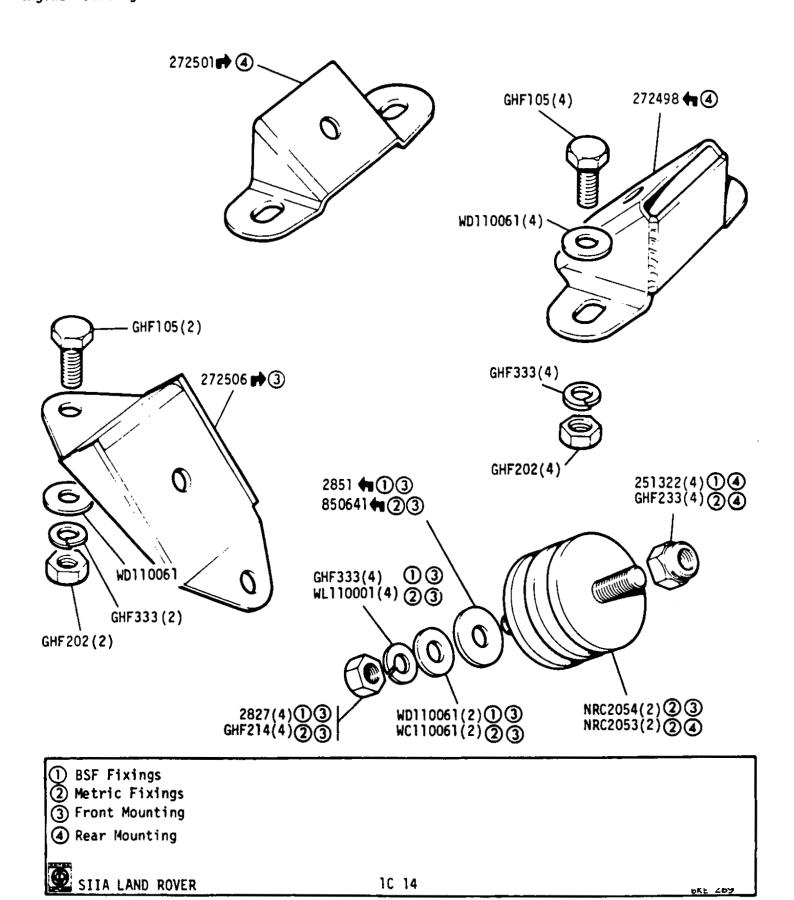

GROUP B
ENGINE - Cylinder Block 2.6 Litre Petrol

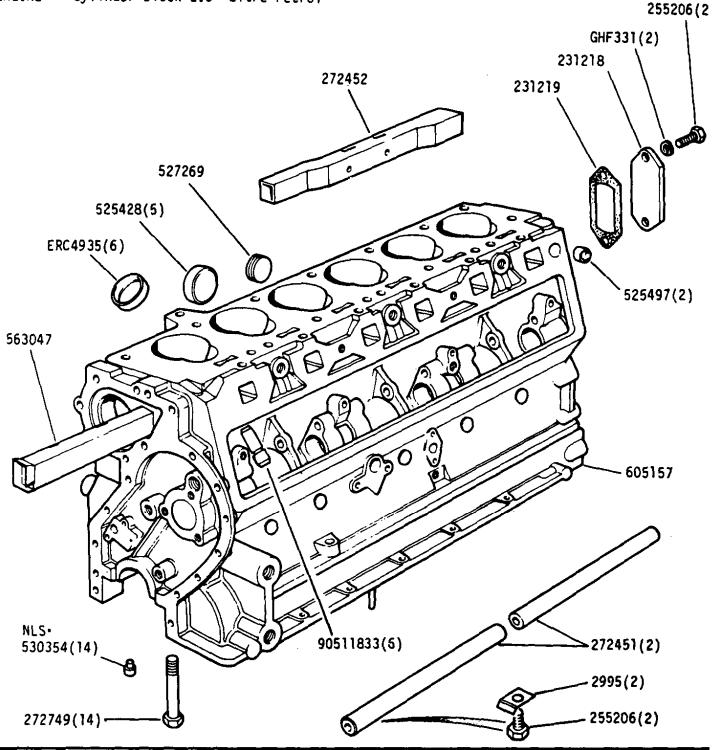

New engine assy 7.8:1 C/R, RTC2388N Standard New engine assy 7:1 C/R, RTC2407N Optional Rebuilt engine assy 7.8:1 C/R, RTC2388R Rebuilt engine assy 7:1 C/R, Not serviced Engine overhaul gasket kit 605106 Decarbonising gasket kit GEG1214

Stud kit 535708 Cylinder liner 516498(6)




SIIA LAND ROVER

10 03

2RE 36

GROUP B ENGINE - Cylinder Block Fixings 2.6 Litre Petrol

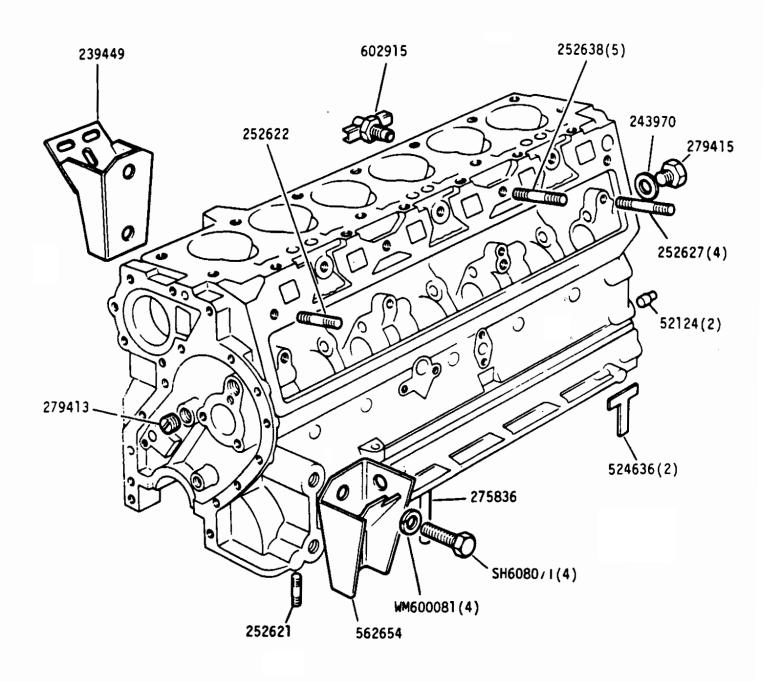

ENGINE - Crankshaft, 2.6 litre Petrol

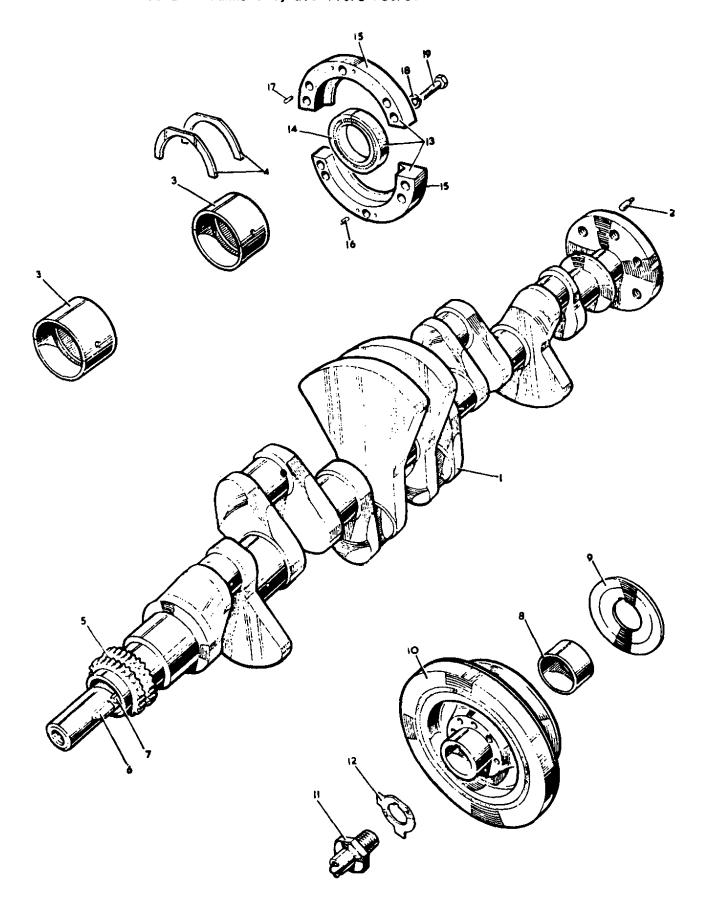


PLATE REF. 1 2 3 4 **DESCRIPTION** QTY. PART No. REMARKS 1 541910 1 CRANKSHAFT ASSEMBLY, STD Dowel for flywheel 1 6395 3 BEARING SET FOR CRANKSHAFT, STD RTC1720 BEARING SET FOR CRANKSHAFT, .010" US 1 RTC172010) Engine BEARING SET FOR CRANKSHAFT, .020" US RTC172020) set 4 Thrust washer for crankshaft, Std 1 600177 Thrust washer for crankshaft, .0025" OS 600174 1 Thrust washer for crankshaft, .005" OS Pairs ٦ 600175 Thrust washer for crankshaft, .0075" OS 600176 1 Thrust washer for crankshaft, .010" OS 600178 1 Thrust washer for crankshaft, .0125" OS 600179 Chainwheel on crankshaft 5F44F3 Key, front, locating vibration damper 542622 Key, rear, locating chainwheel 7 1 542623 8 Oil seal ring for crankshaft 1 541921 9 Oil thrower on crankshaft 1 530343 10 VIBRATION DAMPER AND PULLEY ASSEMBLY ERC4182 Not part of engine assembly 1 1 11 Starting dog 546324 12 Lockwasher for starting dog 1 546333 13 Crankshaft oil retainer and seal assembly 1 542494 1 542492 14 Oil seal assembly 1 270656 Silicone grease Rear bearing split seal halves 2 523240 15 Dowel, lower 2 90519064 16) Fixing retainer Dowel, upper 2 246464) to cylinder block 17 Spring washer) and rear
Bolt (la" UNF x la")) bearing cap 18 10 GHF331 10 255208

ENGINE - Connecting Rod and Piston, 2.6 litre Petrol

```
PLATE
                                                             QTY. PART No.
                                                                         REMARKS
                             DESCRIPTION
REF.
      1 2 3 4
                                                              524492
    CONNECTING ROD ASSEMBLY
      Gudgeon pin bush
                                                             6 273163
                                                            12 90518100
      Special bolt
                             ) Fixing connecting
 3
                                                           12 ERC1027
      Special nut
                            ) rod cap
                                                            1 RTC1721
   Connecting rod bearing set, Std
                                                        1 RTC172110
1 RTC172120
6 537263 * )
    Connecting rod bearing set, .010" US
   Connecting rod bearing set, .020" US PISTON ASSEMBLY, STD, GRADE 'Z'
    PISTON ASSEMBLY, STD, GRADE 'A'
                                                             6 537264 *
    PISTON ASSEMBLY, STD, GRADE 'B'
                                                             6 537265 *
    PISTON ASSEMBLY, STD, GRADE 'C'
                                                            6 537266 *
                                                                            Engine with
    PISTON ASSEMBLY, STD, GRADE 'S'
                                                            6 ERC2337S )
                                                                            7.8:1 compression ratio
    PISTON ASSEMBLY, .010" OS
                                                             6
                                                                537268 *
    PISTON ASSEMBLY, .020" OS
PISTON ASSEMBLY, .030" OS
                                                                537269
                                                             6
                                                                537270 *
                                                             6
   PISTON ASSEMBLY, .040" OS
PISTON ASSEMBLY, STD, GRADE 'Z'
PISTON ASSEMBLY, STD, GRADE 'A'
PISTON ASSEMBLY, STD, GRADE 'B'
                                                                537271
                                                             6
                                                             6
                                                                536267 *
                                                             6
                                                               536268 *
                                                            6
                                                               536269
    PISTON ASSEMBLY, STD, GRADE 'C'
                                                             6
                                                               536270
                                                                             Engine with
    PISTON ASSEMBLY, STD, GRADE 'S'
                                                             6 ERC23395 ) 7:1 compression ratio
    PISTON ASSEMBLY, .010" OS
                                                               536272
                                                            6
    PISTON ASSEMBLY, .020" OS
                                                                536273
                                                            6
    PISTON ASSEMBLY, .030" OS
                                                               536274 *
                                                             6
    PISTON ASSEMBLY, .040" OS
                                                               536275
                                                             6
                                                           12 231155 *
12 236173 *
      Piston ring, compression, Std
      Piston ring, compression, .010" OS
                                                               236174
      Piston ring, compression, .020" OS
                                                          12
      Piston ring, compression, .030" OS
                                                          12
                                                               236175 *
      Piston ring, compression, .040" OS
                                                          12 236176
      Duaflex scraper ring, Std
                                                           6 554620 *
      Duaflex scraper ring, .010" OS
                                                            6 554789
      Duaflex scraper ring, .020" OS
                                                            6 554790 *
      Duaflex scraper ring, .030" 0S
                                                            6
                                                               554791 *
      Duaflex scraper ring, .040" OS
                                                                554792 *
                                                             6
 9
      Gudgeon pin, Std
                                                             6
                                                                264569
      Gudgeon pin, .001" 0S
                                                                267257 *
                                                             6
      Gudgeon pin, .003" OS
                                                            6
                                                               267258 *
10
      Circlip for gudgeon pin
                                                            12
                                                               C3964
                                                            6 RTC2411
   Piston ring set, Standard
    Piston ring set, 0.020in OS
                                                            6 RTC2411020
    Piston ring set, 0.040in OS
                                                             6 RTC2411040
```

^{*} NO LONGER SERVICED

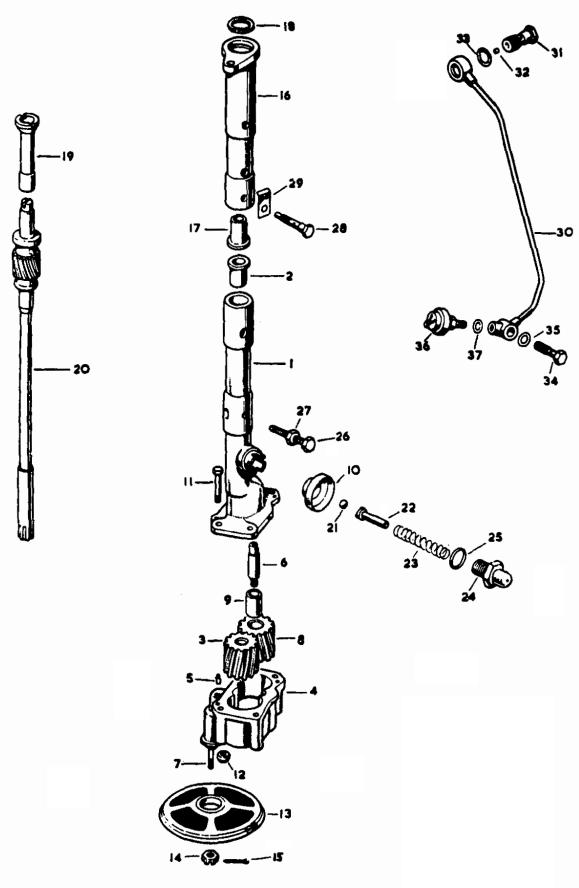



PLATE REF. 1 2 3 4

DESCRIPTION

QTY. PART No. REMARKS

	OIL PUMP ASSEMBLY	1	90564334
1	OIL PUMP BODY ASSEMBLY	i	
	Bush for drive shaft		
2]	
3	Oil pumo gear, driver	1	240555
4	OIL PUMP COVER ASSEMBLY	1	56 4335
5	Dowel locating body	2	236257
5 6	Spindle for idler wheel	1	90502209
7	Stud for oil strainer	1	90564217
8	OIL PUMP IDLER GEAR ASSEMBLY	j	
9	Bush for idler gear	i	
10	Oil pump shield	i	
11			
11	Set bolt (5/16" UNF x 3" long)) Fixing cover		255227
1 2	Spring washer) to body	4	
13	Oil strainer	1	
	Extension piece, strainer to oil pump]	
14	Castle nut) Fixing strainer	1	
15	Split pin) to pump cover	1	
16	DISTRIBUTOR HOUSING ASSEMBLY	1	274084
17	Bush for drive shaft	1	521583
18	Cork washer for distributor housing	1	52278
19	Drive shaft for distributor	1	26 7829
20	Oil pump and distributor gear and shaft assembly	•	
	(phosphor-bronze gear)	1	598214
21	Steel ball)	i	
22	Plunger) For oil	i	245940
23	Spring) pressure	j	
24	Potaining can \ volume		
25	Retaining cap) release		504995
	Joint washer) valve	1	
26	Special set screw) Fixing oil pump Locknut (5/16" UNF)) to cylinder block	1	274086
27	Locknut (5/16" UNF)) to cylinder block	1	
28	Oil feed bolt locating distributor housing	1	
29	Locker for bolt	1	2504
30	Oil pipe to cylinder head	1	558302
	Banjo for oil pipe	ו	557782
31	Banjo bolt fixing oil pipe to cylinder head	1	
33	Joint washer for banjo bolt	2	
34	Banjo bolt fixing oil pipe to cylinder block	ī	
35	Joint washer for banjo bolt	ż	
36	Oil pressure switch complete	í	GPS102
37	Joint washer for switch	ί	232039
57	Agus unguel for autofil	'	5750J3


ENGINE - Camshaft and Tensioner Mechanism, 2.6 litre Petrol

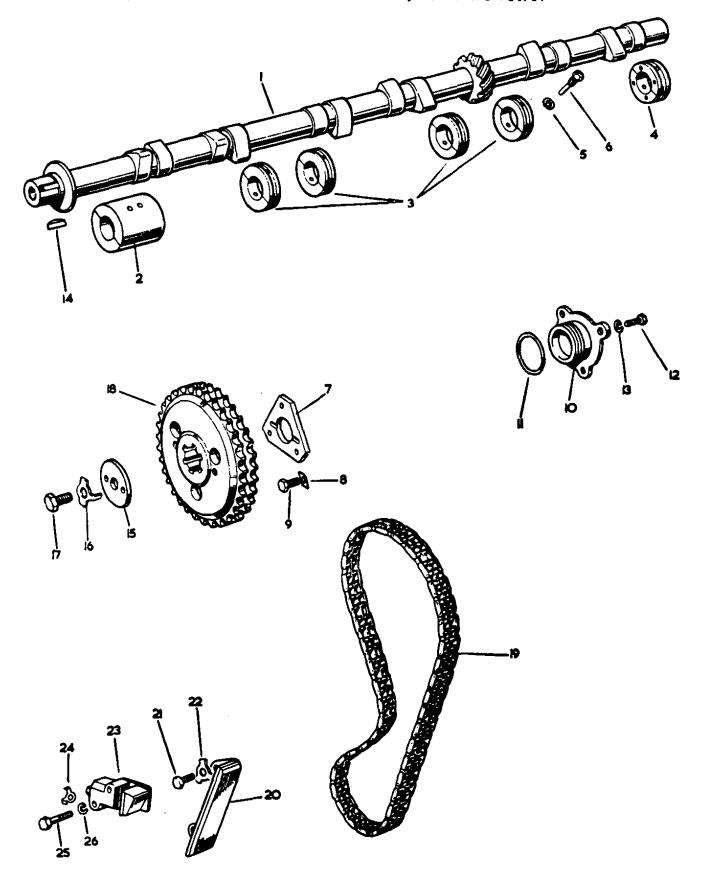


PLAT	_				
REF.	1 2 3 4	DESCRIPTION	ΩΤΥ	. PART No.	REMARKS
1	Camshaft		1	523139	
2	Bearing, front)	1	274116	
3	Bearing, intermediate) For camshaft	4	274115	
4	Bearing, rear)	1	274117	
5		ixing camshaft	6	GHF332	
6	Special set screw) be	earing to block	6	274118	
7	Thrust plate for cams!		1	502266	
8	Locker) Fixing thrust	3	2500	
9	Set bolt (1" UNF x 1")) plate to block	3	255206	
10	Sealing plate for came		1	530481	
11	Joint washer for seal		1	276541	
12)) Fixing sealing plate	3	255206	
13	Spring washer		3		
14	Key locating chainwhee		1	230313	
15	Retaining washer) Fixing	1	9093	
16	Locker) chainwheel	ז	9210	_
17	Set bolt (3" UNF x 3")) to camshaft	1	SH60607	
18	Chainwheel for camsha		1	5631450	
19	Camshaft chain		1	266662	
20	Vibration damper for		1	275234	
21	Set bolt (}" UNF x }")) Fixing damper to	2	255204	
22	Locker) cylinder block	2	557523	
23	Tensioner for timing	chain	1	266661	
24	Tab washer for tens	i oner	1	504443*	
25	Set bolt (1" UNF x 1)	")) Fixing tensioner	2		1
26	Spring washer) to cylinder block	2	GHF331	

Also supplied as replacement for early type chainwheel with separate hub and fixings. NO LONGER SERVICED $\frac{1}{2} \left(\frac{1}{2} \right) = \frac{1}{2} \left(\frac{1}{2} \right) \left($


GROUP B ENGINE - Valves and Push Rod, 2.6 litre Petrol

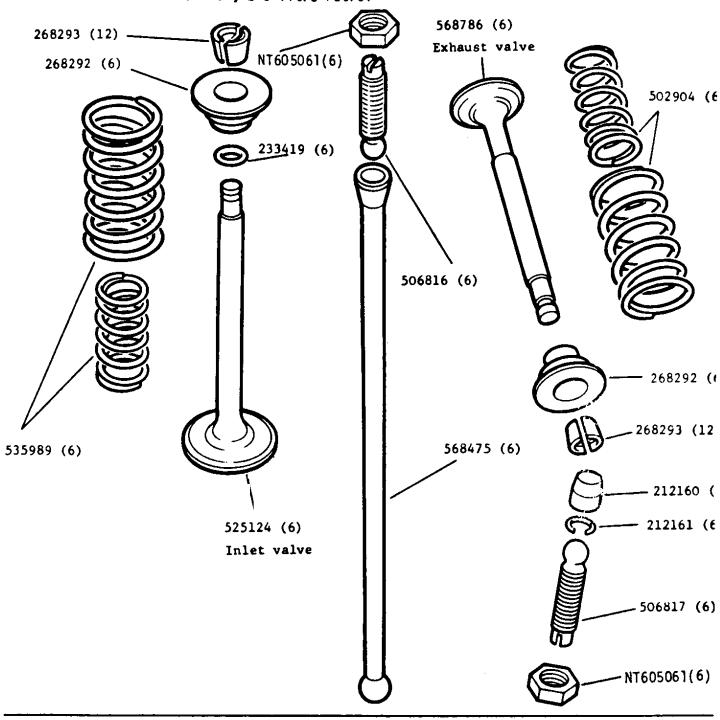

GROUP B
ENGINE - Inlet Valve Rockers, 2.6 litre Petrol ____

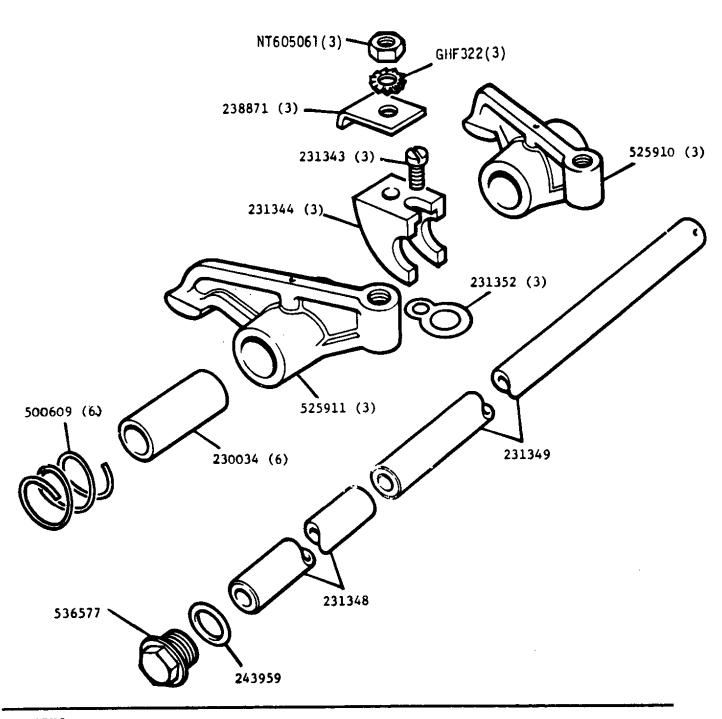

GROUP B ENGINE - Exhaust Valve Rockers, 2.6 litre Petrol

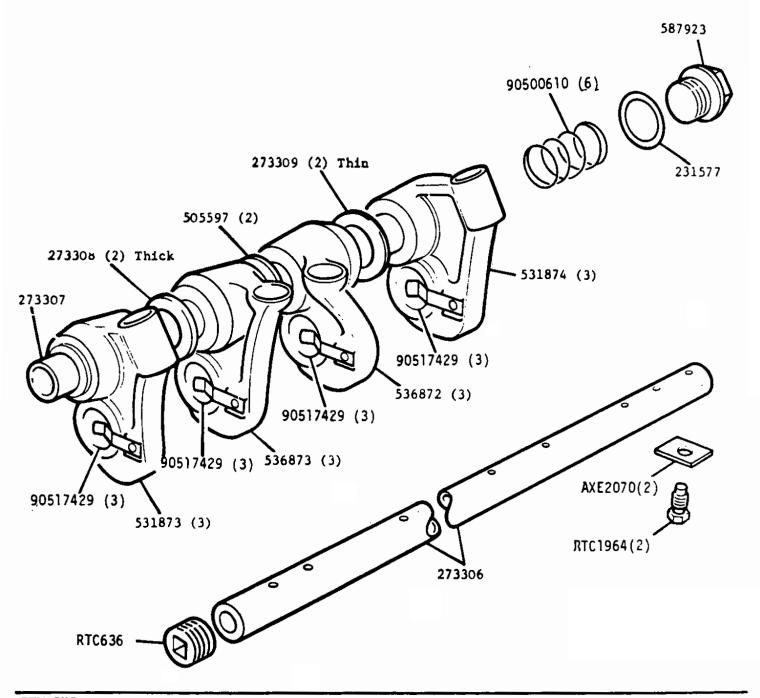

ENGINE - Front Cover, Side Cover and Sump, 2.6 litre Petrol


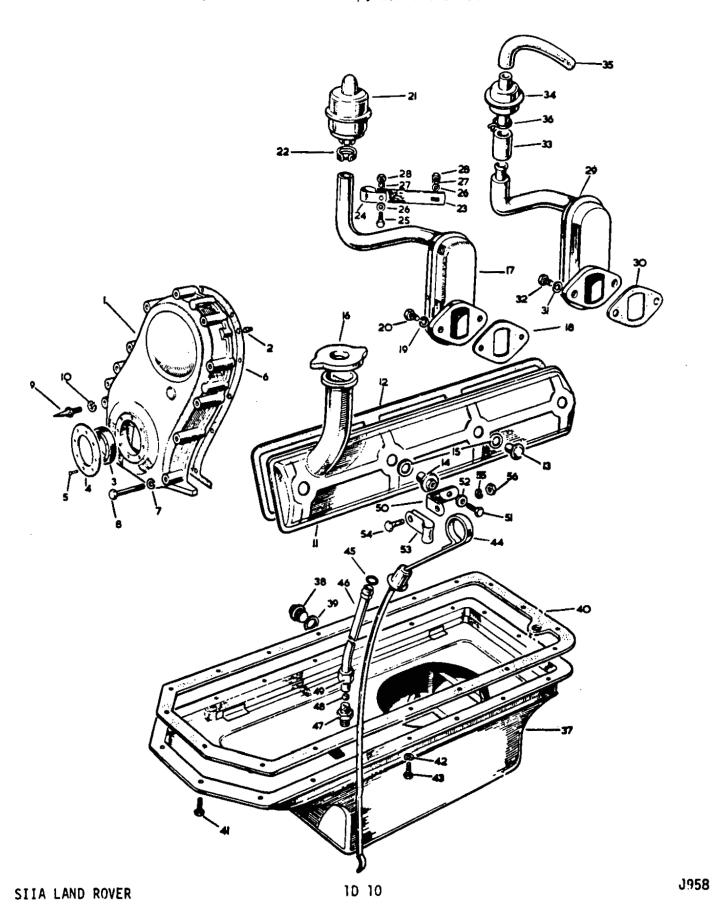


PLATE REF.	E 1 2 3 4 DESCRIPTION	ату	. PART No.	REMARKS
_	FRONT COURD ACCENDING		FFADOA	
1	FRONT COVER ASSEMBLY	1	554924	
2	Dowel locating front cover	2	6395	•
3	Oil seal for front cover	<u>]</u>	9051602	8
4	Mud excluder	1	542073	_
5	Drive screw fixing excluder	8	AB60602	
6	Joint washer for fro nt cover	1	272835	
7	Spring washer) Fixing front cov	ver 10	GHF 332	
8	Set bolt (5/16" UNF x 1g")) to cylinder bloc	:k 10	256025	
9	Timing pointer at front cover	1	564163	
10	Spring washer for timing pointer	3	GHF331	
11	Rocker cover, side, and oil filler	7	542425	
12	Joint washer for rocker cover	1	GEG433 _	
13	Special nut)	3	2740917	Jp to engines numbered
14	Special union nut)	1		34516198B, 34600575B,
	Special nut) Fixing side cover	4		From engines numbered
				34516199B, 34600576B
	•		+	onwards
15	Rubber sealing washer)	4	267828	
	Oil filler cap	1	598231	
17	Breather pipe for engine crankcase	1	541291*	
18	Joint washer for breather pipe	1	214058*	
19	Spring washer) Fixing breather ;	pipe 2	GHF 332	
	Set bolt (5/16" UNF x }")) to cylinder block		255226	
21	Filter for breather pipe	1	90518145	Up to engines numbered
- 22	Clip fixing filter to breather pipe	1	GHC811	34500469B
23	Steady bracket for breather pipe	1	554917*	34600024A
24	Clip for breather pipe	1	518146*	
25	Bolt (1 UNF x 1)	1	255206	
26	Plain washer) Fixing breather pipe	2	RTC609	
27	Spring washer) bracket and clip	2	GHF331	
	Nut (i UNF)	2	GHF 200_	
	Breather pipe for engine crankcase	1	566957	
30	Joint washer for breather pipe	1	214058*	
31	Spring washer) Fixing breather p	ipe 2	GHF332	From engines numbered
32		2	GHF120	34500470B
				34600025A onwards
33	Hose, breather pipe to flame trap	1	587105	
34	Flame trap	1	149996*	
35	Hose, flame trap to carburetter	1	587104	
36	Clip for hoses	3	554260_	
37	Crankcase sump	1	564215	
38		1	536577	
39	Joint washer for plug	1	243959	
40	Joint washer for sump	1	GEG538	<u>.</u>
41	Set bolt (5/16" UNC x 3"))		SH50507	1
42	Spring washer) Fixing sump to		GHF 332	
43	Set bolt (5/16" UNF x [")) cylinder block	_	255227	
	Nut (5/16" UNF)	1	GHF201	NO LONOTO CERUTATE
			•	NO LONGER SERVICED

ENGINE - Front Cover, Side Cover and Sump, 2.6 litre Petrol

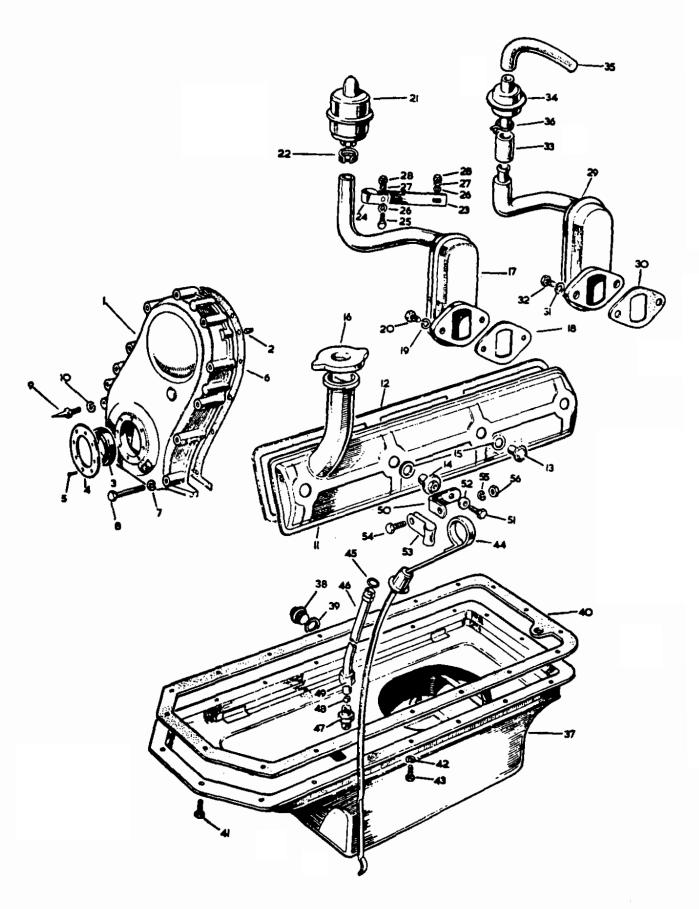

PLA'	-		r. PART No.	REMARKS
	-	OT	554834 532387 554832 541266 ** 236408 236407	Up to engines numbered 34516198B, 34600575B
50	Bracket, oil level tube to side cover Set bolt (½" UNF x 9/16")) Fixing bracket to Sealing washer) special union nut on) side cover	1	554833 * 255205 232037))) Up to engines numbered) 34516198B
53 54 55 56	Clip for oil level tube Bolt (1 UNF x 2) Fixing Spring washer) clip and tube Nut (1 UNF)) to bracket Guide tube for oil level rod	1 1 1	554852 255206 GHF331 GHF200 546583	34600575B
	Adaptor for guide tube Washer fixing adaptor to block	1	546584 232040) From engines numbered) 34516199B, 34600576B) onwards.

^{*} NO LONGER SERVICED


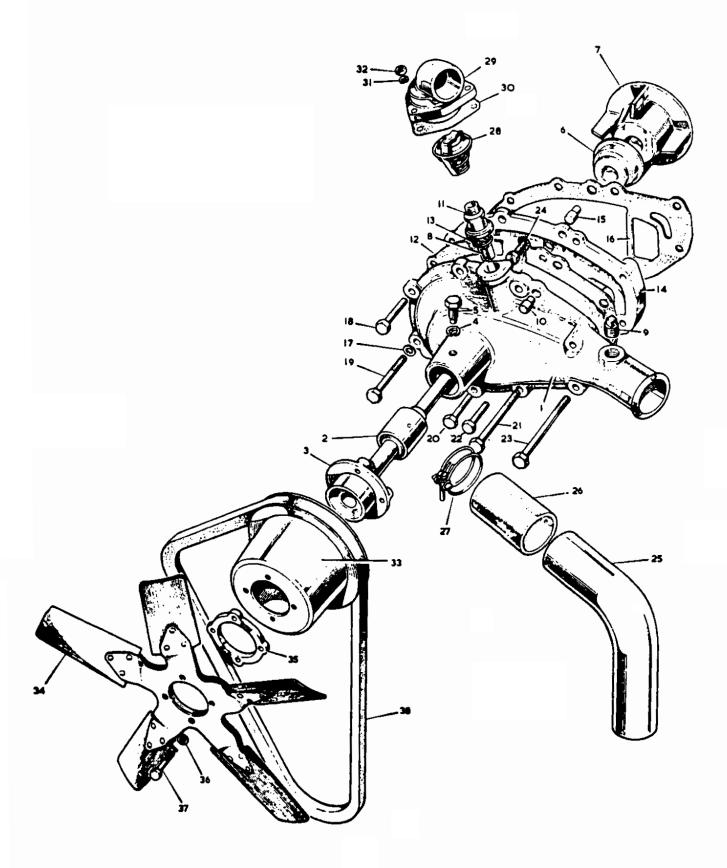


PLATE REF.	1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
1	WATER PUMP ASSEMBLY	1 GWP 305 7
2	Spindle and bearing complete	1 ERC3978
3	Hub for fan blade	1 564270
4	Spring washer) Locating bearing	
5	Special set bolt) in casing	1 247078
6	Carbon ring and seal	1 568301 Not part of engine assembly
7	Impeller for pump	1 563037
8	Tube for thermostat by-pass	1 564164
9	Plug (%"BSP) for heater adaptor hol	e in casing 1 3291
10	Dowel for water pump casing	2 6395
11		1 564165 🔟
12		1 564157
13	Rubber seal, pump to cylinder head	1 RTC1975
14	Adaptor for water pump	1 563154
15	Dowel for adaptor	2 6395
16	Joint washer for adaptor	1 563038
17	Spring washer)	10 GHF331
	Set bolt (¾" UNF x 1"))	3 GHF101
19	Set bolt (1" UNF x 18")) Fixing wat	
20	Set bolt (1 UNF x 11")) pump and	2 BH604091
21	Set bolt (1" UNF x 21")) adaptor to Set bolt (1" UNF x 2"))	
22	Set bolt (}" UNF x {"))	1 255208
23	Set bolt (1" UNF x 21"))	2 256410
24	Special 'Wedgelok' screw)	3 563050
25	Inlet pipe for water pump	1 552517 7
26	Hose, water inlet pipe to pump	1 562915 Not part of engine assembly
07	Clip, hose to inlet pipe	1 GHC1217
	Clip, hose to pump	1 50322 🔟
	Thermostat, wax type	1 GTS114
29 30	Outlet pipe to radiator	1 587463 1 GTG118
31	doint washer for water outlet pipe	3 GHF331
32	Spring washer) Fixing pipe to Nut (1 UNF) 7) cylinder head	3 GHF200
33	Pulley for fan	1 564267
34	Fan blade	7 574044 7
	Distance piece for fan blade	1 274737
36	Spring washer) Fixing pull	
37	Set bolt (1" UNF x 11")) and blade 1	
38	Fan belt	1 GFB189
30	Water pump overhaul kit	1 605716


ENGINE - Cylinder Head, 2.6 litre Petrol

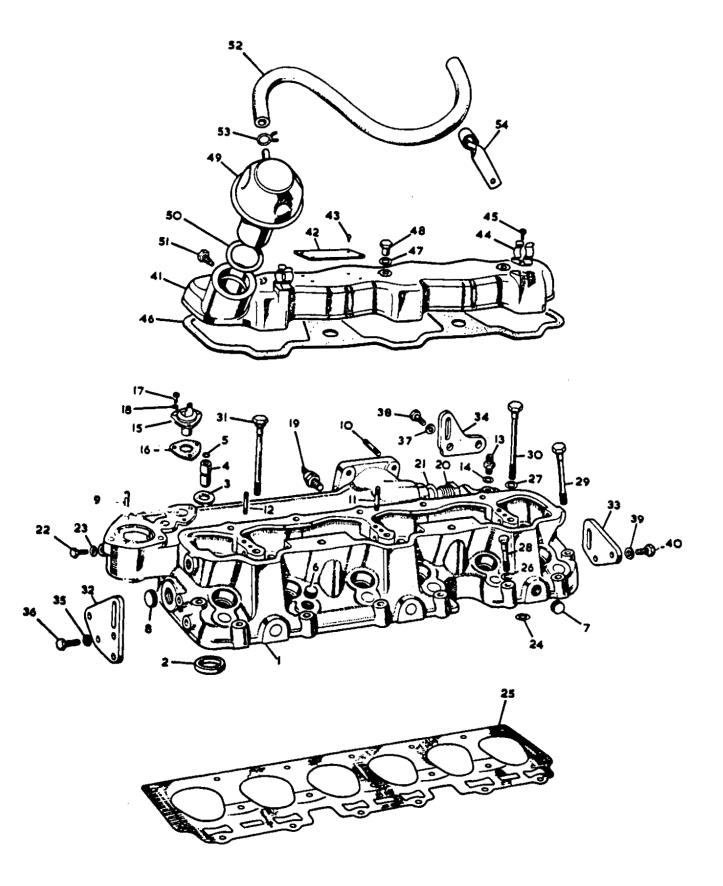

PLA REF.		αт	Y. PART No. REMARKS
	CYLINDER HEAD ASSEMBLY	1	564202
2	Insert for inlet valve	6	266321
3	Washer for valve spring	6	230062
	Valve guide, inlet	6	504169
5	Rubber ring for valve quide, inlet	6	
4 5 6	Core plug , 11/16" diameter	7	230251
7	Core plug, I" diameter	4	210492
	Core plug, l" diameter	1	518272
8	Core plug, 12" diameter	2	230250
9	Stud for water outlet pipe	3	25 2501
10	Stud for carburetter	4	252515
	Stud for carburetter relay bracket	3	2 52497
11	Stud for rocker cover, long	3	506047
13	Double-ended union for servo pipe	1	90513171
14	Joint washer for union]	243958
	Thermostat switch for choke warning light	1	BHA5252
16	Joint washer for thermostat switch	j	236022
17	Set bolt (2BA x 7/16")) Fixing	3	251002
18	Spring washer) switch	3	
19	Water temperature transmitter	ļ	GTR111
20	Plug for heater connection hole	1	278164
21	Joint washer for plug	1	243972
22 23	Set bolt (1" UNC x 7/16")) For hole in	,	253003
24	Joint washer for bolt) thermostat housing]	232037 532319
25	<pre>'0' ring for oil return hole in cylinder head Cylinder head gasket</pre>	1	GEG339
	Plain washer, small)	6	WB110061
27	Plain washer, large) Fixing	าำ	RTC611
ر2 ک	Special set bolt (3" UNF x 1.29/32")) cylinder	6	274093
29	Special set bolt (7/16" UNF x 2.17/32") head	3	
30	Special set bolt (7/16" UNF x 4.29/32") to	8	90574104
31	Special set bolt (7/16" UNF x 5.5/32")) block	3	587338
•	Plain washer	3	587339 For use with bolt 587338
32	Front lifting bracket	Ĭ.	568363*
33		1	ERC4387
34	Rear lifting bracket at rear side face, RH	1	
	Spring washer) Fixing	2	GHF332
3 6	Spring washer	2	
37	Spring washer) Fixing rear bracket Set bolt (5/16" UNC x 1")) at side face	2	GHF332
38	Set bolt (5/16" UNC x 1")) at side face	2	
39	Spring washer	2	GHF333
40	Set bolt (₹" UNC x ₹")) at rear face	2	SH506061

^{*} NO LONGER SERVICED

ENGINE - Cylinder Head, 2.6 litre Petrol

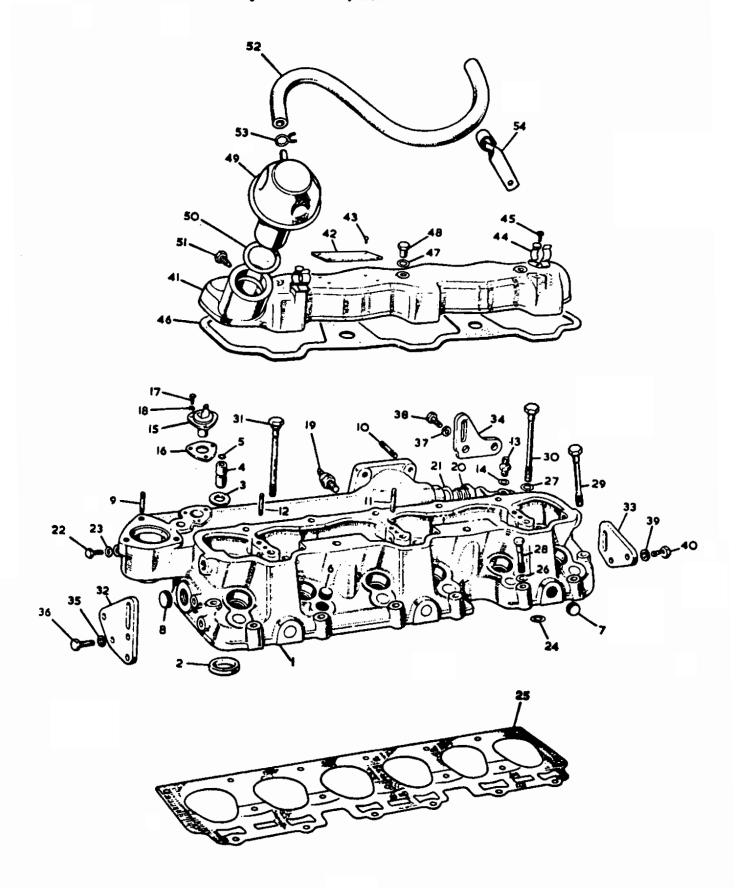


REF. 1 2 3 4 DESCRIPTION QTY. PART No. REMARKS	
REF. 1 2 3 4 DESCRIPTION CITY TARK NO. NOTHING	
41 ROCKER COVER ASSEMBLY, TOP 1 568725	
42 Tappet clearance plate 1 274100	
43 Hammer drive screw for plate 4 3767 *	
44 Clip for ignition wire carrier 2 566813) Early models with	
45 Drive screw fixing clip 2 AB610031) ignition wire car	
46 Joint washer for rocker cover 1 GEG432	
47 Sealing washer) Fixing top 3 231576	
48 Special nut) rocker cover 3 274089	
Engine breather filter, top 1 547605 @ *)	
49 Engine breather filter, top 1 546203 @@)	
50 Sealing ring for breather filter 1 268887) Not part of	
51 Special set screw fixing filter 1 515291) engine assembl	V
Sealing washer for set screw 1 232037)	•
52 Hose, top breather filter to carburetter elbow 1 568391 @@)	
53 Clip, fixing hose to breather filter and elbow 2 546210 @@)	
54 Clip, securing hose to carburetter body 1 568392 @@)	

@ Up to engines numbered 34500469B, 34600024A @ From engines numbered 34500470B, 34600025A onwards


^{*} NO LONGER SERVICED

ENGINE - Oil Filter and Adaptor, 2.6 litre Petrol

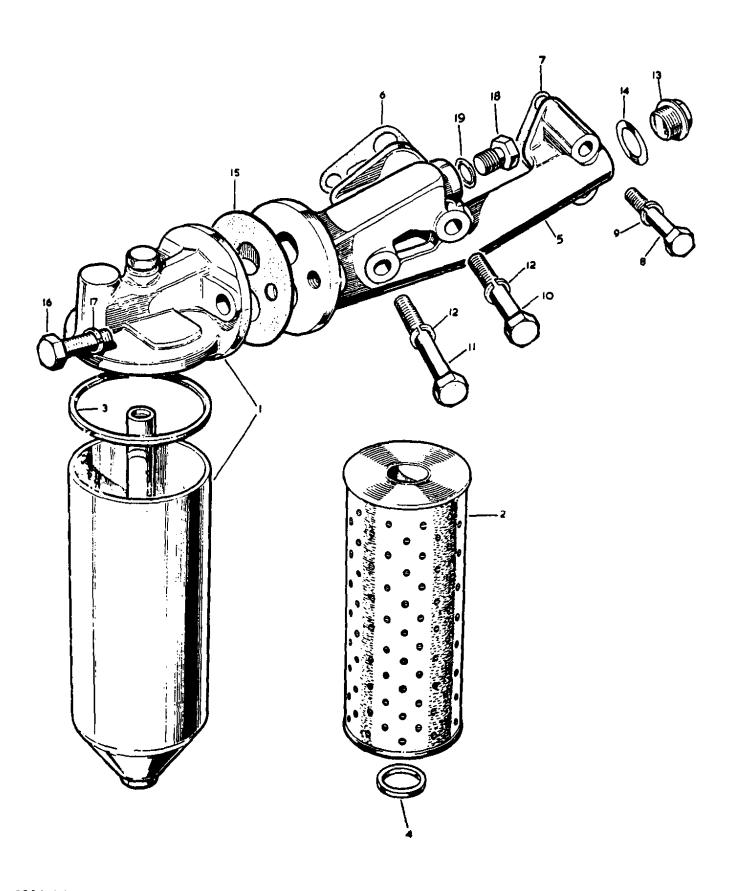


PLAT	1234	DESCRIPTION	QTY	. PART No.	REMARKS
۱	Oil filter for	engine	1	9051359	וו
2	Element))	GFE111	Not part of engine assemb
2	Gasket, la	rge) For oil filter	1	516885	
4	Gasket, smal		1	605169	
5	Adaptor for oi		1	554925	
6	Joint washer,		ì	274609	
7	Joint washer,		i	274104	
8	Set bolt (5/16		2	256025	
9	Spring washer		2	GHF 332	
10	Set bolt (7/16	" UNF x 3") adaptor to	ī	BH60724	13
11	Set bolt (7/16	" UNF x 33")) cylinder block	i	BH60728	
12	Spring washer	om A og / J cyrrnaer brook	ż	WM60007	
13	Plug (1" BSP)) For adaptor	5		7Part of
14	Joint washer) pil way	i		Jadaptor
15	Joint washer	,	i	598354	
		" UNC x 11")) Fixing oil filter	2	SH50710	וו
17	Spring washer			WM60007	
	Plug (BSF)) Blanking oil pressure	ī		TPart of
19	Joint washer) transmitter hole	i		adaptor

ENGINE - Exhaust Manifold, 2.6 litre Petrol

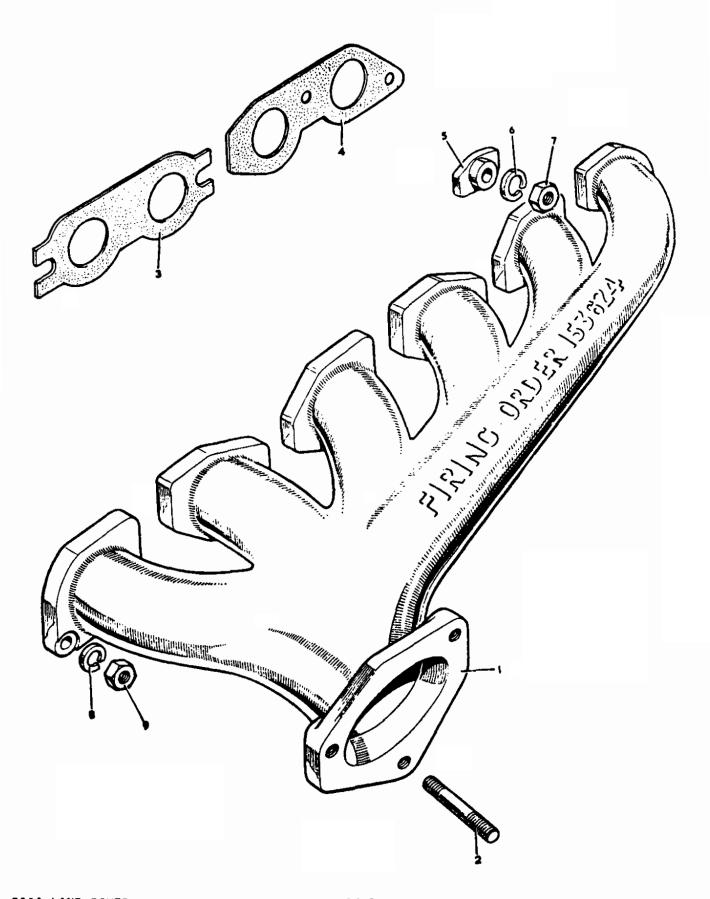



PLA' REF.	· -	DESCRIPTION	QT	Y. PART No.	REMARKS
1	EXHAUST MANIFOLD ASSE	MBLY	1	587401	
2	Stud for exhaust pi		3	252623) Alternatives
-	Stud for exhaust pi		3	596097	
3	Joint washer for exha		1	GEG640	
5	Clamp for manifold		5	9161	
6	Spring washer) Fix	ing	5	GHF333	
7	Nut (¾" UNF)) cla	mps	5	GHF 202	
8		ixing ends	2	GHF332	
9	Nut (5/16" UNF)) o	f manifolds	2	GHF 201	

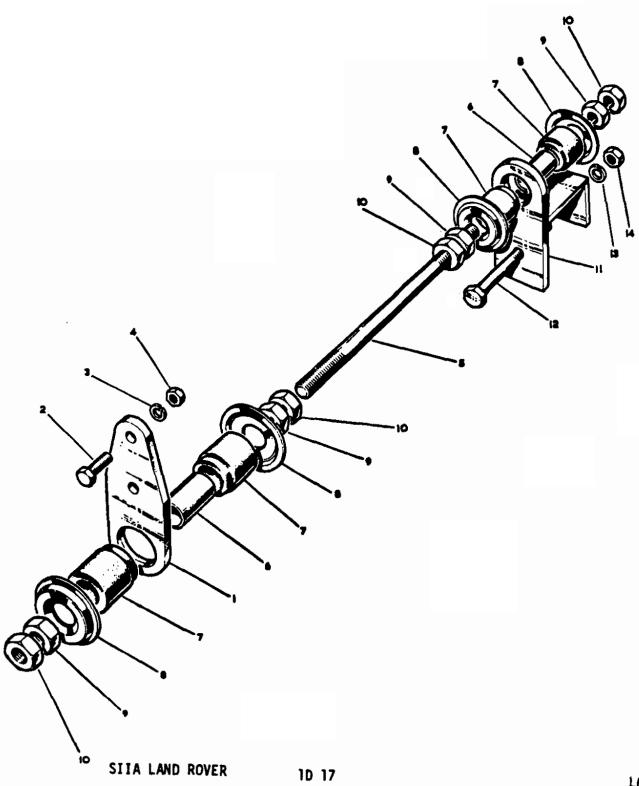

L669

PLAT	· -	\$5000t0=101		
REF.	1 2 3 4	DESCRIPTION	Q1	Y. PART No. REMARKS
1	Bracket for tie rod at	bell housing	1	543254
2	Bolt (5/16" UNF x 13"))	2	GHF104
3	Spring washer) Fixing bracket	2	GHF332
4	Nut (5/16" UNF)) at bell housing	2	GHF201
5	Tie rod for engine		1	504606
6	Sleeve for engine tie	rod	2	504607
7	Rubber bush)		4	509885
8		ixing tie rod	4	7015
9	Nut (5/16" UNF))		4	GHF201
10	Locknut (5/16" UNF))		4	NT605061
11	Bracket for tie rod at	frame	1	90508339
12	Bolt (3" UNF x 31"))	· · · · · · · ·	1	BH606281
13		Fixing bracket	1	GHF333
14	Nut (a" UNF))	to No.4 crossmember	1	GHF202

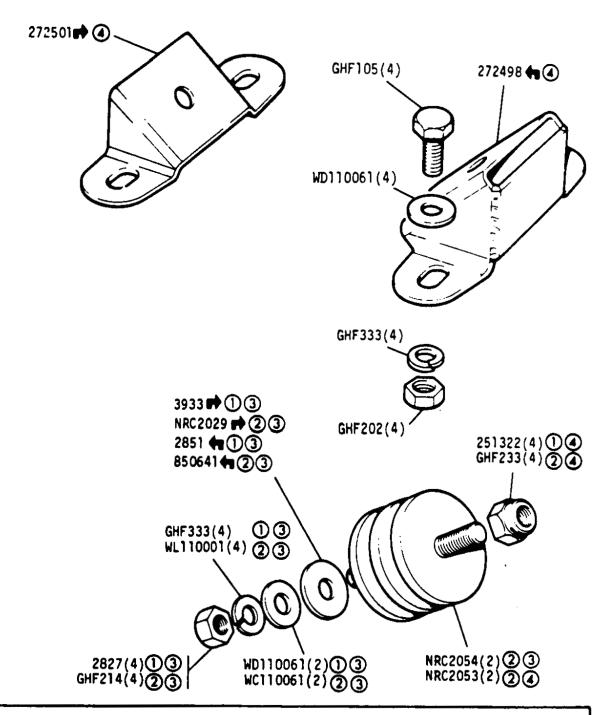

 

Metric Fixings


³ Front Mounting

Rear Mounting

```
New Engine Assemblies:
Standard,
With Lucas 2AC generator
With Prestolite generator
Standard
With Lucas 11AC generator - No longer serviced, use RTC1813N )
With Prestolite generator - No longer serviced, use RTC1813N ) Suffix 'K'
With Prestolite generator - No longer serviced, use RTC1813N ) onwards

Rebuilt Engine Assemblies:
Standard
RTC 2385R )
With Lucas 2AC generator - No longer serviced ) Up to engine suffix 'J'
With Prestolite generator - No longer serviced )
Standard
With Lucas 11AC generator - No longer serviced, use RTC 2353R )
With Prestolite generator - No longer serviced, use RTC 2353R ) Suffix 'K'
With Prestolite generator - No longer serviced, use RTC 2353R ) onwards
```

ENGINE - Cylinder Block, 21 litre Diesel

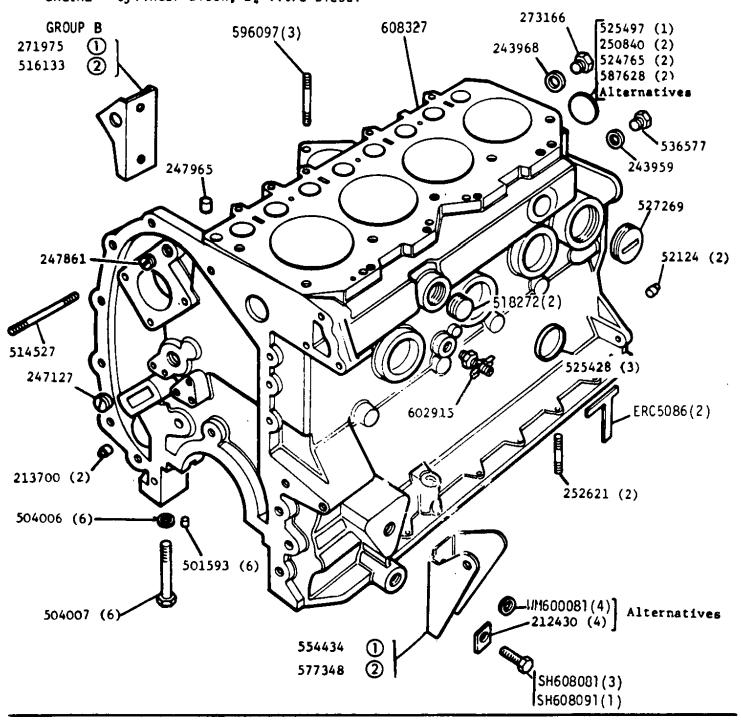

Short engine assembly RTC2664
Decarbonising gasket set GEG1200
Stud kit for Cylinder block 600245

Engine overhaul-gasket set 525520 Cylinder liner 527351 (4)

When early type radiator block with metal cowl is fitted

When late type radiator block with plastic cowl is fitted

ENGINE - Crankshaft, 21 litre Diesel

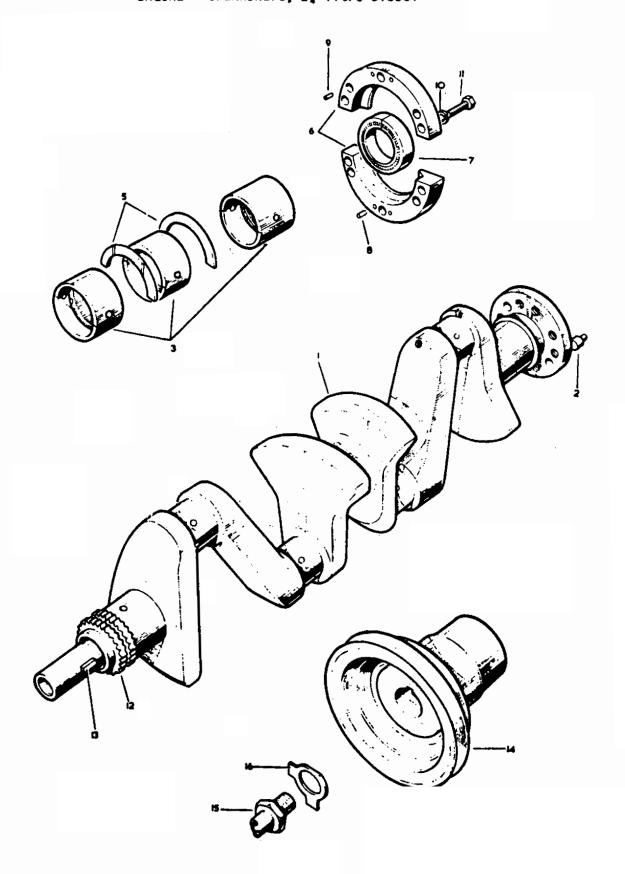


PLATE REF. 1	2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1	CRANKSHAFT ASSEMBLY, STD	1 527167
ż	Dowel for flywheel	1 265779
2 3 5	Main bearing set, Std	1 RTC1729
5	Thrust washer for crankshaft, Std)	1 538130
	Thrust washer for crankshaft, .0025" OS)	Pairs 1 538131
	Thrust washer for crankshaft, .005" OS)	1 538132
	Thrust washer for crankshaft, .0075" OS)	1 538133
	Thrust washer for crankshaft, .010" OS)	1 538134
	REAR BEARING OIL SEAL ASSEMBLY	1 542494
6	Rear bearing split seal halves	2 523240
6 7	Oil seal complete for rear bearings	1 542492
	Silicone grease, MS4, 1 oz tube	1 270656
8	Dowel, lower Fixing split seal	2 90519064
9	Dowel, upper to cylinder block	2 246464
10	Spring washer and rear	10 GHF331
11	Bolt (% UNF x % long) _bearing cap	10 255208
12	Chainwheel on crankshaft	1 568333
13	Key locating chainwheel and pulley	2 235770
14	Crankshaft pulley	1 564375
15	Starting dog	1 503665
16	Lockwasher for starting dog	1 247771

ENGINE - Connecting Rod and Piston, 21 litre Diesel


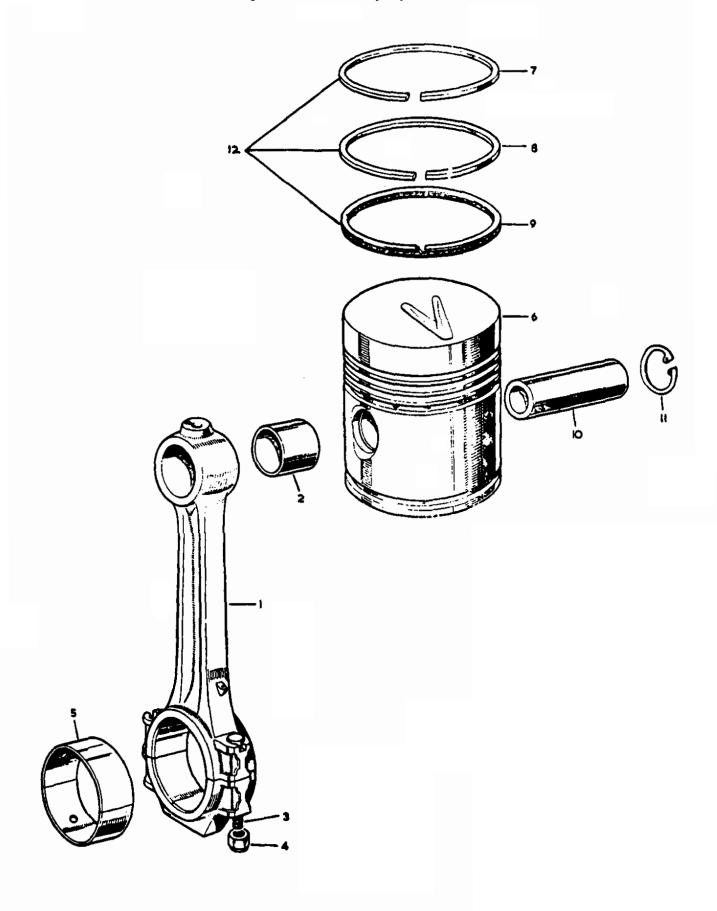


PLATE REF. 1	1 2 3 4 DESCRIPTION	OTY. PART No. REMARKS
1	CONNECTING ROD ASSEMBLY	4 527169
	Gudgeon pin bush	4 247583
2 3	Special bolt) Fixing connecting	8 519440
4	Special Nut) rod cap	8 ERC1029
5	Connecting rod bearing set, Std	1 RTC1730
6	PISTON ASSEMBLY, STD	4 ERC2342S
	PISTON ASSEMBLY, .020" OS	4 564231
	PISTON ASSEMBLY, .040" OS	4 564233
7	Piston ring, compression, Std)	4 568588
	Piston ring, compression, .010" OS)	4 605539
	Piston ring, compression, .020" OS) Chromed	d 4 605540
	Piston ring, compression, .030" OS) Insert	
_	Piston ring, compression, .040" OS)	4 605542*
8	Piston ring, compression, Std)	8 90520978
	Piston ring, compression, .010" OS)	8 90520940
	Piston ring, compression, .020" OS) tapered	
	Piston ring, compression, .030" OS)	8 90520942
	Piston ring, compression, .040" OS)	8 90520943*
9	Oil control ring, Std	4 564226
	Oil control ring, .010" OS	4 605047
	Oil control ring, .020" OS	4 605048
	Oil control ring, .030" OS	4 605049
10	Oil control ring, .040" OS	4 605050
11	Gudgeon pin	4 502029 8 366045
12	Circlip for gudgeon pin	8 266945 4 RTC2415
16	Piston ring set, standard Piston ring set, 0.020in OS	4 RTC2415 4 RTC241520
	Piston ring set, 0.040in OS	4 RTC241520 4 RTC241540
	riston ring set, c.otoin os	7 1/10241340

^{*} NO LONGER SERVICED

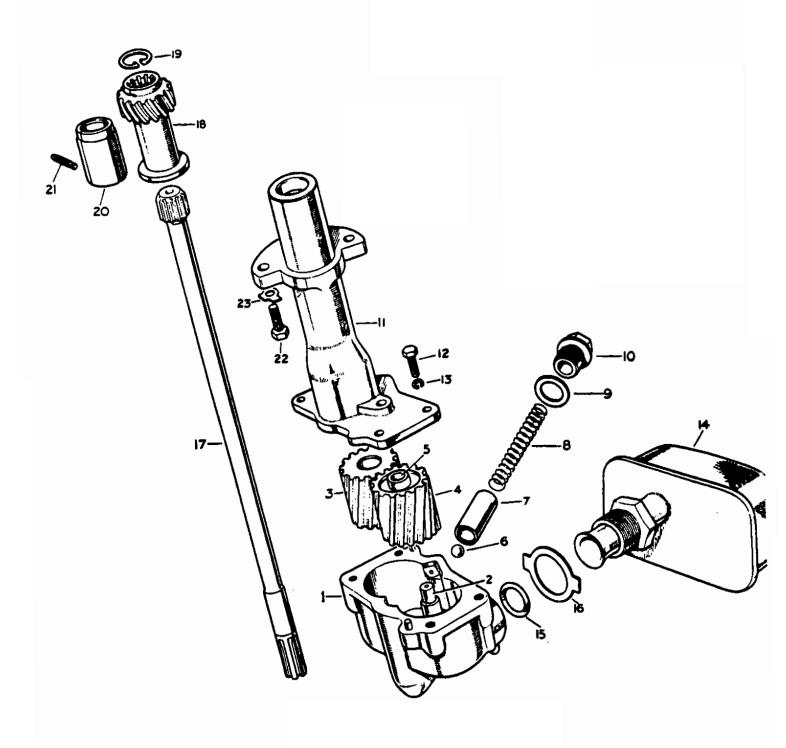

			·					
PLATE REF.	1	2 3	4	DESCRIPTION	c	ITY.	PART No.	REMARKS
			- -					
		OIL	PUMP ASSEMBLY			1	RTC255	4
1			il pump body			í	513641	•
2			Spindle for id	ler gear		i	905022	09
3		01	il pump gear, d			i	240555	
4			il pump gear, i			j	278109	
2 3 4 5 6 7 8 9			Bush for idler			í	214995	
6		St	teel ball	•	٦	1	3748	
7			lunger		For	1	273711	
8			oring		oil pressure	1	564456	
9		Wa	asher, inside d	liameter 55/64"	release valve	1	243970	TAlternatives.
			asher, inside d		ļ.	1	232044	
10		PI	lug	•		1	549909	_
11		0i	il pump cover	•	_	1	513639	
12		Se	et bolt (5/16"	UNF x &" long)	Tixing cover	4	255227	
13		Sp	oring washer	_	to body	4	GHF332	
14			l filter for p			1	247664	
15				ixing oil filte	r	1	244488	
16				o oil pump		1	244487	
17			rive shaft for			1	511680	
18			ICAL DRIVE SHA			1	503266	
19			irclip for driv			1	247742	
20			n for drive sha			1	247653	
21				drive shaft bu]	524769	
22		Set	bolt (5/16" UN	F x 1" long∏Fi		2		
23		Lock	washer	_ to	cylinder block	2	247665	

ENGINE - Camshaft and Tensioner Mechanism, 21 litre Diesel


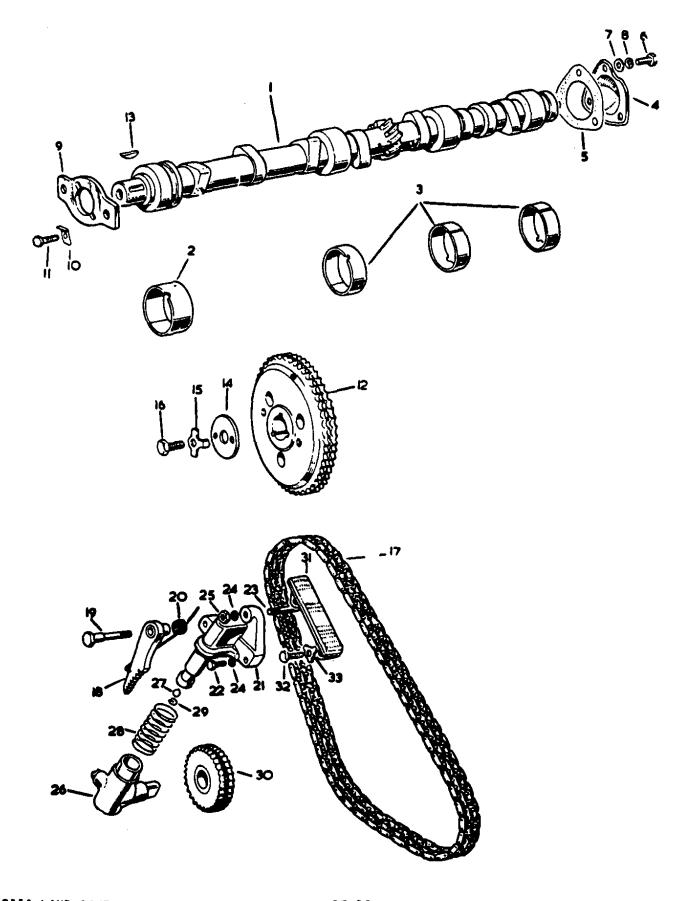


PLATE		
REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
. 1	Camshaft	1 274711
		1 90519054
2 3	Bearing complete for camshaft, front	
	Bearing complete for camshaft, centre and rear	1 538073
4 5	Rear end cover for camshaft	1 247070
J	Joint washer for cover	3 255208
6	Set bolt (1" UNF x 1" long)	3 255206 Alternative fixings.
O	Set bolt (la UNF x la long) Fixing	1 255200 Afternative Tixings.
7	Set bolt (1" UNF x 1" long) cover to Plain washer block	4 RTC840
8	Spring washer	3 GHF331
9	Thrust plate for camshaft	1 ERC1561
10	Locker 7 TFixing thrust plate	
ii	Set bolt (1" UNF x 1" long) to cylinder block	2 255207 thrust plate
12	Chainwheel for camshaft	1 276133
13	Key locating camshaft chainwheel	1 230313
14	Retaining washer Fixing	7 9093
15	Locker chainwheel to	1 9210
16	Set bolt (3" UNF x 3" long) camshaft	1 SH606071
17	Camshaft chain (3" pitch x 78 links)	1 504375
18	Ratchet for timing chain adjuster	1 546026
19	Special bolt fixing ratchet and piston to block	t 1 247199
20	Spring for chain adjuster ratchet	1 267451
21	Piston for timing chain adjuster	1 247912
22	Set bolt (5/16" UNF x ll" long) Trixing	1 BH605101
23	Stud (5/16" UNF) piston to	1 247144
24	Spring washer cylinder	2 GHF332
25	Nut (5/16" UNF) block	1 GHF201
26	Cylinder for timing chain adjuster	1 277388
27	Steel ball (7/32") for non-return valve	1 3739
28	Spring for chain tensioner	1 233326
29	Retainer for steel ball	1 233328
30	Idler wheel for timing chain	1 236067
31	Vibration damper for timing chain	1 275234
32	Set bolt (1" UNF x 1" long) Fixing damper	2 255204
33	Locking plate	2 557523


GROUP B
ENGINE - Valves and Tappets, 21 litre Diesel

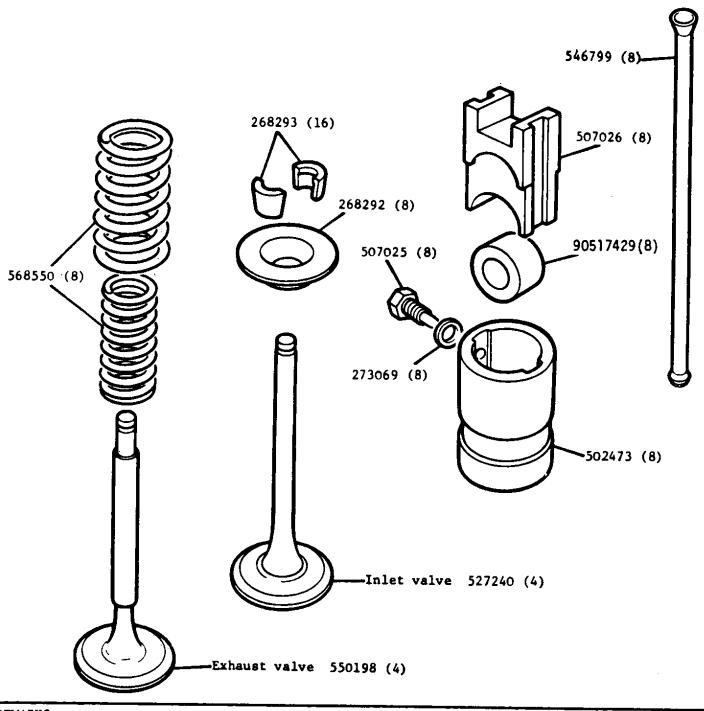

REMARKS

Tappet, tappet guide, roller and set bolt assembly 507829 (8)

GROUP B
ENGINE - Valve Gear and Rockershafts, 21 litre Diesel

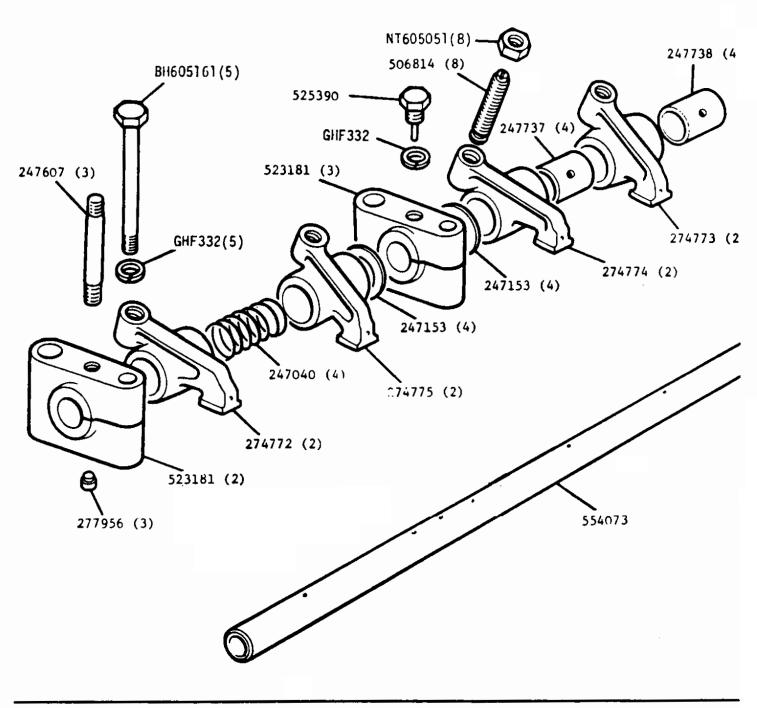

MARKS

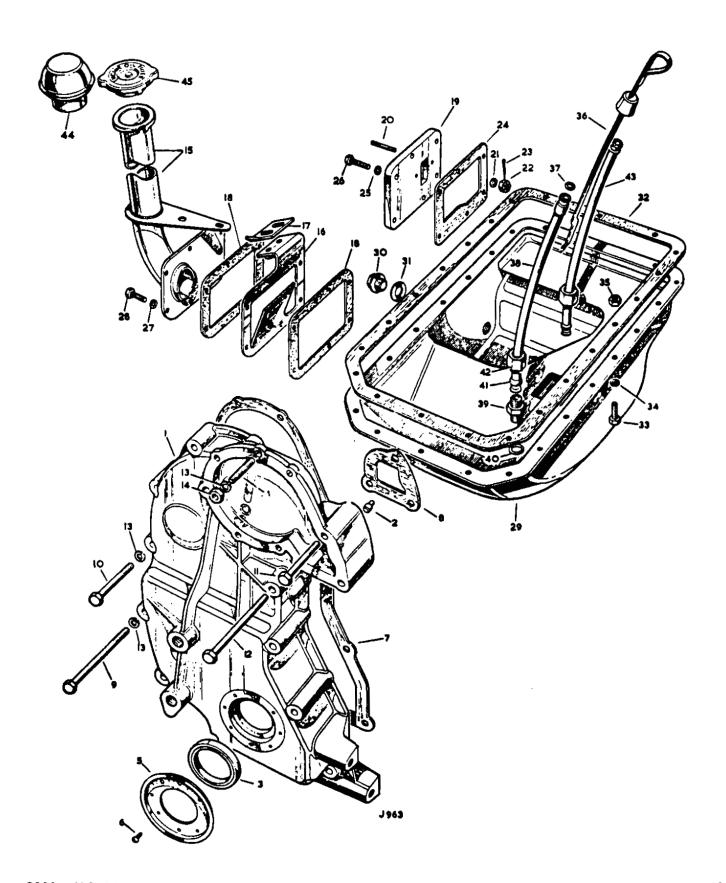


PLATE REF.	1 2 3 4 DESCRIPTION	QΤ	r. PART No. I	REMARKS
	FRONT COVER ASSEMBLY	1	90514451	Up to engine suffix 'F'
1	FRONT COVER ASSEMBLY	1	554541	From engine suffix 'G' onwards
	FRONT COVER ASSEMBLY	1	568667	Models with Lucas 2 AC type 12 volt AC/DC generator. Up to engine suffix 'F' inclusive
	FRONT COVER ASSEMBLY	1	554843	Models with Lucas 2 AC type 12 volt AC/DC generator. From engine suffix 'G' onwards
2	Dowel locating front cover	2	63 95	
3	Oil seal for front cover	1	213744	
4	Stud fixing water pump	5	252500	Up to engine suffix 'F' inclusive
5	Mud excluder	1	247766	
6	Drive screw fixing excluder	8	AB606021	
7	Joint washer for front cover	1	538039	
8	Joint washer at water inlet	7	538038	
9	Set bolt (5/16" UNF x 3"))	7	BH605241	3 off from engine suffix 'G' onwards
10	Set bolt (5/16" UNF x 2")) Fixing front) cover	3	BH605161	7 off from engine suffix 'G' onwards
	Set bolt (5/16" UNF x 3½")) and	2	BH605281	Models with Lucas 2 AC type 12 volt AC/DC generator
11	Set bolt (5/16" UNF x 31")) to	2	BH605261	
12	Set bolt (5/16" UNF x 31")) cylinder	ī	256233	
13	Spring washer) block	14	GHF332	
14	Nut (5/16 UNF)	2	GHF201	
	Side cover and nil filler pipe for engine, front	1	90510730	Up to engine suffix 'J' inclusive
	Side cover and oil filler pipe for engine, front	1	568542	From engine suffix 'K'
	Baffle plate for side cover, front	1	529394	Up to engine suffix 'J' inclusive
16	Baffle plate for side cover, front	1	564467	
17	Timing pointer for distributor pump	1	564470	
	Set bolt (10 UNF x 7/16")) Fixing	2	257004	From engine suffix 'K'
	Spring washer) timing pointer	2		
	Plain washer) to baffle plate	2	4030	
18	Joint washer for side front cover	2	247555	
19	SIDE COVER ASSEMBLY, REAR	1	542600	
20	Stud for fuel pump	2	500792	Nut and split
21	Plain washer)	2 2 2	4047	pin type
22	Nut (5/16" UNF)) Fixing stud	2	254911*	fixing
23	Split pin)	2	2422	
	Stud for fuel pump	2	542601	Plain type stud fixing

^{*} NO LONGER SERVICED

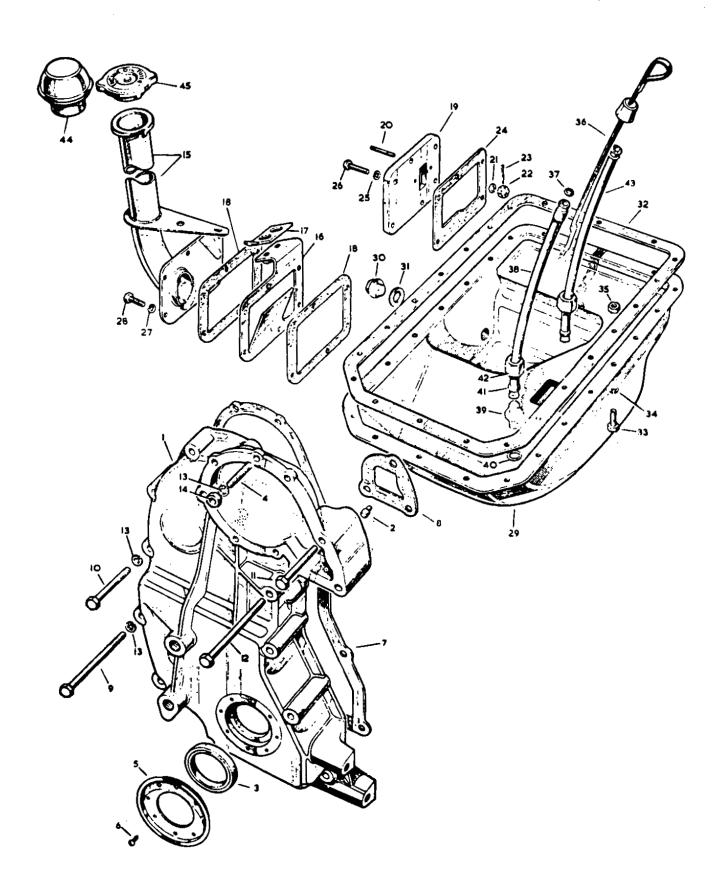


PLATE				
REF.	1 2 3 4 DESCRIPTION	QTY.	. PART No.	REMARKS
24	Joint washer for side cover, rear	1	247554	
25	Spring washer Trixing rear	6	GHF332	
26	Set bolt (5/16" UNF x 1" long) side cover plate	_		
27	Spring washer Trixing front		GHF332	
28	Set bolt (5/16" UNF x 3" long) side cover plate			
29	Crankcase sump	i	529823	
30	Drain plug for crankcase sump	i	536577	
31	Washer for drain plug	i	243959	
32	Joint washer for crankcase sump	ĺ	GEG537	
33	Set bolt (5/16" UNF x 1" long) Fixing	-	255227	
34	Spring washer sump to		GHF332	
35	Nut (5/16" UNF) cylinder block		GHF201	
36	Oil level rod	Ī	274154	
37	Sealing ring for rod	1	532387	
	•			
38	Tube for oil level rod	1	504032	
39	Double-ended union	1	236060	
40	Washer Fixing tube to	1	243958	Alternative to one
41	Olive cylinder block	1	236408	piece type oil
42	Union nut	1	236407	level rod tube
	•		_	
43	Tube for oil level rod	1		One-piece type.
				Alternative to tube with
				separate union.
	A'3 6'33			
44	Oil filler cap and breather filter	1		Up to engine suffix 'J'
				inclusive. Not part of
AE	Oil fillow on	,		engine assembly
45	Oil filler cap	1		From engine suffix *K*
				onwards


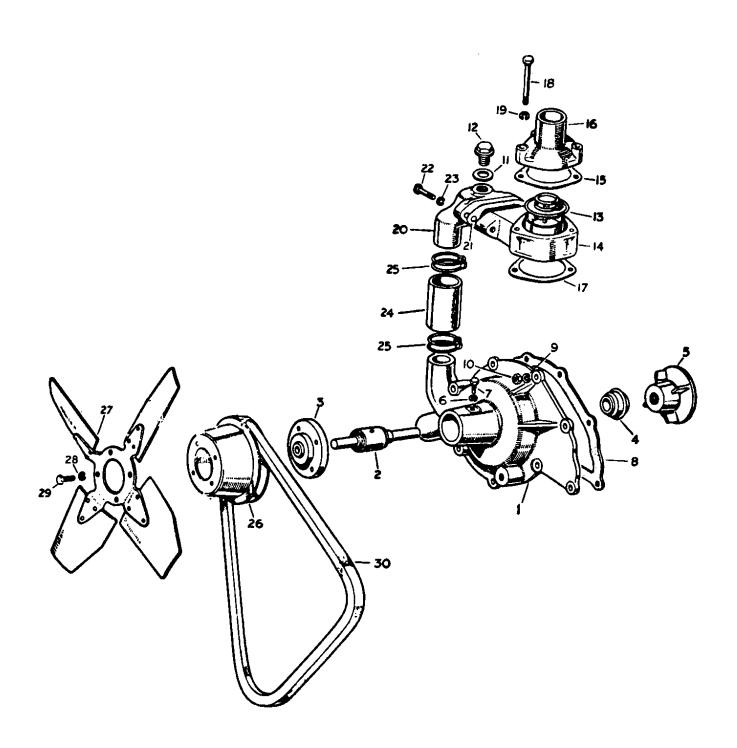


PLATE REF.	1 2 3 4 DESCRIPTION			0511.00
MEF.		QTY.	PART No.	REMARKS
	WATER PUMP ASSEMBLY	j	GWP312	
1	Water pump_casing]	530478	
2	Pump spindle and bearing	1	ERC3978	
3	Hub for fan	1	598064	
4	Carbon ring and seal unit	1	568301	
5 6	Impeller for pump	1	247916	
6	Spring washer) Locating		GHF 331	
7	Special set bolt) bearing casing		247078	
8	Joint washer for water pump		538671	
9	Spring washer) Fixing		GHF331	
10	Nut (1 UNF)) water pump to	5	GHF200	Up to engine suffix 'F'
) cylinder	_		inclusive
	Set bolt (1 UNC x 1")) block	5	GHF161	From engine suffix 'G'
		_		onwards
]]	Joint washer) For heater return in		243959	
12	Plug (a" BSP)) thermostat by-pass pipe	1	536577	
13	Thermostat, bellows type	ļ	504736*	
	Thermostat, wax type			From engine suffix 'C'
	'0' ring for thermostat			onwards
	Thermostat housing		516059	Un de comine quéfic IDI
15	Joint washer for thermostat housing, upper	_	511957 GTG119	•
	Joint washer for thermostat housing, upper	1	פווטוט	From engine suffix 'C' onwards
3.0	Nakau auklak atau khaumankak ka madtakau	,	E110E6+	- · · · · · -
10	Water outlet pipe, thermostat to radiator		511956* 527109	
	Water outlet pipe, thermostat to radiator	•	327103	onwards
17	Joint washer for thermostat housing, lower	1	GTG110	Unwarus
18	Set bolt (1 UNF x 21)) Fixing thermostat		BH60420	1
19	Spring washer) housing and outlet			•
.,) pipe to cylinder head	•	 55.	
20	Thermostat by-pass pipe	1	530476	
21	Joint washer for by-pass pipe		9051195	В
22		2	GHF103	
23	Spring washer) to thermostat	2	GHF332	
) housing			
	Hose for by-pass pipe	1	574871	
25	Hose clip for by-pass pipe	2	GHC913	
	Fan pulley		530890	
	Fan blade			0]4 blade fan
28	Spring washer) Fixing fan blade		GHF331	}
29	Set bolt (%" UNF x %")) and pulley to hub		255207	1
30	Fan and dynamo belt	1	GFB124]
	Fam blada	1	EZADAA	Tt blade for
	Fan blade			75 blade fan
	Spring washer) Fixing fan and Set bolt (3" UNF x 13")) pulley to hub		GHF331	,
	Set Duit (4 UNF X 1g) pulley to hub		BH604111 GFB124	¹
	Fan and dynamo belt	ł	UF D 124	J
	Water pump overhaul kit	1	530590	
	Mocci pamp ofcination of	•	750570	


^{*} NO LONGER SERVICED

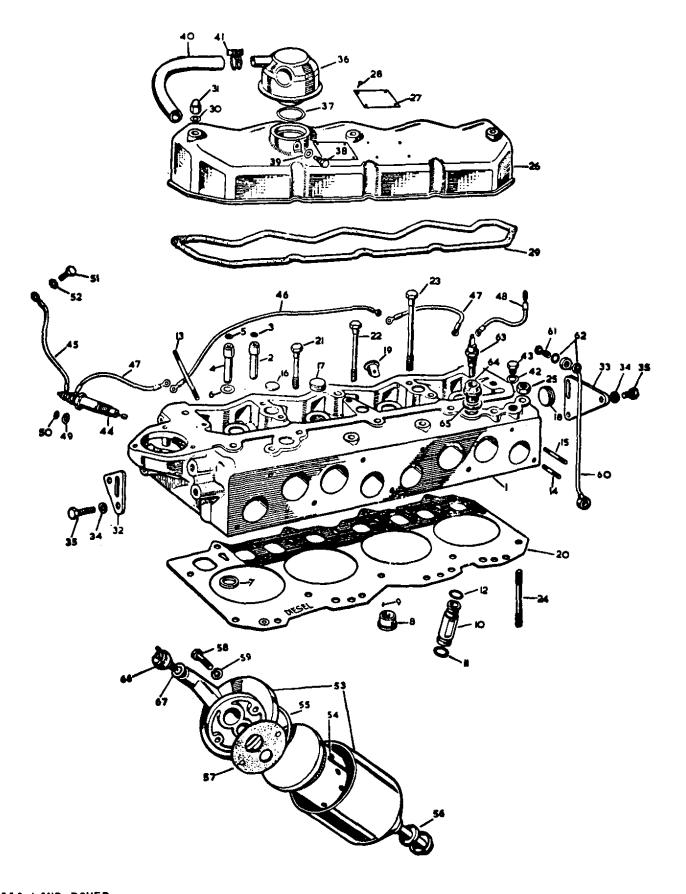

REF.	1 2 3 4 DESCRIPTION	QTY	PART No. REMARKS
1	CYLINDER HEAD ASSEMBLY	1	601469 Up to engine suffix 'J' inclusive
	CYLINDER HEAD ASSEMBLY	1	RTC772 From engine suffix 'K'
2	Valve guide, inlet	4	511837
2 3 4 5 6	Sealing ring for inlet valve guide	4	
4	Valve guide, exhaust	4	1
5	Sealing ring for exhaust valve guide	4	
6	Packing washer for valve guides	20	
	Valve guide, inlet,	4	568688 7
	Oil seal for inlet valve guide	į.	. 1
	Valve guide, exhaust	4	568689 From engine suffix 'K' onwards
	Oil seal for exhaust valve guide	4	5547280
7	Insert for exhaust valve seat	4	512828
8	Hot plug in cylinder head	4	558168
9	Peg for hot plug	4	271881
0	Push rod tube	8	514224
1	'O' ring for push rod tube, large	8	515573
2	'O' ring for push rod tube, small	8	515572
	Stud for injector, thread length ?"	5	247883* For stepped type Up to
	Stud for injector, thread length 23"	3	521600* clamping strip engine suffix 's incl.
3	Stud for injector, thread length 1.3/32"	7	531896 For plain type
-	Stud for injector, thread length 2.19/32"	i	
	Stud for injector, thread length 1.3/32"	8	596097 For flanged type injector. From engine suffix 'K' onwards
4	Stud, short 7 For	5	247144
5	Stud, longmanifold	4	247143
6	Core plug, ¿" diameter	2	250830]Alternatives
	Cup plug	4	525497_
	Core plug, a diameter	2	90512413*
7	Core plug, 1" diameter	7	518272
8	Core plug, la" diameter	1	230250
9	Shroud for injector bore	4	524680
0	Cylinder head gasket	1	GEG393
2)	Special set bolt, short	2	247683
22	Special set bolt, medium Fixing	9	247051
3	Special set bolt, long cylinder head	5	247723
24	Stud (1" UNF) to cylinder block	2	90518466
25	Nut (3" UNF)	2	NH608061


* NO LONGER SERVICED

0 Not included in cylinder head assembly

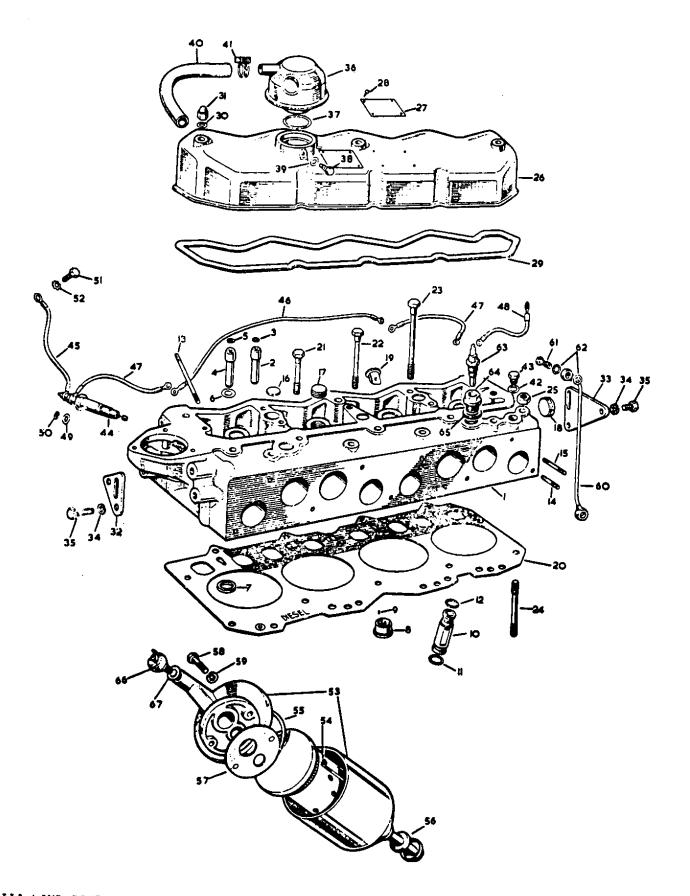


PLAT REF.	E 1234	DESCRIPTION	Q	TY, PART No.	REMARKS
26 27 28 29 30 31 32 33 34 35	Lifting bracket fo Spring washers	plate ng plate np rocker cover ixing tip ocker cover r engine, front r engine, rear) Fixing brackets F x }")) to cylinder head		GEG452 273069 247121 525131	Up to engine suffix
36	Breather filter fo	r engine	1	574658	'J' inclusive From engine suffix 'K' onwards
37 38 39 40	Special set screw Sealing washer for Hose, breather fil	fixing breather filte	1 1 1	268887 515291 232037 90574655	Trom engine suffix
41	Clip fixing hose Clip for hose at m Joint washer) Fo	anifold clamp r heater valve hole	2 1 1	554260 574654 243959	K' onwards
43 44 45 46 47	Heater plug lead N Heater plug lead N	o.l to earth	1 1 2	247953 247952	
48	Heater plug lead N	o.4 to resistor	Ĭ 1	529972 541523	For Lucar blade type resistor For terminal
49 50 51 52	Shakeproof washer,	large) Fixing leads to small) heater plug) Fixing heater earth) lead to cylinder head	4 1 1		type resistor
53	ENGINE OIL FILTER Element for filt	er, overall length 6.13/16"	1	537229 GFE144	Short type For long type filter
54	Element for filt	er, overall length 4§"	1	GFE130	For short type filter
55 56 57 58 59 60 61 62	Spring washer	r centre bolt ilter F x l½")) Fixing filter to	1 1 2 2 1 2 4	WM600071 275679	Spe illei

^{*} NO LONGER SERVICED

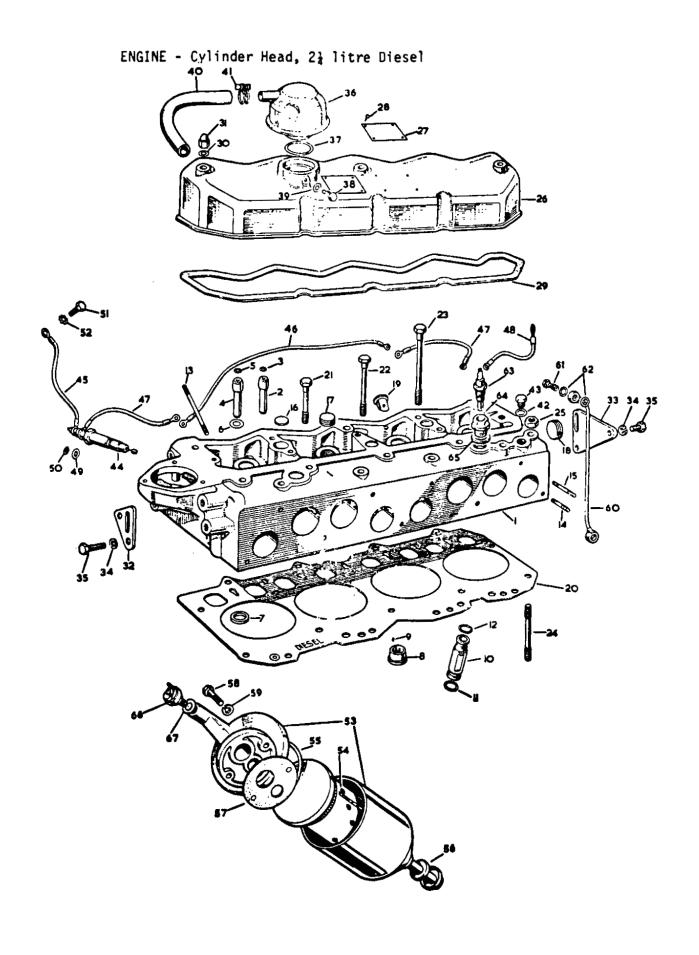

GR	OUP B ENGINE - Cylinder head. 2	ENGINE - Cylinder head. 21 litre diesel				
PLA REF.	· -	QTY.	PART No.	REMARKS		
	Plug for thermometer hole in cylinder head	1 :	278164 i	Jp to engine suffix 'G'		
63 64 65 66 67	Water temperature transmitter Adaptor for water temperature transmitter Joint washer for plug or adaptor Oil pressure switch Joint washer for switch] !] ;	GTR111] 546177] 243972 GPS102 232039	inclusive From engine suffix 'H' onwards		
	Valve guide oil control kit	1 (605484*	To convert early engines with '0' ring type valve guide seals to lip type oil seals		
				* NO LONGER SERVICED		

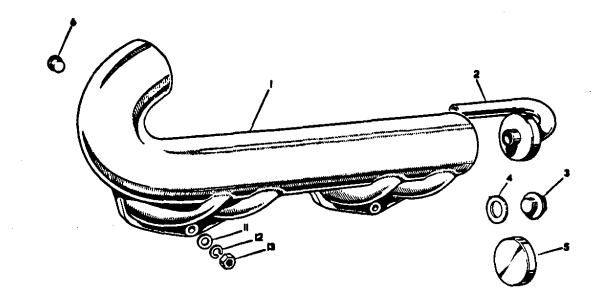



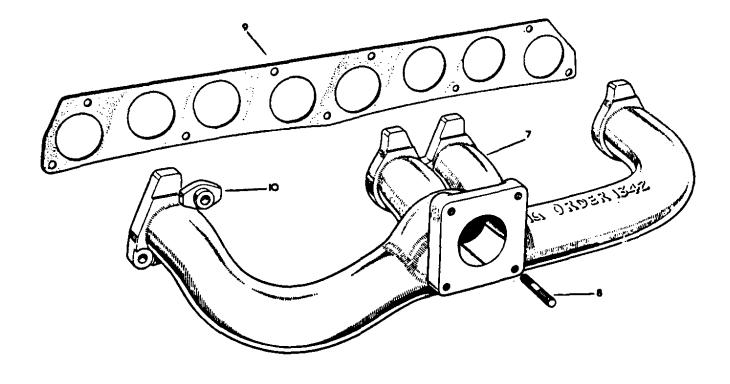


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1	INLET MANIFOLD	1 550263 Up to engine suffix 'J' inclusive
	INLET MANIFOLD	l 57466l∏From engine
2	Connecting tube and plug, hose to manifold	1 574656 suffix 'K' onwards
2 3	Plug for inlet manifold	1 10713 Hexagon head, brass type plug
4	Joint washer for plug	1 243960
	Plug for inlet manifold, 25/64" outside diamete	r 1 524765 Cup type,
5	Plug for inlet manifold, 1.61/64" outside	steel
	diameter	1 525428Jplug
6	Plug for redundant hole at manifold elbow	1 90574691
7	EXHAUST MANIFOLD ASSEMBLY	1 247651 Up to engine suffix 'C'
•	EXHAUST MANIFOLD ASSEMBLY	1 536514 From engine suffix 'D' onwards
8	Stud for exhaust pipe	4 252621
8 9	Joint washer for inlet and exhaust manifold	1 GEG685
10	Clamp for manifold	4 564308
11	Plain washer Trixing inlet	5 RTC613
12	Spring washer and exhaust	9 GHF332
13	Nut (5/16" UNF)manifold	9 GHF201

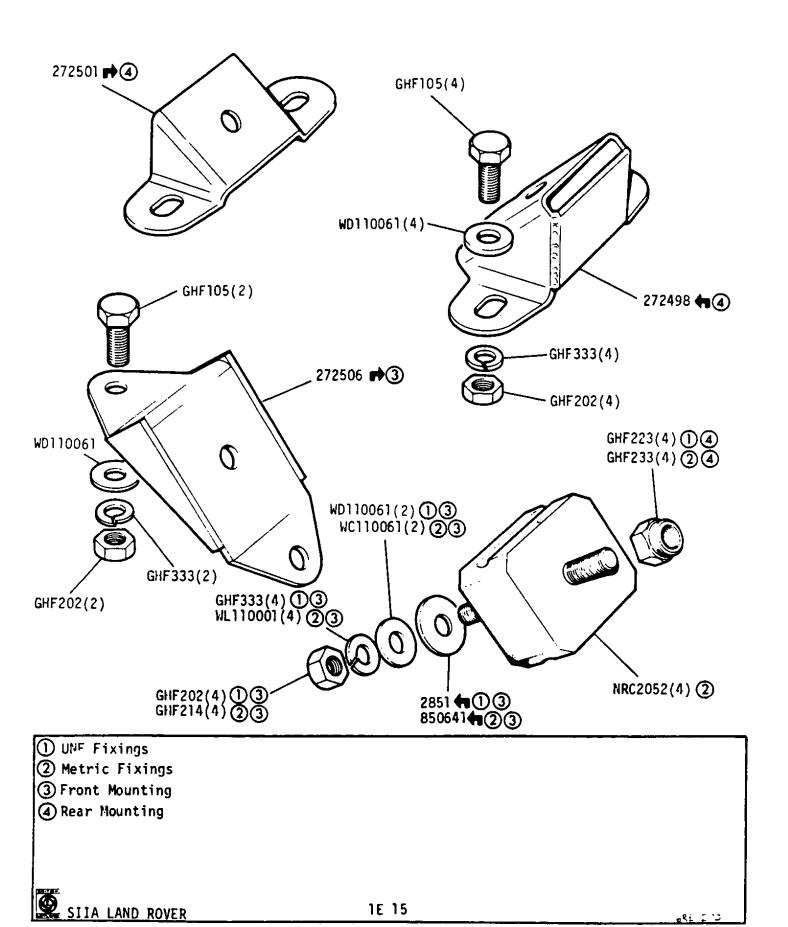


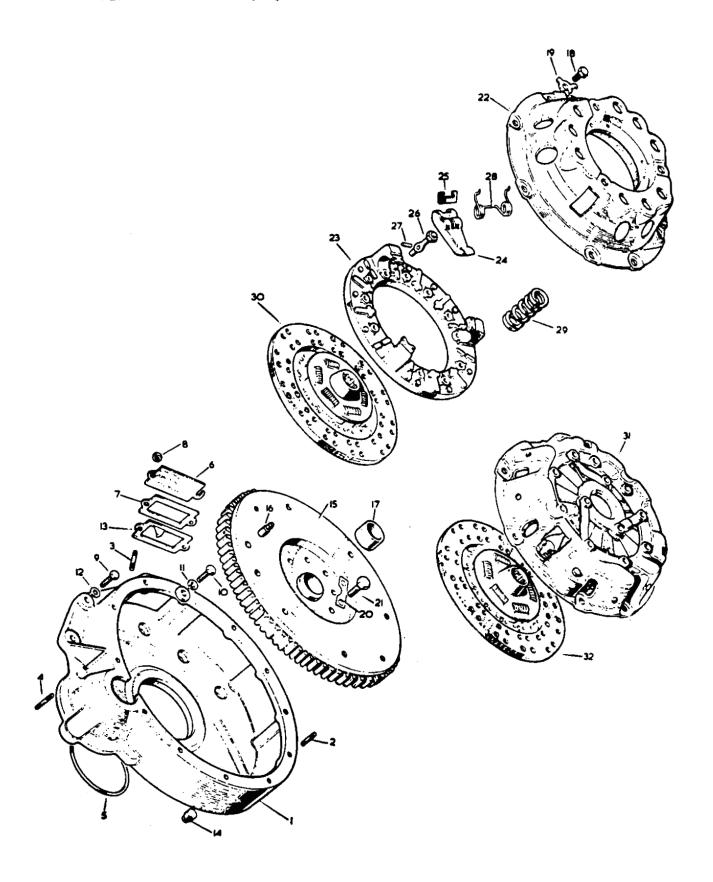

PLA	. —				
REF.	1 2 3 4	DESCRIPTION	QT	Y. PART No.	REMARKS
1	FLYWHEEL HOUSING ASSI	EMBLY	1	247526*	Up to engine suffix 'J' inclusive 7:1 compression ratio only
	FLYWHEEL HOUSING ASS	EMBLY	1	564394	From engine suffix 'K' onwards 7:1 compression ratio. From engine suffix 'A' onwards 8:1 compression ratio
2	Stud (a" UNF) fixi	ng flywheel housing to bell	10	047345	
3	Cana /IM HMEN five	housing		247145 247146	Up to engine suffix 'J'
	Stud (g UNF) FIXT	ng inspection cover			inclusive 7:1 compression ratio only
4	Stud (a" UNF) for			247145	
5	Sealing ring for fly		Ţ		H
6	Inspection cover pla	te]	56140)	Up to engine suffix 'J'
7	Joint washer for cov	er plate	2		inclusive 7:1 compression
8 9	Nut (1" UNF) fixing Bolt (1" UNF x 11")	cover plate	2	GHF200)	ratio only
9	DOIL (& UNF X IZ)	<i>,</i> }	2	BN000141	Up to engine suffix 'J' inclusive 7:1 compression ratio only
	Bolt (%" UNF x l%")) Fixing) flywheel) housing) to) cylinder	2	256040	From engine suffix 'K' onwards 7:1 compression ratio. From engine suffix 'A' onwards 8:1 compressio ratio
10	Bolt (3" UNF x 13")) block	6	255248	. 4.0,0
11	Spring washer	,	8		
12	Plain washer)	6	2219	
13	Indicator for engine	timing	1	272784*	Up to engine suffix 'J' inclusive 7:1 compression ratio
14	Drain plug for housi	ng	7	3290	
	Stowage bracket for	drain plug	_	276511	
15	FLYWHEEL ASSEMBLY		1	600243	
	Ring gear for flyw	heel	1	506799	
16	Dowel locating clu		2	502116	3 off on vehicles with 9½" clutch
17	Bush for primary p		j	8566	
18	Set bolt fixing clut		6	255427	. Albaumahinas
19	Tab washer for set be Spring washer for se		6		Alternatives
20		ixing flywheel	6 4	526161	ı
21	Special set bolt) t		8	247135	
		w withingrise v	•	E-77 100	


^{*} NO LONGER SERVICED

FLYWHEEL and CLUTCH, 21 litre Petrol

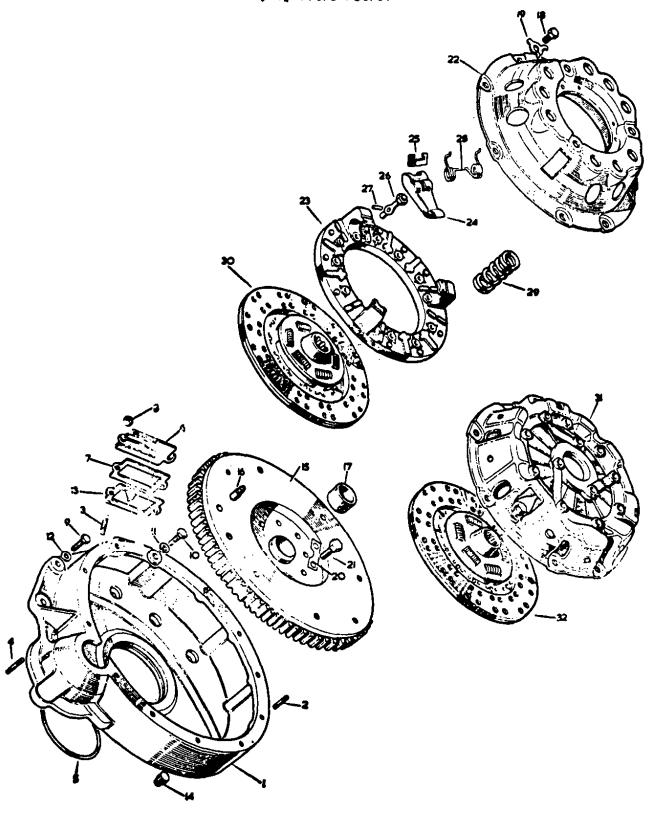

PLA1 REF.	_	DESCRI	PTION	OTY	. PART No.	REMARKS
			· · · · · · · · · · · · · · · · · · ·			
	CLUTCH ASS	EMBLY		1	GCC127	9" type clutch with black clutch spring
22	Cover pl	ate for clutch		1	231888	. 3
23		plate for clutch		1	46032	
24		plate for clutch		3	501211	
25		r release lever		3	231884	•
26	Eyebolt	and nut for releas	e lever	2	242996	
27		release lever		3	42537	
28	Anti-rat	tle spring for rel	lease lever	2	231883	
29		pring (yellow and		9	7H3082	
	Clutch s	spring (black)		9	7H3006	Part of GCC127 for late type clutch
30	Clutch pla	te complete		1	GCP109	
		ackage for clutch		1)Alternatives
	Lining p	package for clutch	plate (Mintex)	1	90517026	5)
31	CLUTCH COV	ER ASSEMBLY		1	GCC112) 9}" type
32	Clutch pla	ite complete		1	GCP129) American Dollar Area
		ackage for clutch	plate	1	605997	> From engines numbered> 25163284 onwards.> Optional equipment for> all other areas.
		ER ASSEMBLY		1	GCC181 GCP129	<pre>Vehicles fitted with all-synchromesh gearbox:-</pre>
		package for clutch	plate	i	605997) Home Market 88 and 109) Station Wagons from) vehicle suffix 'H' onward

^{*} NO LONGER SERVICED

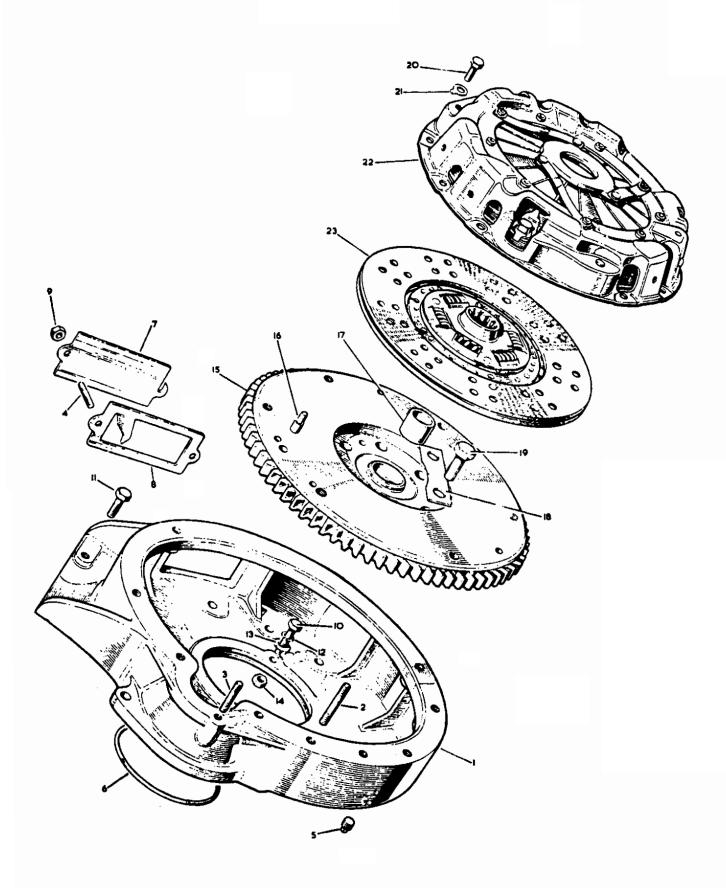

PLA' REF.	· -	DESCRIPTION	Q1	IY, PART No.	REMARKS
1	FLYWHEEL HOUSING	ASSEMBLY	1	541195	
ż		")) Fixing flywheel housing		3650	
3	Stud (5/16")) to bell housing	់រំ	3200	
4		inspection cover		3651 *	
5	Drain plug for	housing	ī		
6		flywheel housing		246169	
7	Inspection cover			56140	
9	Nut (¾" BSF) fix	ing cover plate		3819	
10	Bolt (" UNF x 1	{" })	Ž	GHF106	
	Bolt ()" UNF x 1	້ສູ້")) Fixing flywheel		255248	
2	Spring washer) housing to		GHF 333	
3	Plain washer) cylinder block		2219	
	Plain washer)	2		
	Plain washer)	2	4085	
5	FLYWHEEL ASSEMBL	Υ	1	541760	
	Ring gear for	flywheel		506799	
6	Dowel for clut			502116	
7		ry pinion		856 6	
8	Locker) Fixing flywheel		534098	
9	Special set bolt) to crankshaft	6	247135	
0	Set bolt (5/16"	BSF x [")) Fixing clutch	6	237324	
1	Locker) to flywheel	6	546197)	Alternatives
	Spring washer)		GHF 332)	
	CLUTCH COVER ASS	EMBLY		GCC112	
3	Clutch plate com		1	GCP129	
	Lining package	for clutch plate	1	605997	
	CLUTCH COVER ASS	EMBLY	1	GCC181)	Vehicles fitted with
	Clutch plate com	plete		GCP129)	
		for clutch plate	ĺ		

^{*} NO LONGER SERVICED


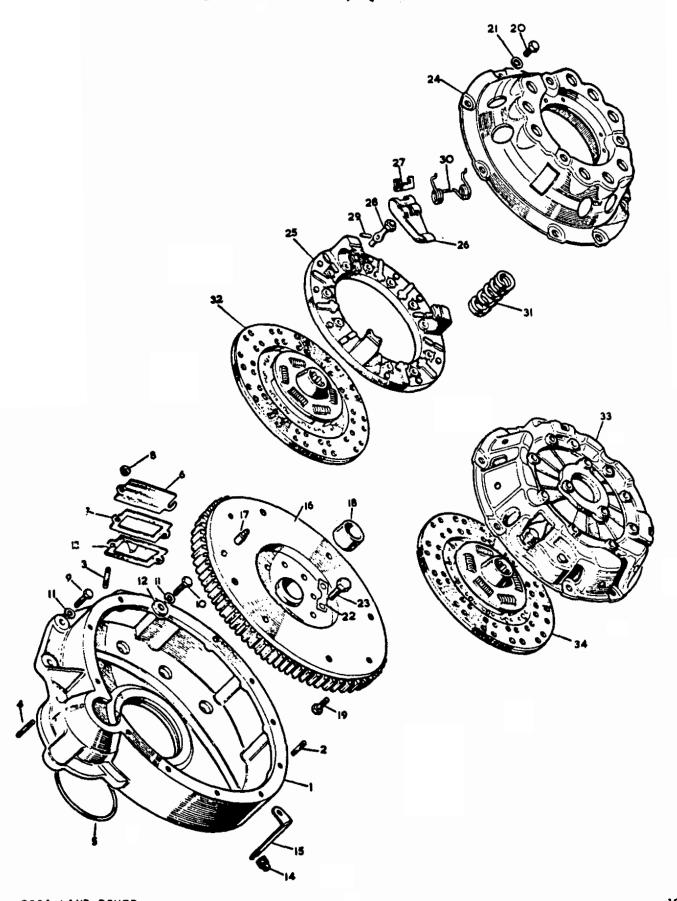


PLATE				
REF.	1 2 3 4 DESCRIPTION	۵۱۲.	PART No.	REMARKS
1	FLYWHEEL HOUSING ASSEMBLY	1	9051508	36
2	Stud (¿ UNF) fixing flywheel housing to bell			
_	housing		247145	
3	Stud (1" UNF) fixing inspection cover		247146	
4	Stud (7/16" UNF) for starter motor	j	277532	
5	Sealing ring for flywheel housing	1	246169	
6	Inspection cover plate		56140	
7	Joint washer for cover plate		50216	
8	Nut (1" UNF) fixing cover plate	2	GHF200 BH60614	13
9 10	Bolt (2" UNF x 12")) Fixing Bolt (3" UNF x 12")) flushed bousing		255248	• •
וו	Bolt (a" UNF x la")) flywheel housing Spring washer) to		6HF333	
	Plain washer) cylinder block		2219	
13	Indicator for engine timing		ERC2250	า
14	Drain plug for housing	j		
15	Stowage bracket for drain plug	i	276511	•
	The same of the sa	•	• • • • • • • • • • • • • • • • • • • •	
16	FLYWHEEL ASSEMBLY	7	566851	Cast iron flywheel
	Ring gear for flywheel	*]		For steel flywheel
	Ring gear for flywheel	1		For cast iron flywheel
17	Dowel locating clutch cover plate	2	502116	3 off on vehicles with
		_		93" clutch
18	Bush for primary pinion	1	8566	
19	Special fitting bolt fixing clutch cover plate			For steel flywheel
20				For cast iron
21	Spring washer) cover plate	6		Jflywheel
22 23	Locker) Fixing flywheel	4		
23	Special set bolt) to crankshaft	8	247135	
	CLUTCH ASSEMBLY	3	600127	9" type with black
		•	400127	clutch springs
24	Cover plate for clutch	1	231888	
25	Pressure plate for clutch	1		
26	Release lever for clutch	3	501211	
27	Strut for release lever	* 3	231884	
28	Eye bolt and nut for release lever	3	242996	
29	Pin for release lever	3	42537	
30	Anti-rattle spring for release lever		231883	
	Clutch spring (yellow and light green)	9	7H3082	For early type
	A.			clutch
31	Clutch spring (black)	9	7H3006	Part of GCC127
				For late type
				clutch


^{*} NO LONGER SERVICED

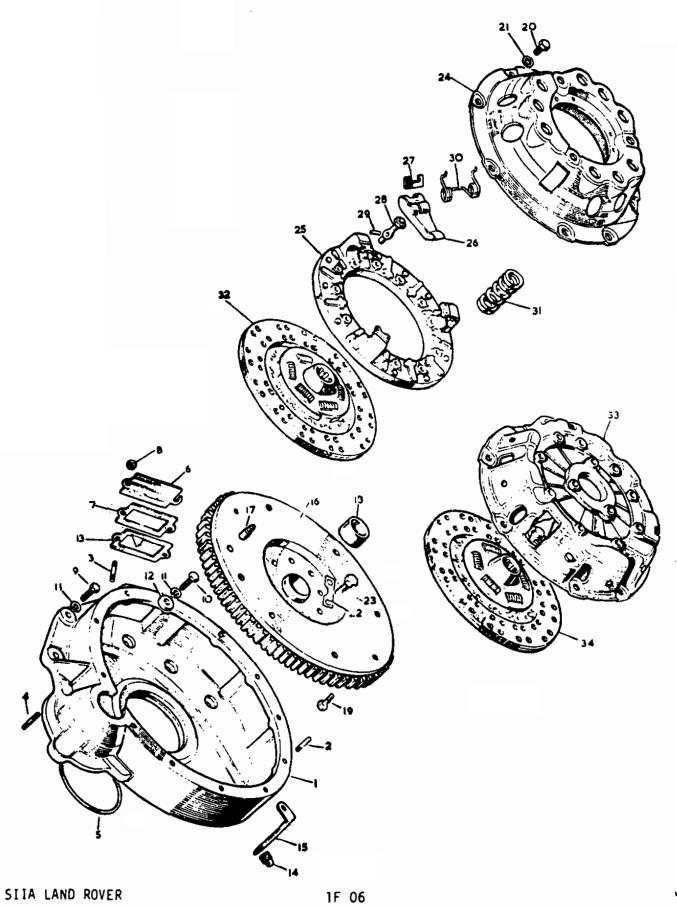


J966

GRO	UP C	FLYWHEEL AND CLUT	CH, 2	LITRE D	DIESEL
PLAT REF.	E 1 2 3 4	DESCRIPTION	٩n	, PART No.	REMARKS
32		e clutch plate (Mintex) clutch plate (Ferodo)	1 1	GCP109 90517026 261921	Alternatives
33 34	CLUTCH COVER ASSEMBLE Clutch plate complete Lining package for Self-locking nut (5/ Spacer	clutch plate	1 1 1 6 6	GCP129) 9½" diaphragm type) American Dollar) Area. Optional equipment) for all other areas up to) engine suffix 'H' inclusive) Standard equipment from) engine suffix 'J' onwards.) When steel flywheel is **) is fitted.
	CLUTCH COVER ASSEMBL Clutch plate complete Lining package for c	2	1	GCC181 GCP129 605997	

GROUP C Clutch Withdrawal Mechanism, except All-Synchromesh Gearbox

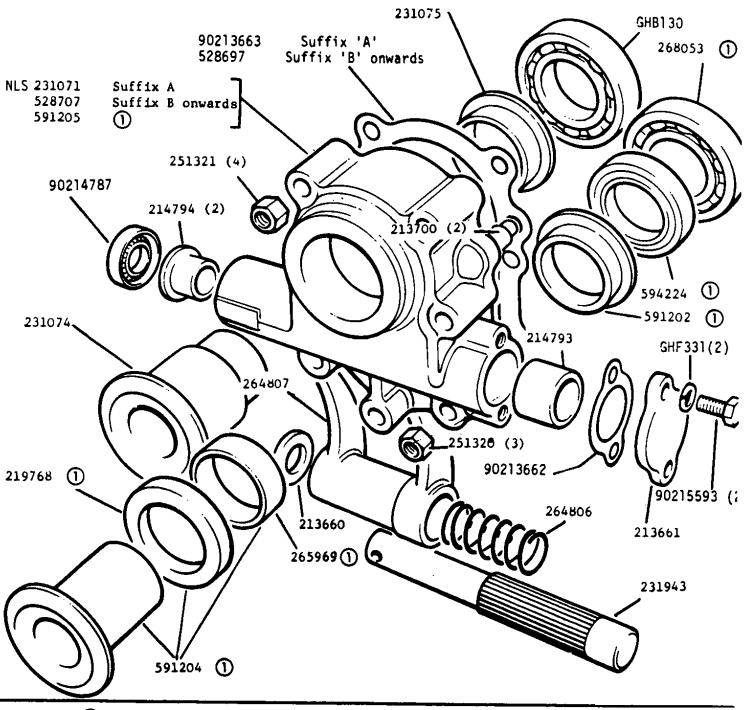

REMARKS () With sealed clutch withdrawal unit

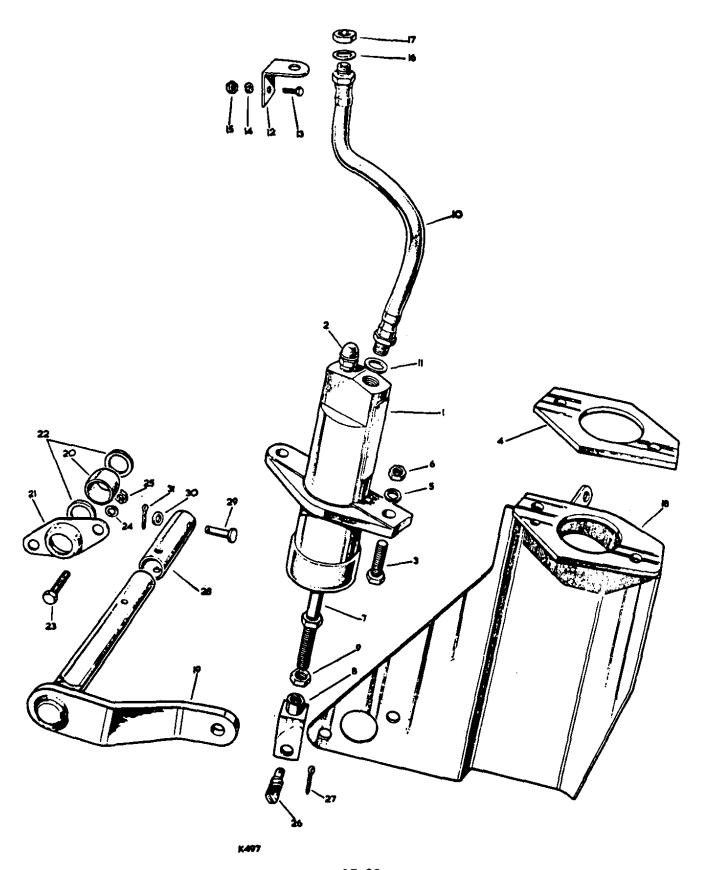


1F 08

ATE		DESCRIPTION	QTY.	PART No.	REMARKS	
1 2 3 4 5 6 7 8 9 10 11 12	CLUTCH SLAVE CYLINDER Bleed screw for clut Bolt (5/16" UNF x 1") Bolt (5/16" UNF x 11") Packing piece Spring washer Nut (5/16" UNF) Push rod for clutch sl Clevis for push rod Locknut (5/16" UNF) for Hose, pipe to clutch s Gasket for hose at sla Mounting bracket for h)))) Fixing slave) cylinder to) support bracket) ave cylinder r push rod lave cylinder ve cylinder ose	1 1 2 2 1 2 2 1 1 1 1	266694 556508 GHF103 SH60510 544686 GHF332 GHF201 537601 275199 GHF201 GBH134 233220 569462		aphragm ch is fitted Except vehicles
13 14 15 16 17	Bolt (2BA x ½")) Fixi Spring washer) brac Nut (2BA)) to d Shakeproof washer)	ng ket	2 2 2 1	234603 WM70200 RTC608 GHF323 NT60604	Also LH Stg with 3/16" pipe	fitted with All-syncromesh gearbox
	Bolt (2BA x ½"))	h master cylinder ter cylinder ylinder cylinder hose o ose Fixing hose to bracket	1 1 1 1 2 1 1 2 2 2 2 2 2	WM70200		

^{*} NO LONGER SERVICED

CLUTCH SLAVE CYLINDER

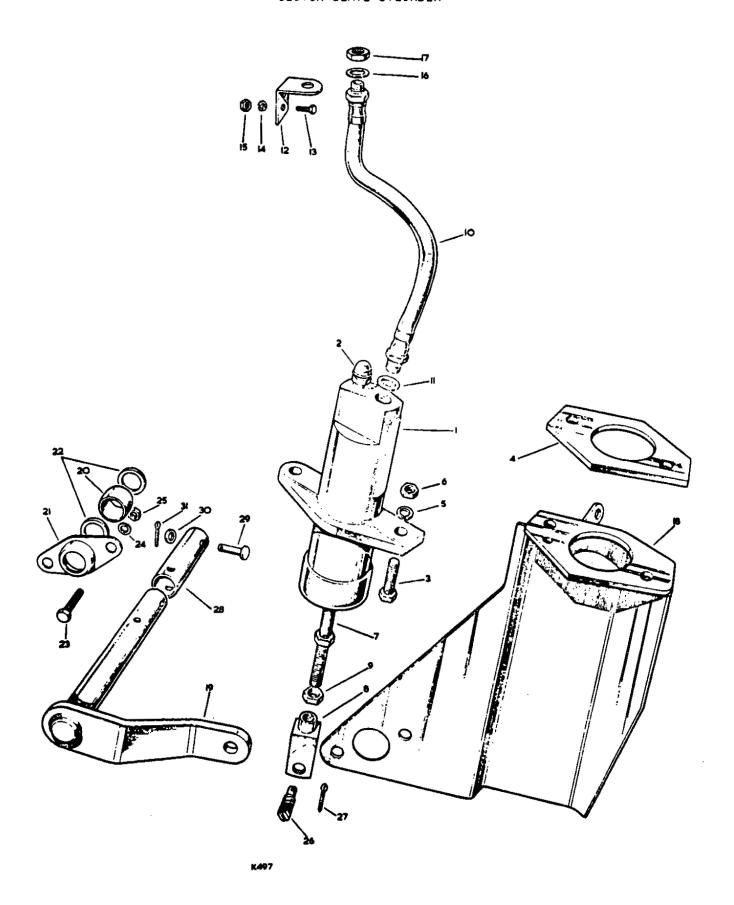


1F 09

PLAT REF.	E 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
	Adaptor) Fixing pipe to Gasket) clutch slave cylinder Adaptor) Fixing pipe to Gasket) clutch master cylinder Clip for pipe, clutch master cylinder to slave cylinder Drive screw, fixing clip to dash	1 139082 1 233220 For early type Except vehicles fitted with All-Synchromesh gearbox
	Adaptor) Fixing hose Gasket for adaptor) to clutch Gasket) slave cylinder Hose, adaptor to pipe Mounting bracket for hose Shakeproof washer) Fixing hose Special nut) to bracket Bolt (2BA x ½")) Fixing Spring washer) bracket Nut (2BA)) to dash Adaptor) Fixing pipe to clutch Gasket) master cylinder Clip, fixing brake pipe to toebox Clip,) Fixing Screw (2BA x½")) clutch pipe Nut (2BA)) to dash	1 139082 1 216914 1 233220 1 552057 1 569462 1 90512651 1 216912 2 234603 2 WM702001 2 RTC608 1 139082 1 233220 1 AEU1581 1 50639 1 78318 * 1 RTC608
18	Support bracket for clutch slave cylinder Support bracket for clutch slave cylinder	1 509856 Engine suffix 'A' 1 561242 2} litre Petrol and Diesel models from engine suffix 'B' onwards
	Support bracket for clutch slave cylinder	1 561922 2.6 litre Petrol models. Early type for use with straight type operating lever
	Support bracket for clutch slave cylinder	1 561762* 2.6 litre Petrol models. Late type for use with cranked type operating lev
19	Shaft and operating lever for clutch Shaft and operating lever for clutch	1 273077* Engine suffix 'A' 1 537603 21 litre Petrol and Diese models from engine suffix 'B' onwards
	Shaft and operating lever for clutch	1 544980 2.6 litre Petrol models. Early type with straight lever
	Shaft and operating lever for clutch	1 537603 2.6 litre Petrol models. Late type with cranked le

^{*} NO LONGER SERVICED


CLUTCH SLAVE CYLINDER

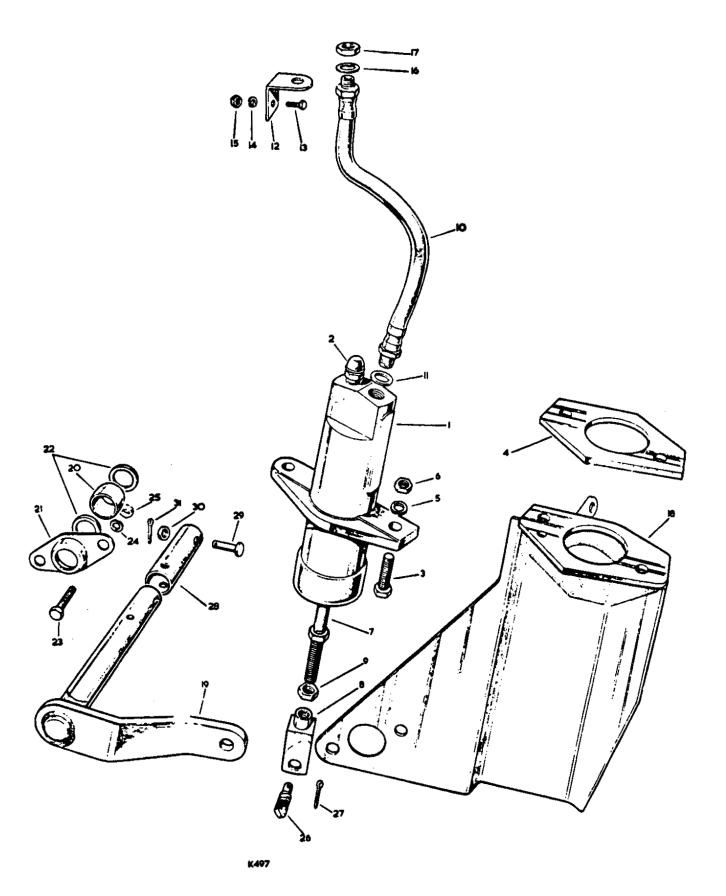


1F 10


PLAT REF.	E 1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS	
20	Spherical bearing	1	217984		٦
21	Housing for spherical bearing		217983		į
	Felt ring for spherical bearing		217985		
23	Bolt (5/16" UNF x }")) Fixing		GHF120	4 cylind	er
	Bolt (5/16" UNF x 1")) spherical		GHF103		
24	Spring washer) bearing to	2	GHF332	J	Except vehicles
25	Nut (5/16" UNF)) sumport bracket		GHF201		fitted with
26	Clevis pin, lever to fork end		216021		All-synchromesh
27	Split pin for clevis pin	1	2392		gearbox
28	Connecting tube for clutch cross-shaft	1			
20	Pin) Fixing tube to	2	536803		ı
30	Plain washer) clutch cross and		RTC840		į
31	Split pin) operating shafts	2	2422*		
	Return spring for clutch operating lever	1	278690) Up to e	ngine suffix 'A'
	Anchor plate for return spring at slave cylinder)	1
	support bracket	1	272920*)	_
	Mounting bracket for clutch jump hose	1	569462	f cylinde RH Stg or	
	Clutch jumn hose	1	592515	A cylinde	
	Clutch jumn hose			6 cylinde	
	Support plate for clutch jumn hose			4 cylinde	
	Support plate for clutch jump hose	1		6 cylinde	
	Pipe, jump hose to clutch slave cylinder	1	NRC1655		Vehicles fitted
	Clutch slave cylinder	1	591231		with all-
	Push rod for clutch slave cylinder	1	576751		synchromesh
					gearbox:-
	Clip fixing push rod	1	574723		Home Market
	Bleed pine for clutch slave cylinder	1			88 and 109
	Adaptor for bleed pipe		204955		Station Wagons
	Bracket for bleed nipe		593664		From vehicle
	Bolt 5/14" UNF x la")) Fixing bracket		255223		suffix 'H'
	Spring washer) to bell		GHF 332		onwards
	Nut 5/16" UNF) housing		GHF201		
	Bleed screw	1	· · ·		
	Shakeproof washer) Fixing bleed screw	1	GHF322		
	Locknut ≩" UN:) to bracket	1	NTF0F04	1	
	Clutch slave cylinder overhaul kit	1	868600		

^{*} NO LONGER SERVICED

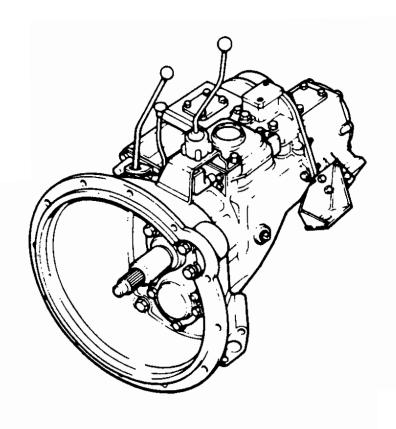

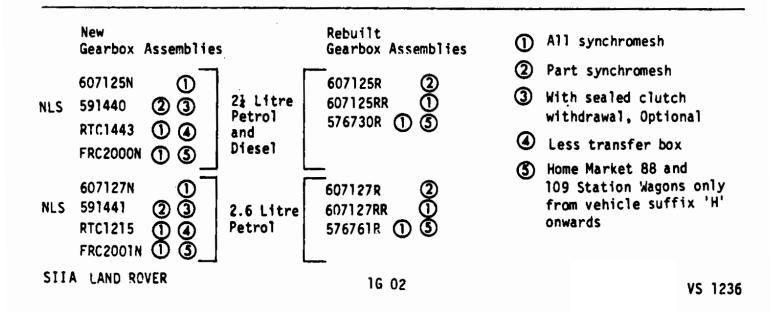


GROUP D GEARBOX - Bell Housing

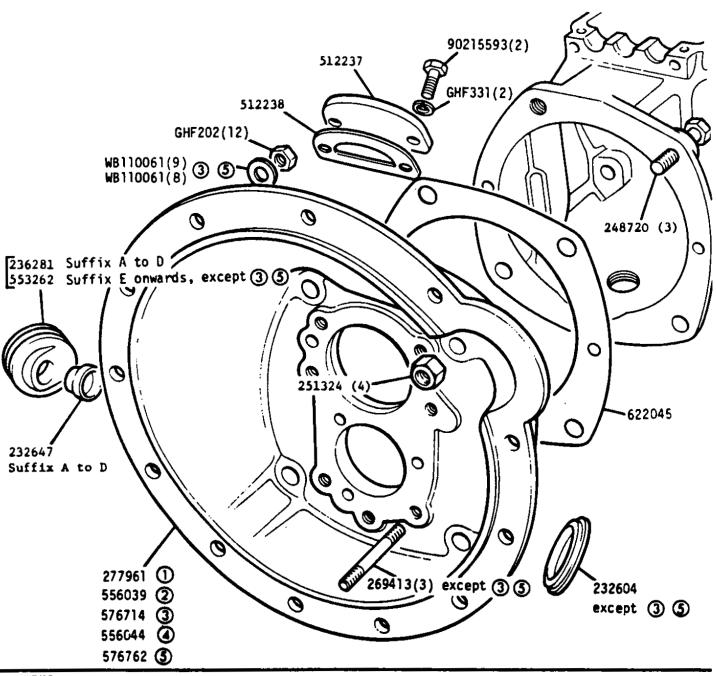


- 21 litre Petrol and Diesel Suffix 'A'
- 2 21 litre Petrol and Diesel Suffix 'B' onwards, Standard Gearbox
- 3 21 litre Petrol and Diesel, All-Synchromesh Gearbox 2.6 litre Petrol, Standard Gearbox
- 3 2.6 litre Petrol, All-Synchromesh Gearbox

GROUP D
GEARBOX - Front Cover, all synchromesh gearbox only

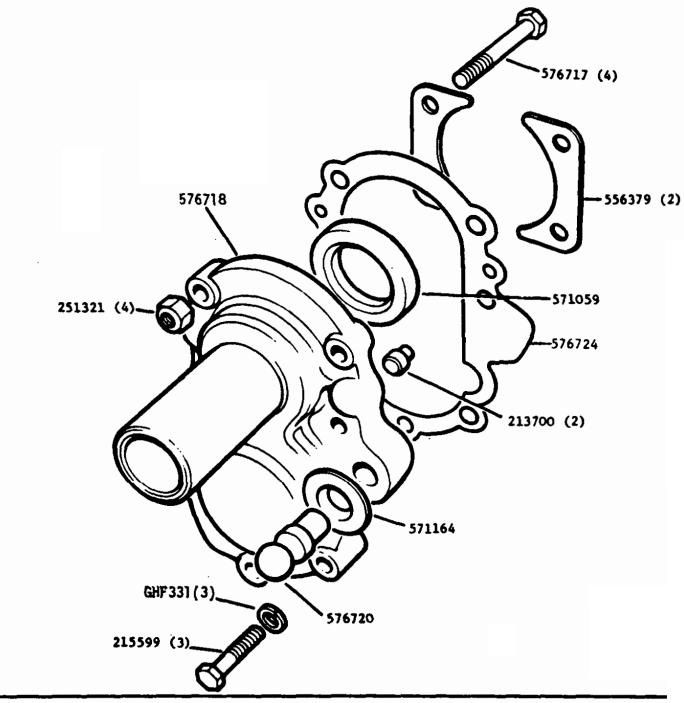


MARKS

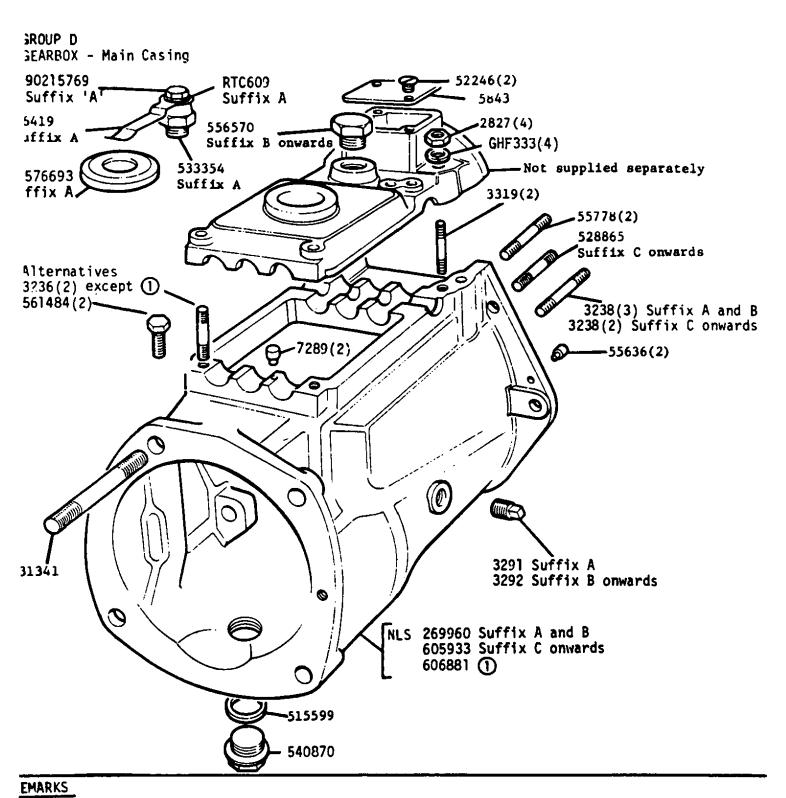

600603 Gearbox gasket kit

All synchromesh, Home Harket 88inch and 109inch Station Wagons, from vehicle suffix 'H'


GROUP D GEARBOX - First Speed and Reverse Gears except All-Synchromesh Gearbox

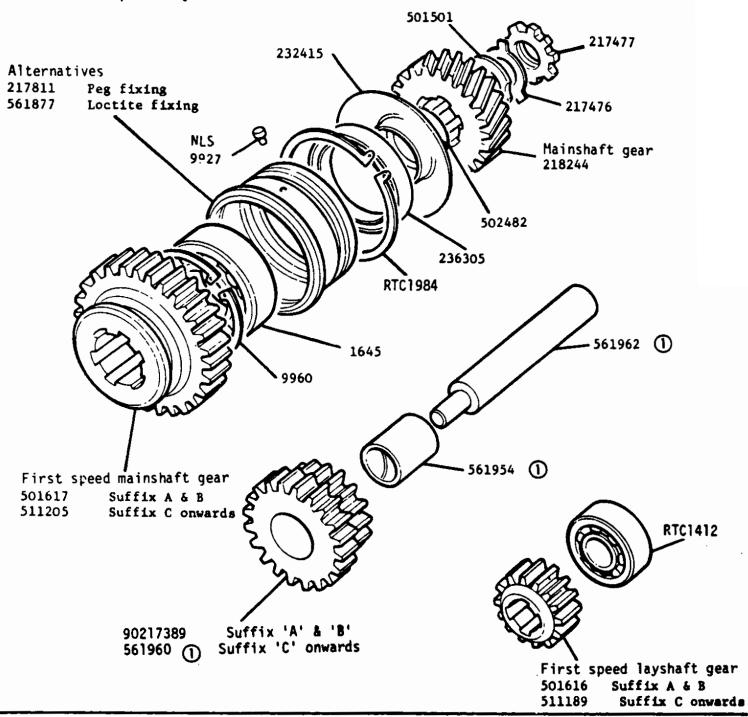


①Interchangeable as a set

Loctite Compound, Grade AVV, 10cc bottle 600303

ROUP D BEARBOX - Second Speed Gears, Mainshaft and Layshaft except All-Synchromesh Gearbox

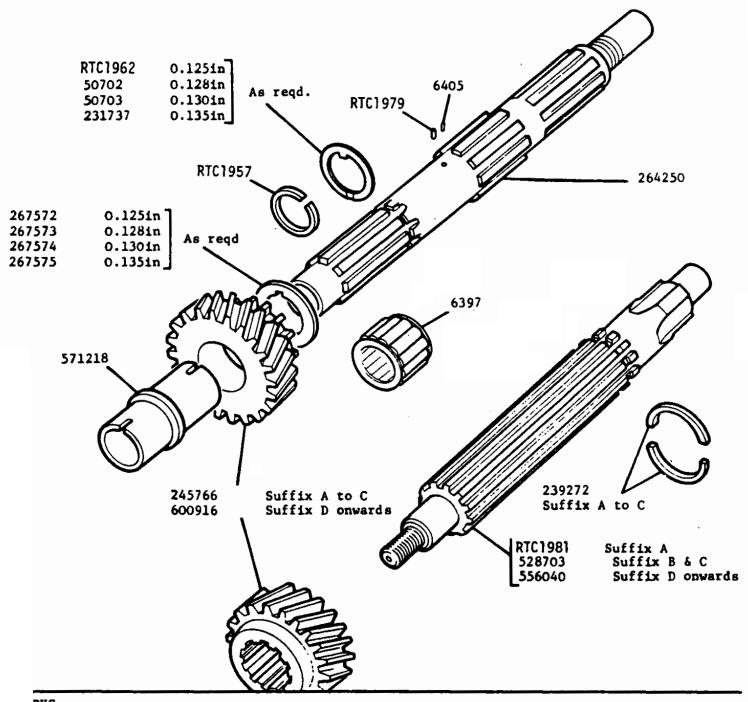


GROUP D
GEARBOX - Third Speed Gears and Primary Pinion
except All-Synchromesh Gearbox

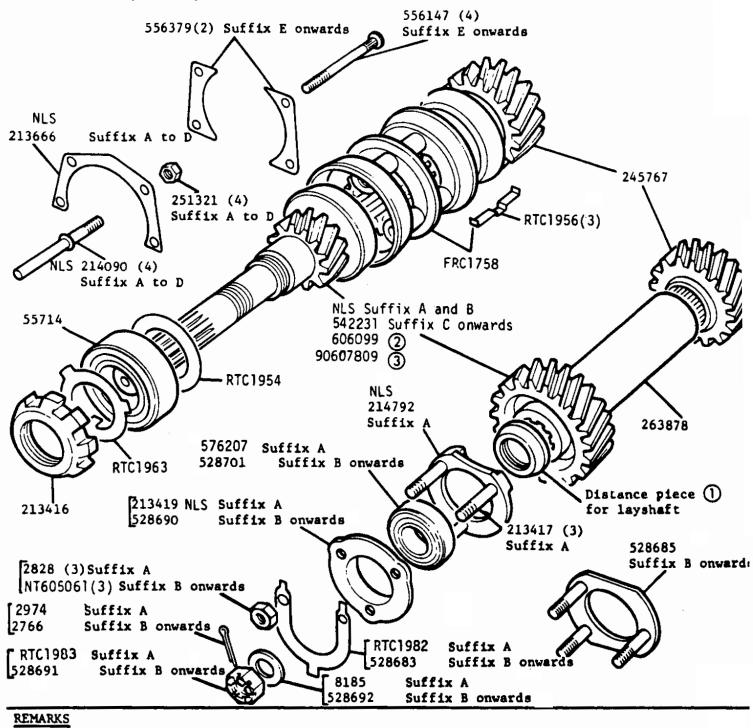


- ① Distance piece for layshaft 0.312in. 241649 0.332in. 241650 As req'd Suffix A
 - 0.352in. 241651
 - 0.405in. 528720 0.425in. 528721 0.445in. 528722

As req'd Suffix B onwards


- ② For gearbox with sealed clutch withdrawal unit
- 3 For gearboxes 607125N and 607127N only

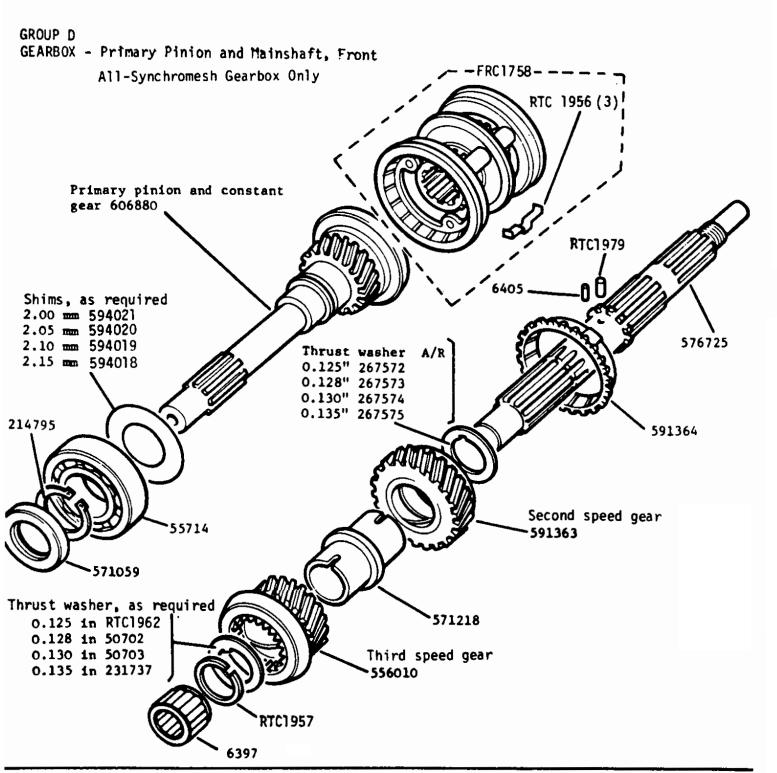

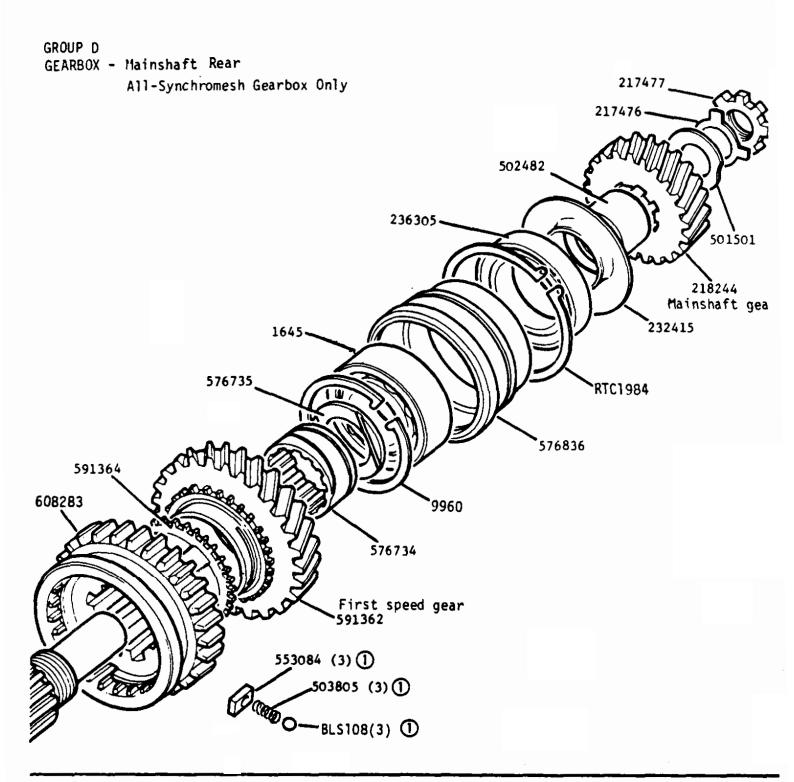


Part of Inner and Outer Member Assembly 608283


GROUP D
GEARBOX - Layshaft Gears and Reverse
All-Synchromesn Gearbox Only

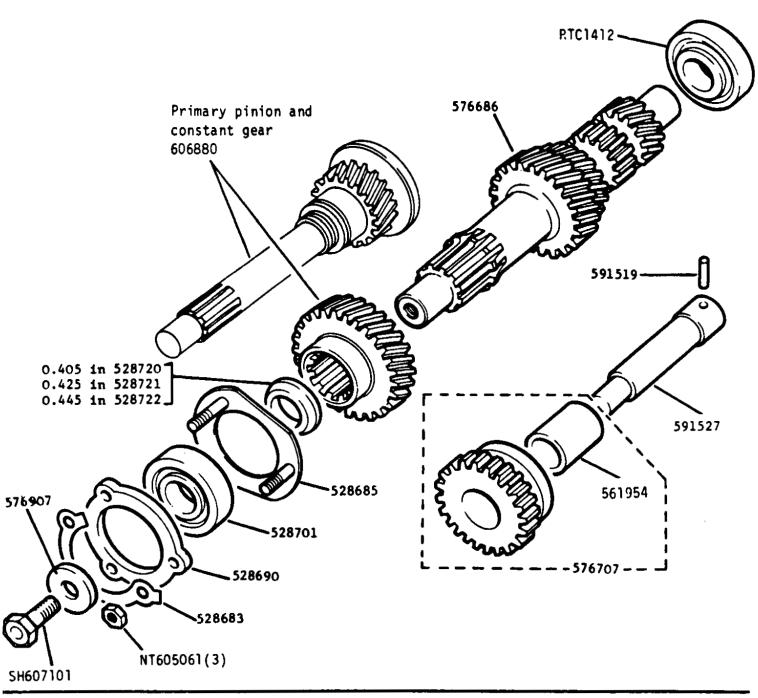

GROUP D
GEARBOX-Rear Output Shaft and Intermediate Gear

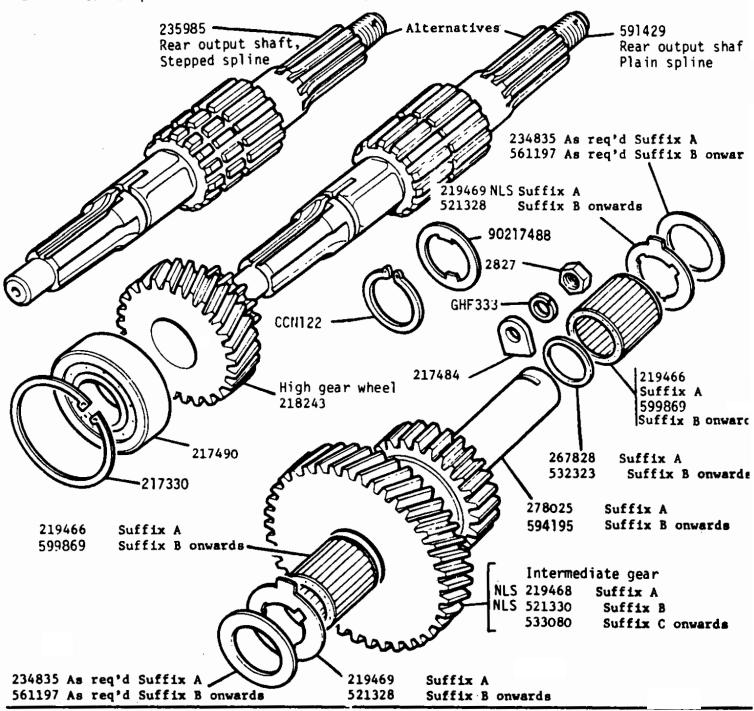



GROUP D
GEARBOX - Low Gear Wheel and Speedometer Drive

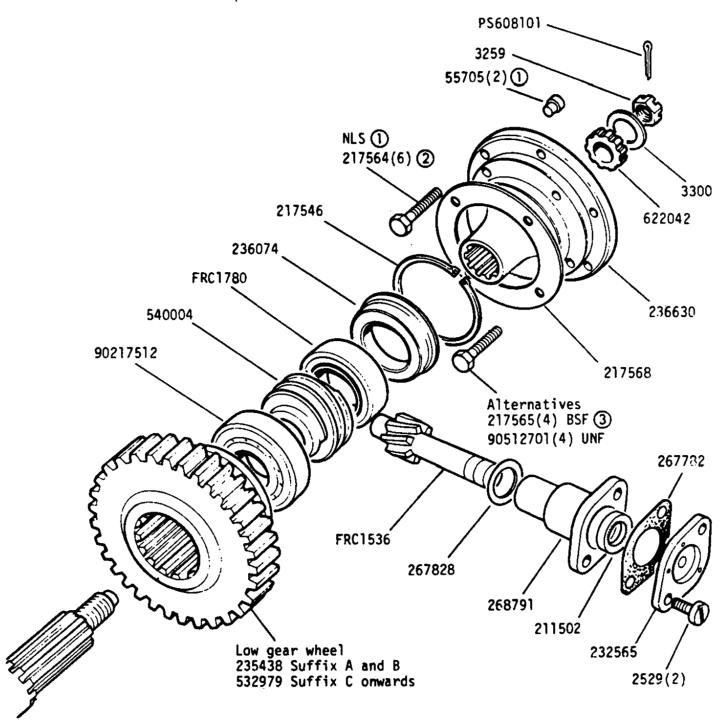


- 109 Diesel up to gearbox number 27600879
- 2 All Petrol and 88 Diesel, also 109 Diesel from gearbox number 27600880
- 3 Except All-Synchromesh Gearbox.

GROUP D GEARBOX - Transfer Box Casing

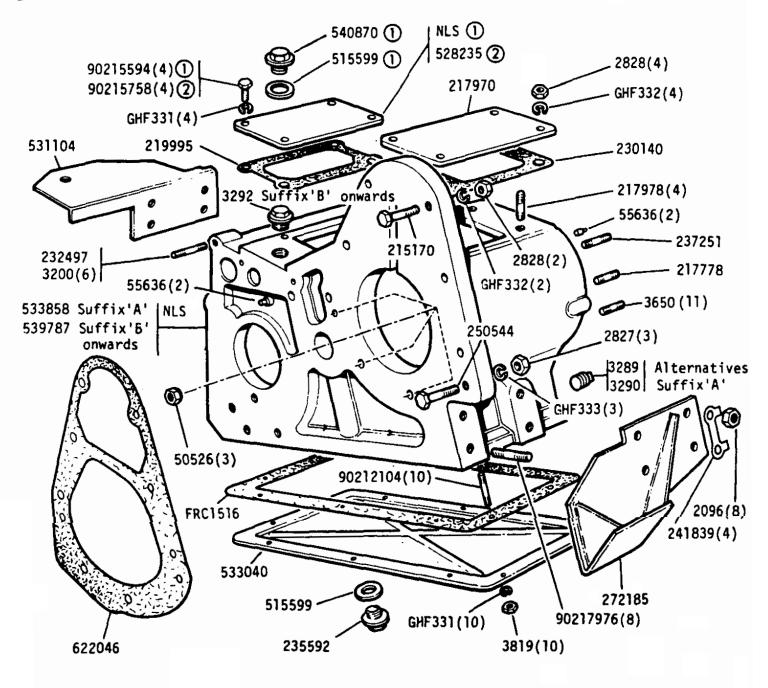


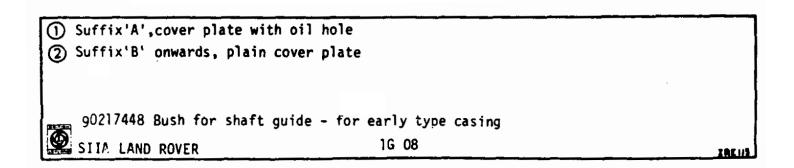

GROUP D
GEARBOX - Speedometer Pinion and Rear Mainshaft Bearing Housings

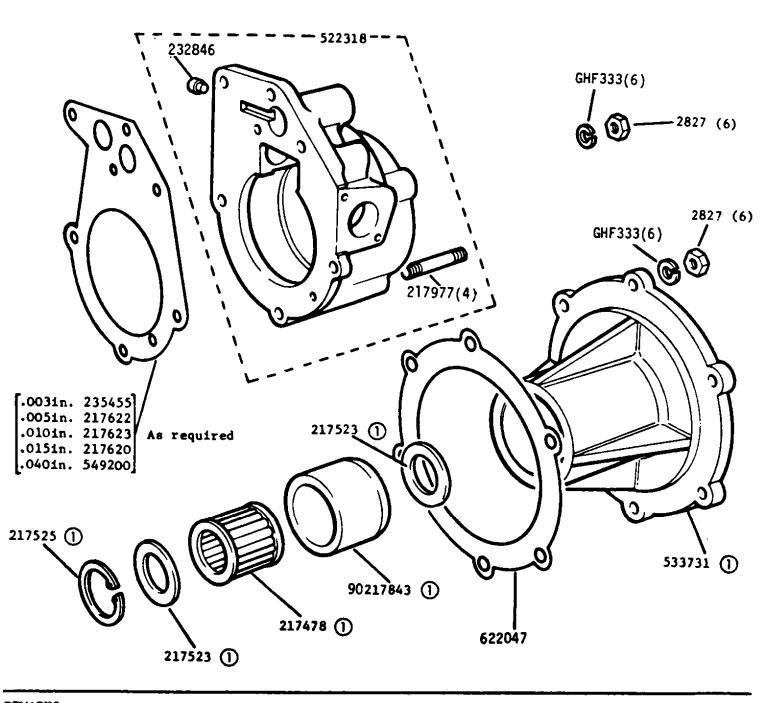


1 Rear mainshaft bearing housing assy. 230696

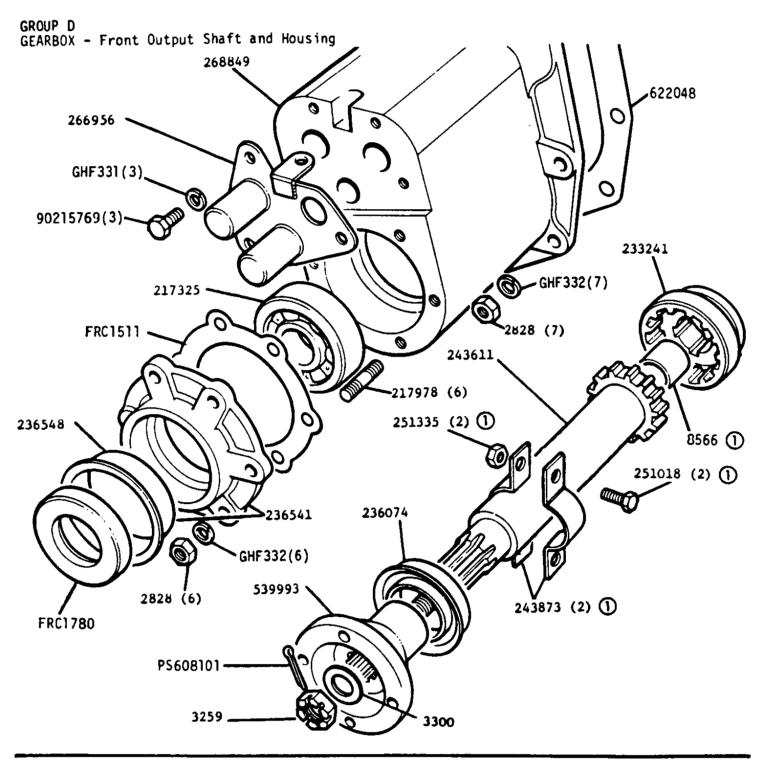

REMARKS

1 Part of 243611 Front output shaft assembly

GEARBOX - Main Gear Change Lever

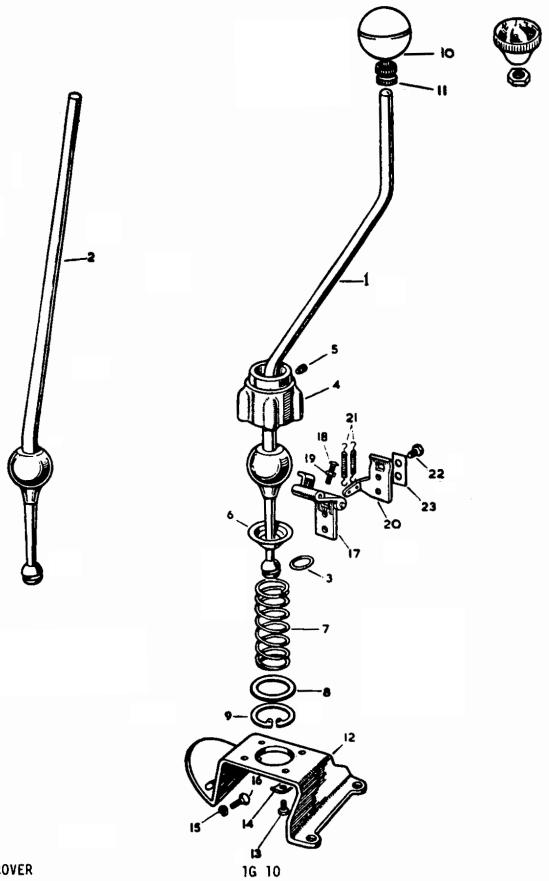


S11A LAND ROVER

K223


PLATE REF.	1 2 3 4 DESCRIPTION		DATE ALL DESCRIPTION
ner.	1 2 3 4 DESCRIPTION	UIT.	. PART No. REMARKS
	MAIN GEAR-CHANGE LEVER ASSEMBLY MAIN GEAR-CHANGE LEVER ASSEMBLY	1	FRC1836*RH Stg 4-cylinder FRC1837*LH Stg models
	MAIN GEAR-CHANGE LEVER ASSEMBLY	1	622006 RH Stg 6-cylinder
	MAIN GEAR-CHANGE LEVER ASSEMBLY	1	622007 *LH Stg models
1	Gear-change lever	1	FRC1454 RH Stg 4-cylinder
	Gear-change lever	1	FRC1455 LH Stg models
2	Gear-change lever	7	FRC1832 RH Stg 6-cylinder
	Gear-change lever	1	FRC1833 LH Stg models
3	'O' ring for gear-change lever	1	lever
	'O' ring for gear-change lever	1	FRC1387 For late type gear change lever
4	Housing for lever	1	219714
5 6 7	Locating pin for lever ball	1	507447
6	Spherical seat for gear lever]	219721
7	Retaining spring for lever]	219723
8	Retaining plate for spring	1	219722
9	Circlip fixing retaining plate]	219797
	Knob for lever]	217735) Screw-on type, for early
	Locknut (1 BSF) for knob	1	3905 *) type gear change lever.
10	Knob for lever]	
11	Star tolerance ring	j	
12	Mounting plate for gear change	1	232608
13	Set bolt (5/16" Whit x 13/16")) Fixing housing		
14	Locker) to mounting) plate	4	
15	Spring washer Pixing mounting	2	GHF331
16	Spring washer) Fixing mounting Set bolt (\frac{1}{4}" Whit x 21/32")) plate to bell) housing		
17	Reverse stop hinge complete	1	502202
18	Adjusting screw) For	1	
19	Locknut (2BA)) hinge]	
20	Bracket for reverse stop spring	1	-
21	Spring for reverse stop	2	
22	Set bolt ($\frac{1}{3}$ " BSF x $\frac{3}{2}$ ")) Fixing hinge and bracket	2	237139
23	Locker) to reverse selector) shaft	1	FRC2469

^{*} NO LONGER SERVICED

GEARBOX - Selector Forks and Shafts
GROUP D except All-Synchromesh Gearbox

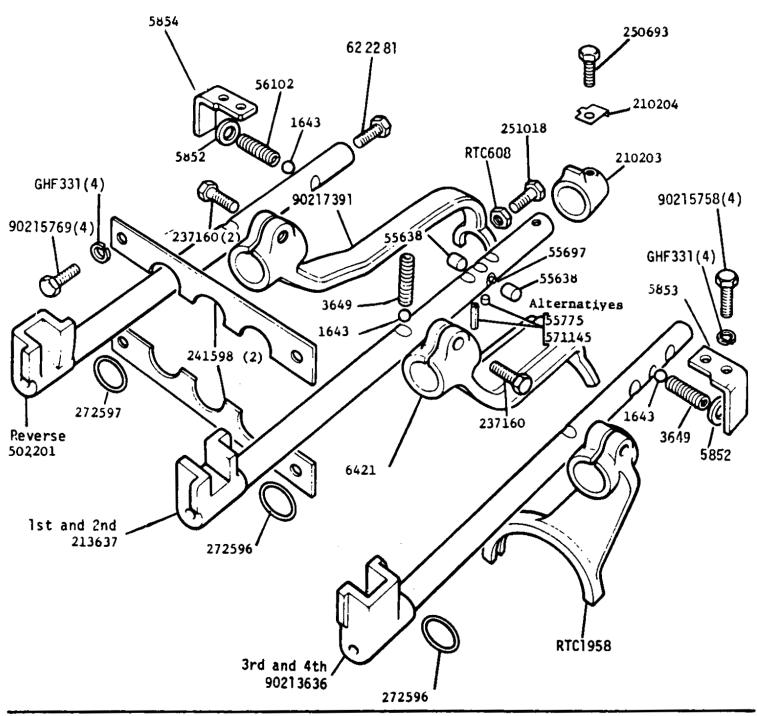

GROUP D
GEARBOX-Selector Forks and Shafts
All-Synchromesh Gearbox Only

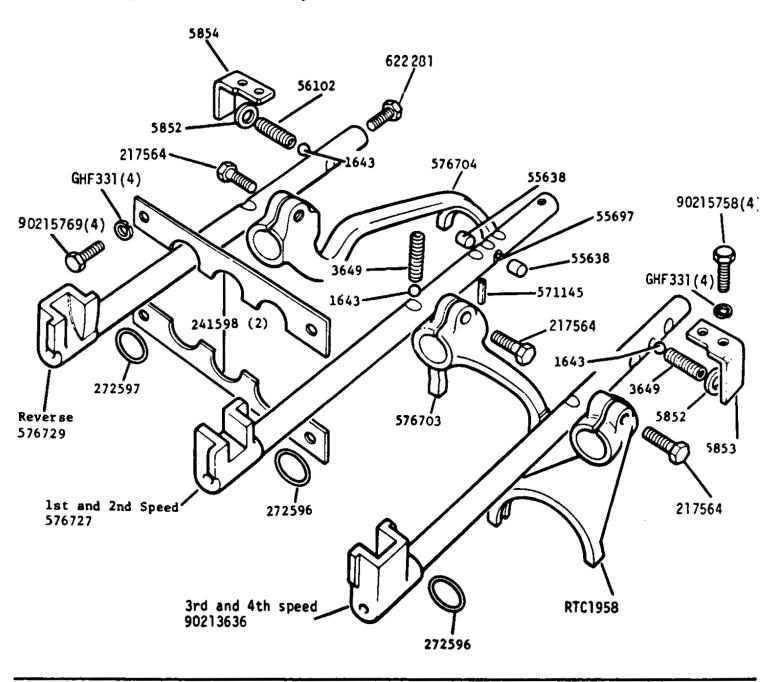


GROUP D GEARBOX - Selector Rod, Four Wheel Drive -232813 -3819 549169~ 2827 561221 233407 232464 GHF323 234658 538536 266992 571855 **-** 3958 549168 230086 -251601 2876 3819 -268847 540842


215808-

₽ - 3958

GROUP D
GEARBOX - Selector Shaft, Four Wheel Drive

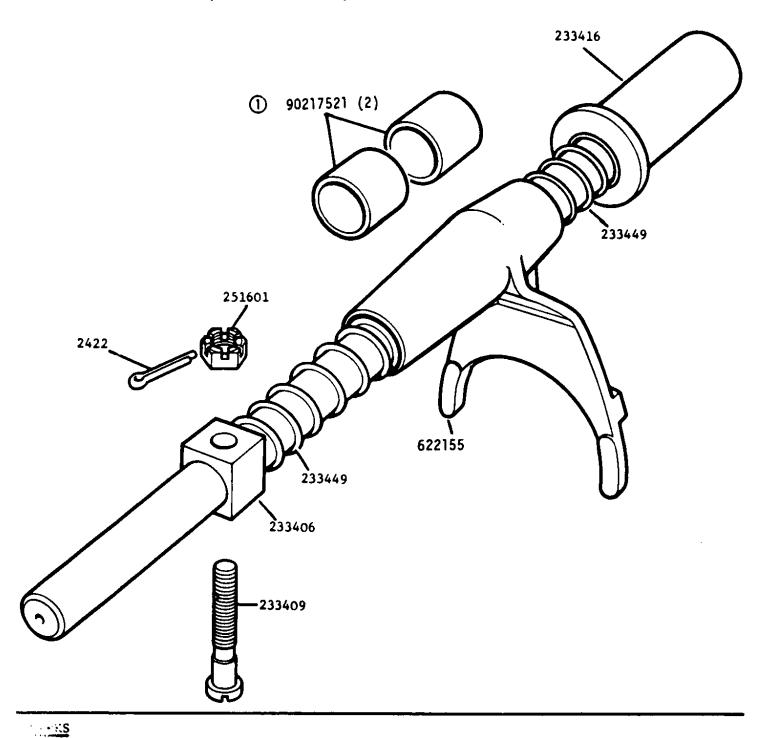


For use with early type selector fork with replaceable bushes

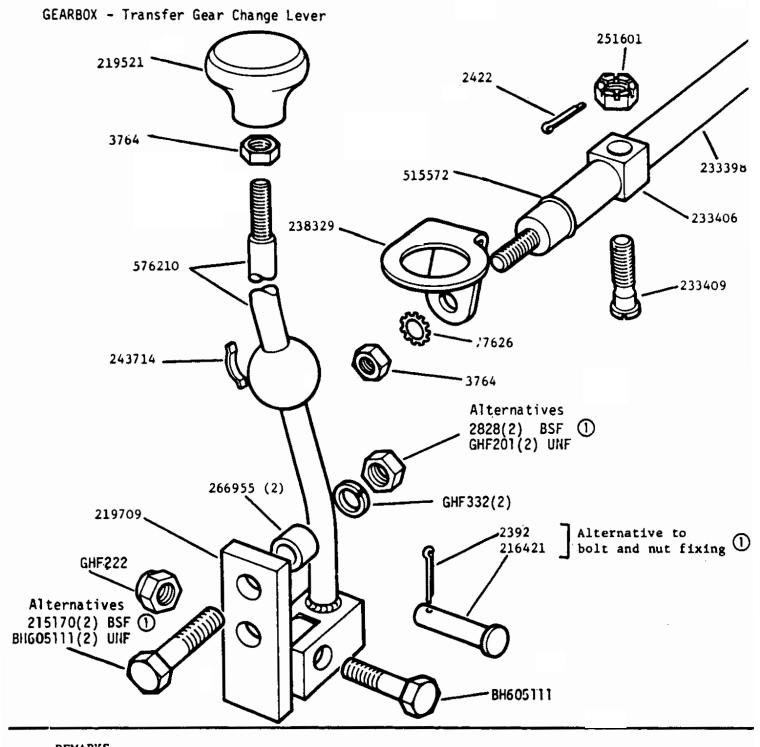


REMARKS

① Except All-Synchromesh Gearbox


GEARBOX - Selector Fork, Transfer Gear Lever

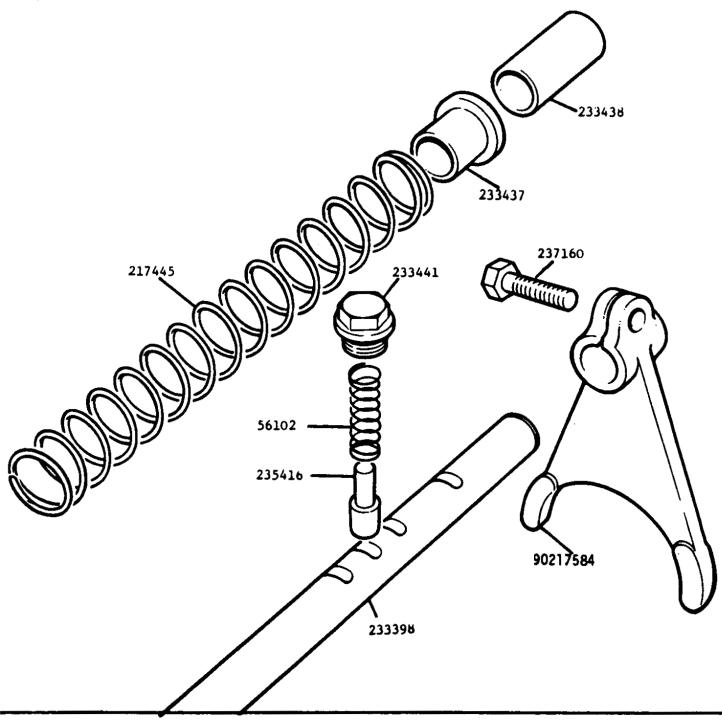

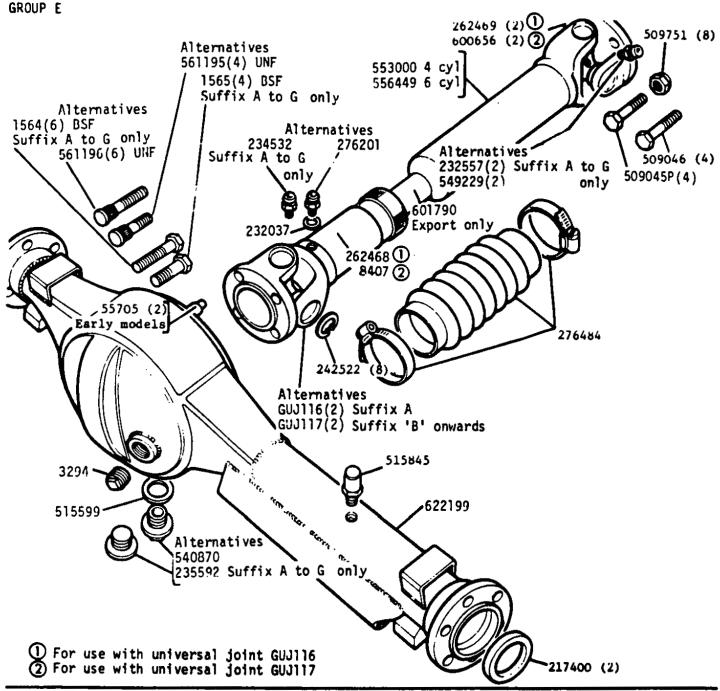


```
Front axle assembly FRC4396 RH Stg } B8"
Front axle assembly FRC2135 LH Stg }
Front axle assembly FRC 2138 RH Stg } 109" 4 cyl
Front axle assembly FRC3395 LH Stg } 109" 6 cyl
Front axle assembly FRC2061 LH Stg } 109" 6 cyl
```

Front axle assemblies include differential, brakes, universal joints, front hubs and steering track rod

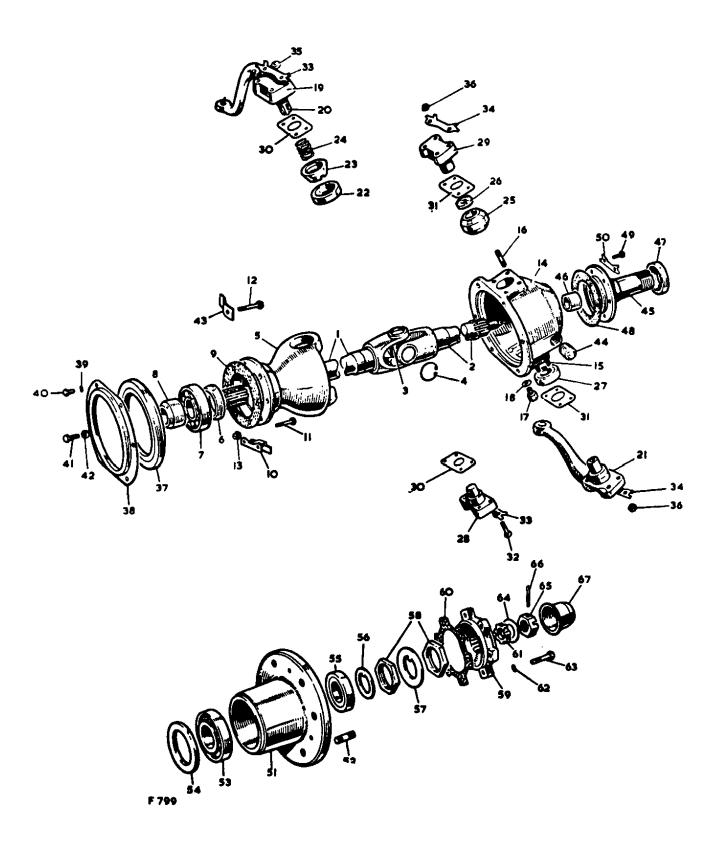

PLAT		RIPTION	an	r. PART No.	REMARKS
	HALFSHAFT COMPLETE FOR FROM	T AXIF. RH	1	269265	•
	HALFSHAFT COMPLETE FOR FROM			269266	
1	Halfshaft only, RH	70.22 \$ 2.11	j		
•	Halfshaft only, LH		j		
2	Stub shaft			242520	
3	Universal joint			GUJ118	
4	Circlip for journal			242522	
5	Housing for swivel pin bear	ing		539741	
6	Distance piece for bearing			244151	
7	Bearing for halfshaft			244150	
	Retaining collar for bearing	9	2	90217398	
9	Joint washer for housing			GFG107	
10	Location stop for jack		1		
]	Bolt (3" BSF x 13"))	Fixing stop		90576510	.
12		and housing		576521) casing
	DOIT (# DOF X 18"))	to front axle	10	5/0521)	For reinforced axle
3	Self-locking nut (a" BSF))			576522) 50526	Casing
•	Seri-Tocking nut (8 DSI))	Casing	12	30320	
	HOUSING ASSEMBLY FOR SWIVEL	PIN. 1H	1	524874*1	For axles with }" steering
	HOUSING ASSEMBLY FOR SWIVEL		i	524875*)	lever studs
	HOUSING ASSEMBLY FOR SWIVEL		i	FRC2075) For axles with 7/16"
4	HOUSING ASSEMBLY FOR SWIVEL		i	FRC2074) steering lever studs
	Special stud(3"), for stee		et 2	90508153) For axles with pendant
	Stud (}"), for steering ?	ever	6	90508152) type ball joints
	Special stud (a"), for st	eering lever and			
		brack) For axles with non-
	Stud (3"), for steering ?		8	90508152) and }" studs
5	Special stud, 7/16" for s	-) For axles with non-penda
_	a	brack		531043) type ball joints and 7/1
6	Stud 7/16", steering leve			531494) studs
_	Set_bolt (7/16" BSF x 13") fixing steering le	ver 8),
7	Drain plug for housing		2	236070) Not part of assemblies
g	Joint washer for drain pl		2) 531004/5
9	Swivel pin and steering lev		1	274145 *	
	Swivel pin and steering lev		1	274147 *	
	Swivel pin and steering lev		1		LH Stg) For axles with
20	Swivel pin and steering lev Swivel pin only	er complete, in	9	239017	LH Stg) pendant type
.0	Grooved pin fixing swivel	nin	2	50453	> ball joints
	Swivel pin and steering lev		ាំ		+ RH Stg)
	Swivel pin and steering lev		i		* RH Stg) For axles with
	Swivel pin and steering lev			90502713	* LH Stg) non-pendant type
	Swivel pin and steering lev		ì	502712	* LH Stg) ball joints and) } studs
2]	Swivel pin and steering lev	er complete. RH	1	530988	RH Stg) For axles with
-	Swivel pin and steering lev			530989	RH Stg) non-pendant type
	Swivel pin and steering lev			530990	LH Stg) ball joints and
	Swivel pin and steering lev			530991	LH Stg) 7/16" studs
	'0' ring for steering lever		2	531433	For axles with non-pendan
	•				type ball joints

UNIVERSAL JOINTS AND FRONT HUBS

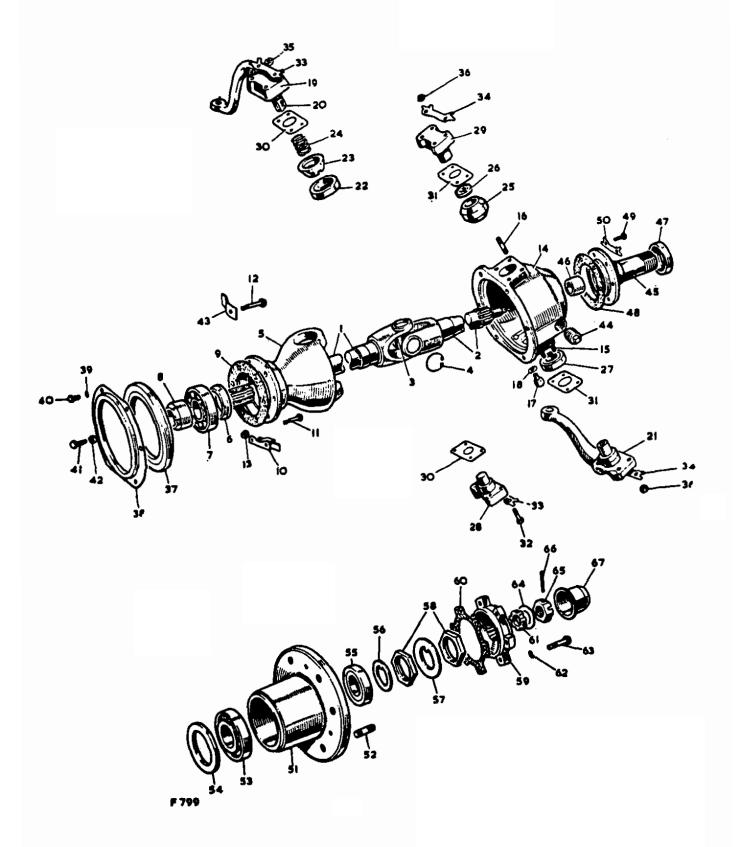

1H 04

PLA' REF.		DESCRIPTION	0	TY. PART No). REMARKS
22	Cone seat for swivel pi	n. ton	2	230858) Cone and spring type
	Cone bearing for swivel		2) steering damping. Up to
24	Spring for cone bearing		2		
6 T	spring for cone bearing	,	•	EAELIE) 88 RH Stg. 25107785 109
) RH Stg, 24405088 88LH Stg.
) 25404199 109 LH Stg
25	Railko bush and housing	•	2	539742	
	Thrust washer for swive) type steering damping.
20	THIRDS Washer TOT SHIVE	i hiu	L	320/02) From axles numbered
) 24109241 88 RH Stg
) 25107786 109 RH Stg
) 24405089 88 LH Stg
) 25404200 109 LH Stg onwards
27	Passing for evival pin	hattam	2	217268	
<i>L 1</i>	Bearing for swivel pin, Swivel pin and bracket				* For axles with pendant type
	Swiver pin and bracket	comp le te	٤	417761	ball joints
	Swivel pin and bracket	complete	2	905027	14* For axles with non-pendan
	Switter pin and pracket	coup rece	4	303027	type ball joints and a"
					studs. Cone and spring
					type steering damping
2Ω	Swivel pin and bracket	complete	2	530992	*For axles with non-pendant
LU	Switter pill and bracket	coup ie ce		JJ4772	type ball joints and
					7/16" studs. Cone and
					spring type steering
					damping
29	Swivel pin upper comple	ate	2	576583	For axles with non-pendant
	omite, p.m. apper compile	. • •	-	0,000	type ball joints and 7/16"
					studs. Bush and thrust
					washer type steering
					damping.
	Shim .003")		As read	230007	
30	Shim .005")		As read		
	Shim .010")		As read		
	Shim .030") For swiv	el pin	As read	217455)
	Shim .003") bearing	•	As regd		. *
	Shim .005")		As read	530985) For axles with 7/16"
	Shim .010")		As read	530986) Studs
	Shim .030")		As reqd	530987)
2	Set bolt (}" BSF x la")) Fixing	. 8	576521	For axles with pendant
) swivel			type ball joints
33	Locker) pin	8		For axles with 1" studs
34	Locker) to	8		For axles with 7/16" studs
35	Nut (3" BSF)) swivel	8	2827	For axles with pendant
) pin	<u>.</u> .		type ball joints
	Nut (3" BSF)) housing	16	2827	For axles with non-pendant
		}			type ball ioints and }"
~-	N., 197728 BODY	}	_	PA 13 A 4	studs
36	Nut (7/16" BSF)	₹	8	594104	For axles with non-pendant
		₹			type ball joints and
)			7/16" studs

^{*} NO LONGER SERVICED


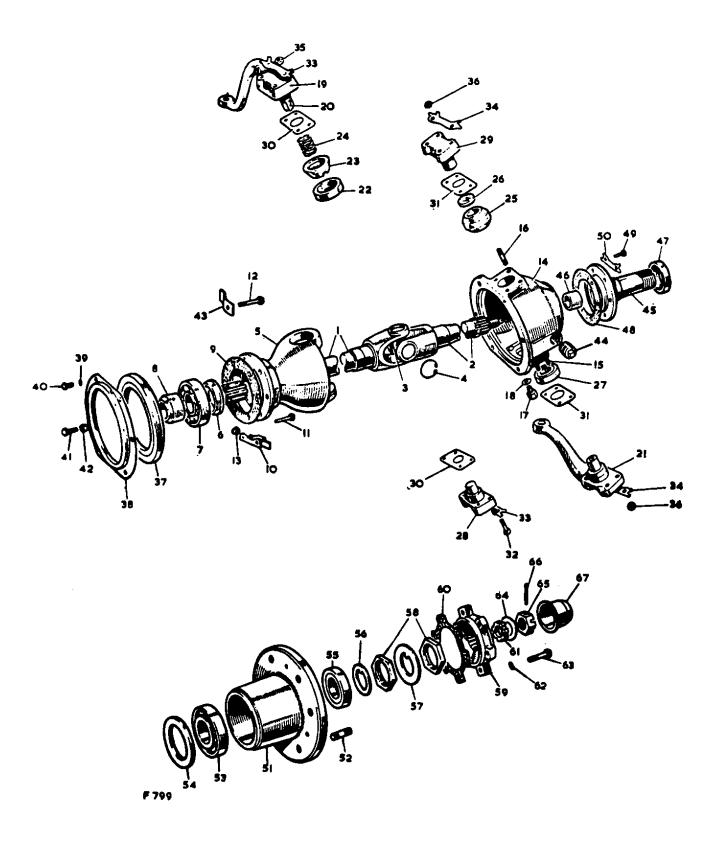


PLATE REF.	1 2 3 4 DESCRIPTION		مرته	PART No.	REMARKS
27	Oil coal for suival nin because			CUCZOCZ	···
	Oil seal for swivel pin bearing	nousing	2	GHS1003	
	Retainer for oil seal	•		235968	
	Spring washer)		GHF 331	
40	Set bolt (3" BSF x 3"))		237139	
_	Plain washer)		RTC609	
41	Adjustable lock stop bolt) Fixing		25069 6	
42	Locknut (1 BSF) for stop bolt) retainer	2	3819	4 off on 109 and when
) to			7.00 x 16, or 8.20 x 15
) swivel			tyres are fitted
43	Lock stop plate) pin housing	2	508175	•
44	Oil filler plug for swivel housi		2	3292	
45	STUB AXLE ASSEMBLY		2	599826	
46	Bush for driving shaft		2	217354	For early type stub axle
47		ng	2	599698	
48			2	GFG108	
49	Set bolt (BSF x 1")) Fixing		12	237339	
50		pin housing	6	277311	
51	FRONT HUB ASSEMBLY		2	561889	
52	Stud for road wheel) 9/16" BS	F x 1.21/32*		561590	∤lain ¬Alter-
	Stud for road wheel) overall			561886	Serrated natives
53	Bearing for front hub, inner		2	GHB162	7,,,,,,,
	Oil seal for inner bearing		2	GHS202	
55	Bearing for front hub, outer		2		
	Key washer)		2	217352	
	Locker) Fixing front hub	hoaning	2	217352	
58	Special nut)	near mg	4	9021735	c
59		e buk			_
33	Driving member complete for from Joint washer) For driving		2	571235	
			2		Early models
60	Oil filler plug) member		2		_with oil filled hub
	Joint washer for driving member		2		
	Oil seal for stub shaft			GHS1002	
62	Spring washer) Fi	xing driving	12		
63	Set bolt (a BSF x 1.19/32")) me hu	mber to front b	12	215331	
64	Plain washer) Fixing		2		
	Slotted nut) driving member			3259	
66	Split pin) to driving shaft			PS60810	1
67	Hub cap, front		2		
	Swivel pin stud conversion kit		1	532329	To convert 3" stud to 7/16" stud on non-pendant
	Swivel pin conversion kit		1	532268	type steering levers only To convert cone and sprin steering damping to bush and thrust washer type

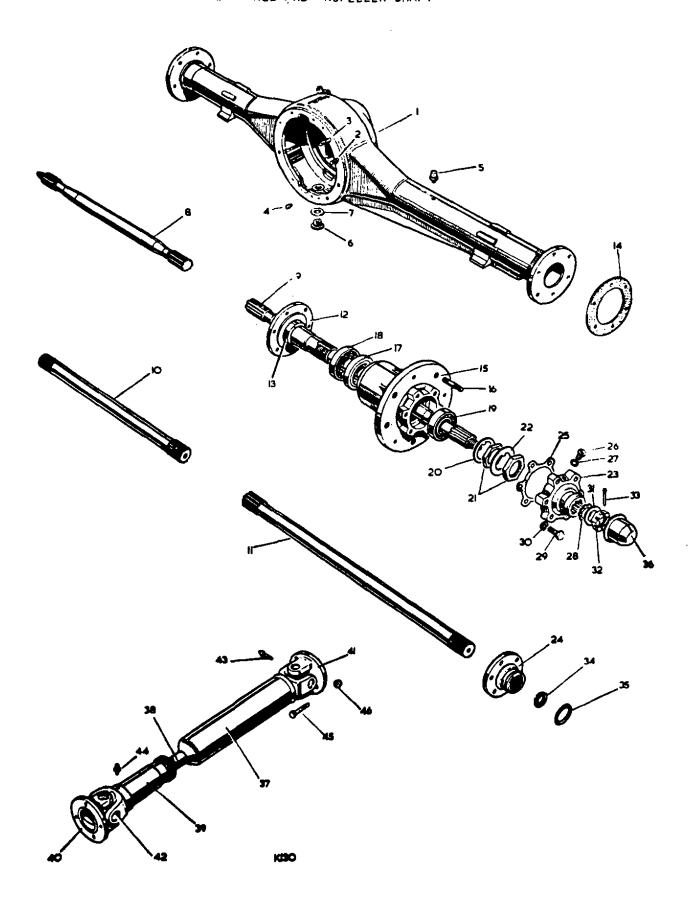

PLA REF.		01	TY. PART No. REMARKS
	REAR AXLE ASSEMBLY	1	FRC3400 88 See note ①
	TREAR AXLE ASSEMBLY	i	
	No longer available, replaced by:-	•) Up to
	REAR AXLE CONVERSION KIT	7	RTC2464 109 21 litre) vehicle
	REAR AXLE CONVERSION KIT	i	RTC2465 109 2.6 litre) suffix 'H
	REAR AXLE ASSEMBLY	i	591316 * 109 ENV type. Optional (2)
1	Rear axle casing complete	i	622195 88
	Rear axle casing complete	1	622197 109 Rover type
	Rear axle casing complete	1	533567 109 ENV type. Optional
	Special bolt (2"BSF x 1.3/16")) Fixing	4	1565) Bolt type)
	Special bolt (2"BSF x 1.11/16")) differentia	1 16	1564 *) fixing) Rover type
2	Special stud (@"UNF x look") housing	4	561195)Stud type) axles
3	Special stud (¾"UNF x-1¾")) to	6	561196)fixing)
	Set bolt (a" UNF x la")) axle		255248)ENV type axle
	Spring washer) casing		GHF333)109 Optional
4	Dowel locating differential housing		55705 Early type axles
5	Breather complete for rear axle	1	
6	Drain plug for rear axle casing		235592
7	Joint washer for drain plug]	
8	Rear axle shaft, RH		591378) Rover type
9	Rear axle shaft, LH]	
10	Rear axle shaft, RH	j	
11	Rear axle shaft, LH		533580) 109 Optional
12	Rear hub bearing sleeve		599828
13	Distance piece for bearing sleeve		599698
1 4	Joint washer, bearing sleeve to axle casing	2	GFG103
15	REAR HUB ASSEMBLY	2	561889)Vehicle
16	Stud for road wheel) 9/16" BSF x 1.21/32"		561590 Plain)Alter-)suffix
	Stud for road wheel) overall length	10	561886 Serrated)natives)A to G
	REAR HUB ASSEMBLY	2	576844)From vehicle suffix H
	Stud for road wheel 16 mm		576825) onwards
17	Hub bearing, inner		GHB162
18	Oil seal for inner bearing	2	
19	Hub bearing, outer	2	
	-		

(1) Also required:		
Adaptor bracket for tee-piece	1	577731
Bolt 1" UNF x 1"	1	255202
Plain washer	1	WB106041

² For replacement of complete rear axle assy - See page 2L 06

^{*} NO LONGER SERVICED

REAR AXLE AND PROPELLER SHAFT


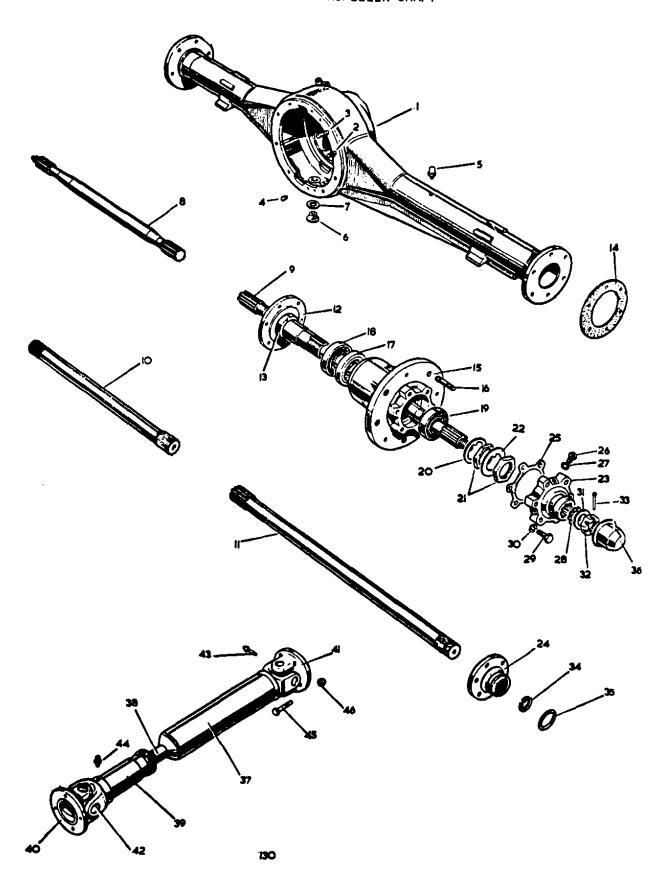


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
20	Key washer) Fixing	2 217352
21	Special nut) hub	4 90217355
22	Locker) bearing	2 217353
23	Driving member for rear hub	2 571235 Grease-packed type, Rover axles
	Driving member for rear hub	2 571711 Grease-packed type, ENV axle. 109 Optional
25	Joint washer for driving member	2 GFG106
26	Filler plug for driving member	2 556204 Early models with
27	Joint washer for filler plug	2 232038Joil filled hub
28	Oil seal for rear axle shaft	2 GHS1002 Rover type axles
29	Set bolt (3" BSF x 1.19/32")) Fixing	
30		to rear 12 GHF333
31	Plain washer)	2 571922 7
32	Slotted nut) Fixing	2 3259 Rover type axles
33	Split pin) axle shaft to	2 PS608101
34	Circlip) driving member	2 549473 ENV type axle 7
35	'0' ring)	2 GHS1007 109 Optional
36	Hub cap, rear	2 219098
37	PROPELLER SHAFT ASSEMBLY, REAR	1 553001 88 4-cyl 1 553002 109 4-cyl 1 556450 109 6-cyl 1 533639 109 4-cyl 1 591279 109 6-cyl 2 591279 109 4-cyl 3 591279 109 4-cyl 3 591283 109 6-cyl 3 Salisbury type 3 axle from vehicle Suffix 'H' onwards
38	Splined stub shaft for propeller shaft	1 601790_Export only
	Splined end)	1 262468 For use with Universal
	Flange) For propeller	2 262469 Joint Part No. GUJ116
39	Splined end) shaft	1 8407 For use with Universal
40	Flange)	2 600656 Joint Part No. GUJ117
	Universal Joint	2 GUJ1167
41	Universal Joint	2 GUJ117 Alternatives
42	Circlip for universal joint	8 242522
43	Grease nipple for universal joint, }" B	
7.0	Grease nipple for universal joint, 1" U	
44	Grease nipple for shaft sleeve	1 234532 Straight type. 7Alter-
• •	Grease nipple for shaft sleeve	1 276201 Angled Inatives
	Joint washer for nipple	1 232037 type
45	Bolt (3" UNF x 13")) Fixing	8 509045P
46	Self-locking nut (3" UNF)) propellor	
70	Jeth tooking hat (8 onl) / propertor	3/14/ U W// E/U


GROUP E
DIFFERENTIAL HOUSING FOR FRONT AND REAR ROVER AXLES

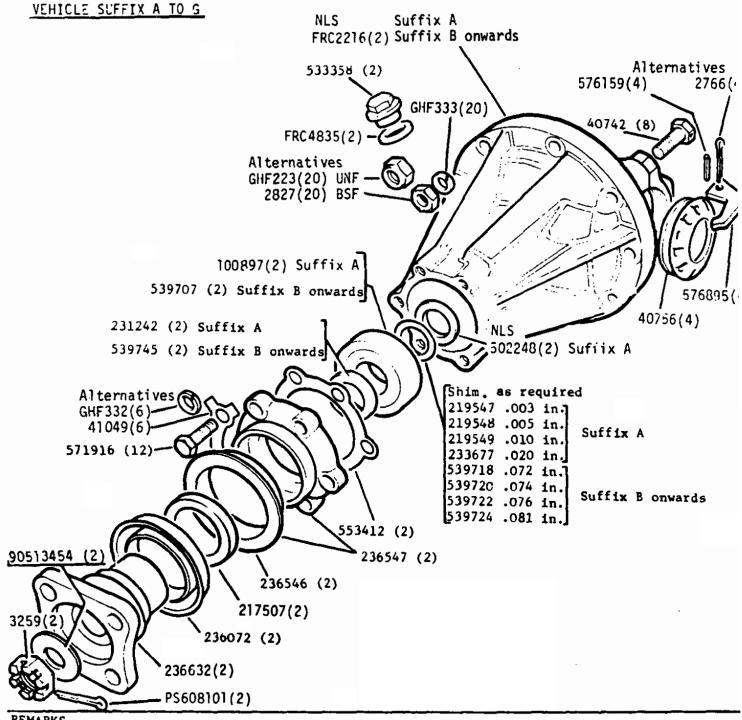


Differential assembly 505702(2) - Has now been superseded by 504484M, see land Rover 5.111 catalogue for components.


Hylomar sealing compound, 4 oz tube, GGC102 For use with joint washer 553412

 GROUP E



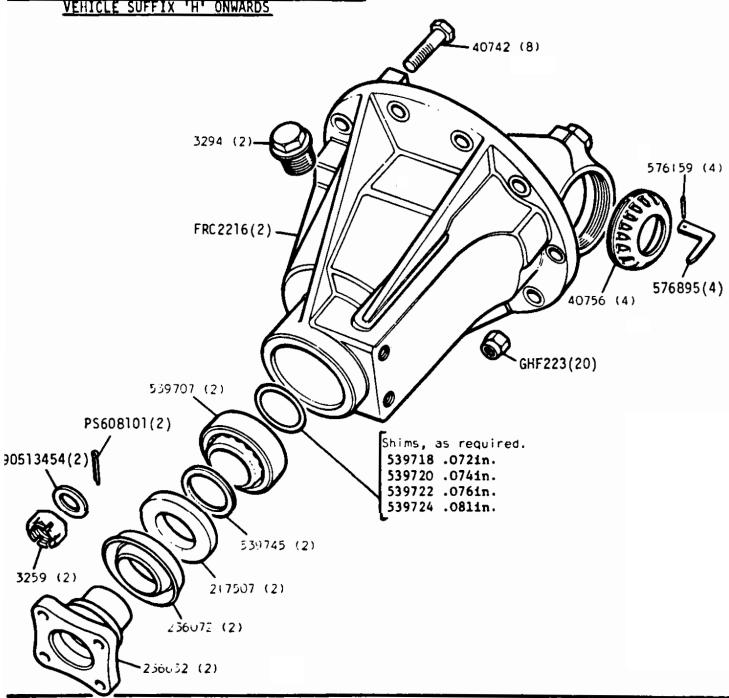

Differential assembly 576790(2) - Has now been superseded by 594484N, see Land Rover S.111 catalogue for components.

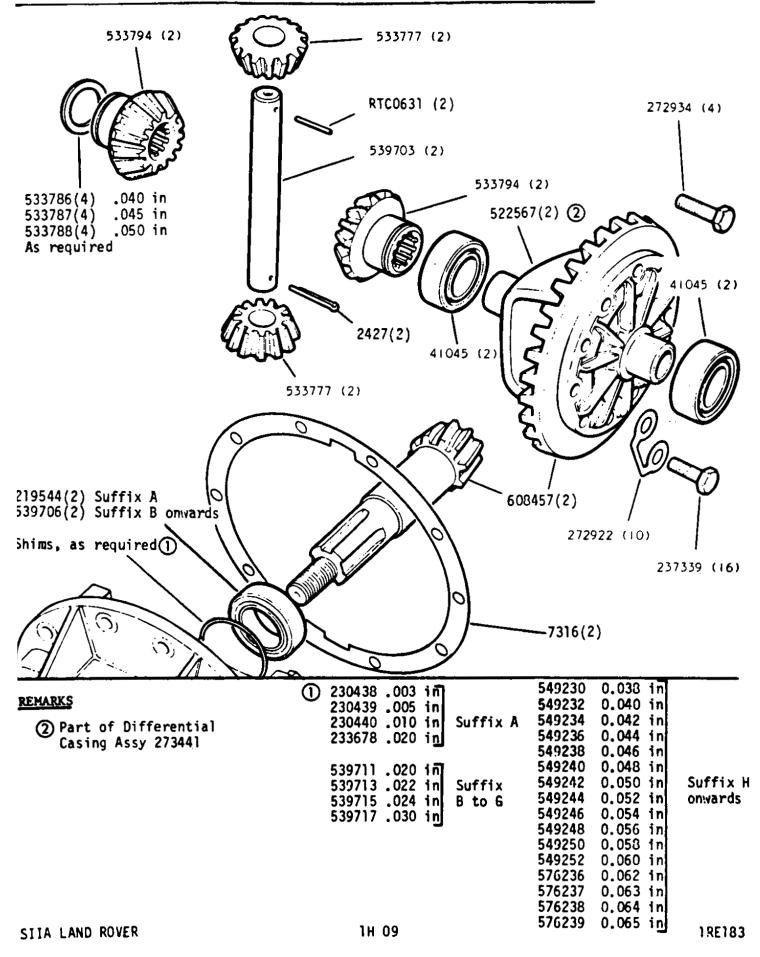

DIFFERENTIAL, REAR, ENV TYPE AXLE, 109 OPTIONAL


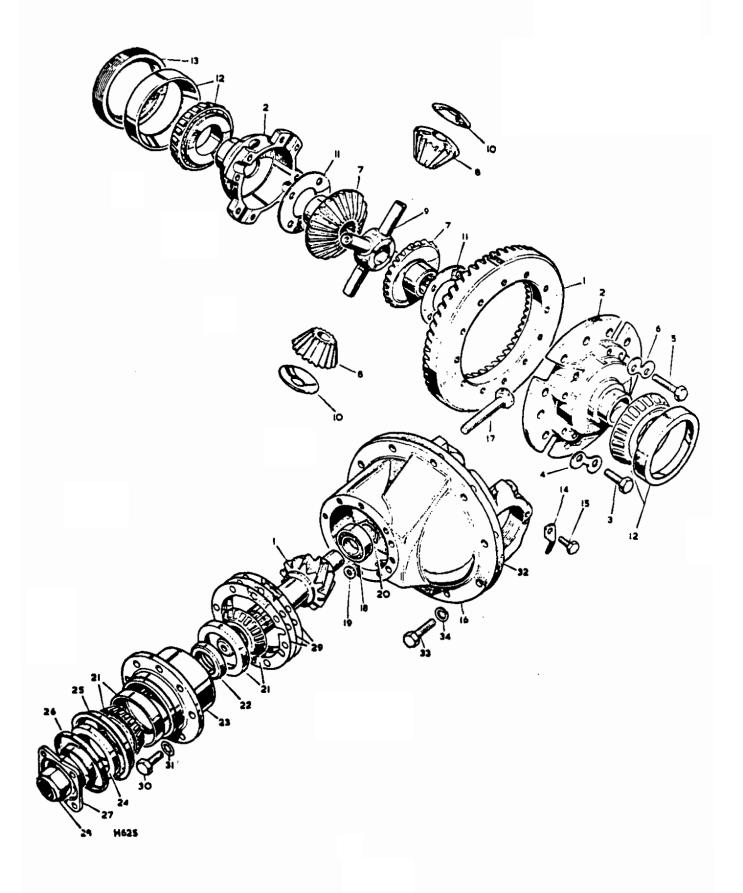



PLATE REF.	1 2 3 4	DESCRIPTION	QT	Y, PART No.	REMARKS
-					
		ASSEMBLY, 4.7 RATIO	1	533568*	
1		and bevel pinion	1		
2	Differenti	al casing	1	600901	
3	Set bolt (7/16" UNF x 1")) Fixing crownwheel	12	SH607081	
4	Locking pl		6	549460*	
5	Set bolt (7/16" UNF x 13")) Fixing differen-	8	BH607141	
6	Locking pl	ate, double type) tial casing) halves together	4		
7	Differenti		2	549461	
8	Differenti		4		
9	Spindle fo		ĩ		
10		differential pinion washer	4		
11		al wheel washer	. 2		
12		er bearing for differential	2	549457	
13	Differenti	al bearing adjuster	5	549431*	
14	Locking pl		2	549411* 549447* SH504041 600902*	
15	Set bolt (l" UNC x l")) adjuster	2	SHEDADAT	
16		and bearing cap complete	้า	600902*	
17	Special	set bolt, fixing bearing cap	À	549409	
18		or bevel pinion, nose end	ĭ		
19		washer) Fixing bearing to	i		
		t (½" × 1½")) nose piece and	i	4560	
20	Circlip) bevel pinion	j	549419	
21		r bevel pinion		549420	
	Spacer .37			549425	
	Spacer 37	Δ'' \		549427	
22	Spacer .37	6" \		549429	
	Spacer .37	P") For As		549431	
	Spacer .38	2") pinion As		549433	
	Spacer .38			549435	
	Spacer .38			549437	
	Spacer .39			549439	
	Spacer .39		read	549441	
	Spacer .39			549443	
	Spacer .40)O" \	reod		
23		on housing complete	1	549413	
24	Oil seal f	or ninion	,	549412	
25		for bevel pinion bearing housing			
26	Mudehield	for driving flange	1	549454 549453*	
27		ange for bevel pinion	i		
28		ange for bevel pinton it (?" UNF), fixing driving flange to		549421*	
20	- Special 110	of (a living trange to	1	EADAAO÷	
	Shim 002"			549448* 549414*	
29	Shim 1002		eqd		
LJ	Shim 1003		read		
30		as adjustment AS as UNF x la")) Fixing pinion	reqd		
30 31	Shakeproof	g one x ig / / rixiny pinion	8		
31	эпакергоот	washer) housing to nose) piece	8	GHF 323	


^{*} NO LONGER SERVICED

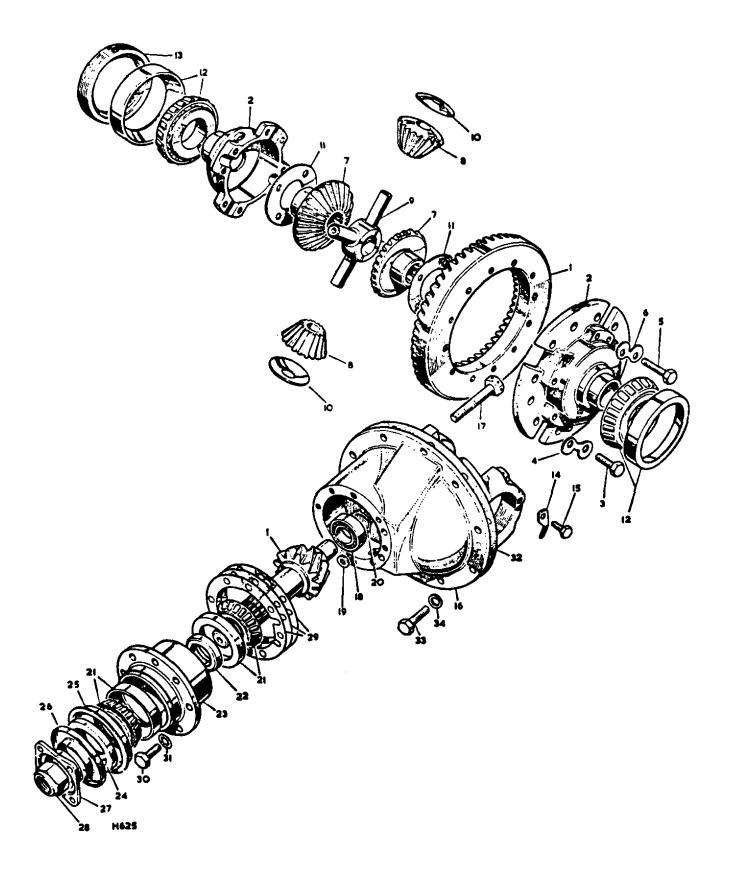


CRO PLATE	UP E	DIFFERENTIAL, REAR, ENV TY	PE AXI	LE, 109 OPTIONAL
REF.	1 2 3 4	DESCRIPTION	۵۱۲	. PART No. REMARKS
32	Joint washer	, differential to axle casing	1	533645*
33	Set bolt (}"	UNF x 11")) Fixing differential	10	255248
34	Spring washe	UNF x li")) Fixing differential r) to axle casing	10	GHF333 * NO LONGER SERVICED

GROUP E
Rear Axle Casing - 109inch from Vehicle Suffix 'H' onwards

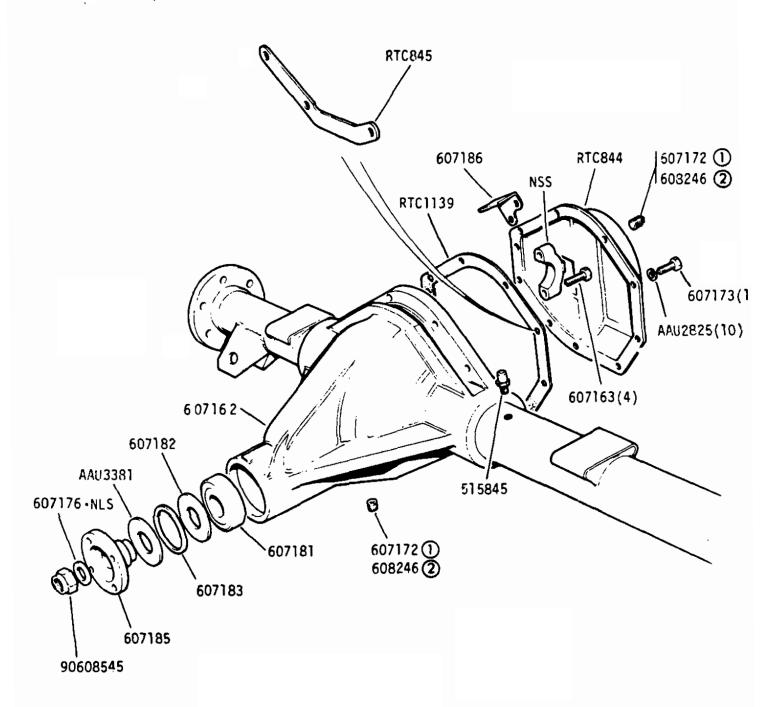

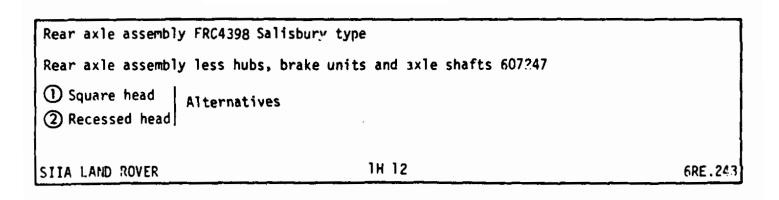


GROUP E
Rear Differential Crown Wheel and Pinion - 109inch from vehicle suffix 'H' onwards

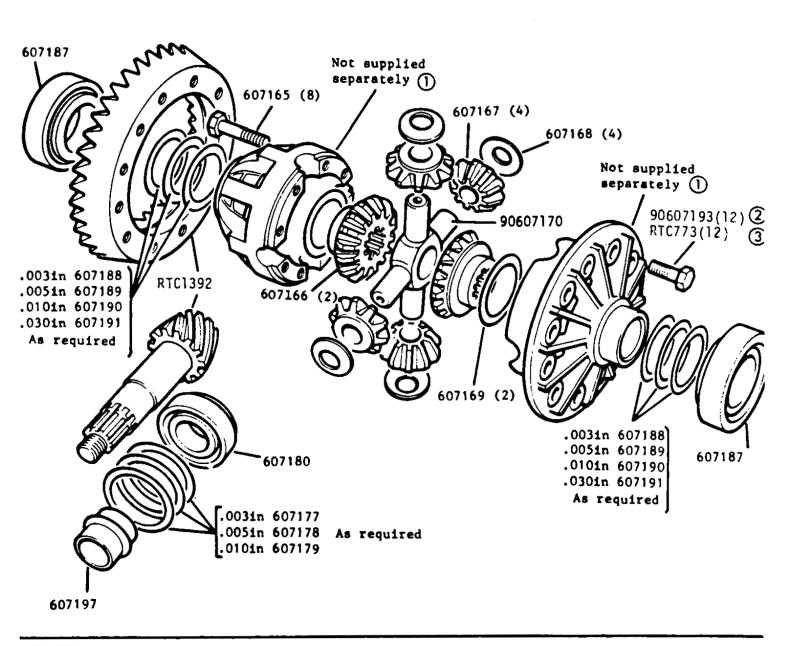



- 1 Differential case less gears 607164
- ② Course thread
- ③ Fine thread


GROUP E
Rear Hub and Axleshaft - 109inch from vehicle suffix 'H' onwards

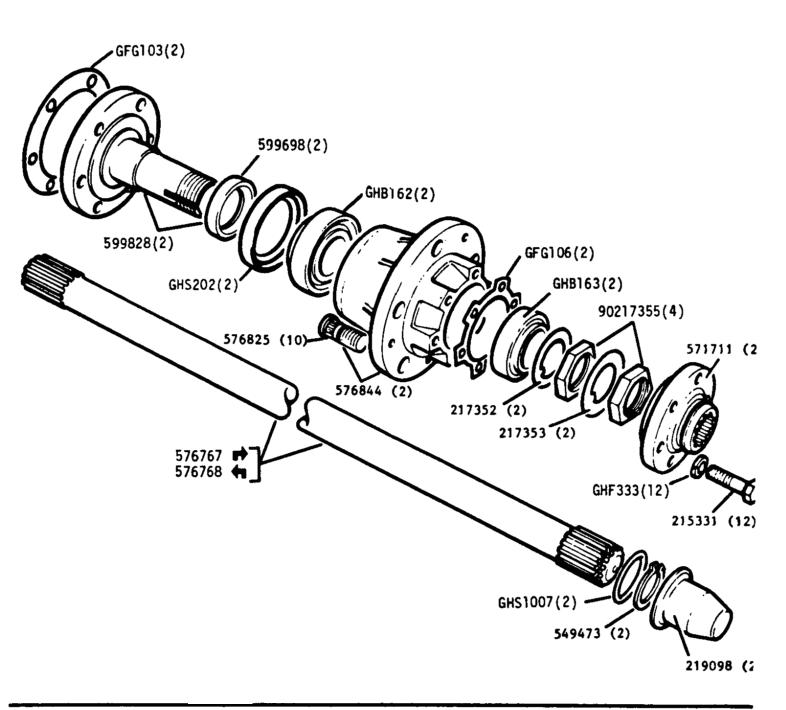



GROUP E
SUSPENSION - Front and rear shock absorbers

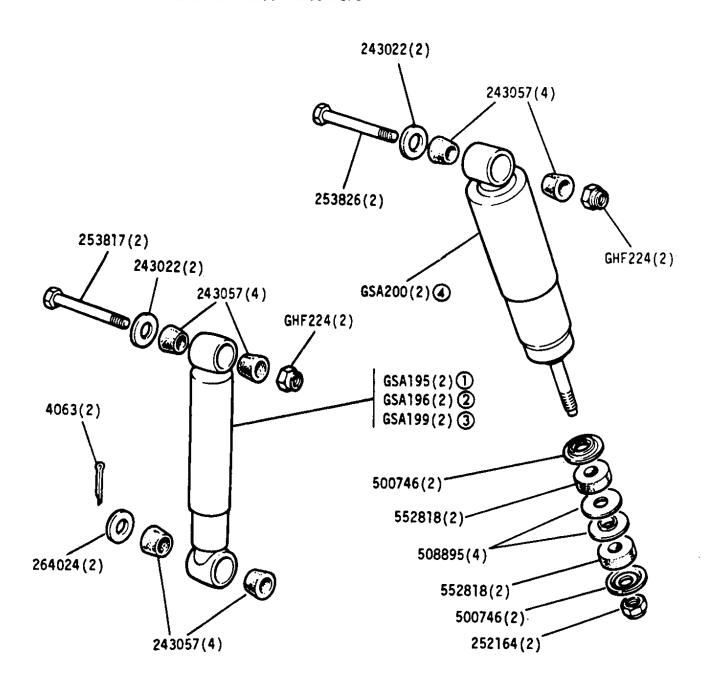


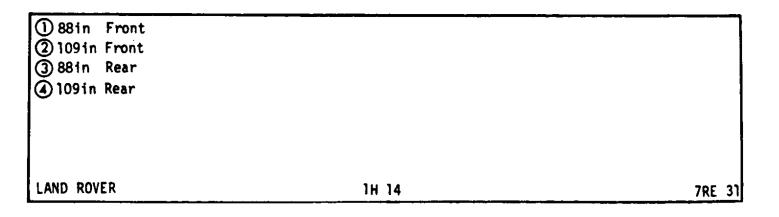


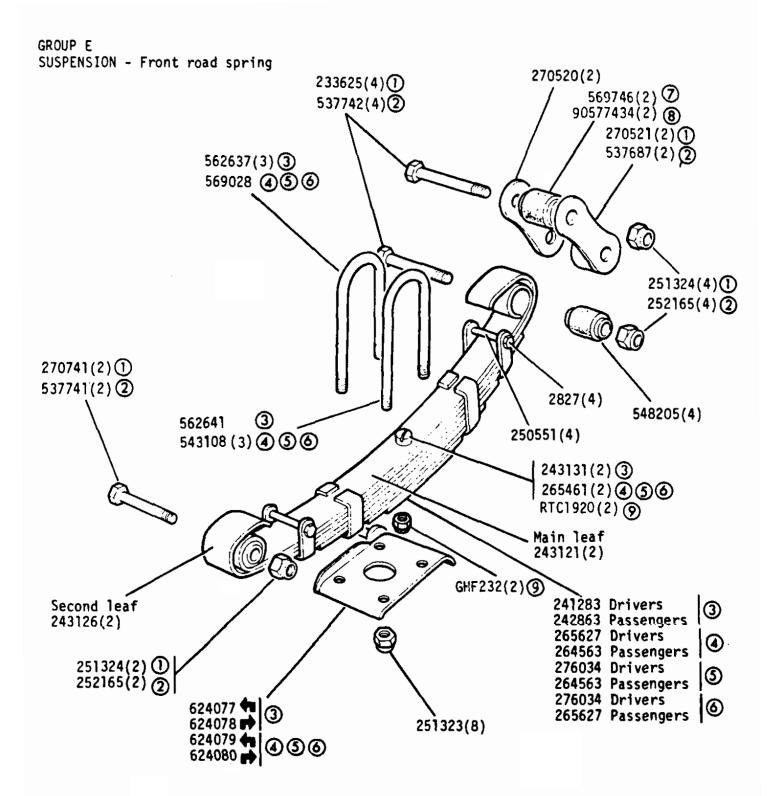


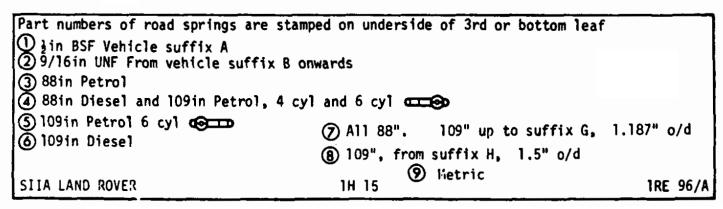


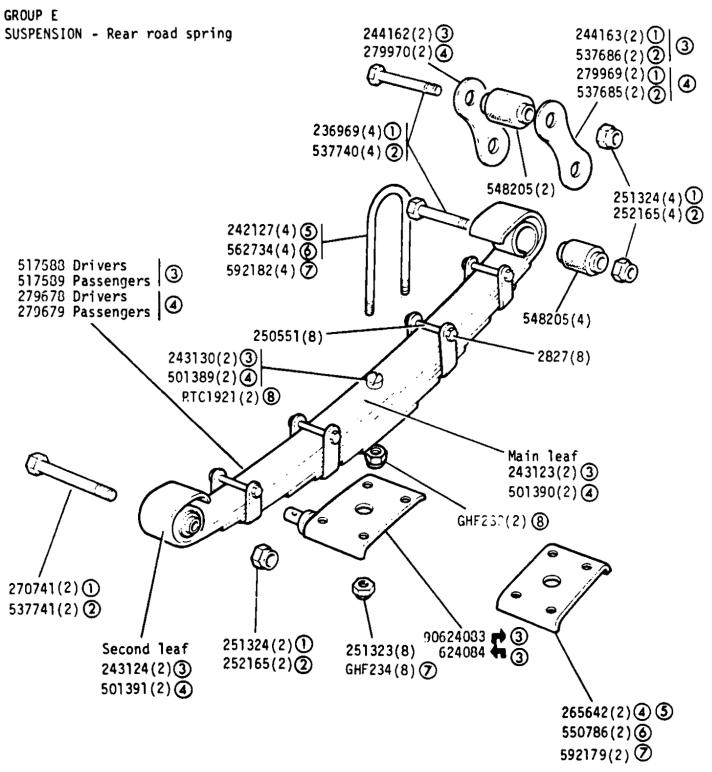

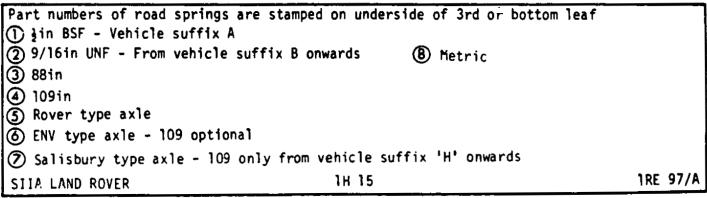

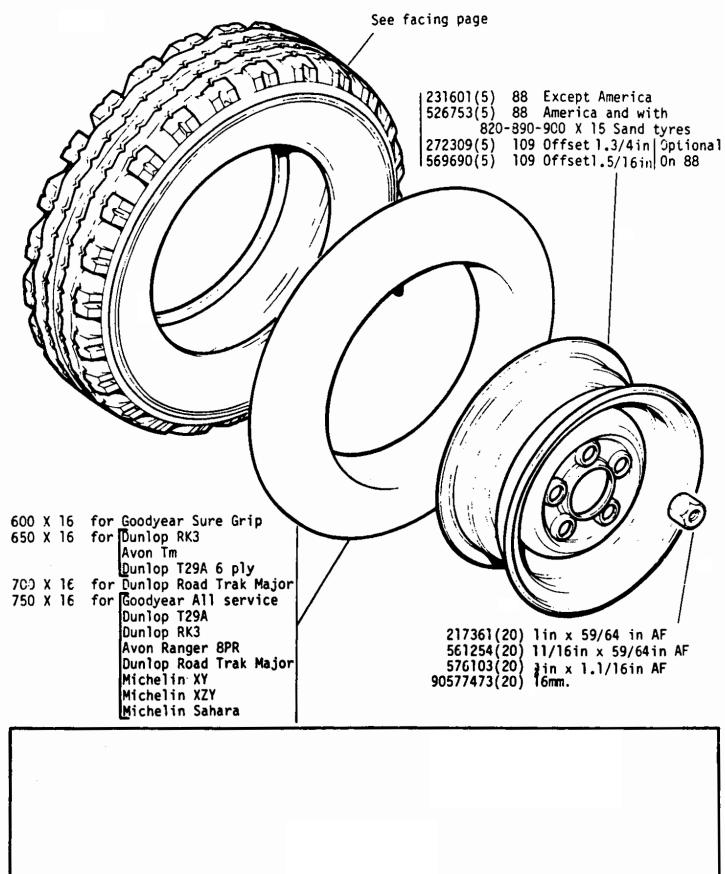

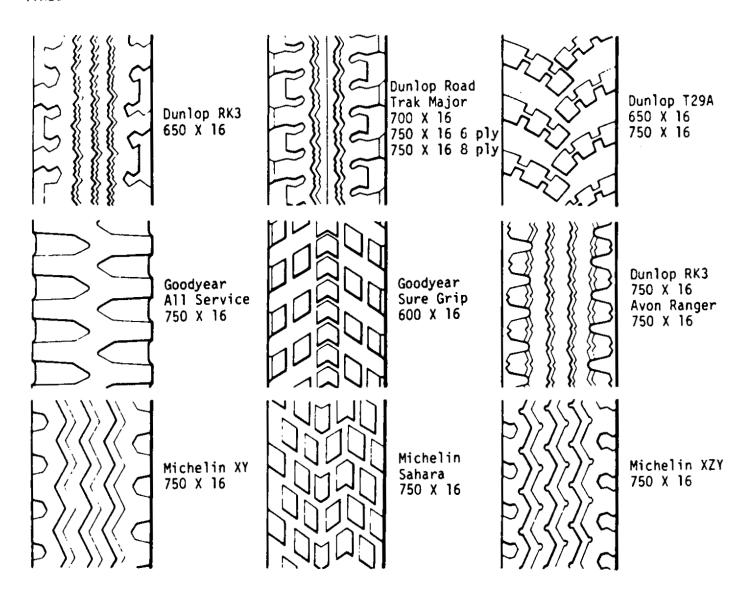

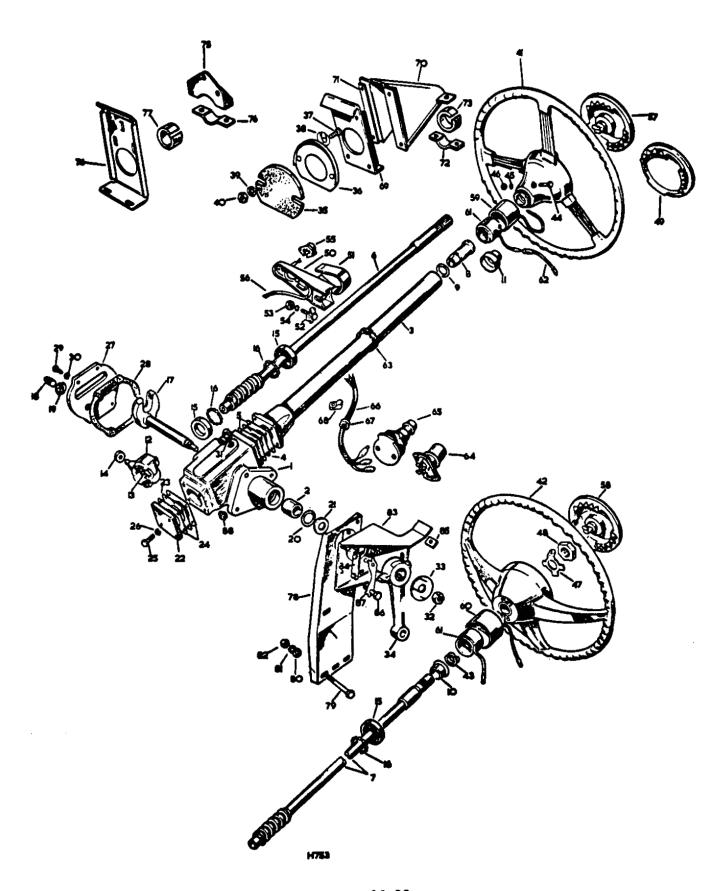

PLAT	1 2 3 4	DESCRIPTION	arr	. PART No.	REMARKS
	STEERING UNIT ASSEMBLY		1	509449*	RH Stg With centre horn
	STEERING UNIT ASSEMBLY		1	509448*	LH Stg push. For 5/16" diameter support bracket bolts. Up to vehicle suffix 'A'
	STEERING UNIT ASSEMBLY STEERING UNIT ASSEMBLY		1	537541* 537542	RH Stg With centre horn push. For a" diameter support bracket bolts. Vehicle suffix 'B' only
	STEERING UNIT ASSEMBLY		1	551702 551703	RH Stg With centre horn LH Stg push. For a dia- meter support bracket bolts. Fro vehicle suffix "C' onwards
1	Steering box assembly Steering box assembly		1	515508* 515509*	
	Steering box assembly Steering box assembly		1	541899 541900	RH Stg Dowel type. For }" LH Stg diameter support bracket bolts. Fro vehicle suffix 'B' onwards
2	Bush for rocker shaf		1	261850	
3	Outer column, overall Outer column, overall		1	271364 * 600468 *	•
	Outer column		1	600984	Models with centre horn push. From vehicle suffix 'C' onwards
4 5	Joint washer, steel Joint washer, paper Joint washer, plastic Bolt (5/16" UNC x 29/3 Spring washer	32")) Fixing outer) column	As read As read As read 4	271379 271380 GHF332	nu a. 1 0
6	Inner column Inner column Inner column Inner column Inner column Inner column	nut accembly]]]]	271368 518676* 518677*	RH Stg Models with side LH Stg Models with centre RH Stg Models with centre LH Stg horn push. RH Stg Vehicle suffix
7	Inner column and main Inner column Inner column	nut assembly	1 1	AEU1083 9057719 9057719	<pre>LH Stg JA and B 3* RH Stg Models with centre 4* LH Stg Horn push. From</pre>
	Inner column and main Inner column and main		1		RH Stg vehicle suffix 'C' LH Stg onwards.

^{*} NO LONGER SERVICED

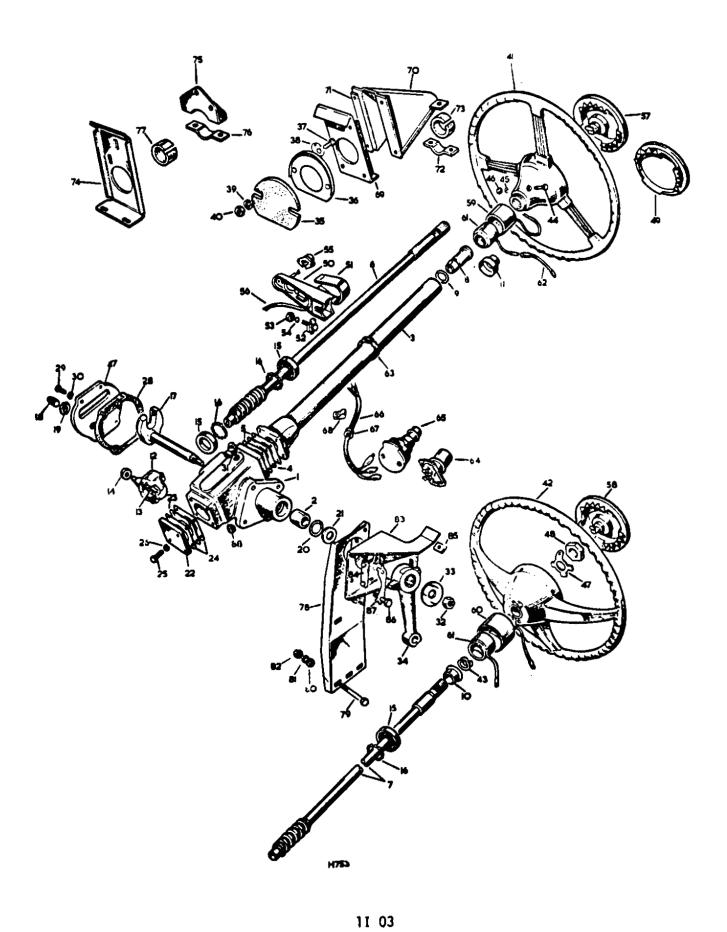


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
		CIT. FART NO. REWARKS
8	Bush for inner column	1 501245 Part of outer column
9	Spring ring for inner column bush	1 501246 Up to vehicle suffix 'B'
•	opi mg / mg / or mid/ objective objective	Linclusive
10	Bearing for inner column	1 RTC324 From vehicle suffix 'C' onwards
11	Dust shield for inner column	1* 267016 Models with side horn pus
12	MAIN NUT ASSEMBLY	1 261862 RH Stg
	MAIN NUT ASSEMBLY	1 261865 LH Stg
	Set bolt (2BA x 🕍)) Fixing	2 234603
	Lockwasher for bolt) retainer	2* 261868
13	Steel ball (a") for main nut	12 1643
14	Roller for main nut	1 261869
15	Adjustable ball race	2 271384
16	Steel balls (9/32") for adjustable race	20 BLS109
17	Rocker shaft	1 271372
18	Adjuster screw for rocker shaft	1 261873
19	Locknut for adjuster screw	1 261874
20	Oil seal for rocker shaft	1 271013
21	Washer for rocker shaft oil seal	1 271014
22	End plate	1 271378
23	Joint washer, steel	As reqd 261858
24	Joint washer, paper	As reqd 261857
	Joint washer, plastic	As reqd 271379
25	Bolt (5/16" UNC x 29/32")) Fixing	4 271380
26	Spring washer) end plate	4 GHF332
	Side cover plate	1 272181 Plain
	Joint washer for side cover plate	1* 261880 Jtype
27	Side cover plate	1 515848 Dowe1
28	Joint washer for side cover plate	1 515849
29	Bolt (5/16" UNC x 1.1/16")) Fixing side	4 271382
30	Spring washer) cover plate	4 GHF 332
31	Oil filler plug	1 271386
32	Special nut) Fixing	1 NT612061
33	Lockwasher) drop arm	1 RTC623
34	Steering drop arm	1 595123
35	Rubber seal for steering column	1 MRC4867
36	Cover for steering column seal	1 303997
37	Screw (2BA x ₹"))	2 77861
38	Special washer) Fixing cover and	2 303996
39	Spring washer) seal to dash	2 WM702001
40	Nut (2BA))	2 RTC608

^{*} NO LONGER SERVICED


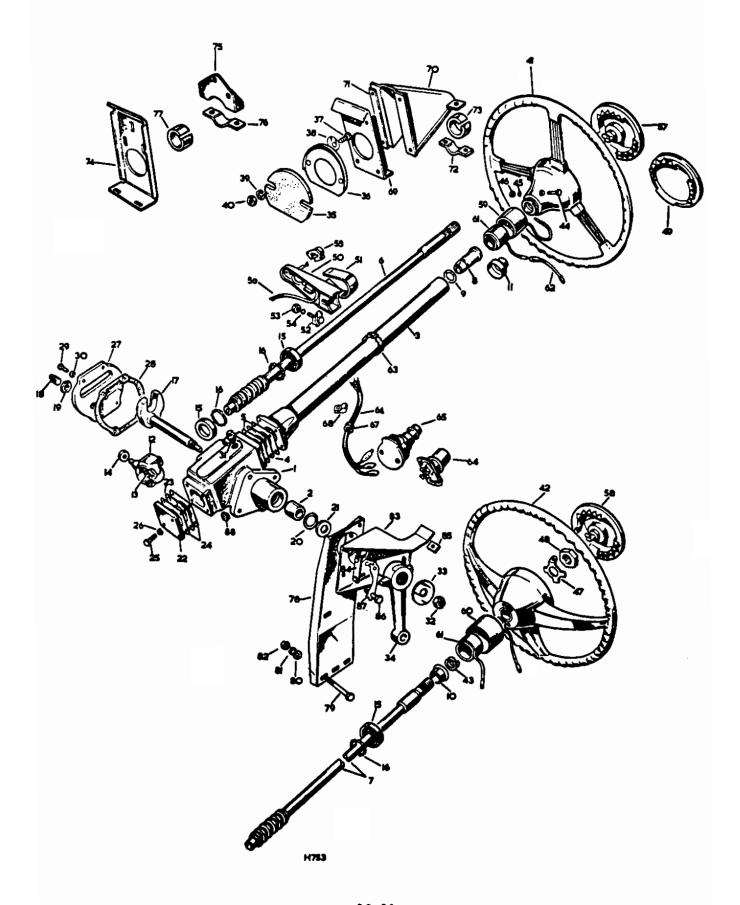


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
41	Steering wheel	1* 90512322 Up to vehicle suffix
	•	'B' inclusive
	Steering wheel	1 NRC4346 7From vehicle
43	Special spring washer	1 NRC3150 _suffix 'C' onwards
44	Bolt (5/16" UNF x 2"))	1 BH6051617
45	Plain washer) Fixing	1 RTC613 Up to vehicle suffix 'B'
46	Nut (5/16" UNF)) steering	1 GHF2O1 ⊿inclusive
	Tag washer) wheel	1 552572 From vehicle
	Special nut)	1 552804 _suffix 'C' onwards
	Steering wheel centre cover	1* 268284
	Horn push bracket	1* 271496
	Clip for horn push bracket	1* 277560
	Yoke assembly for horn push bracket	1* 270724
53	Nut (1 BSF)) Fixing horn push	1 3819
54	Shakeproof washer) bracket	1 78114 Models with side horn pus
55	Horn push	1 90217279
	Special screw) Fixing	2* 3279
	Spring washer) horn push	2 WM704001
	Nut (5BA)) to bracket	2* 4011
	Lead, horn push to junction box	1* 270961 J
57	Horn push and centre cover for steering wheel	1 512352 Up to vehicle suffix 'B'
58	Horn push and centre cover for steering wheel	1 90575201 From vehicle Models suffix 'C' onwards with
59	Bust cover and horn contact	1 512359 Up to vehicle centre suffix 'B' horn
60	Dust cover and horn contact	1 552575 From vehicle push suffix 'C' onwards
	Screw (2BA x 5/16"))	2* 67184
	Shakeproof washer ') Fixing dust cover	2 WF702101_suffix 'B'
	Screw (2BA x 3")) to steering	2 77925 Trom vehicle
	Plain washer) wheel	2 3902suffix 'C' onwards
61	Slip ring complete for horn contact	1 519753
63	Cable cleat on steering column	1 240431
	Dip switch	1 502087 Alternatives
65	Dip switch	1 RTC432 J
	Screw (10 UNF x 11"))	2* 78316 JUNF]
	Spring washer)	2 WM702001 fixing
	Nut (10 UNF) Fixing	2 HN2005 Alternatives
	Screw (2BA x 1")) dip switch	2* 78173
	Spring washer)	2 WM702001 fixing
	Nut (2BA)	2 RTC608]
66	Lead)	1* 514840 RH Stg]4-cylinder up to
	Lead) Discouring	1 531501 LH Stg models vehicle
	Lead) Dip switch	1* 560533 RH Stg 6-cylinder suffix 1* 560534 LH Stg models 'E'
	Lead) to	
	Lead) junction box	1* 560968 RH Stg74 and 6 7From cylinder vehicle
	Lead)	1 531501 LH Stg models suffix
		lifi.

^{*} NO LONGER SERVICED

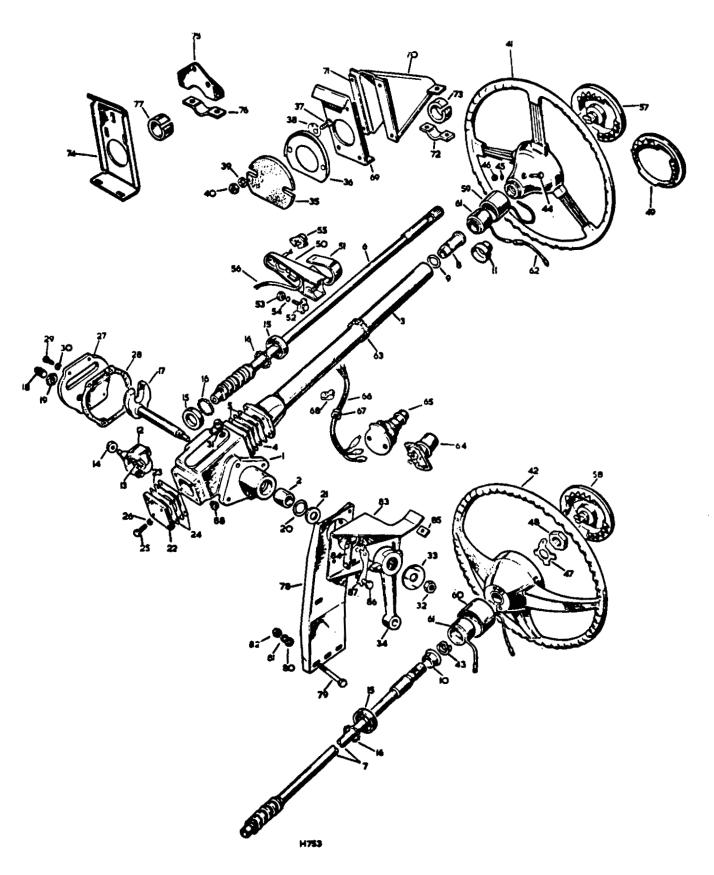

PLAT	E	
REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
c 7	Custon for land in too how floor	1 236389
67	Grommet for lead in toe box floor	2 50639
68	Clip fixing dip switch lead to floor	2 77941 5 off on LH Stg
	Screw)	2 WM702001
	Spring washer) Fixing clip	
	Nut (2BA)	2 RTC608 J 1* 302986 7
69		1 1/17_14
	Bolt (5/16" UNF x 3"))	
	Plain washer, small) Fixing	2 2266 2 RTC604
	Plain washer, large) support bracket	4 GHF332
	Spring washer) to dash	4 GHF201
70	Nut (5/16" UNF)	1* 303701
70	Support bracket for steering column	1 303701
71	Packing piece for steering column support	1* 332729
72	bracket Clip for steering column	1* 300715 Up to vehicle suffix 'C'
73		1 348747 inclusive
/3	Rubber strip for clip Bolt (}" UNF x }")) Fixing clip	2 255207
	Spring washer) to support	2 GHF331
	Nut (\{\}" UNF)) bracket	2 GHF200
	Bolt (5/16" UNF x ["))	2 255227
	Bolt (5/16" UNF x 1")) Fixing support	2 GHF120
	Plain washer) bracket to	2 3966
	Spring washer) dash bracket	4 GHF 332
	Nut (5/16" UNF))	4 GHF201 _
74	Support bracket on dash	1* 348743 7
, 4	Bolt (5/16" UNF x 2"))	4 GHF120
	Plain washer, small) Fixing	6 3830
	Plain washer, large) support bracket	2 RTC604
	Spring washer) to dash	4 GHF332
	Nut (5/16" UNF))	4 GHF201
75	Clamp, upper, for steering column	1* 348744
	Bolt (5/16" UNF x 3"))	3 GHF120 From vehicle suffix 'D'
	Plain washer) Fixing upper clamp	3 3830 onwards
	Spring washer) to support bracket	3 GHF332
	Nut (5/16" UNF))	3 GHF201
76		1 346715
77		1 348747
- *	Bolt (1" UNF x 2")) Fixing upper and	2 255208
	Spring washer) lower clamps to	2 GHF331
	Nut (1" UNF)) steering column	2 GHF200 💄
	Support bracket, RH)	1* 277294 For 5/16" dia. steering
78		1* 277295 box fixing bolts. Up to
) box	
	Support bracket, RH) on chassis	1* 537535 For 1" dia. steering_
	Support bracket, LH)	1 537533 box fixing bolts. From
	Packing piece for support bracket	1 569522 LH Stg
79		6 256233
80	Plain washer, thin) Fixing	6 3830
	Plain washer, thick) brackets to	6 WP185
81		6 GHF332
82	Nut (5/16" UNF)	6 GHF201
		+ NO LONGED CERUICER
	31 06	* NO LONGER SERVICED

STEERING COLUMN

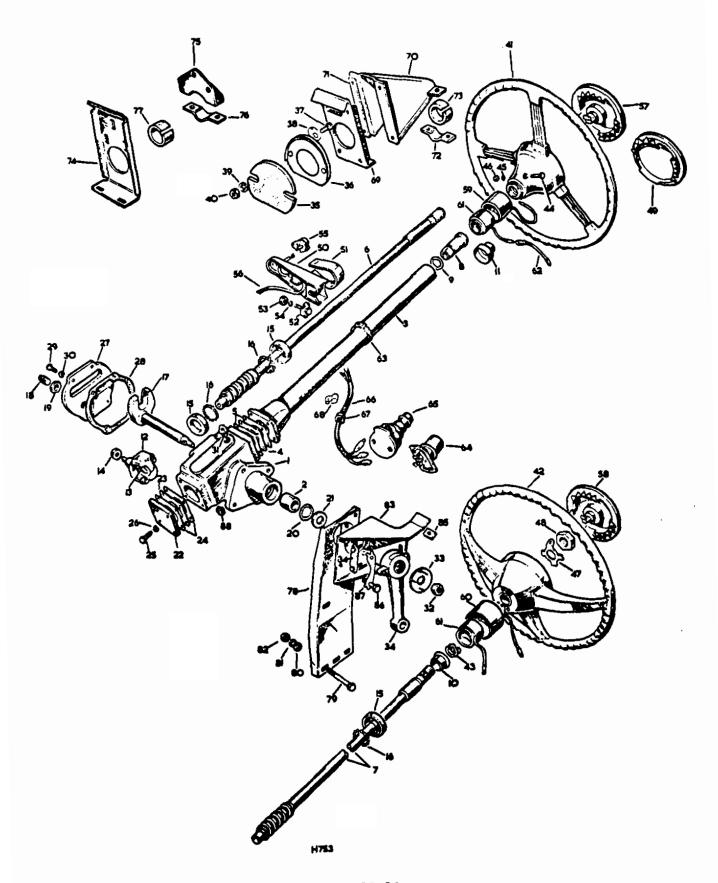


PLATE	1 2 3 4	DESCRIPTION	QTY, PART No. REMARKS
83	Stiffener bracket)	1* 504276 RH Stg For 5/16" diameter
	Stiffener bracket) For	1* 504272 LH Stg steering box fixing
) steering	bolts. Up to vehicle
) box	_ suffix 'A'
	Stiffener bracket)	1 90577264 RH Stg∏For }" diameter
	Stiffener bracket)	1* 537539 LH Stg steering box fixing
			bolts. From vehicle suffix 'B' onwards
	Bolt (1" UNF x 9/16	5"))	4 255205 TAlternatives to T
	Plain washer) Fixing stiffenε.	4 RTC609 _line below
84	Bolt plate) bracket to front	2 395064 Alternative to
	•) face toe box	2 lines above RH Stg
	Spring washer	}	4 GHF331
	Nut (¼" UNF))	4 GHF200
	Bolt (¾" UNF x 1"))	1 GHF101 7
	Plain washer) Fixing stiffener	1 RTC609 3 off on LH Stg
	Spring_washer) bracket to	1 GHF331
٥.5	Nut (1 UNF)) top face of	1 GHF200 J
85	Shim washer) toe box	As reqd 504279 RH Stg
	Shim washer	, ,	As reqd 504275 LH Stg
	Bolt (5/16" UNF x 1		2 BH605111 75/16" fixings
	Set bolt (5/16" UNC	· , ,	1 SH505061 Except 109 Up to vehicle
	Sat halt /E/169 UNG) steering box	
	Set bolt (5/16" UNC	•	1 SH505071 109 LH Stg inclusive
86	Locking plate Set bolt (}" UNC x) support	1* 517877 1 SH506071
87	Locking plate	a) bracket	1 90517878
88	Self-locking nut (5	5/36" UNF) \	2 GHF242
	Bolt (3" UNF x 13"))	2 255050
	Set bolt (}" UNC x	(a")	1 SH506061 Except 109 2" fixings
) Fixing	LH Stg From vehicle
	Set bolt (3" UNC x		1 SH506071 109 LH Stg suffix 'B'
	Locking plate) box to	1* 537543 onwards
	Set boit (}" UNC x	(a) chassis	1 SH506071
	Locking plate) support	1 537544
	Self-locking nut (2 GHF243

^{*} NO LONGER SERVICED


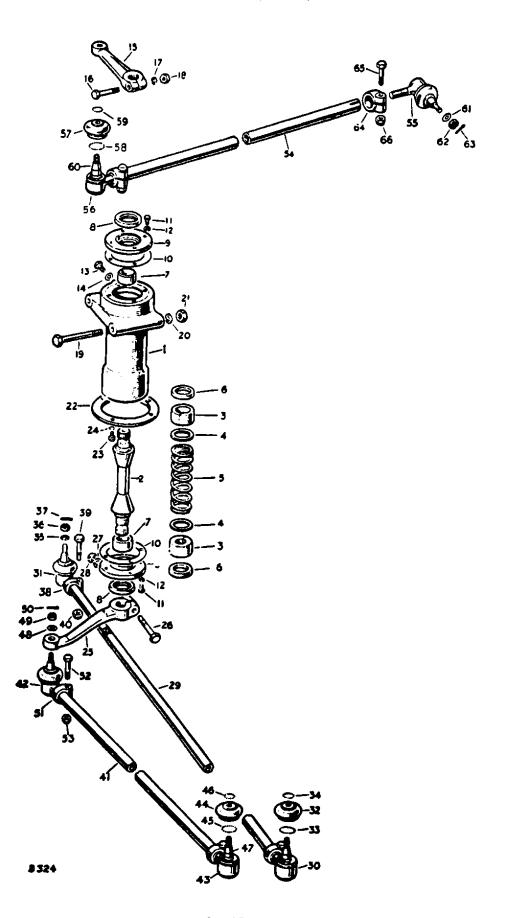



PLATE REF.		2 3	3	4			DESC	RIPTION			aty.	PART !	ło.	REMARKS
									·					···
	ST	EERI	NG	REL	LAY C	OMPLE	TE AS	SEMBLY			1	NRC1	269	
1		Hous	in	g fo	or re	lay s	haft						72	
2		Shaf	t	for	stee	ring	relay	lever	\$		1	5628	75	
3		Spli	t	bush	n for	hous	ing,	halves			4	5378	77 ·	
3 4 5 6 7		Wash	er	foi	r spr	ing	_				2	2307	60	
5		Spri	ng	for	r hou:	sing					1	2307	59	
6		Thru	st	wa:	sher	fors	haft				2	2413	88	
7		Dist	an	ce j	piece	for	shaft				2*	2301	84	For early type shaft only
8		0i 1	se	ali	for si	haft					2	2133	40	
9		Reta	in	er	for o	il se	al				2	2302	94	
10							taine				2	9062	443	36
11		Spec	ia	1 b	olt) Fi	xing	retain ing	er		8	5443	37	
12		Plai	n	wasl	her) to	hous	ing			. 8			_
13		Plug	f	or	oil h	ole								For early type housing
14		Join	t	was	her f	or pl	ug				2			_with oil plug hole
15	Re	lay	۱e	ver	, upp	er					1	5310		
16	Во	1t (7/	16"	UNF :	x 2}")) F	ixing le	ver	1	BX60		31
18	Se	1f-1	OC	king	g nut	(7/1	6" UN	F)) t	o shaft		1	GHF2	_	_
19	Во	1t (5/	16"	UNF :	x 3½")) F	ixing				BX60		31
	Sp	ring	W	ashe	er) h	ousing	to		2	5648		
21									frame			GHF2		
22	F1	ange	p	late	e for	rela	y mou	nting			1	2176		
23	Se	t bo	١ţ	(∦	" UNF	x §")) F	ixing	flange p	late		2552		
) t	o chas	sis fran	n e		GHF3		
25	Re	lay	le	ver.	, low	er	,					5352		.,
									ixing le	ver				31
28	Se	†-	0C	king	g nut	(7/1	6" UN	F)) t	o shaft		1	GHF2	24	
29							SEMBL	Y			1			For pendant type ball
						rod					1	2692	69	joints
							SEMBL	Y]	6084	65	For non-pendant type
						rod					j	5269	94	_ball joints
30								THREAD			1			Metric
31								THREAD			1	3209		threads
					asher			Fixing				WC11		
						12 mm		ballj				NCTI		
20		Spli						to lw	vers		2	PS10		31
32							11 jo				2	2146		
33							to bo	ay			2	2146		3.4
34) Cov					2	9021		D 4
35		Reta Plai) to	naii/	Fixin	0		2	2146 RTC6		Tenn anniu tuma
36						16" B	SEI (y joints		2 2	2822		For early type ball joints
30		cast Cart	16	יות	+ 17/	16" U	NE (to le			2			natives with BSF or
37		Spli	1 C	niu:	L (//	יט טי	···· /	w ie	4619		2	2393		UNF threads
38						joint	. ,				2	5778		How the Earls
30		o i ib	•	۱ ، ر	Juii ,	JUINE	•				-	J, 10		

^{*} NO LONGER SERVICED

STEERING RELAY AND LINKAGE

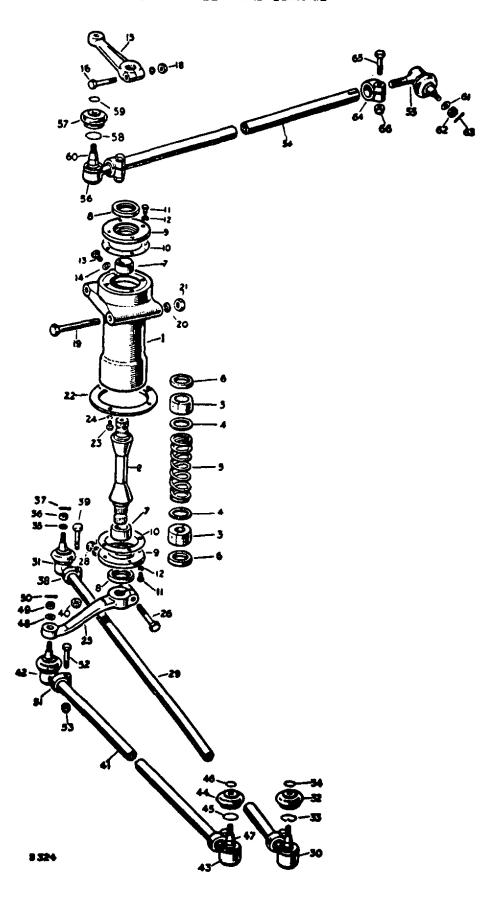


81 4 7 5		
PLATE REF.	1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
20	D-34 /18 DCF 318\ \	2 250517 7 855
39	Bolt (1" BSF x 11")	2 250517 BSF
40	Self-locking nut (%" BSF))	2 251320 fixing
	Bolt (%" UNF x lg")) Fixing ball joint	2 BH604161] Alternatives
	Plain washer) clips	2 WB106041 UNF
	Self-locking nut ({}" UNF))	2 252210 fixing
41	STEERING DRAG LINK ASSEMBLY	1 RTC2547
47		
42	Steering drag link only BALL JOINT ASSEMBLY, RH THREAD	1 NRC4609
		1 608464 Metric
43	BALL JOINT ASSEMBLY, LH THREAD	1 320902 Jthreads
	Plain washer) Fixing	2 WC112081
	Castle nut (12 mm)) ball joints	2 NC112041
	Split pin) to levers	2 PS105281
44	Rubber cover for ball joint	2 214649
45	Spring ring, cover to body	2 214685
46	Spring ring) Cover	2 90214684
47	Retainer) to ball	2 214662
48	Plain washer) Fixing	2 RTC605 For early type
49	Castle nut (7/16" BSF)) ball joints	2 2822 Alter- ball joints
5 0	Castle nut (7/16" UNF)) to levers	2 276482natives with BSF or 2 2393UNF threads
50	Split pin)	2 2393 J UNF threads
51	Clip for ball joint	2 577898
52	Bolt (1 BSF x 11))	2 250517 BSF
53	Self-locking nut (1" BSF)	2 251320 fixing
	Bolt (}" UNF x lg")) Fixing ball joint	2 BH604161 Alternatives
	Plain washer) clips	2 WB106041 UNF
	Self-locking nut (1 UNF)	2 252210fixing
54	LONGITUDINAL STEERING TUBE ASSEMBLY	1 90608462
	Longitudinal steering tube only	1 276784
55	BALL JOINT ASSEMBLY, RH THREAD	1 608464 TMetric
56	BALL JOINT ASSEMBLY, LH THREAD	1 320902 thread
-	Plain washer) Fixing	2 WC112081
	Castle nut (12 mm)) ball joints	2 NC112041
	Split pin) to levers	2 PS105281
57	Rubber cover for ball joint	2 214649
58	Spring ring, cover to body	2 214685
59	Spring ring) Cover	2 90214684
60	Retainer) to ball	2 214662
61	Plain washer) Fixing	2 RTC605 For early type
62	Castle nut (7/16" BSF)) ball joints	2 2822 Alter- ball joints
	Castle nut (7/16" UNF)) to levers	2 276482 _natives with BSF or
63	Split pin	2 2393 UNF threads
64	Clip for ball joint	2 577898
65	Bolt (1 BSF x 11))	2 250517 JBSF]
66	Self-locking nut (i BSF)	2 251320 fixing
	Bolt (i UNF x lin) Fixing ball joint	2 BH6041617 Alternatives
	Plain washer) clips	2 WB106041 UNF
	Self-locking nut (1 UNF)	2 252210 _fixing
	• • • • • • • • • • • • • • • • • • • •	

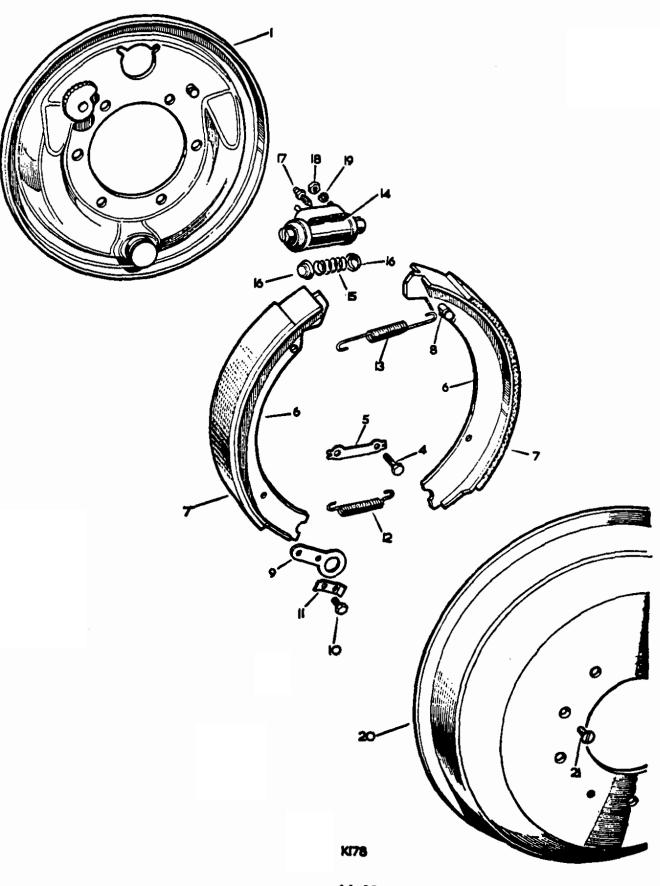


1J 02

PLAT REF.	E 1 2 3 4 DESCRIPTION	QTY.	PART No.	REMARKS
1	BRAKE ANCHOR PLATE ASSEMBLY, LH		515406	
	BRAKE ANCHOR PLATE ASSEMBLY, RH		515405	
4	Set bolt (%" BSF x 1")) Fixing front anchor		237339	
5	Locker) plate to axle case	6	232416	
	Bolt (a BSF x la") Fixing rear anchor		576521	
	Self-locking nut (å" BSF)) plate to axle case	12	251 322	
6	BRAKE SHOE ASSEMBLY, AXLE SET, FRONT AND REAR	2	GBS 728	
	Lining complete with rivets	8*	241090	For early type shoe wiff riveted linings.
7	Linings and rivets, axle set, front and rear	2	A AU9942	Riveted type lining for replacement of bonded originals
8	Spring post for brake shoe	4	232074	Part of brake shoe
	Anchor for brake shoe		236993	
	Special set screw fixing anchor		238542	
	Locking plate for bolt	4		
12	Pull-off spring for brake shoe	4	218983	
13	Pull-off spring for leading shoe	4	503981	
	WHEEL CYLINDER ASSEMBLY, RH FRONT	1		
14	WHEEL CYLINDER ASSEMBLY, LH FRONT	_	GWC306	
	WHEEL CYLINDER ASSEMBLY, RH REAR]		
	WHEEL CYLINDER ASSEMBLY, LH REAR	1		
15	Spring for piston, front		212919	
	Spring for piston, rear	_	212943	
16	Washer for spring, front	4		
17	Washer for spring, rear	4		
17	Bleed screw		556508	
18	Nut (5/16" UNF)) Fixing		GHF201	
19	Spring washer) wheel cylinder	8	WL600050)
20	Brake drum	4	591661	Chassis suffix A to G
	Brake drum	4	591039	From chassis suffix H onwards
21	Set screw fixing brake drum	12	1510	
	Wheel cylinder overhaul kit, front	1	275744	
	Wheel cylinder overhaul kit, rear	1	266687	

*NO LONGER SERVICED

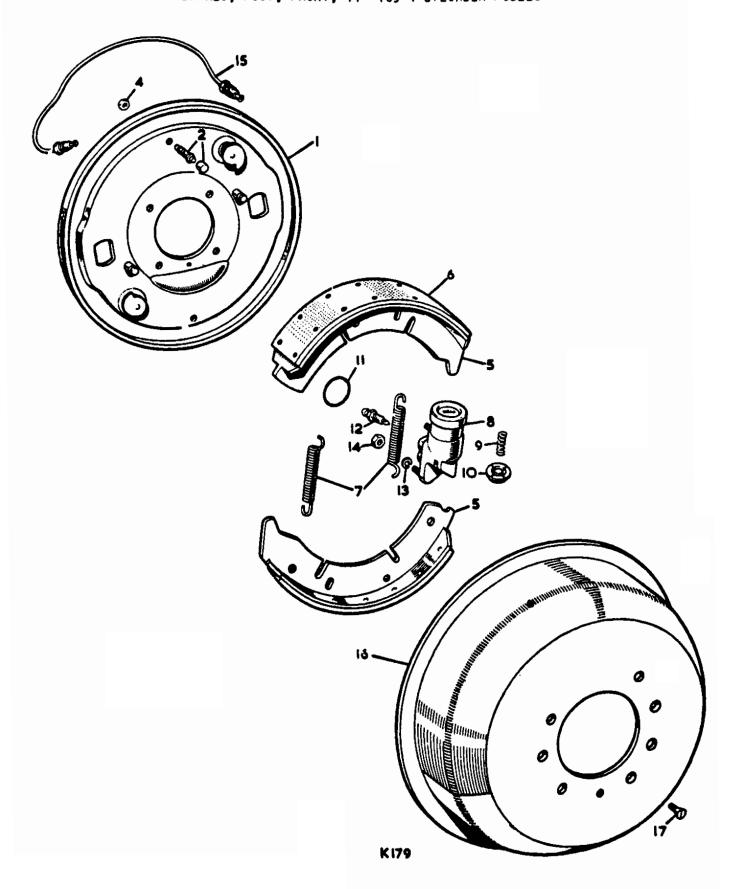


ATE	1 2 3 4	DESCRIPTION	۵۲۷.	PART No.	REMARKS
1	Brake anchor plate	. LH front	1	246565	
-	Brake anchor plate		j	246566	
		(1")) Fixing anchor plate	12	237339	
	Locker) to axle case	6	277311	
2	Steady post and be		4	607808	
4			4	NT60506	1
5	BRAKE SHOE ASSEMB	LY, AXLE SET, FRONT	1	GBS729	
	Lining complete		4	246569	For early type shoe with riveted linings
6	Linings and rive	ets, axle set, front	1.	AAU8471	Riveted type linings for replacement of bonded originals
7	Pull-off spring fo	or brake shoe	4	234889	
8	WHEEL CYLINDER AS		2	GWC303	
_	WHEEL CYLINDER AS		2	GWC304	9
9	Spring (a" dia)) For	4	233211	Alter-
	Spring (7/16" d	ia)) piston	4		Inatives
0	Air excluder		4*	242463	Early models only with "diameter spring
	Sealing ring for a	:ylinder	4	505790	
2	Bleed screw		2	556508	
13	Spring washer) I	Fixing wheel	8	GHF332	
4			8	GHF201	
15	Connecting pipe for	or wheel cylinder	2	NRC5347	
16	Brake drum		2	516599	
	Brake drum		4	576973	From chassis suffix H onwards
17	Set screw fixing l	orake drum	6	1510	
	Wheel cylinder over	erhaul kit, front	1	266684	
			*	NO LONG	ER SERVICED

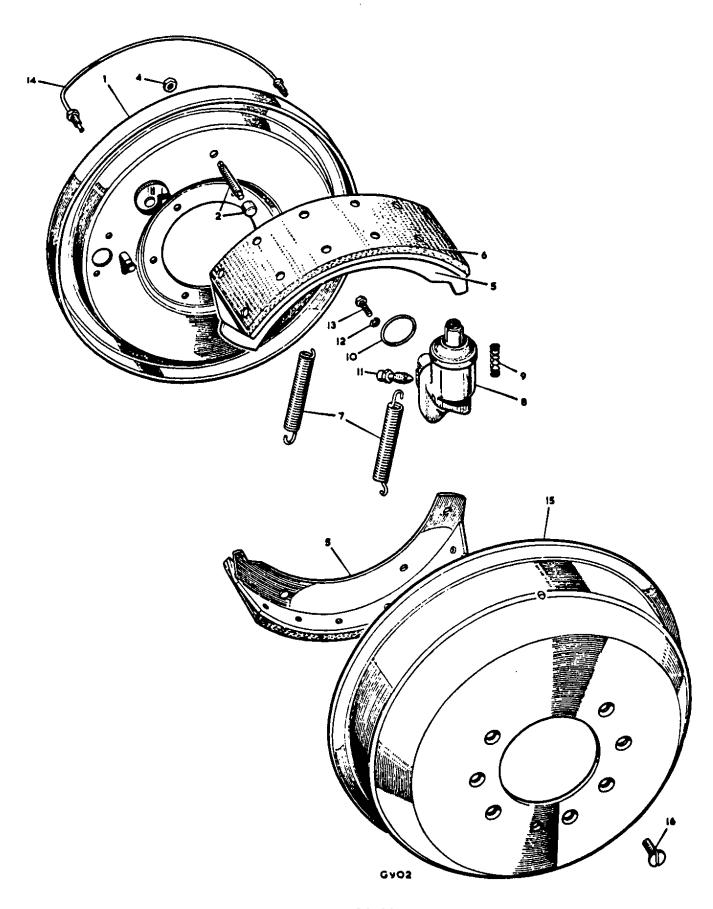


1J 04

PLATE					
REF.	1 2 3 4	DESCRIPTION	QTY.	PART No.	REMARKS
1		plate, LH front plate, RH front	1	600202 600203	
		BSF x 1")) Fixing anchor plate) to axle case	12	237339	
2	Steady post f	the contract of the contract o	4		
4		ixing steady post	4	NT605061	
5	BRAKE SHOE AS	SEMBLY, AXLE SET, FRONT	1	GB S 7 3 0	
6	Linings and	rivets, axle set, rear	1	A AU8469	
7		ng for brake shoe	4	234889	
8		R ASSEMBLY, LH FRONT		GWC 301	
	WHEEL CYLINDE	R ASSEMBLY, RH FRONT	2	GWC302	
9	Spring		4	600212	
10	Sealing ring	for cylinder	4	505790	
]]	Bleed screw		2	556508	
12) Fixing wheel	8		
		olt) cylinder	8	SH605041	
14	Connecting pi	pe for wheel cylinder	2	600206	
15	Brake drum		2		Chassis suffix D to G
	Brake drum		2	576974	From chassis suffix H onwards
16	Set screw fix	ing brake drum	6	1510	
	Brake wheel c	ylinder overhaul kit, front	1	600210	

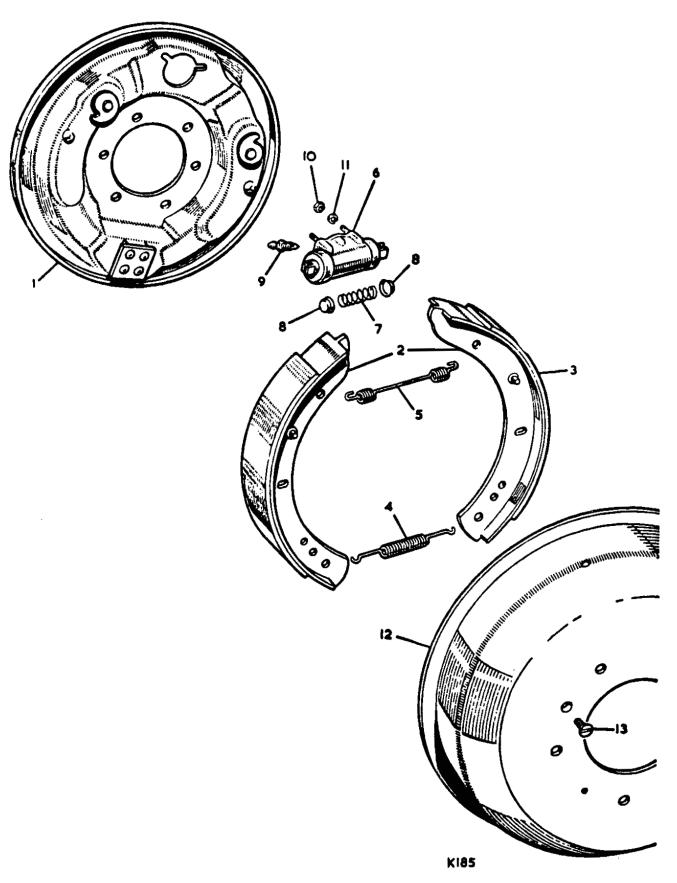

1J 05

PLATI	_	2	3	4	DESCRIPTION	ary.	PART No.	REMARKS
1	Br	ake	: a	nche	or plate, LH rear	1	531888	
	Br	ake	e a	nche	or plate, RH rear	1	531889	
	Во	lt	()	" B:	SF x 1a")) Fixing rear anchor	12	576521	
	Nu	t	3"	BSI	F)) plate to axle case	12	251322	
2	BR	AKE	S	HOE	ASSEMBLY, AXLE SET, REAR	1	GBS 793	
3					and rivets, axle set, rear	1	AAU8470	
4					utment end) For brake	2	531893	
5					eel cylinder end) shoe	2	548169	
6	WH	EEL	. С	YLII	NDER ASSEMBLY, RH	1	GWC305	
					NDER ASSEMBLY, LH	1	GWC306	
7					or piston	2	212919	
8					or spring	4	242117	
	BI	ee	l s	cre	w .	2	556508	
10	Nu	t	5/	16"	UNF)) Fixing wheel	4	GHF201	
11					her) cylinder	4	WL60005	0
12	Br	ake	d	rum		2	516599	Chassis suffix A to G
				rum		2	576973	From chassis suffix H
13		-			fixing brake drum	6	1510	
	Br	ake	: W	hee]	l cylinder overhaul kit, rear	3	275744	

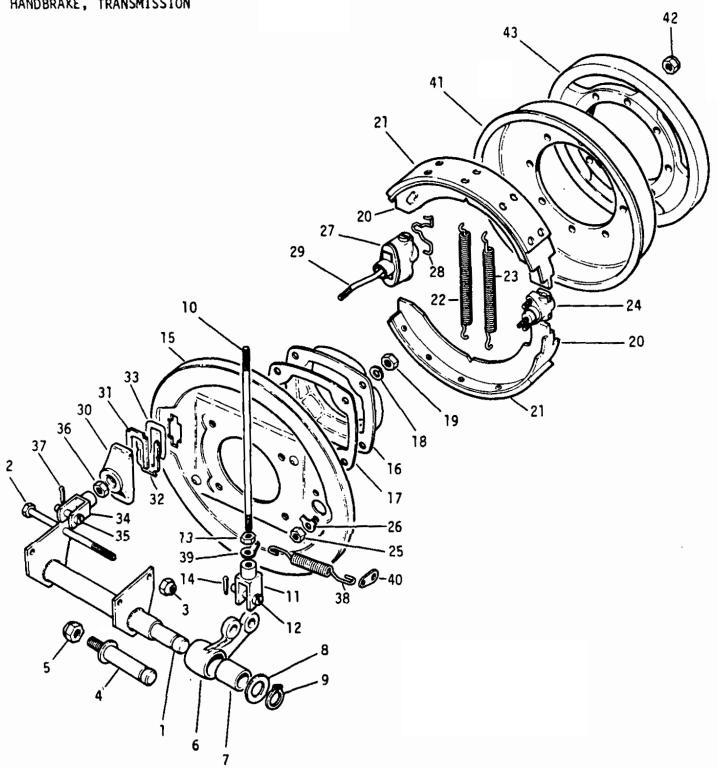

PLA REF		a [.]	TY, PART No. REMARKS
$\overline{}$		1	240829* 88)
1	Shaft for hand brake relay lever	1	267193* 109)
_	Shaft for hand brake relay lever	1	BH606321)Up to vehicle suffix 'C'
2	Bolt (#" UNF x 4")) Fixing		WB110061)inclusive
_	Plain washer) shaft to		
3	Self-locking nut (?" UNF)) chassis frame		GHF223)
4	Shaft for hand brake relay lever	1	552746)From vehicle suffix)
5	Self-locking nut (#" UNF) fixing shaft to	•)'D' onwards with)
	chassis frame	Ţ	GHF223)welded washer plate)Alter-
	Shaft for hand brake relay lever	1	,,,,,
	Self-locking nut (7/16" UNF) fixing shaft to	_)With loose)
	chassis frame	ļ	GHF224)washer plate)
	Washer for hand brake relay shaft	Ţ	577354
_	Washer plate for hand brake relay shaft.	· [57713R
6	RELAY LEVER ASSEMBLY FOR HAND BRAKE	1	238180
7	Bush for relay lever	1	218386
	Plain washer) Fixing lever	Ţ	3299
9	Circlin) to spindle		CCN112
	Brake rod, relay to hand brake lever		277921 RH Stg)Uo to vehicle suffix
	Brake rod, relay to hand brake lever		278020* LH Stg)*C' inclusive
10	Brake rod, relay to hand brake lever	1	552407 From vehicle suffix *D* onwards
11	Clevis, fork end) Fixing	1	275199
	Clevis pin complete) brake rod	1	216421
13	Locknut (5/16" UNF)) to relay and	3	GHF201
14	Split pin) hand brake lever		2392
	Anchor plate, transmission brake		515365
	Oil catcher for transmission brake	1	561368
17	Joint washer for oil catcher	1	561856
ገዶ	Spring washer) Fixing anchor plate and oil	4	GHF333
10	Nut (3" BSF)) catcher to sneedometer housing		
20	BRAKE SHOE ASSEMBLY, BOXED PAIR	1	GB\$552
21	Lining for brake shoe		607249) 10 hole)
•	Rivet for lining		607250) tyne
	Lining for brake shoe	1 set	
	Rivet for lining		607252) type)
22		1	FRC3234
23	Return spring, adjuster end) shoe	i	FRC3234
24	ADJUSTER UNIT ASSEMBLY	1	37H6134
	Nut (3" UNF)) Fixing	2	GHF200
	Tab washer) adjuster unit	i	542515
20	Repair kit for adjuster unit	i	515924
27	EXPANDER UNIT ASSEMBLY	1	515366
28	Clip retaining tappets	i	515927
29	Brake rod, expander to relay lever	í	515926
£7	Repair kit for expander unit	i	515923
30	Dust cover for expander unit	, 1	515765 515466
	Packing plate) Fixing	1	515470
	Locking plate) expander	i	515467
	Retaining spring) unit	i	515468
د ب	necurring and ray / unit		VIVER

^{*} NO LONGER SERVICED


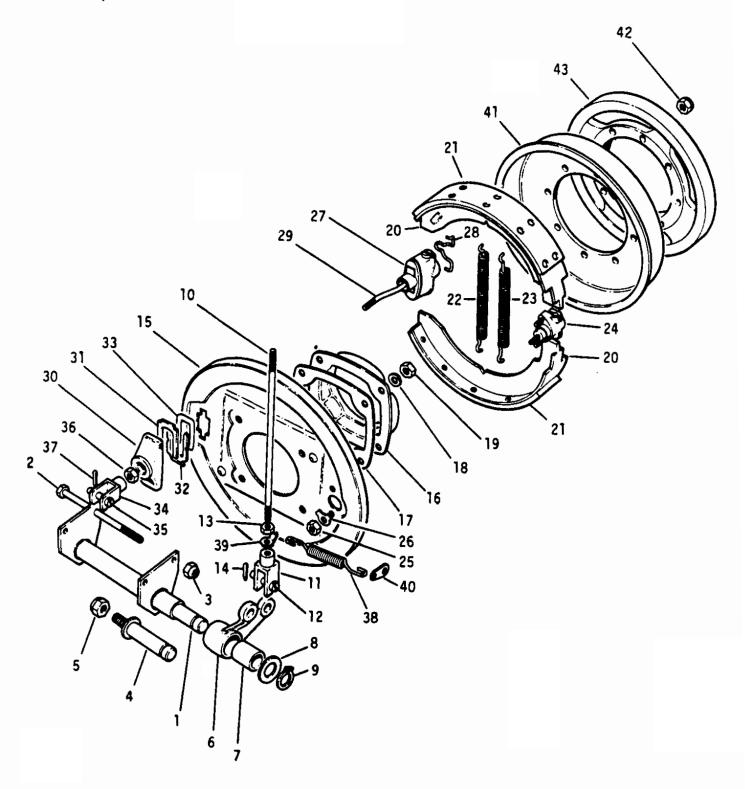


PLATE REF.	1 2 3 4	DESCRIPTION	QTY.	PART No.	REMARKS
34	Clevis complete) Fixing	1	215809	
	Clevis pin complete) brake rod	1	216421	
36	Locknut (5/16" BSF)) to relay	1	2828	
37	Split pin	lever]	2392	
	Return spring for bral		i	59663	
	Anchor for spring		1	240708	
	Anchor for spring, on	transfer box	j	267412	
_	Brake drum		j	274423	
42	Self-locking nut (5/1	6" BSF) fixing brake	·	· · · - •	
	drum and damp	er	6	251321	
43	Transmission damper a		1*		109 Diesel. Up to gearbox number 27600879

^{*} NO LONGER SERVICED


CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS 6-cylinder models up to vehicle suffix 'F' inclusive All 4-cylinder models

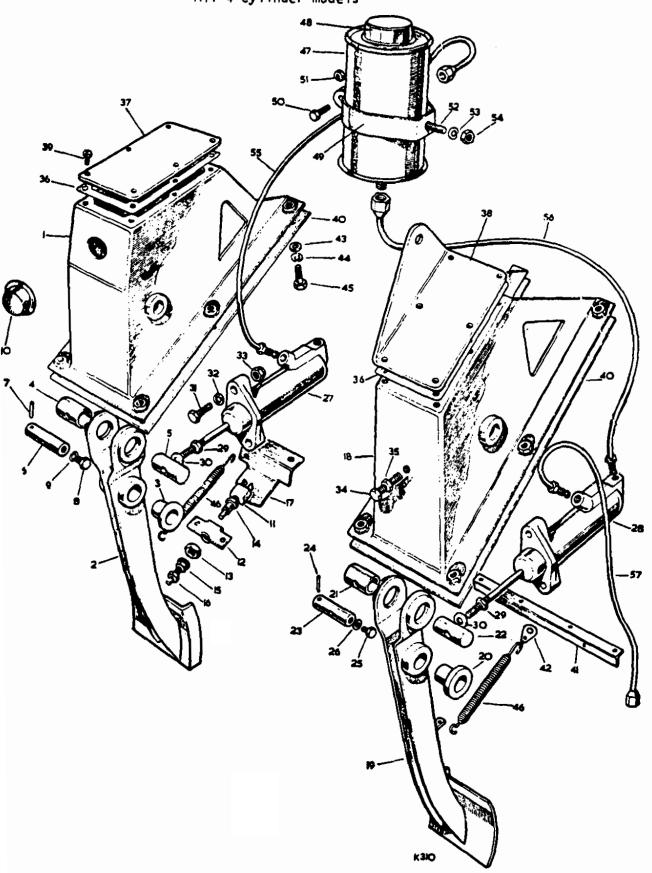

GROUP G CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS
6 Cylinder models up to vehicle suffix 'F' inclusive. All 4 cylinder models

PLAT					· <u> </u>			
REF.	1 2 3	4	DES	CRIPTION		QTY.	PART No.	REMARKS
	BRAKE PE	DAL AND	BRACKET AS	SSEMBLY		1	523916	88. Up to vehicle suffix 'E' inclusive
	BRAKE PE	DAL AND	BRACKET A	SSEMBLY		1	569054	88. From vehicle suffix 'F' onwards.
	BRAKE PE	DAL AND	BRACKET A	SSEMBLY		1	568894	109. Up to vehicle suffix 'E' inclusive
	BRAKE PE	DAL AND	BRACKET A	SSEMBLY		1	569084	109. From vehicle suffix 'F' onwards
	Bracke	t for b	rake pedal			7*	523695	88. Up to vehicle suffix
	Brake	pedal at	nd bushes			1*		l'E' inclusive
1			rake pedal			1]88. From vehicle suffix
2			nd bushes			1		J'F' onwards
			rake pedal		•	1]109. Up to vehicle suffix
			nd bushes			1		J'E' inclusive
			rake pedal			1	569085	109. From vehicle suffix
_			nd bushes			1		'F' onwards
3		for pe		_		2		
4			e for peda	l trunion		1	269783	
5 6 7		on for				1	568883	
6		for peda				Ī	272712	
7			pedal shaf	t		1	50446	
8 9	0i1 p1					1	255202	
			for oil pla			ļ	GHF 342	
10			rake pedal				9050997	
11			h, mechani			j		5 Trom vehicle suffix 'F'
12	Mounting	bracke	t for stop	lamp switch		1	569058	Jonwards

CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS 6-cylinder models up to vehicle suffix 'F' inclusive All 4-cylinder models

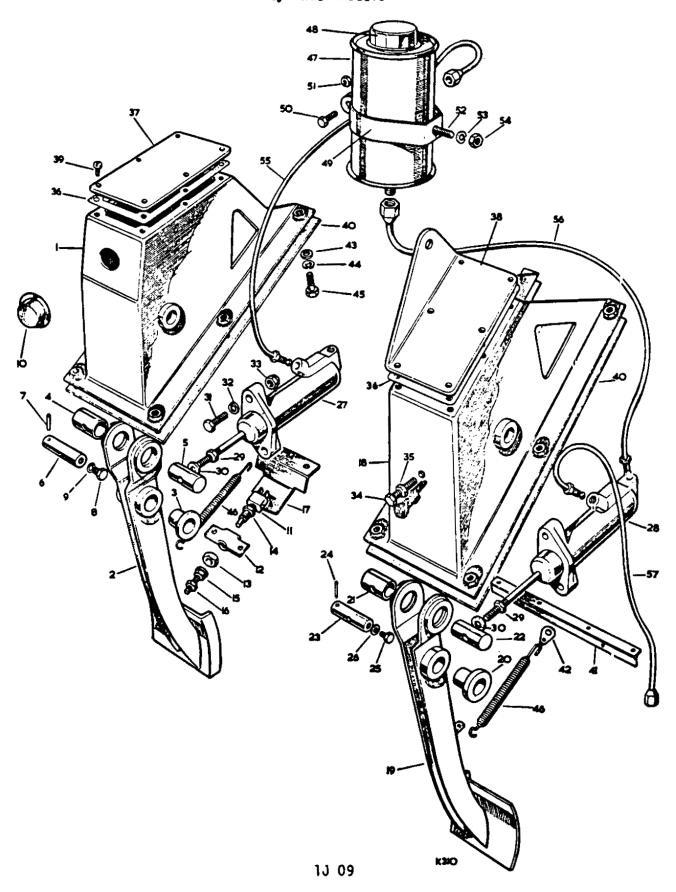

CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS


GROUP G

PLATE

6 Cylinder models up to vehicle suffix 'F' inclusive. All 4 cylinder models

REF. 1 2 3 4 DESCRIPTION QTY. PART No. REMARKS 569117 13 End stop) Fixing switch to Special locknut) mounting bracket BMK1903 From vehicle suffix 'F' 14 onwards 1 15 Special bolt 560223) Brake pedal Locknut (5/16" UNF)) stop in lever 16 NT605061 1 Switch protector plate and spring anchor CLUTCH PEDAL AND BRACKET ASSEMBLY 17 1 569201 Except Station Wagon 1 568893 RH Stg CLUTCH PEDAL AND BRACKET ASSEMBLY 1 568894 LH Stg 18 Bracket for clutch pedal 1 272632 19 Clutch pedal and bushes 1 568895 RH Stq Clutch pedal and bushes 1 568896 LH Stg 20 Bush for pedal 2 272714 Distance piece for pedal trunnion 21 1 269783 22 Trunnion for pedal 1 568883 23 Shaft for pedal 272712 1 24 Pin locating pedal shaft 1 50446 25 Oil plug 1 255202 Joint washer for oil plug 26 **GHF342** 1 BRAKE MASTER CYLINDER, CB type GMC 314 88. Up to vehicles numbered 24131336D, 2443162D Petrol models 27108693D, 27405072D Diesel models BRAKE MASTER CYLINDER, CV type GMC310 88. From vehicles numbered 24131337D, 24431622D Petrol models 27108694D, 27405073D onwards Diesel models 109. 4-cylinder models. Up **GMC312** BRAKE MASTER CYLINDER, CB type to vehicle suffix 'E' inclusive BRAKE MASTER CYLINDER, CV type GMC311 109. 4-cylinder models. From vehicle suffix 'F' 564944 Facking piece for brake master cylinder Jonwards 109 6-cylinder models BRAKE MASTER CYLINDER, CB type 1 564706 1 606330 88 For CB type Spacer 109 master cylinder Spacer 606332 1 88 and 109 For CV type Spacer for brake and clutch master cylinders 2 569096 master cylinder 28 CLUTCH MASTER CYLINDERS, CV type 1 GMC 310 29 Nut for master cylinder push rod 4 GHF201 Plain washer for push rod 30 4 WB108051 31 Bolt (5/16" UNF x 13") Fixing 4 255029 2 off on 109 4-cylinder master mode 1 s Bolt (5/16" UNF x 13") cylinder 2 **GHF104** 109 4-cylinder models 4 3830 32 Plain washer to Self-locking nut (5/16" UNF)) pedal bracket 4 **GHF242** 33 Bolt (1 UNF x 1") Nut (1 UNF) 2) In bracket for 11 off when mechanical stop 34 GHF101) pedal stop 254810 | lamp switch is fitted 36 Gasket for pedal bracket too cover 272819 37 Top cover for pedal bracket 272713

CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS 6-cylinder models up to vehicle suffix 'F' inclusive All 4-cylinder models

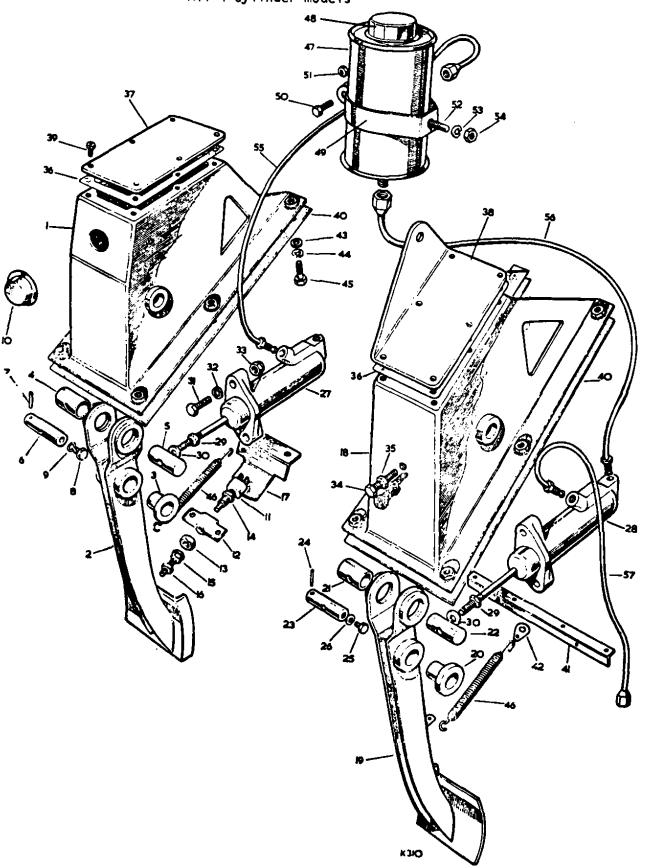


GROUP	C) ritch	ΔND	RDAKE	PEDALS	AND	MASTER	CYLINDERS
anour		~~~	DIVAILE	ILUNES	MIL	1.073 (61)	O C

		der mo	ndels up to vehicle suffix 'F' incl	usive.	A11_	4 cylinder models.
PLATI REF.	1 2 3	4	DESCRIPTION	aty.	PART No.	REMARKS
38	Pedal b	racket	top cover and reservoir tank			
		pport		ן*	277840	All 109 and 88 RH Stg
			t top cover and reservoir tank			•
		pport	•	1	5179.07	88 LH Stg
39	Drive s	crew 1	fixing top cover to bracket	12	78227	
			endant pedal brackets	2		
41	Anchor	for pe	edal springs] *	272730	
42	Anchor	for pe	edal springs	2	240708	Late type. 1 off when mechanical stop lamp is fitted
43	Bol+ //	5/16"	JNF x 2")) Fixing pedal	12	255227	71000
			bracket and		RTC610	
77	Plain v			3		
45	Spring	wachei	r) dash	12	GHF332	
7.5	Clutch	and by	rake pedal return spring, 3.1/32"		J 401	
		long	and peads second opening, or i, or	2	568866	٦
			rake pedal return spring, 3.17/32*	_	••••	Alternatives
		long	and pands vaccous aprima, according	2	272729	
46			rake pedal return spring, 4" long	2	569701]
47	Clutch	and br	rake reservoir tank	1	504105	
			clutch and brake tank	j	9051868	32
			sher for filter	1	264767	
48			for supply tank	1	500201	
49			ervoir tank	1	9021763	36
50			l")) Fixing clip	1	74838	
51	Nut (2E	BA)) to tank	1	RTC608	
52	Bolt (L" UNF) to tank x and) Fixing	1	255206	
53	Sprina	wachei	r	1	GHF331	
54	Nut (3'	' UNF)) mounting bracket	1		
55			oir tank to brake master cylinder	1	504106	A11 88 LH Stg
	•		•			88 RH Stg up to vehicles
						numbered 24131336D Petro
						models, 27108693D Diesel
						models


* NO LONGER SERVICED

CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS 6-cylinder models up to vehicle suffix 'F' inclusive All 4-cylinder models

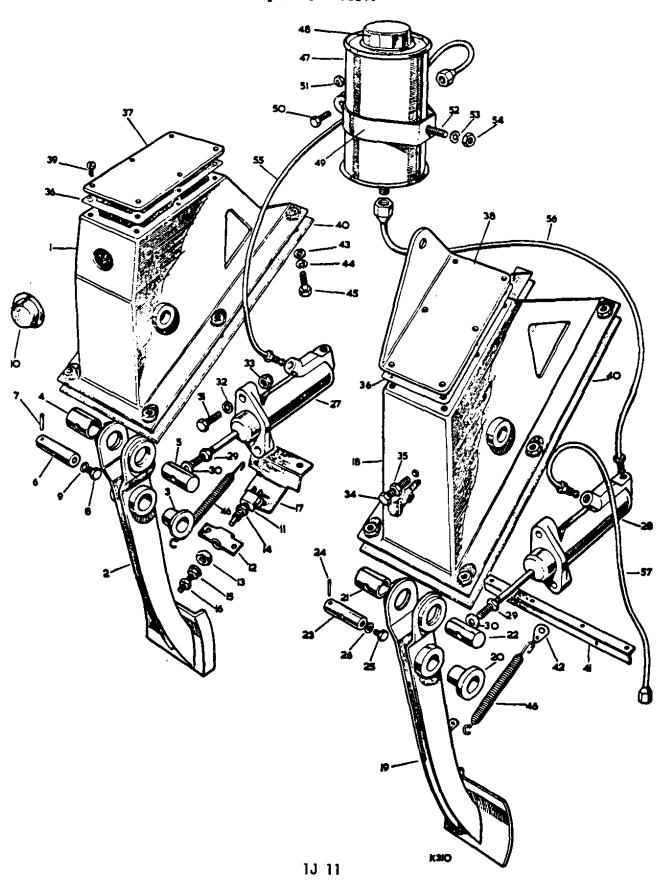

?LA REF		QTY. PART No. REMARKS
	6 Cylinder models up to vehicle suffix 'F'	inclusive. All 4 cylinder models
i5	Pipe complete, reservoir tank to brake master cylinder)88 RH Stg. From vehicles 1 564785)numbered 24131337D Petrol)models 27108694D Diesel)models
	Pipe complete, reservoir tank to brake master cylinder)109 4-cylinder models up to 1 504106)vehicles suffix 'E' inclusive)109 6-cylinder models
	Pipe complete, reservoir tank to brake master cylinder Pipe complete, reservoir tank to brake master)109 4 cylinder models. 1 569147 RH Stg)From vehicle suffix 'F')onwards
	cylinder	1 569149 LH Stg)
	Banjo) Banjo bolt) Fixing pipe to brake Gasket, small) master cylinder Gasket, large)	1 90216909)88 up to vehicles 1 267601 LH Stg)numbered 24431621D 1 216914)Petrol models 27405072D 1 504104)Diesel models. 109 4-cylinder models 1 up to vehicle suffix 'E 1 inclusive 109 6-cylinder 1 models
56	Pipe, reservoir tank to clutch master cylinder Pipe, reservoir tank to clutch master cylinder	1 277929 RH Stg 1 562978 LH Stg
57	Pipe, 3/16", clutch master cylinder to hose Pipe, 3/16", clutch master cylinder to hose Pipe, ½", clutch master cylinder to hose	<pre>1 277930 RH Stg)88 and 109 1 512839*LH Stg)4-cylinder models 1 569224*LH Stg)</pre>
	Pipe, 3/16", clutch master cylinder to slave	
	cylinder Pipe, 1", clutch master cylinder to hose	<pre>1 562932 RH Stg)109 6-cylinder models 1 568947*LH Stg)</pre>
	Adaptor for clutch master cylinder Pipe, clutch master cylinder to jumphose bracket	1 139082)Vehicles fitted with 1 592508 RH Stg)all-Synchromesh 4-cyl.)gearbox:- Home Market)88 and 109 Station)Wagons from vehicle)suffix 'H' onwards
		* NO LONGER SERVICED


CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS 6-cylinder models up to vehicle suffix 'F' inclusive All 4-cylinder models

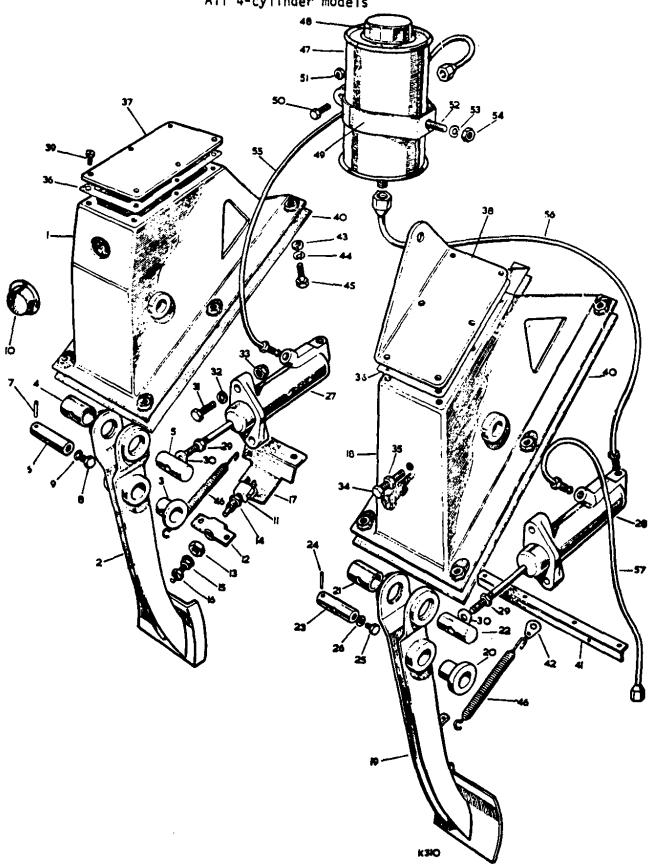

GROUP G CLUTCH AND BRAKE PEDALS AND MASTER CYLINDERS
6 cylinder models up to vehicle suffix 'F' inclusive. All 4 cylinder models

PLATE REF.		2	3 4	DESCRIPTION	ат	Y. PART No.	REMARKS
	BR	AKE	SE	RVO CONVERSION KIT	1 9	0606892	109 21 litre petrol models Optional equipment
	Br	ake	ma	ster cylinder overhaul kit	1	502333	88. For CB type master
	Br	ake	ma	ster cylinder overhaul kit	1	8G8837	cylinder (GMC314) 88. For CV type master cylinder (GMC310)
	Br	ake	ma	ster cylinder overhaul kit	1	503754	109 4 cylinder models. For early CB type master cylinder G1 64067722
	Br	ake	ma	ster cylinder overhaul kit	1	605127	109 4 cylinder models For late CB type master cylinder G1 64068750 (GMC31)
	Br	ake	ma	ster cylinder overhaul kit	1	90606023	109 4 cylinder models. For CV type master cylinder (GMC311)
	Br	ake	ma	ster cylinder overhaul kit	1	605127	109 6 cylinder models
	¢1	utc	hπ	master cylinder overhaul kit	1	8G8837	


CLUTCH AND BRAKE PEDALS. MASTER CYLINDERS AND SERVO UNIT 6-CYLINDER MODELS. From vehicle suffix 'G' onwards

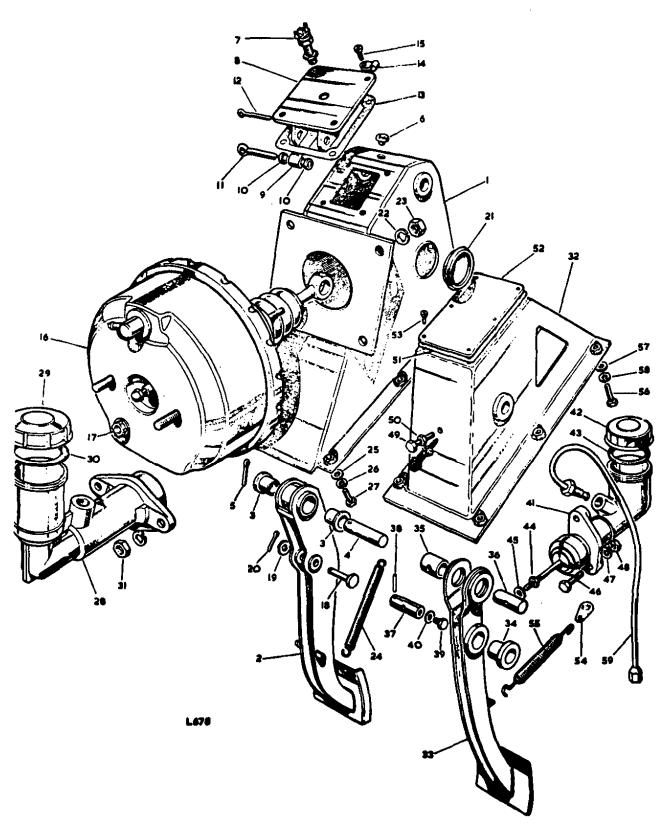

1J 13


PLA						
REF.	1 2 3 4 DESCRIPTION	QT	Y. PART No.	REM	ARKS	
	BRAKE PEDAL AND BRACKET ASSEMBLY	1	569652			
1	Bracket for brake pedal	1	569601			
2	Brake pedal and bushes	1	90569611			
3	Bush for pedal	2	564816			
4	Shaft for pedal	ī	564813			
5	Pin, locating pedal shaft	1	50446			
	Gasket for clutch pedal and bracket	1	562940			
	Gasket for brake pedal and bracket	1	90564832			
6	Plastic plug for oil hole in pedal bracket	1	338029			
7	Stop lamp switch, mechanical	1	575166			
8	Mounting bracket for stop lamp switch	1	569606			
9	Operating lever for switch	1*	569584			
10	Nylon bush) Fixing lever to	2	569609			
11	Split pin) mounting bracket	1	3035			
12	Split pin, lever stop	1	2427			
	Gasket for switch mounting bracket	7	90569612			
	Clip for switch cable	1	8885			
15	Self-tapping screw (8 UNC x 3") fixing mounting					
	bracket and clip to pedal bracket	4	78905			
16	BRAKE SERVO UNIT, type 38	1	569338			
	Non-return valve and grommet for servo	1	18G8953			
	Plug for vacuum switch hole in servo	Ţ	90577611			
	Pivot pin) Connecting servo	1	90564812			
19	Plain washer) operating rod to	1	RTC611			
20	Split pin) brake pedal	1	2393			
21	Plastic plug for pivot pin access hole in pedal	_				
00	bracket	2	338027			
22	Spring washer) Fixing servo unit	4	GHF332			
23	Nut (5/16" UNF)) to pedal bracket	4	GHF201			
24	Brake pedal return spring	2	569291			
25	Plain washer) Fixing brake	6	RTC610			
26 27	Spring washer) pedal bracket	6	GHF332 SH605051			
28	Bolt (5/16" UNF x §")) to dash	6				
29	BRAKE MASTER CYLINDER CV TYPE Filler cap for fluid unit		GMC 309 RTC 253			
30	Sealing washer for filler cap	,	606404			
31	Special nut, fixing brake master cylinder to	•	000404			
٠,١	Servo	2	GHF202			
	CLUTCH PEDAL AND BRACKET ASSEMBLY	í	568893	рu	Stg	
	CLUTCH PEDAL AND BRACKET ASSEMBLY	j	568894		Stg	
32	Bracket for clutch pedal	i	272632	LII	3 tg	
33	Clutch pedal and bushes	i	568895	ВH	Stg	
	Clutch pedal and bushes	i	56 8896		Stg	
34	Bush for pedal	2	272714			
35	Distance piece for pedal trunnion	ī	269783			
36	Trunnion for pedal	j	568883			
37	Shaft for pedal	1	272712			
38	Pin locating pedal shaft	1	50446			
39	Oil plug	1	255202			
40	Joint washer for oil plug	1	GHF342			
	· •					

CLUTCH AND BRAKE PEDALS, MASTER CYLINDERS AND SERVO UNIT 6-CYLINDER MODELS. From vehicle suffix 'G' onwards

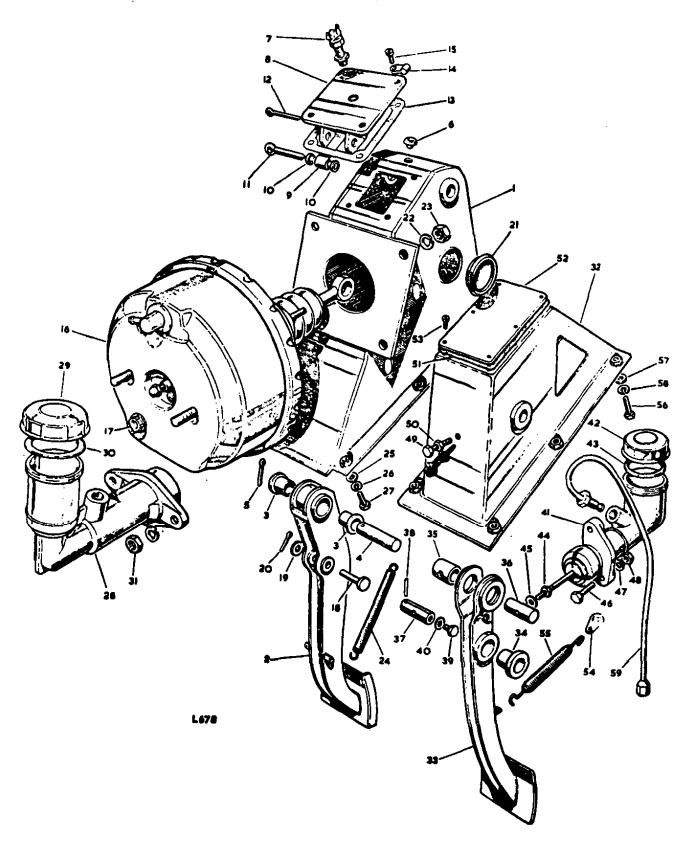


1J 14

PLAT	6 CYLINDER MODELS. From vehicle suffix	'G'	onwards.		
REF.	1 2 3 4 DESCRIPTION	QTY	. PART No.	REMARKS	
41	CLUTCH MASTER CYLINDER, CV TYPE	1	550732		
42	Filler cap for fluid unit:	i	500201		
43	Sealing washer for filler cap	Ì	264767		
44	Nut for master cylinder push rod	2			
45	Plain washer for push rod		WB108051		
46	Bolt (5/16" UNF x 11")) Fixing clutch		255029		
47	Plain washer) master cylinder to	2			
48	Self-locking nut (5/16" UNF) pedal bracket		GHF 242		
49	Bolt (1 UNF x 1")) In bracket for	1	GHF101		
50	Nut (1 UNF)) pedal stop]	GHF200		
51	Gasket for pedal bracket top cover	1	272819		
52	Top cover for pedal bracket	}	272713		
53	Drive screw fixing top cover to bracket	6	78227		
54	Anchor for clutch pedal spring	1	240708		
55	Return spring for clutch pedal	1	569701		
56	Bolt (5/16" UNF x 3")) Fixing clutch pedal		255227		
	Plain washer, thin) bracket and	5	RTC610		
57	Plain washer, thick) anchor to dash	7	4594		
58	Spring washer)	6	GHF 332		
59	Pipe, 3/16", clutch master cylinder to slave				
	cylinder	1	562932 RI	H Stg	
	Pipe, 1, clutch master cylinder to hose	1	569702 LI	H Stg	
	Adaptor for clutch master cylinder	10	139082)Vehicles fitted wi)all -synchromesh
	Pipe, clutch master cylinder to jump hose bracket	1	592509 1	RH Stg)gearbox:- Home Mar)109 Station Wagons)from vehicle suffi)'H' onwards
	Brake master cylinder overhaul kit	1	606415		
	Clutch master cylinder overhaul kit	i	8G8837		
	Brake servo unit overhaul kit	i	18G8951		

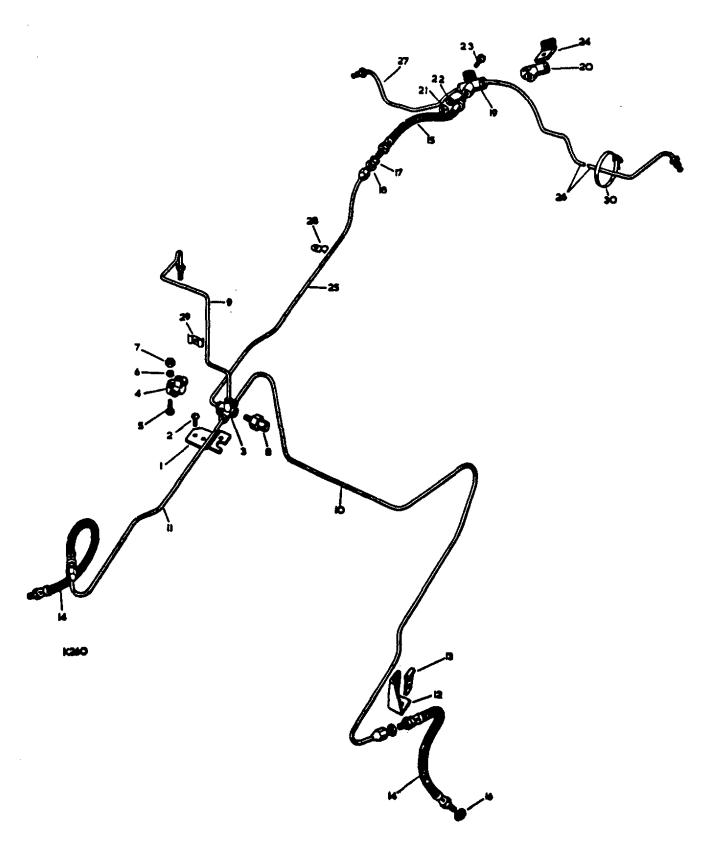

PLATI	E 1 2 3 4	DESCRIPTION	QTY.	PART No.	REMARKS
$\overline{}$	Bracket for	junction piece	1	594938	
2		fixing bracket	2	72626	
3		on piece for brake pipes	1	279412	Up to vehicle suffix *E* - inclusive
4	4-way juncti	on piece for brake pipes	1*	241690	From vehicle suffix 'F'
5	Bolt (¾" UNF	x 11"))	1	BH604101	
6	Spring washe		1	GHF 331	
7	Nut (1" UNF)		i	GHF200	
8	Stop lamp sw		i	560775	Hydraulic type. Up to vehicle suffix 'E' inclusive. See 1J 08 for mechanical type
	Dunka mina	1	1	508148	
	Brake pipe Brake pipe		1	512838	RH Stg]88. Up to vehicles LH Stg numbered 24131336D Petrol, 27108693D Diesel
9	Brake pipe	j	1	564786	RH Stg788. From vehicles
	Brake pipe	<pre>Master cylinder to) 5-way junction piece } </pre>	1	569223	LH Stg numbered 24131337D Petrol, 27108694D Diesel up to vehicle suffix 'E' Linclusive
	Brake pipe)	1	508148	RH Stg]109. Up to vehicle
	Brake pipe	j	1	512838	LH Stg.suffix 'E' inclusive
	Brake pipe)	1.	564786	RH Stg 188. From vehicle
	Brake pipe) Master cylinder to	1	569223	LH Stg]suffix 'F' onwards
	Brake pipe) 4-way junction piece	1		5 RH Stg]109. From vehicle
	Brake pipe)	1	577166	LH Stg_suffix 'F' onwards
10	Brake pipe,	junction piece to LH front	7	592549	
11	Brake pipe,	junction piece to RH front	1	277923	
12	Bracket for	LH front brake pipe]*	9050856	5
	Bolt (5/16"	UNF x }")) Fixing	1	GHF120	
	Plain washer		1	3830	
	Shakeproof w]	GHF322	
	Nut (5/16" U]	GHF201	
13		front brake pipe	_	508565	
	Bolt (2BA x		וַ ַ	234603	
	Plain washer Nut (2BA)) Fixing clip)	1	3902 RTC608	


^{*} NO LONGER SERVICED

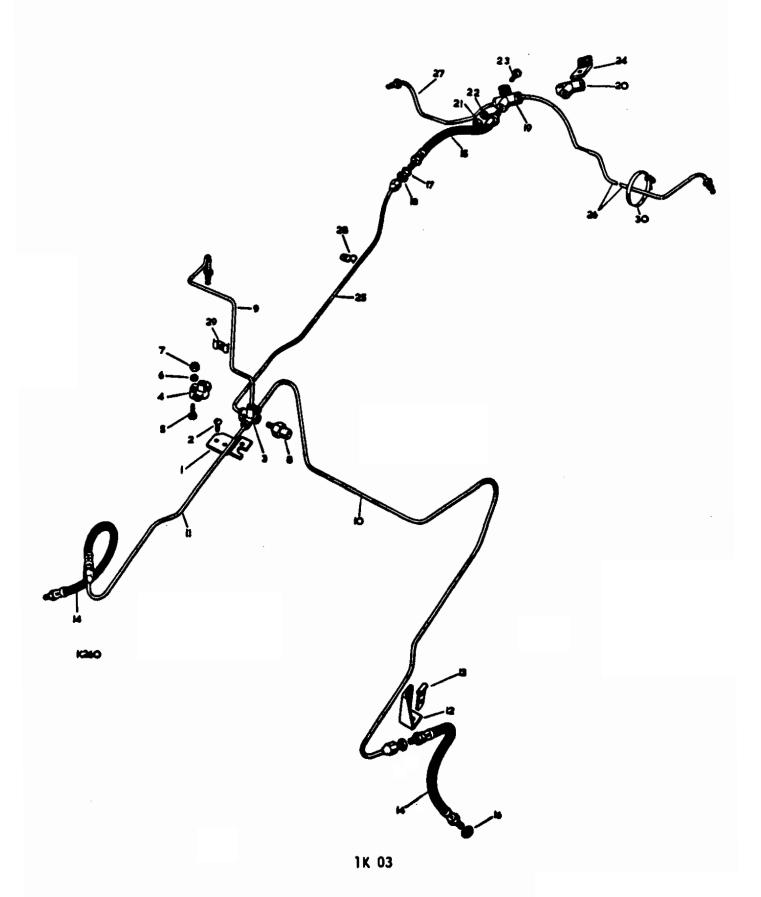

```
LATE
EF. 1 2 3 4
                          DESCRIPTION
                                                      QTY. PART No. REMARKS
                                                       2 GBH134
14 Hose complete for front wheels
15 Hose complete to rear axle
                                                       1 GBH134
                                                                   88
                                                       1 GBH302
                                                                   109
    Hose complete to rear axle
                                                       3 233220
   Joint washer for hoses
                                                       3 GHF323
17 Shakeproof washer ) Fixing hose
                                                      3 NT606041
18 Special nut
                      ) to bracket
                                                                   Rover type axle
   'T' piece on rear axle
                                                      1 234928
19
20 'T' piece on rear axle
                                                      1 BTB657
                                                                   ENV type axle. 109 optional
   Nut (5/16" UNF)
                                                      1 GHF201
21
                                                      1 GHF332
1 GHF120
                           ) Fixing 'T' piece
   Spring washer
22
   Bolt (5/16" UNF x ₹")
23
   Bracket for 'T' piece
                                                       1* 537805
    Bolt (5/16" UNF x %")
                                                      1 SH605061 ENV type axle. 109 optional
                           ) Fixing
                                                      ]
                           ) bracket to
                                                          GHF332
    Spring washer
    Nut (5/16" UNF)
                           ) rear axle
                                                      1
                                                          GHF 201
                                                                   88
                                                      1
                                                          279418
   Brake pipe to rear hose
    Brake pipe to rear hose
                                                      1
                                                          279452
                                                                  109
   Brake pipe, LH rear to 'T' piece
Brake pipe, RH rear to 'T' piece
                                                          504517
                                                                  788. Also 109 with
                                                      1
                                                                 Rover type axle
                                                      1
                                                          531906
   Brake pipe, LH rear to 'T' piece
                                                      1
                                                          592374
                                                                  TENC type axle
    Brake pipe, RH rear to 'T' piece
                                                       1
                                                          551652
                                                                  optional
    Brake pipe, LH rear to 'T' piece
                                                       1
                                                          592374
                                                                  |Salisbury type axle
                                                                   |109 only from vehicle
                                                          592375
    Brake pipe. RH rear to 'T' piece
                                                                  suffix 'H' onwards
                                                          41379
28 Clip, brake pipes to chassis frame
                                                As read
29 Clip, brake and clutch pipes to dash
                                              As read
                                                          508945
                                                                   LH Stg
    Clip, fixing pipe to steering box stiffener
                                                          90513940 RH Stg
          bracket
                                                          72626
                                                As read
    Drive screw
                                                As read
                                                          77758
    Screw (2BA x §")
                        ) Fixing clips
                                                          WE702101 LH Stq
    Shakeproof washer
                                                As read
                                                          RTC608
                                                As read
    Nut (2BA)
                                                          11820
30 Clip on rear axle for LH pipe
                                                       4 56666
    Clip
                                                       4 6860
    Rubber grommet
    Bolt (2BA x ½")
                                                       4 234603
                     ) Fixing LH brake pipe
                                                       4 WC702101
    Plain washer
                     ) to chassis frame
                                                       4 WM702001
    Spring washer
                                                         RTC608
    Nut (2BA)
```

* NO LONGER SERVICED

BRAKE SERVO UNIT AND BRAKE PIPES, 6-CYLINDER MODELS Up to vehicle suffix 'F' inclusive

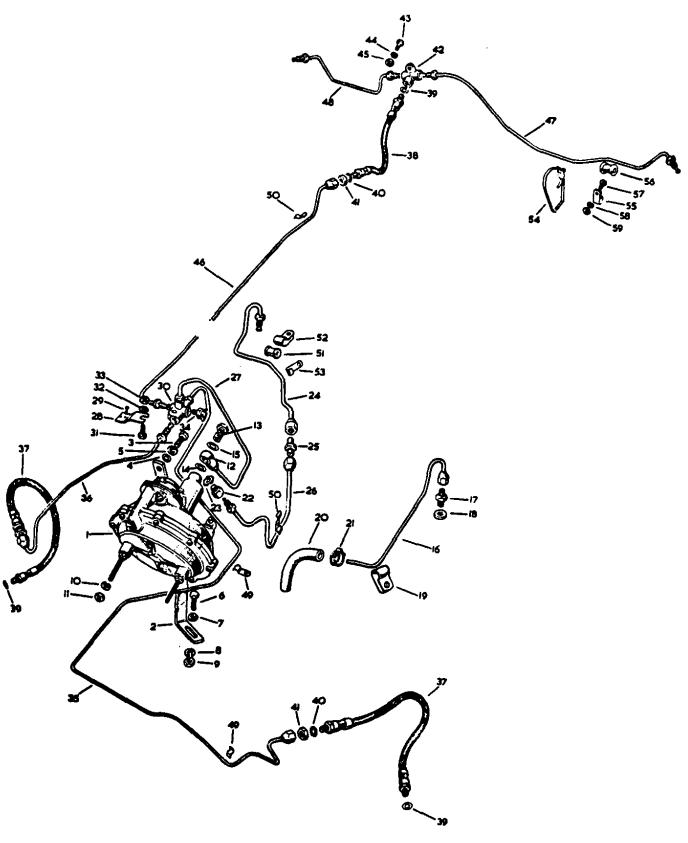

H944

PLATE REF.	1 2 3 4	DESCRIPTION	QTY.	PART No.	REMARKS
		_		560670	
1	BRAKE SERVO UNI		1	562678	
2	Support bracket	for brake servo		562675	•
3		" UNC x a")) Fixing servo	2		1
4	Plain washer			3830	
5	Spring washer		2		
6	Bolt (5/16" UNF	× ¾"))]	255226	
7	Plain washer				
8	Spring washer) to chassis frame]		
9	Nut (5/16" UNF))	1		
10	Spring washer) Fixing servo to		GHF332	
11	Nut (5/16" UNF)) air cleaner support	2	GHF201	
12	Banjo for servo		1	538614	
13	Banjo bolt)		1		
14	Gasket) Fi:	king banjo to servo	1		
15	Gasket)			538612	
16	Pipe complete,	inlet manifold to hose		562666	_
17	Adaptor) Fixia	ng servo pipe to	1		1
	Gasket) inle		j		
19	Clip, fixing set	rvo pipe to water outlet pipe	1		
20	Rubber hose con	necting manifold pipe to servo		37H8863	
		ober hose to pipe and brake servo		GHC406	
	Adaptor for ser		1.		
	Gasket for adap		_	538612	
24	Pipe complete,	master cylinder to union	1.		-
		master cylinder to union	=	562906	LH Stg
25	Union for pipe]	504765	
	Pipe complete,		1	_	
27		orake servo to junction piece	1		
	Bracket for jun		1	594938	
	Drive screw fix		2	72626	
30	5-way junction	piece for brake pipes	, 1	279412	
					inclusive
		piece for brake pipes		241690	
31	Bolt (1" UNF x	ll")) Fixing junction	j		1}
	Spring washer]	GHF331	•
	Nut (1" UNF)) support bracket	_	GHF200	
34	Stop lamp switch	h	3	560775	Hydraulic type. Up to
					vehicle suffix 'E'
					inclusive. See 1J 08
			_		for mechanical type
35	Brake pipe, jun	ction piece to LH front	1	592549	
		ction piece to RH front]	277923	
37	Hose complete f		2		
	Hose complete t		ו	GBH302	
			3		
40	Shakeproof wash	er) Fixing hose) to bracket	3		3
41					

* NO LONGER SERVICED

BRAKE SERVO UNIT AND BRAKE PIPES, 6-CYLINDER MODELS Up to vehicle suffix 'F' inclusive


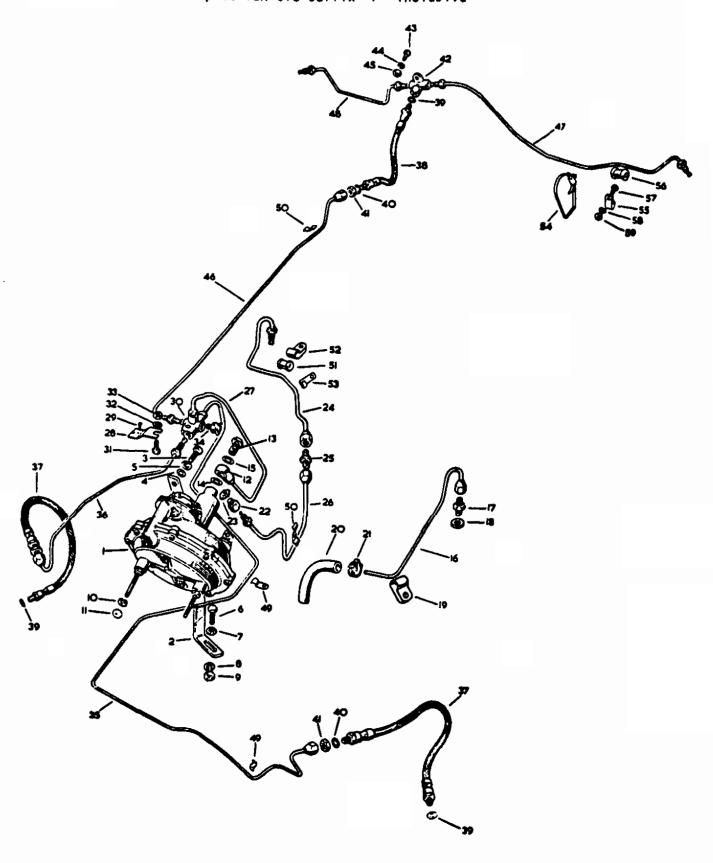


PLATE REF.	1 2 3 4	DESCRIPTION	<u>01</u>	ry, part No.	REMARKS
42	'T' piece o	on rear axle	1	234928	
43		' UNF x 1"))	7	GHF120	
44	Spring wash		7	GHF332	
	Nut (5/16"		1	GHF201	
		to rear hose	1	279452	
47		, LH rear to 'T' piece	1	504517	
48		, RH rear to 'T' piece	1	531906	
49			ls read	41379	
50	Double clip	o, brake pipes to chassis frame	ls read		
	Drive screv	v fixing clips	ls read		
51	Grommet)	Fixing brake servo pipe	1	6860	
	Clip)	to pedal bracket top cover	ו	56666	
53		ng brake pipe to steering box brack	et]		IO RH Stg
		ng brake pipe to dash	3	3 338035	LH Stg
		ar axle to LH pipe]	11820	
55	Clip for bu		9	56666	
	Rubber bust			6860	
57		(}")) axle pipe to	_	234603	11
	Spring wash	ner) chassis frame			J I
59	Nut (2BA)	}		RTC608	
	Dunka cause	n maine ouremand hit	1	600432	ר
		n major overhaul kit	, 1	600432	
		o poppet valve overhaul kit o non-return valve overhaul kit	1	600435	Export only
	DIGKE SELAT	G DOUT LECOIN AGIAE CAELUGUI KIC		. 000-33	_

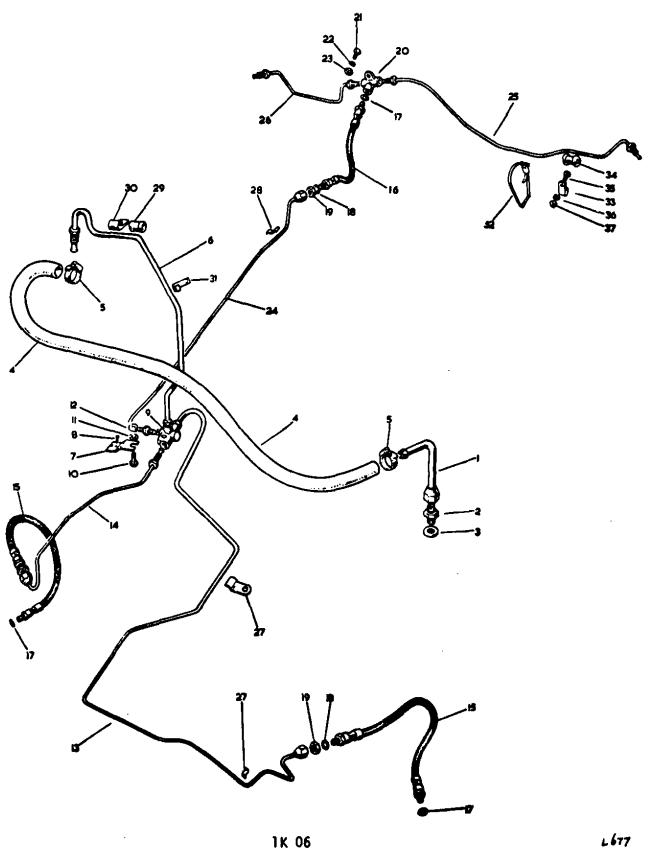


L677

- 0.00			
PLAT	From vehicle suffix '6	onv	wards
REF.			Y, PART No. REMARKS
$\overline{}$	Pipe complete, inlet manifold to hose	1	569434 See IJ 13 for servo unit
		,	
	Adaptor) Fixing servo pipe to		90513171
3	Gasket) inlet manifold	1	538616
4	Rubber hose connecting manifold pipe to servo	1	37H8863
5	Clip, fixing rubber hose to pipe and brake serve	2	GHC406
6	Pipe complete, master cylinder to junction piece		
U	Pipe complete, master cylinder to junction piece		
7			
7	Bracket for junction piece	1	
	Drive screw fixing bracket	2	
9	4-way junction piece for brake pipes	1	241690
10	Bolt (1 UNF x 11)) Fixing junction	1	BH604101
11	Spring washer) piece to	ו	GHF331
12	Nut ({ UNF)). support bracket	i	- ·
		i	
13	Brake pipe, junction piece to LH front		* =
14	Brake pipe, junction piece to RH front	1	
	Hose complete for front wheels	2	
16	Hose complete to rear axle	1	
17	Joint washer for hoses	3	
18	Shakeproof washer) Fixing hose	3	GHF323
19	Special nut) to bracket	3	
20	'I' piece on rear axle	ĭ	
21	Bolt (5/16" UNF x }"))	j	_ · · · _ ·
22	Spring washer) Fixing 'T' piece	j	· · · ·
	Nut (5/16" UNF))	<u> </u>	
	Brake pipe to rear hose	1	
25	Brake pipe, LH rear to 'T' piece	1	504517
26	Brake pipe, RH rear to 'T' piece	1	531906
	Brake pipe, LH rear to 'T' piece	1	
	Brake pipe, RH rear to 'T' piece	i	
	brake pripe, his rear to a prece	•) suffix 'H' onwards
27	Cinalo clin humbo ninos to chassis framo. As	waa d	·
	· · · · · · · · · · · · · · · · · · ·	read	
28		reqd	
		reqd	
29	Grommet) Fixing brake pipe	1	6860
30	Clip) to pedal bracket top cover	1	56666
31	Clip, fixing brake pipe to steering box bracket	1	90513940 RH Stg
	Clip on rear axle for LH pipe	Ì	11820
33	Clip for bush)	À	56665
34		, , ,	6860
		-	
35	Bolt (2BA x ½")) axle pipe to	4	234503
36	Spring washer) chassis frame	4	WM702001
37	Nut (2BA))	4	RTC608
	Clip, fixing brake pipe to toe box	1	41379
	Screw (2BA x 3"))	1	78177
	Plain washer ') Fixing clip	1	4034 LH Stg
	Spring washer) to toe box	1	WM702001
	Nut (2BA)	i	RTC608
		, i	41379
	Clip fixing brake pipe to chassis		577016
	Mounting bracket for pipe clip	΄.	
	Drive screw fixing bracket to chassis	2	
	Bolt (10 UNF x ½")) Fixing clip	1	257017
	Spring washer) to mounting	1	WM702001
	Nut (10 UNF)) bracket	1	HN2005
	· · · · · · · · · · · · · · · · · · ·		

^{*} NO LONGER SERVICED


GROUP G
HANDBRAKE LEVER, RH STG, UP TO VEHICLE SUFFIX 'C' INCLUSIVE

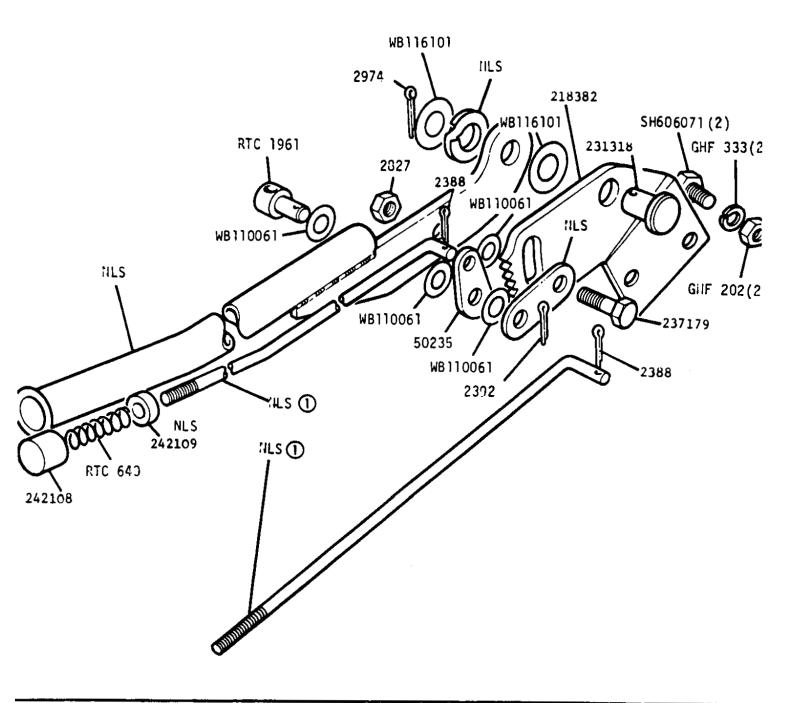

<u>REMARKS</u>

Hand brake lever assembly 50858! •NLS

Alternatives

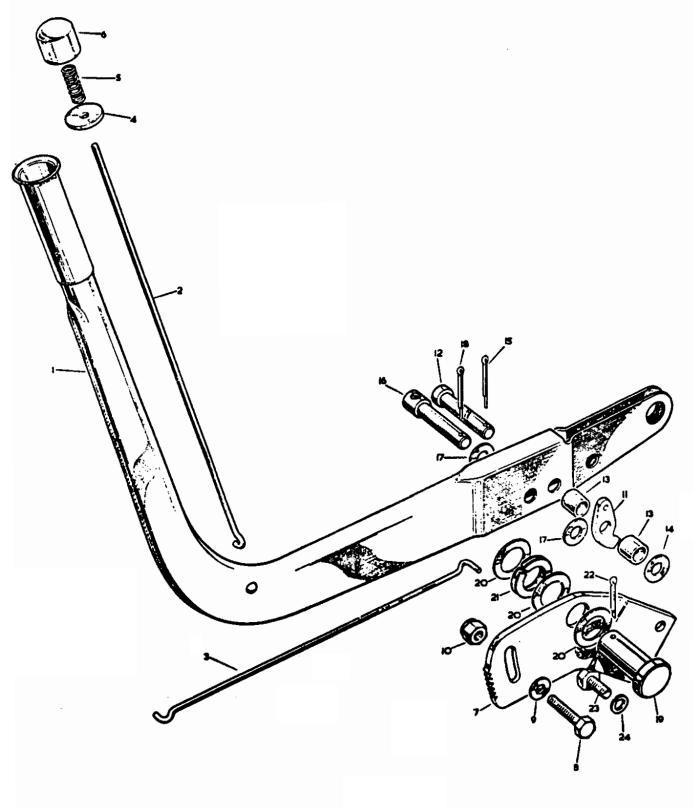


Hes

HAND BRAKE LEVER, RH Stg. From vehicle suffix 'D' onwards

PLATE	E 1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
	HAND BRAKE LEVER ASSEMBLY	1 624252
1	Hand brake lever	1 543265
2	Plunger rod, upper	1 543292
3	Plunger rod, lower	1 543291
4	Washer for plunger spring	1 552857
5	Spring for plunger rod	1 RTC640
6	Plunger	1 552856
4 5 6 7	Ratchet for hand brake	1 543546
8	Bolt (a UNF x la")) Fixing	1 255249
8	Plain washer) lever to	2 WB110061
10	Self-locking nut ("UNF)) ratchet	1 GHF223
11	Brake catch	1 50235
12	Pin)	1 559563
13	Distance piece) Fixing catch	2 543275
14	Plain washer) to lever	1 4574
15	Split pin)	1 2392
16	Pin for hand brake adjuster rod	1 543281
17	Plain washer) Fixing pin to	2 4574
18	Split pin) hand brake lever	1 2392
19	Fulcrum pin for hand brake lever	1 231318
20	Plain washer) Fixing pin	3 WB116101
21	Spring washer) to ratchet	1* 2290
22	Split pin) and lever	1 2974
23	Bolt (?" UNF x [")) Fixing hand brake	2 SH606071
24	Spring washer) lever to	2 GHF333
	Nut (UNF)) chassis frame	2 GHF202

^{*} NO LONGER SERVICED

GROUP G HAND BRAKE LEVER, LH STG, UP TO VEHICLE SUFFIX 'C' INCLUSIVE

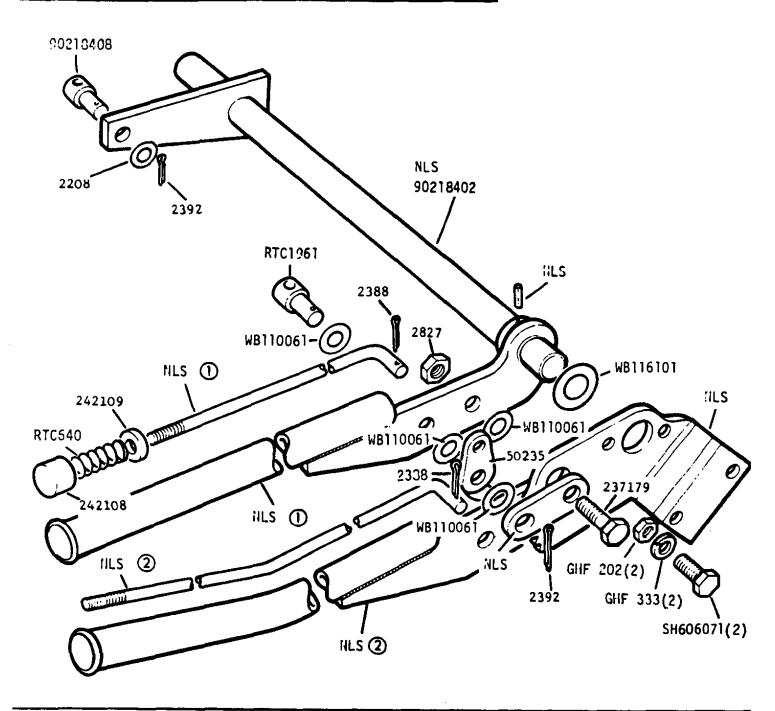


REMARKS


Hand brake lever assembly (508582) - NLS

- ① Straight type) Alternatives
- ② Cranked type)

GROUP G
HANDSRAKE MOUNTINGS, LH STG. UP TO VEHICLE SUFFIX 'C' INCLUSIVE

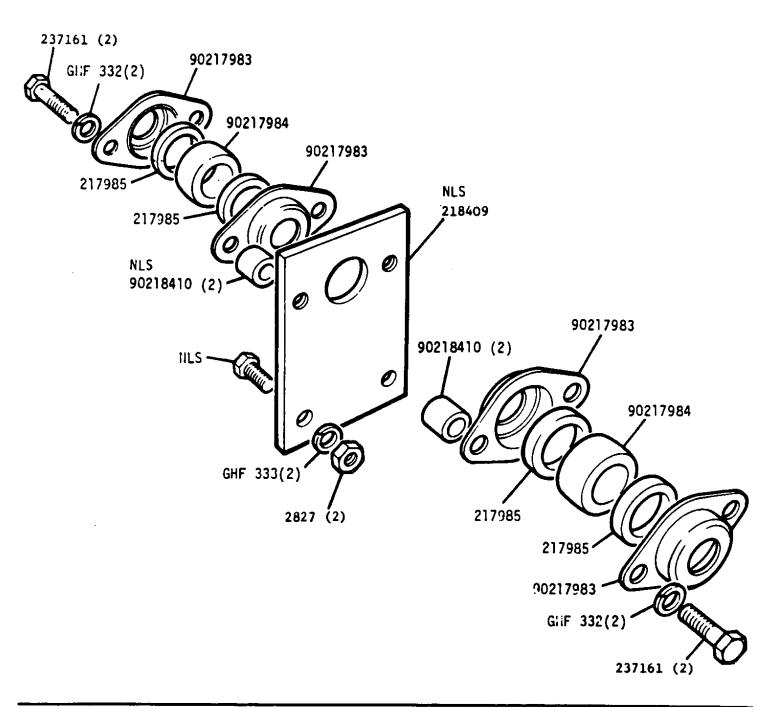

REMARKS

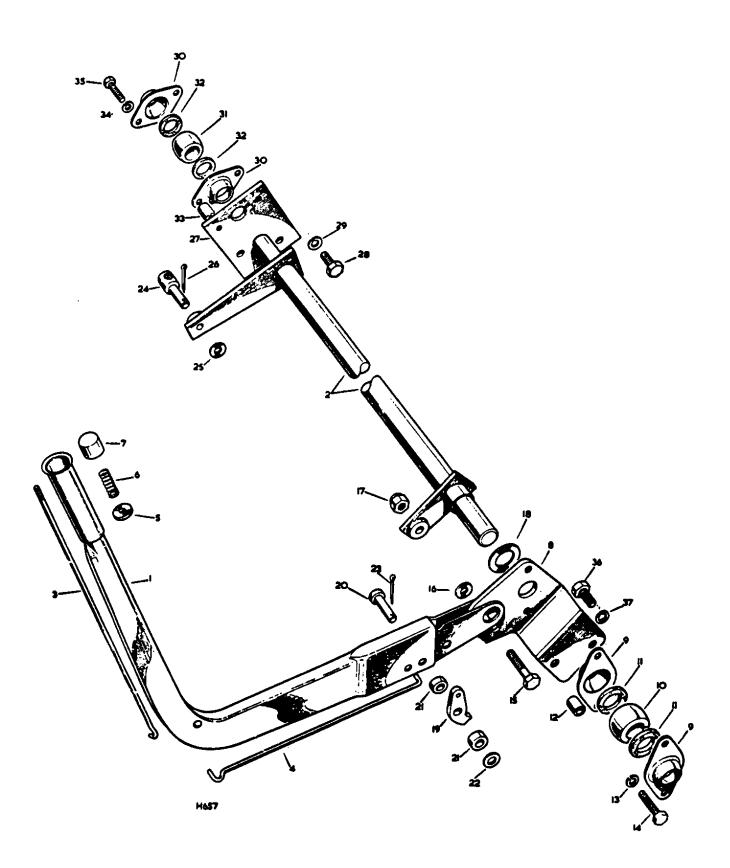


1K 10

HAND BRAKE LEVER, LH Stg From vehicle suffix 'D' onwards

PLAT REF.		QTY.	PART No.	REMARKS
	HAND BRAKE LEVER ASSEMBLY	1	624262	
1	Hand brake lever	1	543265	
2	Cross shaft for hand brake	i	552578	
2	Plunger rod, upper	j	543292	
4	Plunger rod, lower	ĺ		
5	Washer for plunger spring	i		
4 5 6	Spring for plunger rod		RTC640	
7	Plunger	ĺ	552856	
8	Ratchet for hand brake	1	552583	
9	Housing for cross shaft bearing		90217983	}
10	Spherical bearing for cross shaft	ī		
11	Felt ring for bearing	2		
12	Distance piece) Fixing bearing Spring washer) and housing to	2	522805	
13	Spring washer) and housing to	2	GHF332	
14	Set bolt (5/16" UNF x ll")) ratchet	2	255029	
15	Bolt (a" UNF x la")) Fixing	1	SH606141	
16	Plain washer) lever to	2	WB110061	
17	Self-locking nut (a" UNF)) ratchet	1	GHF223	
18	Plain washer between lever and ratchet	1		
19	Brake catch	1	50235	
20	Pin)	1	599563	
	•	2		
21 22	Plain washer) to lever	ī	4574	
23	Split pin)	1	2392	
24		1		}
25	Plain washer) Fixing pin to	1	2208	
26	Split pin) cross shaft lever	1	2392	
27	Support plate for hand brake bearing housing	1	552858	
28	Bolt (a" UNF x a")) Fixing support		SH606071	
29	Spring washer) hlate to	2	GHF333	
	Nut (%" UNF)) chassis frame	2	GHF202	
30	Housing for cross shaft bearing	2	90217983	}
31	Spherical bearing for cross shaft	Ī	90217984	
32	Felt ring for bearing	2		
33	Distance piece) Fixing housing	2	90218410)
34		Ž	GHF332	
35		2	255227	
36	Bolt (3" UNF x 2")) Fixing hand brake	Ž	SH606071	
37	Spring washer) lever to	2	GHF333	
	Nut (3" UNF)) chassis frame		GHF202	

FUEL SYSTEM - Car Up 7:1

ession ratio only

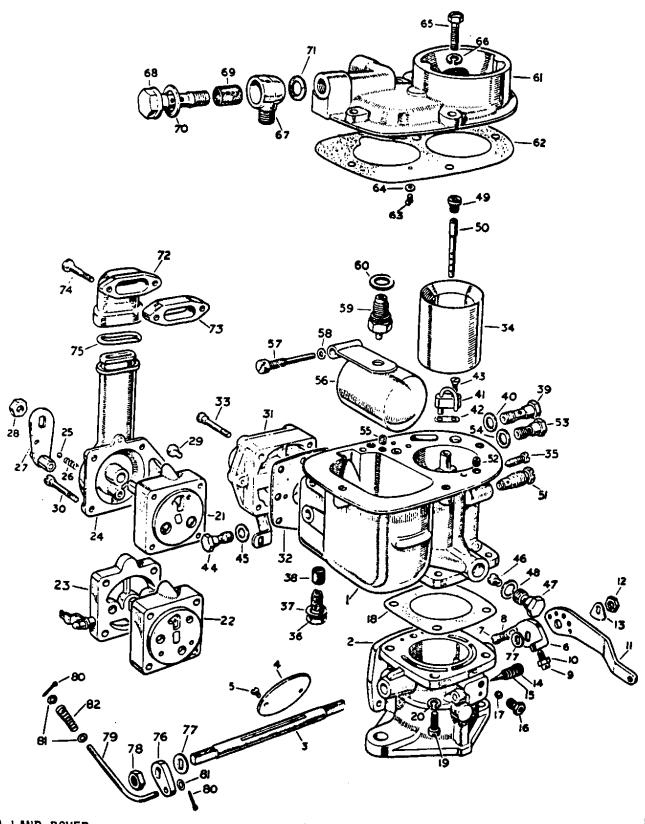

E478

PLATE
REF. 1 2 3 4 DESCRIPTION QTY. PART No. REMARKS

Up to engine suffix 'H' inclusive 7:1 compression ratio only

	CARBURETTER COMPLETE	1	546029 @	Without starter heater
	The above is no longer available use:- CARBURETTER CONVERSION KIT	1	RTC2038	element.
	CARBURETTER COMPLETE	1	546180 @	With starter heater element Note: Identification, Lucar connection adjacent to starter unit
1	Carburetter body only	1	90513506	*For carburetter without starter element.
	Carburetter body only	1	528037 *	For carburetter with starter element.
2	Throttle chamber only	1	524114	<u> </u>
	Throttle chamber only	1	538435 *	For carburetter with starter heater element.
3	Spindle for throttle	1	503889 *	
4	Butterfly for throttle	i	503890 *	
5	Special screw fixing butterfly	2	260138 *	
6	Plate, throttle abutment	ī	503891 *	
7	Special screw) For slow running	1	260140 *	
8	Spring) adjustment	1	260141 *	
9	Special screw) For throttle	i		
10	Locknut) stop	1	260143 *	
11	Throttle lever	1	504683 *	
12	Nut fixing throttle lever	1	260159 *	
13	Lockwasher for nut	1	504485 *	
14	Special screw) For mixture	1	260146 *	
15	Spring control	1	260141 *	
16	Screwed union). For suction	1	260707 *	
17	Olive) pipe	1	260708	
18	Joint washer for throttle chamber	1	503893	
19	Special screw and spring washer fixing chamber to carburetter body	4	512402 *	

- @ Carburetter and fittings are not included in the engine assembly
- * NO LONGER SERVICED

FUEL SYSTEM - Carburetter, Solex type, 24 litre Petrol Up to engine suffix 'H' inclusive 7:1 compression ratio only


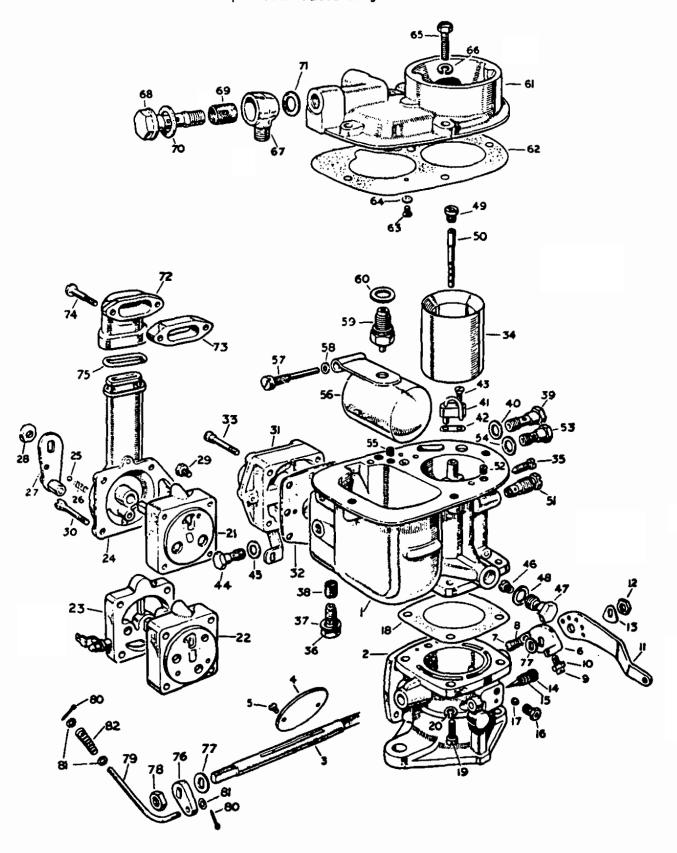


PLATE REF.	1 2 3 4	DESCRIPTION	QTY	. PART No.	REMARKS
		Up to engine suffix	'H' inclusive	7:1 com	pression ratio only
21	Starter complete		* 1	503895	For carburetter without starter heater element
22	Starter complete		* 1	527273	For carburetter with starter heater element
	Starter valve co	mplete	* 1	503896	For carburetter without starter heater element.
	Starter valve co	omplete	* 1	528039	For carburetter with starter heater element.
23	Heater element f	ian stantan	*]	528053	
			* j		
24	Cover for starte	er	+ j	260155	
25	Ball) For	-A	* j		
26	Spring) star		* 1	503898	
	Lever for starte		•		
28	Nut fixing start		*]	_	
29	Special bolt fix	ing starter cable	1		
30	Special screw fi	xing starter body	4	262313	For carburetter without
	Special screw fi	ixing starter body	4	52727 2	starter heater element. For carburetter with starter heater element.
31	Accelerator pump	complete	*]	524115	For carburetter without starter heater element.
	Accelerator pump	complete	1	528041	
	Diaphragm asse	embly for pump	1	503900	
32			*]	503939	
33	Special screw fi		4	503901	
34	Choke tube (30)	g pant	* 1	503902	
J •	Choke tube (28)		* 1	512105	
	Choke tube (26)		* 1	542368	
35	Special screw fi	iving choke tube	* j	260163	
3 6	Non-return valve		* j	260765	
37	Fibre washer for		* i	260734	•
		r non-return valve	* 1	503903	
38 39			* i	503904	
39	Jet (65), accele	erator pump	* i	542640	
40	Jet (50), accele		* i	260734	
40	Fibre washer for	r jet	* 1	503905	
41	Pump injector	inimates	* 1	261570	
42	Joint washer for		* 1	260767	
43	Special screw f	ixing injector	- 1	200/0/	
			* NC	LONGER	SERVICED

FUEL SYSTEM - Carburetter, Solex type, 21 litre Petrol
Up to engine suffix 'H' inclusive
7:1 compression ratio only

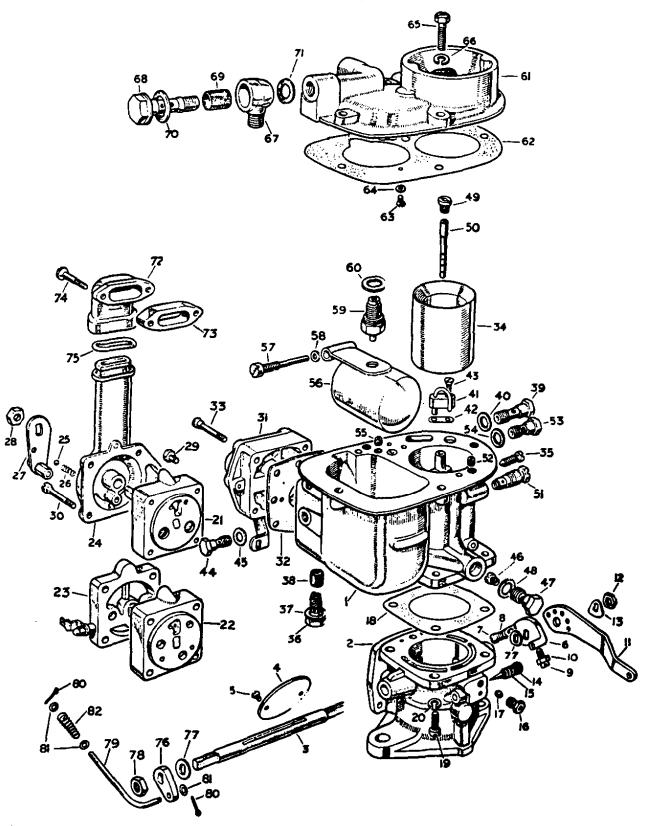


SIIA LAND ROVER

1L 04

E478


PLATE REF.	-	CRIPTION	ar	Y. PART No. F	REMARKS
		ngine suffix 'H'			ssion ratio only
	up to e	ngine suffix 'n	Inclusive	7.1 Compres	ston ructo only
44	Economy jet, blank		*]	503906	
45	Joint washer for blank je	t	* 1	250734	
46	Main jet (135)		*]	503907	
	Main jet (125)		*]	505701	
	Main jet (120)		* 1	542639	
47	Bolt, main jet carrier		*]		
48	Fibre washer for bolt		* 1		
49	Correction jet (175)		*] *]		
	Correction jet (185)		•	90512106	
50			*] *]		
	Emulsion tube, No. 10		* 1		
51	Pilot jet (60)		* 1	260216	For carburetter without
	Pilot jet (50)		- 1	200200	starter heater element
	D21-4 2-4 /FF)		*]	260269	For carburetter with
	Pilot jet (55)		•	20020.	starter heater element
EO	lot sim blood (1.5)		* 1	260179	Juli del licade. Gramatia
52	Jet air bleed (1.5) Jet air bleed (blank)		* j	542641	
53	Starter jet, petrol (145)	1	* j	503910	For carburetter without
23	Starter Jet, petroi (145)	1	•	300210	starter heater element
	Starter jet, petrol (130)	1	* J	528038	For carburetter with
	Starter Jet, petror (150)	•	•		starter heater element
54	Fibre washer for jet		* 1	260734	
55	Economy jet, high speed ((150)	*]	503911	
00	Economy jet, high speed (*]	512107	
56	Float	(/	*]	503912	
57	Spindle for float		* }	503913	
58		•	*]	503914	
59	Needle valve complete		1	260725	
60			* 1		
61	Top cover for carburetter	r	*]	503915	
62	Joint washer for top cove	er	1	90503916	
63	Screw) Fixing joint v	washer	* 2		
64	Washer) to top cover		* 2		
65		cover	4	503919	
66			4	260714	Nat and of anchimeter
67				260166	Not part of carburetter
68			*]	260167	
69		.	*] * 1	260168	
70		For	*] *]	260169 260170	
71	Fibre washer, small)	union	- 1	<u> የ</u> የሀ1/ሀ	
			# Mf	LONGER SE	RVICED
			- 110	J LUMBER 30	,NT 10LU

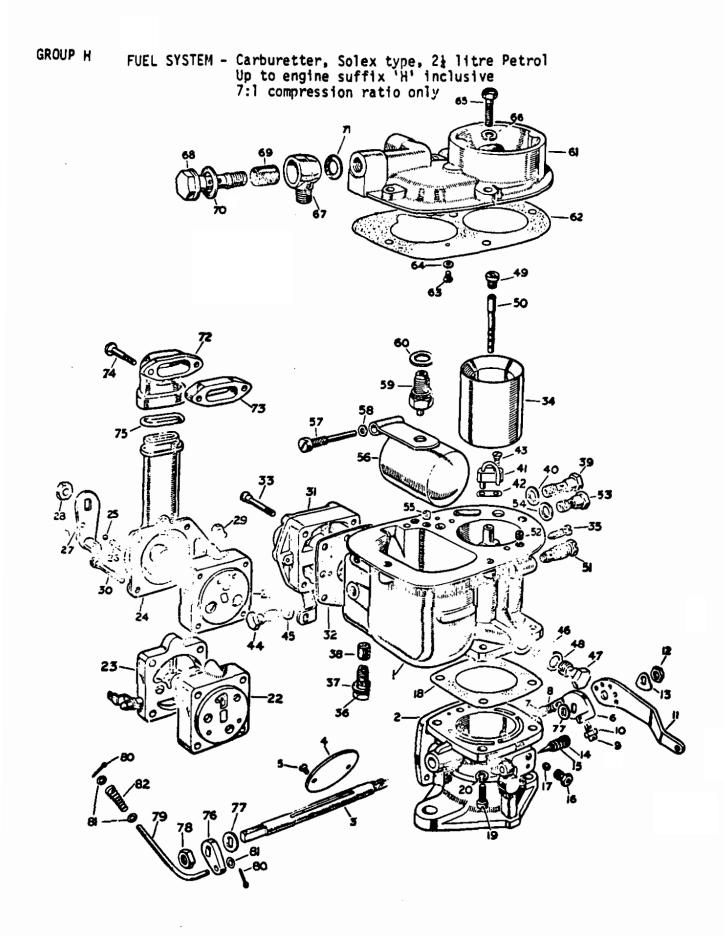

PLATI REF.	1 2 3 4 DESCRIPTION	N QTY, PART No. REMARKS	
	Up to engine s	suffix 'H' inclusive 7:1 compression ratio onl	у
72	Elbow for top cover	1 503920 *	
73	Distance piece, elbow to top	cover 1 527275 * For carburett starter heate	
74	Screw fixing elbow to top cov		er without
	Screw fixing elbow to top cov	ver 1 260157 * For carburett starter heate	
75	Rubber sealing washer, elbow	to starter cover 1 503922 *	
76	Lever for accelerator pump ro		
77	Special washer for levers	1 261410 *	
78	Nut fixing lever to spindle	2 260159 *	
79	Control rod for accelerator p	pump 1 90503924 *	
80	Split pin)	4 3359 *	
81	Plain washer) For control	1 rod 3 260771 *	
82	Spring)	1 503925 *	
	Carburetter overhaul kit	1 507687	
	Carburetter gasket kit	1 507693	
	CARBURETTER CONVERSION KIT	1 542637 * To convert ea PA 10-5A and carburetters with revised	PA 10-6 to late types
	Carburetter overhaul kit	1 605092) For carburet	ter Conversion
	Carburetter gasket kit	1 605093) Kit RTC2038	-

^{*} NO LONGER SERVICED

FUEL SYSTEM - Carburetter, Zenith type, 21 litre Petrol
From engine suffix 'J' onwards 7:1 compression ratio
From engine suffix 'A' onwards 8:1 compression ratio

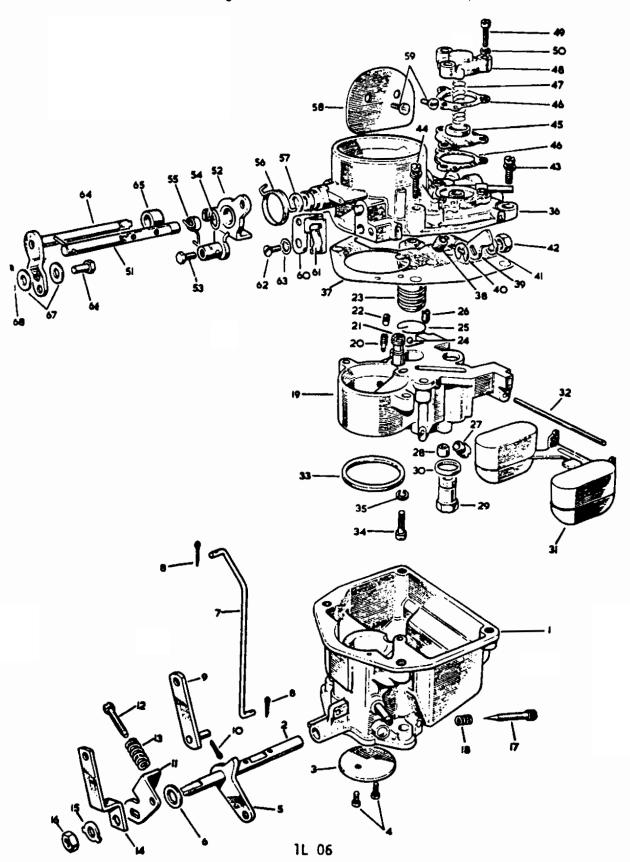


H386

PLATE


1 2 3 4 DESCRIPTION QTY, PART No. REMARKS REF. From engine suffix 'J' onwards 7:1 compression ratio From engine suffix 'A' onwards 8:1 compression ratio CARBURETTER COMPLETE 1 ERC2886 For 7:1 or 8:1 compression ratio Carburetter main body 1 601834 Throttle spindle 601835 1 3 Butterfly for throttle 601844 Special screw fixing butterfly 2 601845 5 Floating lever on throttle spindle 1 601842 6 Plain washer on spindle for floating lever 1 601843 7 Interconnecting link, throttle to choke 1 601893 8 Split pin fixing link to levers 601894 Relay lever, throttle to accelerator pump 9 1 601840 10 Split pin fixing relay lever to floating lever 1 601841 11 Throttle stop and fast idler lever 1 601837 12 Special screw 1 601846) Fixing throttle 13 Spring 90601847) stop 14 Throttle lever 601836 15 Lockwasher Fixing throttle RTC166 1 16 Special nut levers 1 601838 17 Volume control screw 1 90601848 Spring for control screw 90601849 18 1 Emulsion block 19 1 601851 For use with early type carburetter 554149 Emuslsion block 1 606319 For use with carburetter 574540 20 Pump jet (65) 7 601899 21 Pump discharge valve 1 601855 22 Plug for pump jet 1 601854 23 Piston for accelerator pump 1 601856 24 Ball for piston 1 601852 Circlip for piston 25 601853 1 26 Slow-running jet (60) 1 601897 27 Main jet (125) 1 601895 28 Enrichment jet (195) 601896 1 For use with early type carburetter 554149 Enrichment jet (150) 606318 For use with carburetter 574540 29 Needle valve (1.75) 1 601900 Special washer (2mm) for needle valve 30 1 601857 31 Float 7 601858 32 Spindle for float 1 601859 'O' ring, emulsion block to body 33 1 601850 Special screw) Fixing emulsion 1 601886 34) block to body 35 Spring washer 1 601887

FUEL SYSTEM - Carburetter, Zenith type, 21 litre Petrol
From engine suffix 'J' onwards 7:1 compression ratio
From engine suffix 'A' onwards 8:1 compression ratio

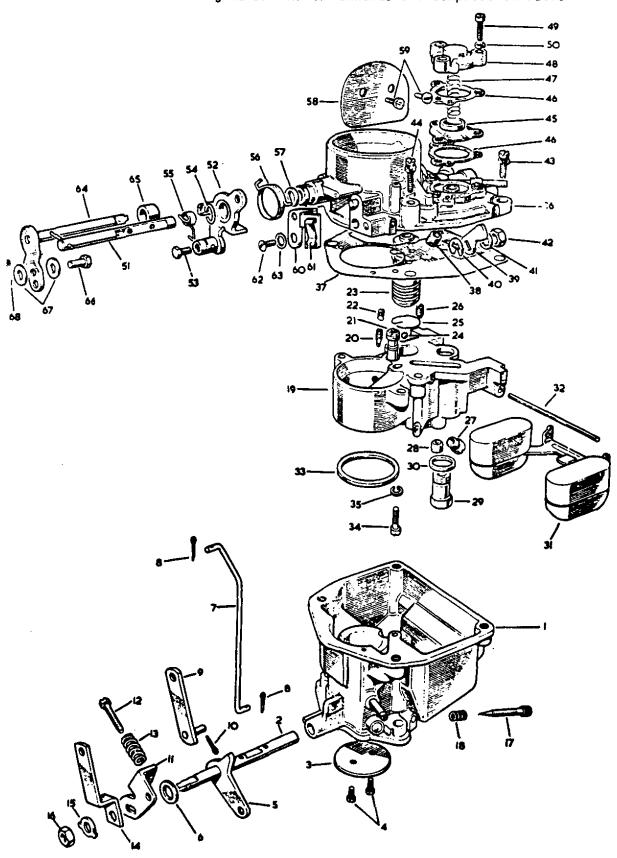

PLAT	TE 1 2 3 4	DESCRIPTION	۵r	Y. PART No. REMARKS
		om engine suffix 'J' onwards	7:1	compression ratio
	Fro	om engine suffix 'A' onwards	8:1	compression ratio
36	Top cover for carbure	tor	1	601860
37	Gasket for top cover	. cer	i	
38	Ventilation screw (3.0)) for choke	i	
39	Pump lever, internal	, , , or anone	i	
40	Retaining ring for pur	mp lever	i	
41	Shakeproof washer) Fixing	1	
42	Special nut) pump lever	1	601838
43	Screw and spring wash	er, short) Fixing top	2	601889
44	Screw and spring wash	er, long) cover to main) body	2	601888
45	Diaphragm for carbure		1	601879
46	Gasket for diaphragm		2	
47	Spring for diaphragm]	
48	Cover for diaphragm		1	601882
49		ng diaphragm	3	
50	Spring washer) cover	1 .=1.= . ¶==.=	3	
51 52	Spindle and pin for cl Lever and swivel for c		1	
53	Screw for choke lever		i	
54	Circlip fixing choke		1	
55	Spring, small) I		i	
56		lever	i	
57	Plain washer for choke		i	· · ·
58	Butterfly for choke		j	
59	Special screw fixing b	putterfly	2	601868 *
60	Bracket and clip for (1	601870
61	Clip for choke brack		1	
62		Fixing choke bracket	1	
63	Shakeproof washer)		1	•
64	Spindle and lever for		ļ	
65 66	Spacing washer for pur		ļ	
66 67		xing relay]	90601890
68		ever to Imp lever		601892 601891
00	Carburetter overhaul 1			605092
	Carburetter gasket kil		i	
	_	'INGS WHICH MAY BE ADVANTAGE	•	
	Main jet (120)		,	ENEEDS E DON += 7 000 f+
	Main jet (117.5)	·	i	605683 5,000 to 7,000 ft
	Main jet (117.5)		i	605684 7,000 to 9,000 ft 605685) 9,000 to 605687) 12,000 ft
	Slow running jet (55)		i	605687 1 12,000 ft
	Main jet (112.5)		i	605686) 12.000 to
	Slow running jet (55)		i	
				* NO LONGER SERVICED


IROUP H
FUEL SYSTEM - Air Cleaner, 21 litre Petrol

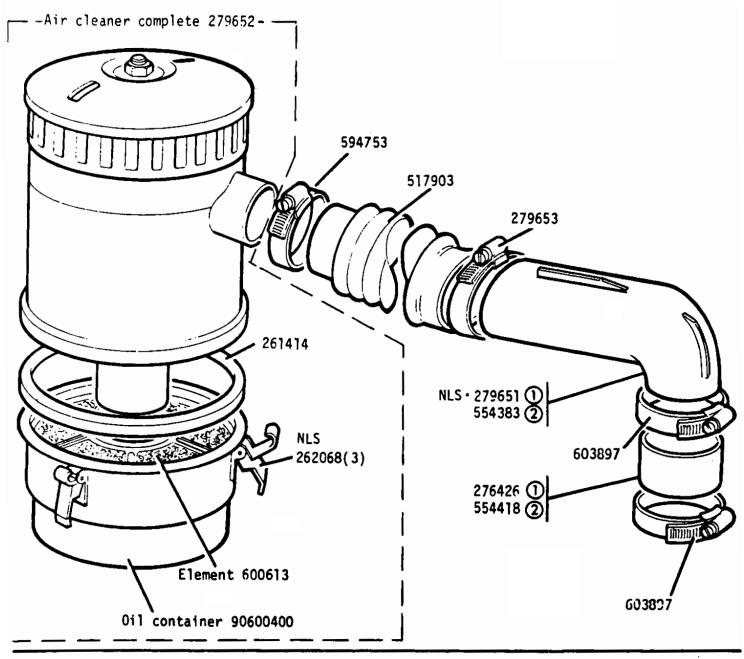

MARKS

- Fingine Suffix A to H
- Engine Suffix J onwards

GROUP H
FUEL SYSTEM - Pump 21 litre petrol

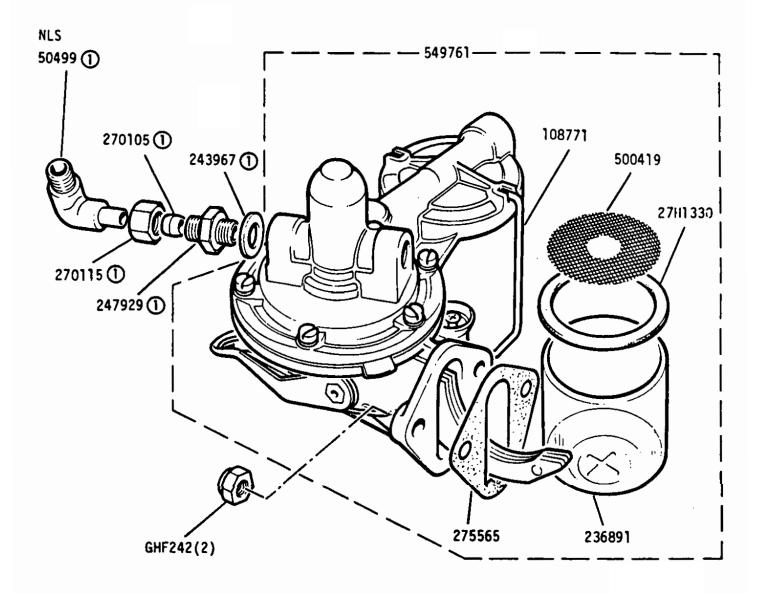


Overhaul kit for fuel pump 18G8246
Repair kit for fuel Pump 8G2039
Fuel pump is not part of Engine assembly.

① Early type fixing only

LAND ROVER


1L 08

1RE 7/A

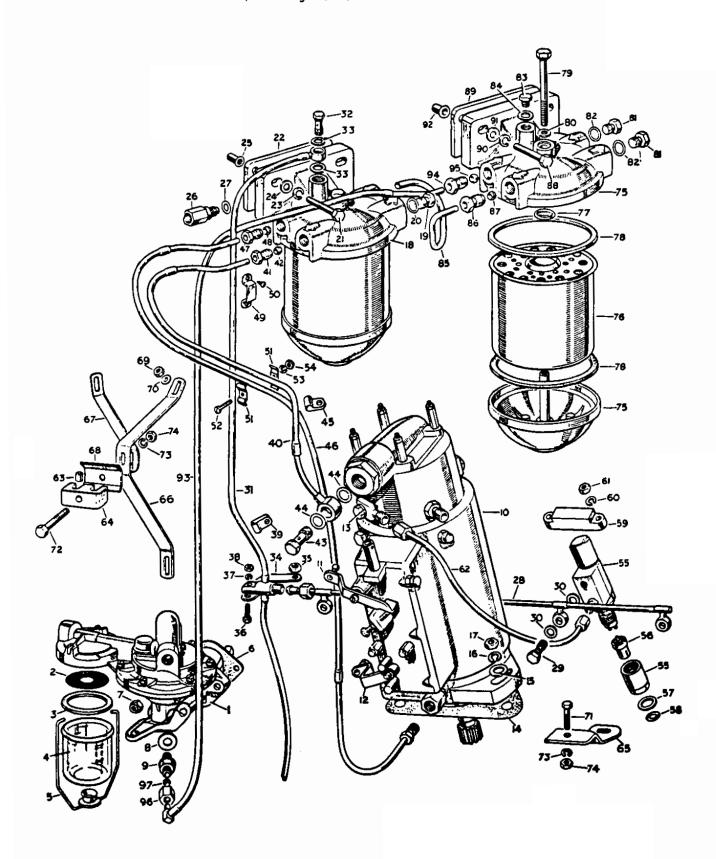

	Up to engine suffix 'd'	inciu	2146
PLATI	1 2 3 4 DESCRIPTION	aty	. PART No. REMARKS
1	FUEL PUMP, MECHANICAL	1	550324 With red diaphragm
2	Filter for bowl	i	500419 For early type pump
3	Washer for bowl	i	27H1330
4	Sediment bowl	1	236891
5	Retainer for bowl	1	
5 6		!	108771
	Joint washer, fuel pump to cylinder block	1	275565
7	Self-locking nut fixing fuel pump	2	GHF242
8	Joint washer 7 For mechanical pump		243967 Early type
9	Unioninlet and outlet	2	247929_fixing
10	DISTRIBUTOR PUMP]	564495
11	Accelerator control lever 7For	1	509009
12	Stop lever distributor		554525
	Swivel for stop lever pump	1	AAU1053
	Clamp bolt for swivel	1	AAU 1054
13	Joint washer for injection pipe, distributor		
	pump end	6	247802
	Sleeve for control lever stop screw	1	546282
	Joint washer for distributor pump	1	247212
15	Plain washer Fixing distributor	3	GHF301
16	Spring washer pump to		GHF332
17	Nut (5/16" UNF)	3	
18	FUEL FILTER	1	517682
	Element for fuel filter	i	37H1581
	Seal for element, small	i	37H575
	Seal for element, large, top	i	AAU9903
	Seal for element, large, bottom	i	AAU9902
	Special centre bolt for filter	i	522939
	Washer for centre bolt	;	522940
	Seal for centre bolt	1	37H770
10	Plug for filter	1	
			517689
21	Joint washer for plug	ı	517706 BUG05103
22	Bolt (5/16" UNF x 1½" long)	2	BH605101
	Distance plate Fixing	ļ	544389
23	Spring washer filter		GHF332
	Plain washer to dash	2	3830
25	Rivnut (5/16" UNF)	2	501224
	Non-return valve for filter	1	517707 Not required when addi-
27	Joint washer for non-return valve	1	517706 tional fuel filter is
28	Leak-off pipe complete	1	548262
29	Banjo bolt Trixing leak-off pipe	4	273521
30		8	273069
31	Fuel pipe, spill return to tank	Ĭ	509909
32	Banjo bolt Fixing spill return	ì	505805
33	Joint washerpipe to filter	ż	517976*
34		ì	521584*
35	Locknut (5/16" UNF) fixing bracket to injector	•	JE 1 JUT
	stud	2	254881
36			250961*
70	Plain washer return pipe	'n	558190
37	Spring washer to bracket on	1	
38		j	WM702001
30	Nut (2BA)	ı	RTC608

FUEL SYSTEM - Fuel Injection, 2% litre Diesel
Up to engine suffix 'J' inclusive

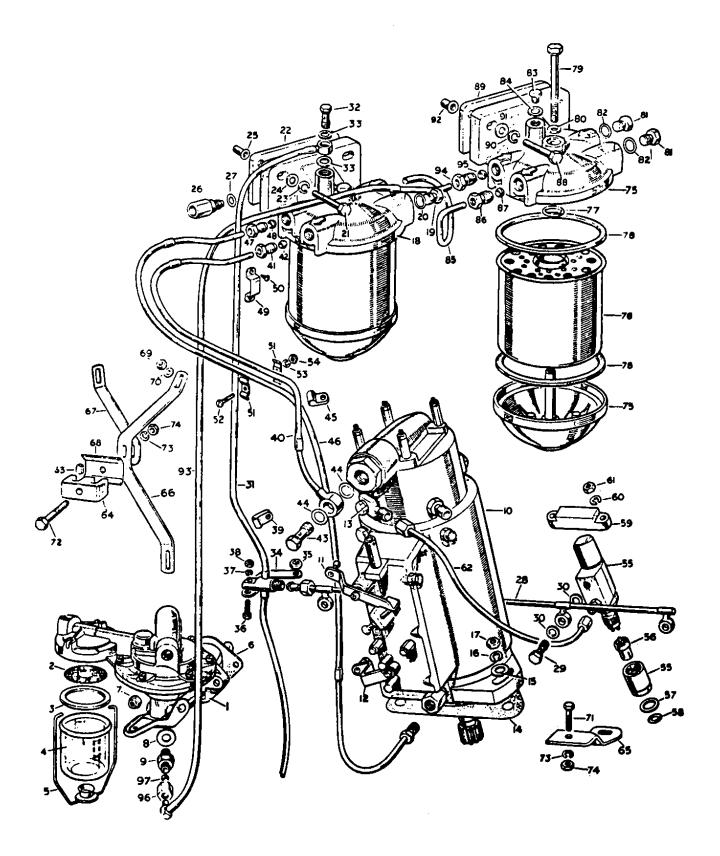


FUEL SYSTEM - FUEL INJECTION - 21 LITRE DIESEL

H. 104	Up to engine suffix in	<u>J'inc</u>	lusive		
PLATE	•				-
REF.	1 2 3 4 DESCRIPTION	QTY.	PART No.	REMARKS	
				-	
39	Clip for spill return pipe	1	525168		
	Plain washer for spill pipe clip	2			
	Fuel pipe, mechanical pump to filter	ī	552439*	٦.	
		, i	557531	•	maguimad
	Olive for fuel pipe, pump end	,	517690		required
	Nut Fixing pipe			wher	
	Olive Ito filter	1	530966		itional
	Nut Fixing pipe to	1	2/0115] filter
	Nut Fixing pipe to Olive mechanical pump	1	2/01051	fixing is	fitted
40	Fuel pipe, filter to distributor pump	1	517685	_	
41	Nut Fixing pipe	1	517690		
42	Olive Ito filter	1	530966		
43	Banjo bolt Fixing pipe to	1	275266		
44	Joint washer _distributor pump	2			
45	Clip, fixing pipe to distributor pump	ī	8885		
46	Fuel pipe, distributor pump return to filter				
47	Nut Fixing pipe to	í	517690		
		i	530966		
48	Olive _filter	i		,	
49	Clip, fixing fuel pipe to dash	-	517684*		
50	Drive screw, fixing clip	. 2	AB60803	1	
51	Double pipe clip (fixing distributor pump feed				
	_return pipes together)		243395		
52	Bolt (2BA x ½") Fixing pipes	1	234603		
53	Spring washer and	1	WM70200)]	
54	Nut (2BA) clips	1	RTC608		
•					
55	INJECTOR COMPLETE	4	9051555	2	٦
56	Nozzle for injector		247726	_	
57	Joint washer for injector, copper	4			
58	Joint washer for injector, steel	4	272474		
59	Clamping strip for injector	4	531897		ī
	Spring washer Fixing injector	8			Part
60	Durk 15/160 INE) The evilander hand	8			of
61	Nut (5/16" UNF)to cylinder head				
	Injector pipe to No.1 cylinder	1	513926		engine
	Injector pipe to No.3 cylinder	1	513928		assembly
	Injector pipe to No.4 cylinder		513929		
62	Injector pipe to No.2 cylinder	1	513927	_	1
63	Damper for injector pipe	4		Damper and	ľ
64	Shroud for damper	2	277839*	Shroud type	1
	· , -			_fixing	į.
	Clamping plate for injector pipe grommet	4	541229	7Clamp and	
	Grommet for injector pipe	4	272512	grommet type	1
	ar annual to trigulater pripa	•		fixing	1
65	Bracket for damper shroud	1	277816*	Tup to engines	1
66		i	278002*		1
	Support strap for shroud	i			
67	Steady strap for shroud		27701E	#5/10001#	J
68	Backplate for shroud	2	4//513	Not required	اد
				with clamp and	4
				grommet type	ĺ
				fixing.	J

^{*} NO LONGER SERVICED

FUEL SYSTEM - Fuel Injection, 21 litre Diesel Up to engine suffix 'J' inclusive

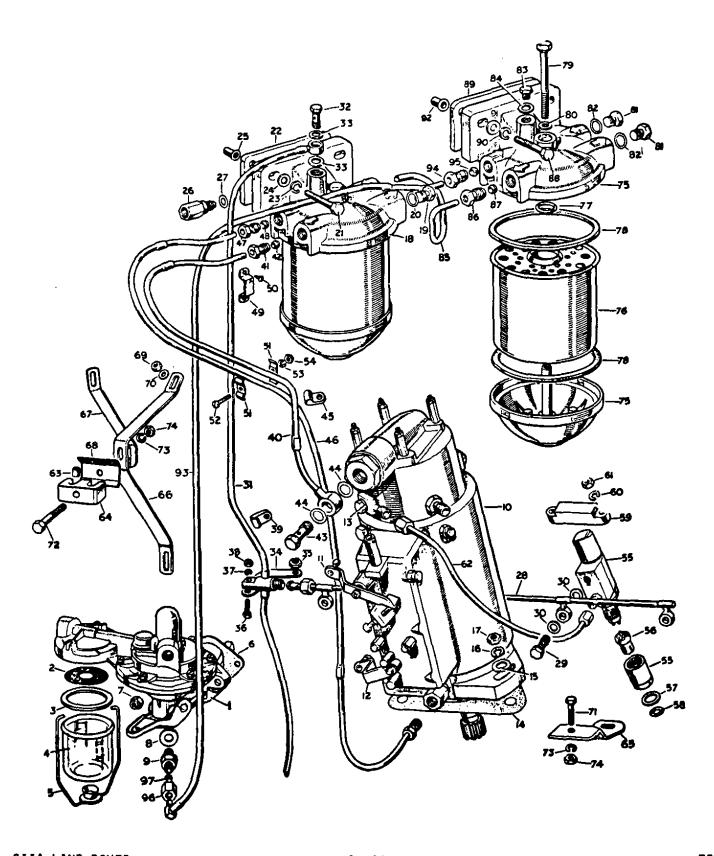

QTY. PART No.

REMARKS

DESCRIPTION

1 2 3 4

PLATE

REF.

```
Locknut (5/16" UNF) Trixing straps to
                                                                NT605061
69
                             Jinjection studs
                                                                4047
70
      Plain washer
      Bolt, front (5/16" UNF x 1½") Fixing shrouds Bolt, rear (5/16" UNF x 1½") and dampers to
71
                                                             1
                                                                256220 Up to engines
72
                                                             1
                                                                GHF104 numbered
                                        backplate, strap
73
      Spring washer
                                                             2
                                                                GHF332 27105814
                                                                                           Part
      Nut (5/16" UNF)
74
                                       Jand support brkt
                                                             2
                                                                GHF201
                                                                                           of
      Bolt (5/16" UNF x 11") Fixing shrouds
                                                             2
                                                                BH605101 From
                                                                                           engine
                                                             2
      Spring washer
                                  and dampers
                                                                GHF332 engines
                                                                                           assembly
                                                                GHF201 numbered
      Nut (5/16" UNF)
                                 _to backplate
                                                             2
      Bolt (1" UNF x 9/16") Fixing clamping
                                                             2
                                                                255205 27105815
                                                             2
      Spring washer
                               plates and
                                                                GHF331 onwards
      Nut (}" UNF)
                               Igrommets
                                                             2
                                                                GHF 200
      Bolt (1 UNF x 1") Fixing bracket
                                                             1
                                                                255204
                                                                GHF300 Up to engines
      Plain washer
                             for damper shroud
                                                             1
                             to oil
                                                             1
                                                                GHF331 numbered
      Spring washer
      Nut (1" UNF)
                                                                GHF200_27105814
                            ∐filler pipe
                                                             1
      ADDITIONAL FUEL FILTER, COMPLETE ASSEMBLY
                                                                522756*
75
        Fuel filter
                                                             1
                                                                517682*
76
           Element for fuel filter
                                                             1
                                                                37H1581
                                                             1
77
           Seal for element, small
                                                                37H575
78
           Seal for element, large, top
Seal for element, large, bottom
                                                             1
                                                                AAU9903
                                                                AAU9902
           Special centre bolt for filter
79
                                                                522939
80
           Washer for centre bolt
                                                                522940
           Seal for centre bolt
                                                             1
                                                                37H770
81
        Plug for fuel filter
                                                             2
                                                                517689
        Joint washer for plug
Plug for fuel filter, top, leak-off
82
                                                                517706
83
                                                                517855
84
        Joint washer for leak-off plug
                                                                517976*
        Transfer pipe, extra filter to basic filter
Nut Fixing pipe
Olive to filter
85
                                                             1
                                                                544391*
                                                                                        Standard on
86
                                                             2
                                                                517690 Early type
                                                                                     Export models
87
                                                             2
                                                                530966_fixing
                                                                                     Optional
         Bolt (5/16" UNF x 11")
                                                             2
88
                                                                BH605101
                                                                                     equipment on
89
                                   Fixing
                                                                544389
                                                                                     Home models
        Distance plate
90
                                                             2
                                                                GHF332
         Spring washer
                                   filter
91
                                                             2
        Plain washer
                                   to dash
                                                                3830
         Rivnut (5/16" UNF)
92
                                                                501224
93
         Fuel pipe, mechanical pump to twin filters
                                                             1
                                                                552438
         Olive for fuel pipe, pump end
                                                             1
                                                                557531
94
                Fixing pipe
                                                             ١
                                                                517690
         Nut
95
         Olive Ito filter
                                                             1
                                                                530966
96
                                                             1
                                                                270115 Early type
         Nut
                  Fixing pipe to
                                                                270105 fixing
97
         Olive _mechanical pump
                                                                8G8844
      Repair kit for mechanical fuel pump
                                                            1
      Overhaul kit for mechanical fuel pump
                                                                8G8845
```

^{*} NO LONGER SERVICED

FUEL SYSTEM - Fuel Injection, 21 litre Diesel From engines suffix 'K' onwards


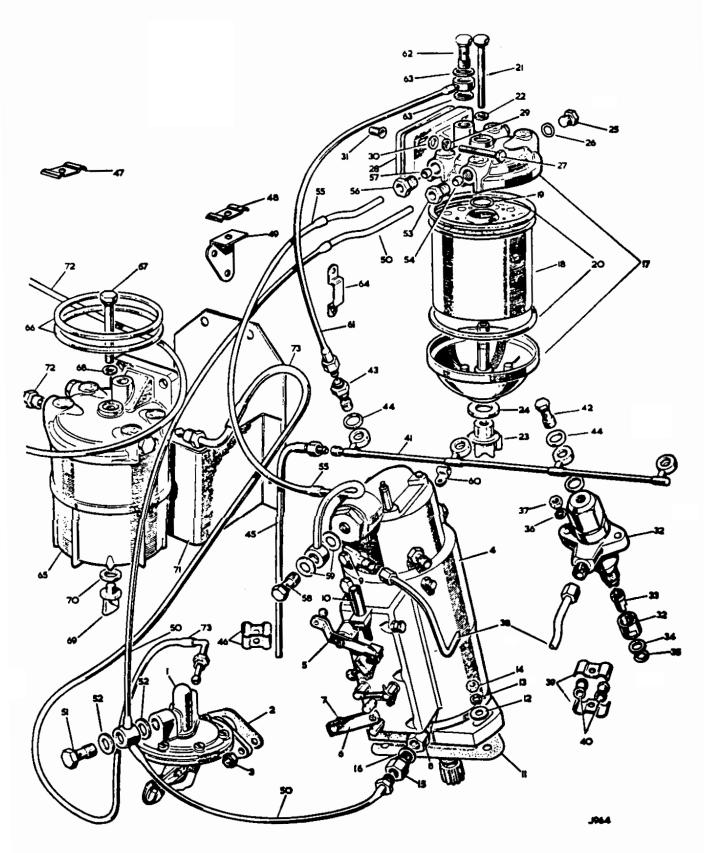


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1 2	FUEL PUMP, MECHANICAL Joint washer, fuel pump to cylinder block	1 563146 1 275565
3	Self-locking nut, fixing fuel pump	2 GHF 242
4 5 6 7	DISTRIBUTOR PUMP Accelerator control lever Stop lever Swivel for stop lever Clamp bolt for swivel	1 564495 1 509009 1 90568525* 1 AAU1053 1 AAU1054
8 9	Union, fuel pipe connection Joint washer for injection pipe, distributor	1 90566617
11 12 13 14 15	pump end Sleeve for control lever stop screw Joint washer for distributor pump Plain washer Fixing distributor Spring washer pump to Nut (5/16" UNF) cylinder block Non-return valve for distributor pump	6 247802 1 546282 1 247212 3 2920 3 GHF332 3 GHF201 1 ERC3788
16 17 18 19 20 21 22 23 24 25	Seal for element, small Seal for element, large, top Seal for element, large, bottom Special centre bolt for filter	1 517706 1 563190 1 90517711 1 37H575 1 AAU9903 1 AAU9902 1 522939 1 522940 1 37H770 1 605012 1 605013 2 517689
26 27 28 29	Joint washer for plug Bolt (5/16" UNF x lg" long) Distance plate Spring washer Plain washer Fixing filter to dash	2 517705 2 255029 1 544389 2 GHF332 2 3830 2 501224
35 36 37	Joint washer for injector, copper Joint washer for injector, steel Spring washer Fixing injectors to Nut (5/16" UNF) Cylinder head studs Injector pipe to No.1 cylinder Injector pipe to No.3 cylinder Injector pipe to No.4 cylinder Injector pipe to No.2 cylinder	4 564332 4 247726 4 247179 4 272474 8 GHF332 8 GHF201 1 563165 1 563167 1 563168 1 563166 4 541229
40		4 272512 2 255205 2 GHF331 2 GHF200


FUEL SYSTEM - Fuel Injection, 2½ litre Diesel From engine suffix 'K' onwards

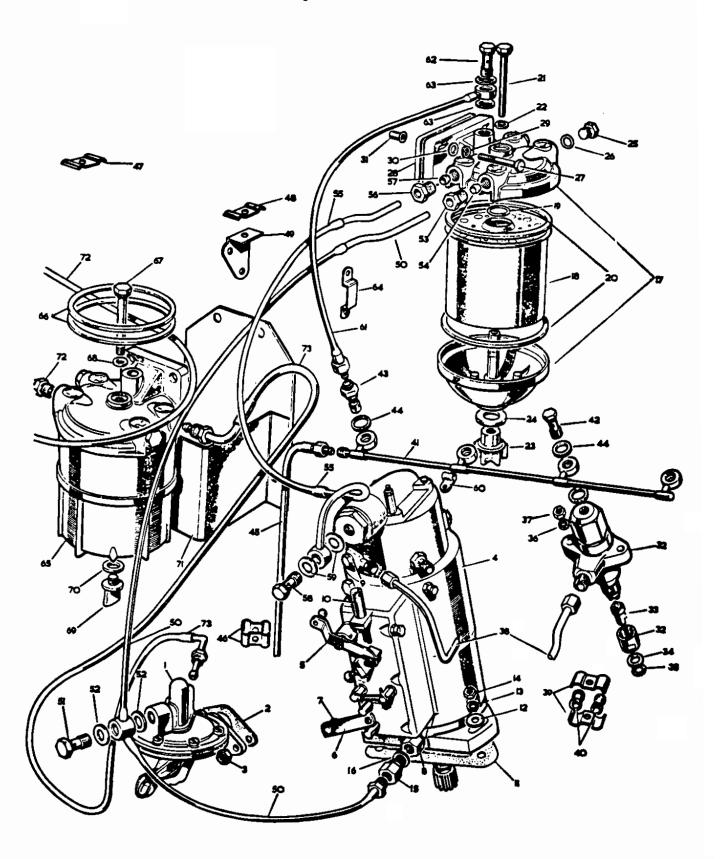

		From engine Surrix		Uriwar us	
PLATE REF.		CRIPTION	ατν.	. PART No. REMARKS	
49					
	Leak off pipe		1	ERC4480	
42	Banjo bolt for No 1, 2 an		3	273521	
	Banjo union for No 4 inje		1	563195	
44	Joint washers for banjo b	ooltoff pipe to injecto	8 ors	273069	
45	Fuel pipe, leak off retur	n to tank	1	564907 88 and 109	
	Fuel pipe, leak off retur		ì	564962 109 Station Wagon	
	Fuel pipe, tank to mechan	ical pump	í	564898 88 and 109 Except when	
	Fuel pipe, tank to mechan		i	552436 109 Station sedimentor is	
	raci pipe, calle co licellat	i car framp	•	Wagonfitted	
46	Double clip		2	243395	
		mping feed and return	้า	234603	
		es together	j	WM702001	
	Nut (2BA)	es together	i	RTC608	
	Double clip 7		i	509412 88 and 109	
		l and return pipes	i	72626	
	Double clip to chassis		3	5094157109 Station Wagon	
	Drive screw	314611611661	3	7262E	
48	Double clip for feed and	return nines	ĭ	509412 7	
49	Bracket for clin	recuir proes	i	270297*	
,,,		ixing clip and	3	234603 Alternative to	
		racket to	ĭ	3902 41lines below	
		chassis crossmember	3	WM702001	
	Nut (2BA)	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	3	RTC608	
	Clip for fuel pipe		_	90514721	
	Bolt (1" UNF x 1 long)	1Fixing clin	i	255206 Alternative	
		to No 3 crossmember	i	GHF331 to 6 lines above	
	Spring washer Nut (1" UNF)	l co no o ci ossinembei	i	GHF200	
	Double clip	4	i	509412 =	
	Bracket for clip	Fixing pipes to	j	NRC76	
	Bolt (2BA x 1 long)	check strap mounting	i	237121 109 Station Wagon	
	Spring washer	in chassis	i	WM702001 [
	Nut (2BA)		i	RTC608	
	Fuel pipe, mechanical pum	p and distributor pump	•		
	to filter	F	1	564899	
51		xing fuel pipe	Ì	9056 8489	
52		mechanical pump	2	231576	
53	Nut Fixing p		ī	517690	
54	Oliveto filte	r	1	530966	
55	Fuel pipe, filter to dist		1	564902	
56		xing pipe	1	517690	
57		filter	1	530966	
58	Banjo bolt	Trixing pipe to	1	275266	
59	Joint washer	_distributor pump	2	275265	
60		xing fuel	1	8885	
	Spring washer pi	re to	1	WM702001	
	Nut (10 UNF)	stributor pump	1	HN2005	

^{*} NO LONGER SERVICED

FUEL SYSTEM - Fuel Injection, 21 litre Diesel From engine suffix 'K' onwards

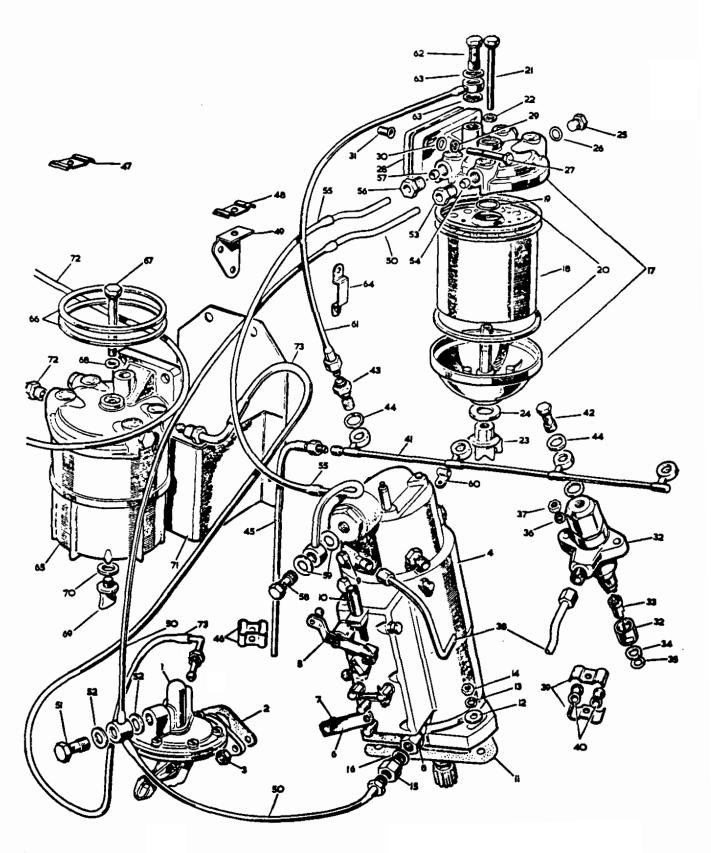

SIIA LAND ROVER


GROUP H

FUEL SYSTEM - FUEL INJECTION 21 LITRE DIESEL From engine suffix 'K' onwards


PLATI	E 1 2 3 4 DESCRIPTION	<u>an</u>	. PART No. F	REMARKS	
61	Fuel pipe, filter to leak off pipe	1	564905		
62	Banjo bolt Fixing fuel pipe	1	13H1515		
63	Joint washer	* 2	517976		
64	Double clip Trixing fuel pipes	* 1	517684		
	Drive screw	2	AB610051		
	SEDIMENT COMPLETE ASSEMBLY	1	605560	88 and 109	
	SEDIMENT COMPLETE ASSEMBLY	* 1	90605561	109 Station Wagon	
65	Sedimentor	1	562748	1	
66	Seal for sedimentor, top	1	AAU9903	į	
	Seal for sedimentor, bottom	1	AAU9902	į.	
67	Special centre bolt for sedimentor	1	522939	1	
68	Washer for centre bolt	1	522940		
	Seal for centre bolt	1	37H770		
69	Drain plug for sedimentor	1	605010		
70	Rubber seal for drain plug	1	605011		
71	Mounting bracket for sedimentor	1	569585	Stan	dard
	Set screw (¾" UNF x 1" long)∏Fixing sedime	entor 2	GHF105	on E	xport
	Plain washer to		WB110061	mode	ls.
	Spring washer mounting brace		GHF333	Opti	onal
	Nut (all UNF)	2	GHF202	equi	pment
	Screw (10 UNF x ₹" long)	4	78384	on H	ome
	Plain washer Fixing mounti	ing 4	WC702101	mode	ls:
	Spring washer bracket to ch	nassis 4	WM702001	1	
	Rivnut (10 UNF)	4	532848		
72	Fuel pipe, tank to sedimentor	1	56 49 36	88 and 109	
	Fuel pipe, tank to sedimentor	1	564963	109 Station Wagon	
73	Fuel pipe, sedimentor to mechanical pump	1	564937		
/3	Double clip Trixing fuel pipe to		509412	{	
	Drive screw	i	72626	ٳ	
	Repair kit for mechanical fuel pump	1	8G8844	-	
	Overhaul kit for mechanical fuel pump	1	8G8845		

^{*} NO LONGER SERVICED


GROUP H
FUEL SYSTEM - Air Cleaner, 2% litre Diesel

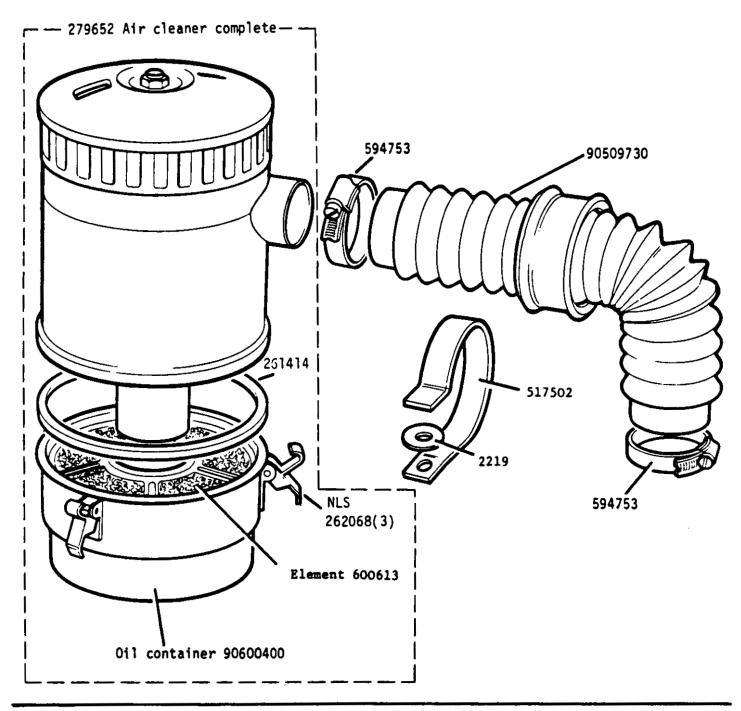

PEMARKS

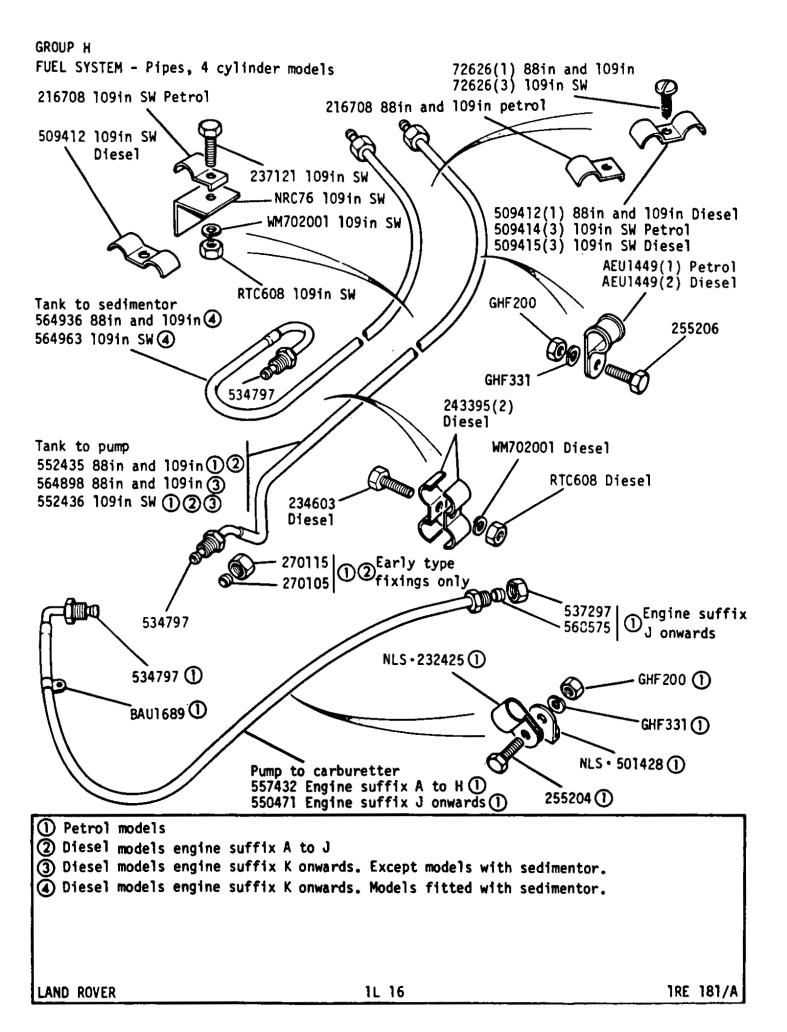


GROUP H
FUEL FILLER - All 4 cylinder models, except 109" Station Wagon

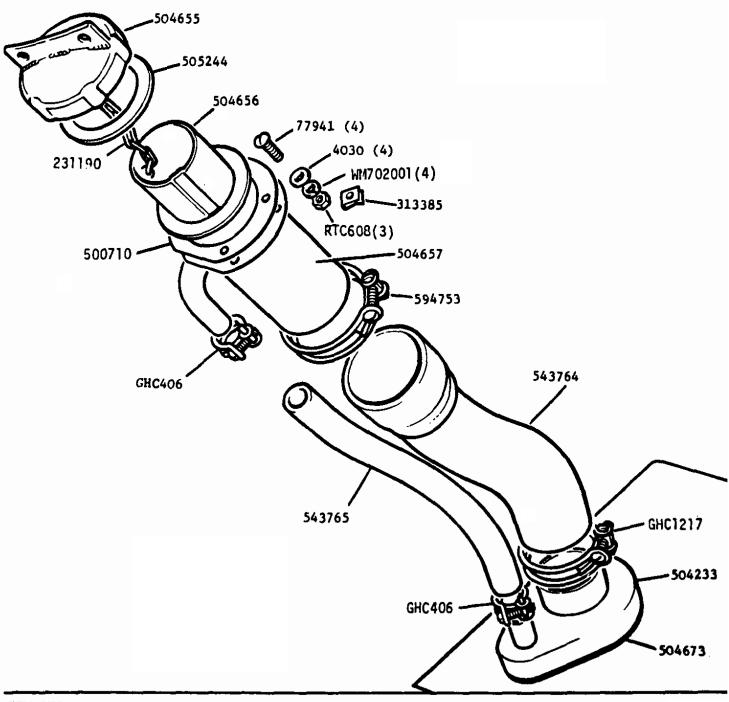

REMARKS

Telescopic filler tube complete 277259


GROUP H
FUEL FILLER - 4 cylinder, 109" Station Wagon

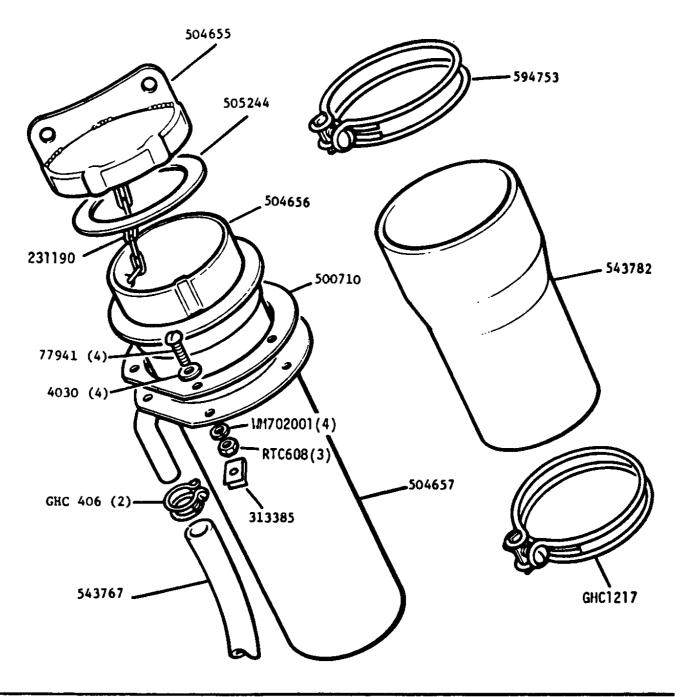


REMARKS

Telescopic filler tube complete 277259

GROUP H
FUEL TANK - All 4 cylinder models except 109in Station Wagon

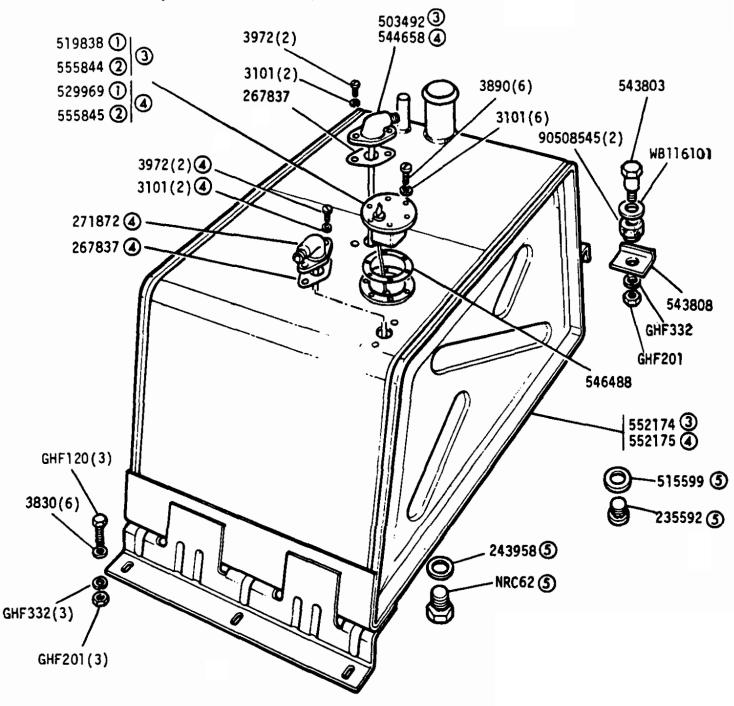

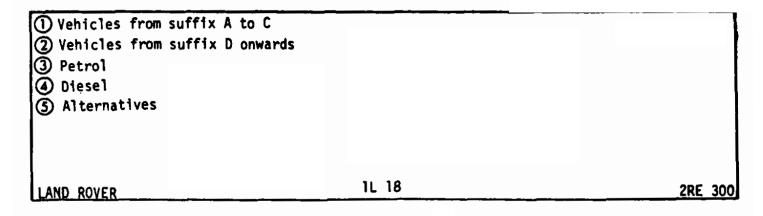


GROUP H FUEL TANK - 4 cylinder, 109" Station Nagon 3972(2) ① 3972(4) ② 3101(2)① 3101(4)② 267837(1) ① 267837(2) ② BH606201(2) 500432 ① 3890 (6) 2265 3101 (6) NLS · 544674 (2) 543766 -90519875 Suffix A to C 555846 Suffix D onwards 1 GHC406 (2) •529970 Suffix A to C 529970 Suffix A to C O .NLS. 555847 Suffix D onwards 501070 (2 256040 (2) 500446 (2) 500818 500447 (4) 3109 (2) 3933 (2) 500588 (3) 90508545 (2) GHF223(2) 90508544 (2) GHF333(2) 515599 --GHF202(2) 235592 NRC5830 ①

<u>REMARKS</u>

- ① Petrol
- ② Diesel

NRC5829 2

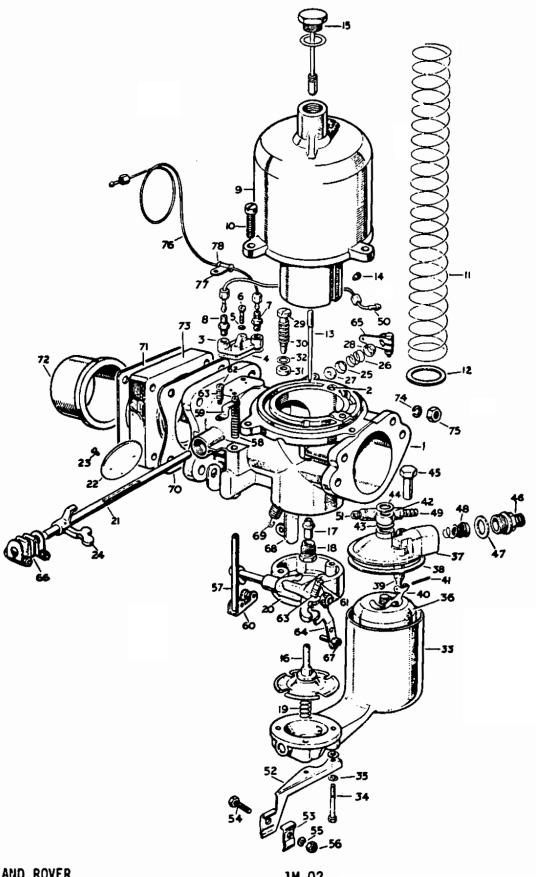

CARBURETTER (HD6) 1 Carburetter body 3 Adaptor, ignition and weakening device 4 Gasket for adaptor 5 Shakeproof washer) Fixing 6 Screw) adaptor 7 Union for ignition pipe 8 Union for economiser pipe 9 Suction chamber and piston complete 10 Special screw fixing suction chamber 11 Spring for piston (yellow) 12 Thrust washer for suction chamber 13 Needle, SS 14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running, rubber 31 Brass washer for slow-running	9051245 504082 AUC2014 601594 AUC2175 108364 245295	
Adaptor, ignition and weakening device Gasket for adaptor Shakeproof washer) Fixing Screw) adaptor Union for ignition pipe Union for economiser pipe Suction chamber and piston complete Spring for piston (yellow) Thrust washer for suction chamber Needle, SS Special screw fixing needle Oil cap complete Jet complete Jet bearing Jet screw Jet spring Jet screw Jet spring Jet screw Jet spring Throttle spindle Throttle spindle Throttle butterfly Screw for throttle butterfly Throttle stop Taper pin for throttle stop lever Spring for throttle spindle gland Throttle stop Taper pin for throttle spindle, langite Retainer cap for gland washer Slow-running adjusting valve Gland spring for slow-running, rubber	504082 AUC2014 601594 AUC2175 108364	8
Adaptor, ignition and weakening device Gasket for adaptor Shakeproof washer) Fixing Screw) adaptor Union for ignition pipe Union for economiser pipe Suction chamber and piston complete Spring for piston (yellow) Thrust washer for suction chamber Needle, SS Special screw fixing needle Oil cap complete Jet complete Jet bearing Jet screw Jet spring Jet screw Jet spring Jet screw Jet spring Throttle spindle Throttle spindle Throttle butterfly Screw for throttle butterfly Throttle stop Taper pin for throttle stop lever Spring for throttle spindle gland Throttle stop Taper pin for throttle spindle, langite Retainer cap for gland washer Slow-running adjusting valve Gland spring for slow-running, rubber	504082 AUC2014 601594 AUC2175 108364	
4 Gasket for adaptor 5 Shakeproof washer) Fixing	AUC2014 601594 AUC2175 108364	
5 Shakeproof washer) Fixing 6 Screw) adaptor 2 7 Union for ignition pipe * 1 8 Union for economiser pipe	601594 AUC2175 108364	
6 Screw) adaptor 7 Union for ignition pipe	108364	
7 Union for ignition pipe 8 Union for economiser pipe 9 Suction chamber and piston complete 10 Special screw fixing suction chamber 11 Spring for piston (yellow) 12 Thrust washer for suction chamber 13 Needle, SS 14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running, rubber		l
8 Union for economiser pipe 9 Suction chamber and piston complete 10 Special screw fixing suction chamber 11 Spring for piston (yellow) 12 Thrust washer for suction chamber 13 Needle, SS 14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running, rubber	245295	
9 Suction chamber and piston complete 10 Special screw fixing suction chamber 11 Spring for piston (yellow) 12 Thrust washer for suction chamber 13 Needle, SS 14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running, rubber		
Il Spring for piston (yellow) Ithrust washer for suction chamber Il Needle, SS Il Special screw fixing needle Il Oil cap complete Il Jet complete Il Jet bearing Il Jet screw Il Jet spring Il Jet housing complete Il Throttle spindle Il Throttle butterfly Il Screw for throttle butterfly Il Screw for throttle stop lever Il Throttle stop I Taper pin for throttle stop lever Il Spring for throttle spindle, brass Il Spring for throttle spindle, langite Il Retainer cap for gland washer Il Spring for slow-running Il Gland washer for slow-running Il Gland washer for slow-running, rubber	274954	
Thrust washer for suction chamber Needle, SS Special screw fixing needle Soil cap complete Jet complete Jet screw Jet spring Jet spring Jet spring Jet housing complete Throttle spindle Throttle butterfly Screw for throttle butterfly Taper pin for throttle stop lever Signand washer for throttle spindle, brass Spring for throttle spindle, brass Spring for throttle spindle, langite Retainer cap for gland washer Slow-running adjusting valve Gland washer for slow-running Jana Screw in the stow-running in slow-runber Jana Signand washer in slow-running in slow-rubber	AUC2175	
Needle, SS 14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running 31 Gland washer for slow-running, rubber	AUC1167	
14 Special screw fixing needle 15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop		
15 Oil cap complete 16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop	245292 NUC2057	,
16 Jet complete 17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop	AUC 2057 GSU 320	
17 Jet bearing 18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running, rubber 1	AUC 8155	,
18 Jet screw 19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop	AUC 2001	
19 Jet spring 20 Jet housing complete 21 Throttle spindle 22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop	AUC 2002	
20 Jet housing complete	AUC 2006	
21 Throttle spindle	605162	•
22 Throttle butterfly 23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running 31 Gland washer for slow-running, rubber	512459	
23 Screw for throttle butterfly 24 Throttle stop Taper pin for throttle stop lever 25 Gland washer for throttle spindle, brass 26 Spring for throttle spindle gland 27 Gland washer for throttle spindle, langite 28 Retainer cap for gland washer 29 Slow-running adjusting valve 30 Gland spring for slow-running 31 Gland washer for slow-running, rubber	600351	
Throttle stop Taper pin for throttle stop lever Sland washer for throttle spindle, brass Spring for throttle spindle gland Gland washer for throttle spindle, langite Retainer cap for gland washer Slow-running adjusting valve Gland spring for slow-running Gland washer for slow-running, rubber	AUC1358	}
25 Gland washer for throttle spindle, brass		
26 Spring for throttle spindle gland * 2 27 Gland washer for throttle spindle, langite * 2 28 Retainer cap for gland washer * 2 29 Slow-running adjusting valve 1 30 Gland spring for slow-running 1 31 Gland washer for slow-running, rubber 1		
27 Gland washer for throttle spindle, langite		
28 Retainer cap for gland washer * 2 29 Slow-running adjusting valve 1 30 Gland spring for slow-running 1 31 Gland washer for slow-running, rubber 1		
29 Slow-running adjusting valve 30 Gland spring for slow-running 1 31 Gland washer for slow-running, rubber 1		
30 Gland spring for slow-running 1 31 Gland washer for slow-running, rubber 1		
31 Gland washer for slow-running, rubber	AUC 2028	
	AUC 2027	
32 Brass washer for slow-running	AUC 2029	
	AUC2030	,
33 Float chamber	6993	n
34 Bolt) Fixing 4	AUC2110 601594	,
33 Shakepi oo washel ji loo chamba	AUC1123	3
36 Float 1 37 Lid for float chamber * 1	10025	,
38 Joint washer for float chamber lid		
39 Needle valve and seat	GSU551	
40 Lever for float	GSU551 GSU102	5
41 Pin for lever	GSU551 GSU102 AUD2285	2

[@] All items on this page up to engines numbered 34500469B, 34600024A

^{*} NO LONGER SERVICED

FUEL SYSTEM - Carburetter, SU type, 2.6 litre Petrol


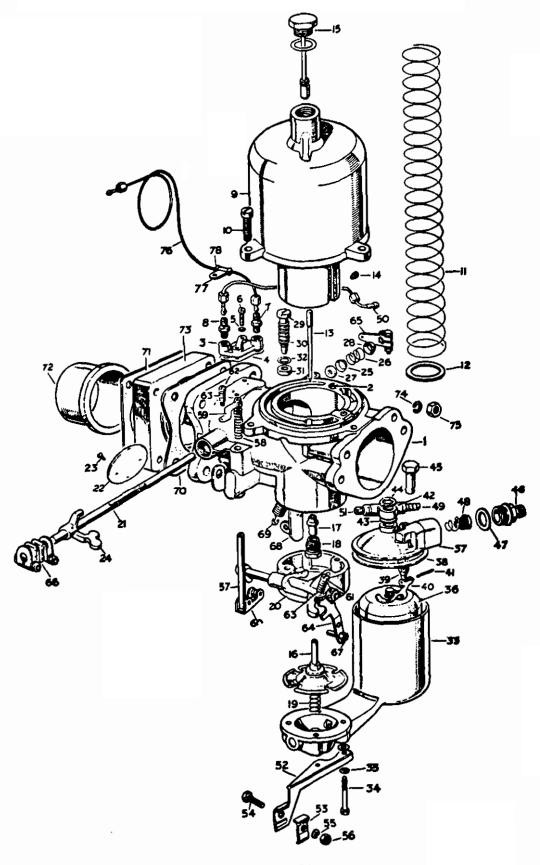


PLATE REF.	1 2 3 4 DESCRIPTION	QTY.	PART No. R	EMA RKS
42	Banjo)	* 1	245279	@See footnote for applicability
43	Fibre washer for banjo) On	1	AUC1928	
44	Aluminium washer for banjo) float	1	AUC1557	
45	Cap nut fixing banjo) chamber	1	5832	
46	Double-ended union for carburetter	* 1	245278	
47	Washer for union	1	232006	
48	Filter and spring for carburetter body	1	AUC2139	
49	Economiser union for rubber tube	*]	245258	
50	Pipe for economiser	* 1	512460	
51	Union for economiser pipe	1	245266	
57	Sliding rod, roller and cam shoe	1	536796	
58	Spring for sliding rod	1	274979	
59	Top plate	1	274980	
61	Stop screw, bottom	*]	601521	
62	Stop screw, top	* 1	601521	
63	Spring for stop screw	2	AUC2451	
64	Cold-start lever	* 1	513991	
65	Lever for throttle return spring	*]	501374	
	Bolt (2BA x ⅓")) Fixing lever	*]	250961	
	Spring washer) to throttle]	WM702001	•
	Nut (2BA)) spindle	1	RTC608	
	Throttle lever for carburetter	*]	505796	
	Bolt (2BA x l")) Fixing lever	*]	250961	
	Spring washer) to carburetter]	WM702001	
	Nut (2BA)) spindle	Ţ	RTC608	
	Ball end for carburetter lever]	273964	
	Spring washer) Fixing	1	WM702001	
	Nut (2BA)) ball end	1	RTC608	
68	Bracket for throttle return spring	*]	505787	
69	Throttle return spring	j	505786	
	Joint washer for carburetter]	511690	
71	Joint washer for distance piece	Ţ	511652	0.0
72	Liner for manifold	1	505612	@ See footnote for
70	Distance wise for southwestern	,	505613	applicability
73	Distance piece for carburetter	Į.	505613	
74 75	Spring washer) Fixing carburetter and distance	4	GHF332	
75 76	Nut (5/16" UNF)) piece to cylinder head	4	GHF201	
76	Suction pipe complete	* 1	501769	
77 78	Clip for suction pipe) On Rubber grommet for clip) engine	*]	275037 214229	
/0	Rubber grommet for clip) engine	ı	614663	

[@] All items on this page up to engines numbered 34500469B, 34600024A

^{*} NO LONGER SERVICED


FUEL SYSTEM - Carburetter, SU type, 2.6 litre Petrol

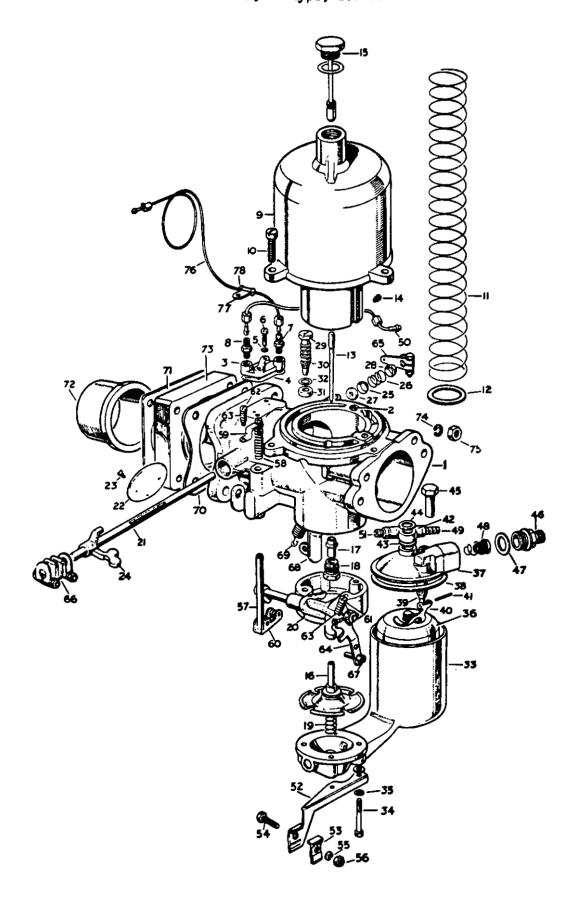

REF.

TE . 1 2	3 4	DESCRIPTION	QTY.	. PART No. REMARKS	
St Join Lock Supp Plai Spri Nut Clip Bolt Nut Econ Adap Join Clip Clip	ud) For ud) adapting pin tort for on washer (5/16" Ul (10 UNF) comiser hotor for ot washer fixing here is to the comiser hotor for ot washer fixing here is to the comiser hotor for ot washer fixing here is to the comiser hotor for ot washer fixing here is to the comiser hotor for ot washer fixing here.	for adaptor for cold start cable cold start cable) Fixing adaptor r) and support NF)) to carburetter) Fixing cold start x 3")) cable to	1 1 1 1 2 2 1 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 2 2 1 1 1 1 1 2 2 1 1 1 1 1 1 2 2 1	GHF201 41379 257017 257023 557694 242319* 232039 546017* 50301 *	
	~ · · · · · · · · · · · · · · · · · · ·	Judnes nie	•	GSU524	

^{*} NO LONGER SERVICED

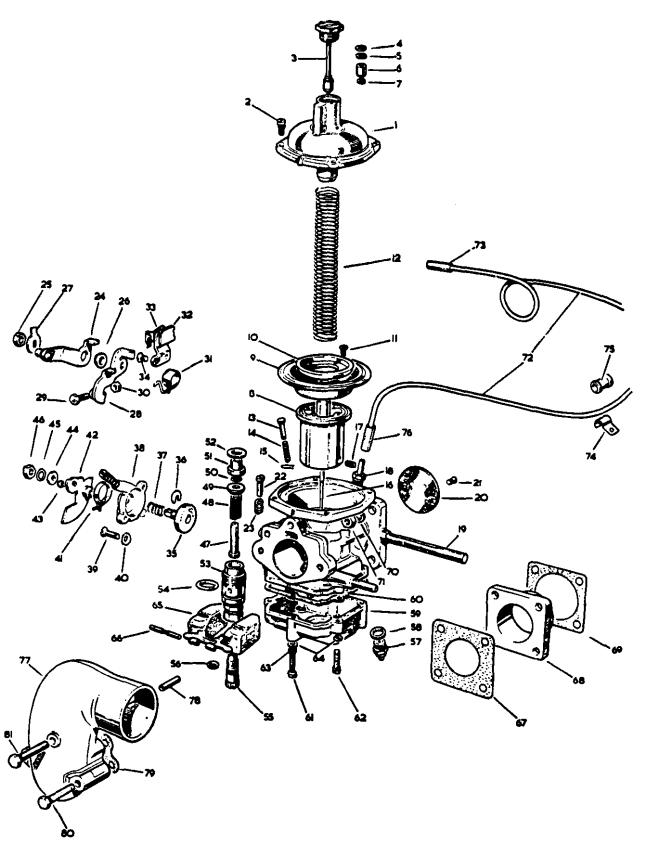


J960

PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
	CARBURETTER COMPLETE	1 598110 Carburetter and fittings
1	Top cover for carburetter	1 605846 are not included in engir
2	Special screw and washer fixing top cover	4 605847 assembly
3	Damper and oil cap assembly	1 605848
4	Special washer, upper	1 605849*
5	Special washer, lower	1 605856*
5 6	Bush for damper	1 605850*
7	Retaining ring for damper	1 90605851
8	Air valve, shaft and diaphragm assembly	1 605844
9	Diaphragm	1 JS499
10	Retaining ring for diaphragm	1 605842
11	Special screw fixing retaining ring	4 605843
12	Return spring for air valve	1 60 6486
13	Lifting pin for air valve	1 605820
14	Spring for lifting pin	1 605821
15	Spring clip for lifting pin	1 605822
16	Metering needle	<u>1</u> 606487
17	Locking screw for metering needle	1 605845
18	Ignition adaptor	1 605793
19	Throttle spindle	1 605794
20	Butterfly for throttle	1 605800
21	Special screw fixing butterfly	2 605801
22	Throttle stop screw	1 605816
23	Spring for stop screw	1 605817
24	Throttle lever	1 605795
25	Special nut) Fixing	1 605799
26	Special washer) throttle	1 605797
27	Tab washer) levers	1 RTC162
28	Throttle stop and fast-idle lever	1 605796
29	Special screw	1 605818
30	Locknut For throttle stop	1 512287 *
31	Throttle return spring	1 605802
32	Bracket and clip for choke cable	1 605813
33	Clip for choke bracket	1 516962

^{*} NO LONGER SERVICED

FUEL SYSTEM - Carburetter, Zenith type, 2.6 litre Petrol

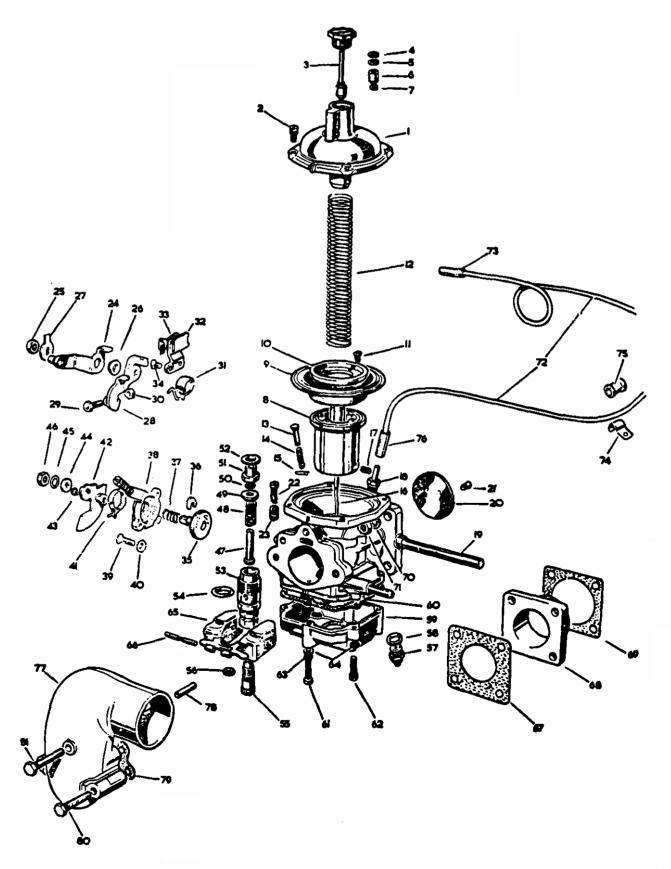

J960

PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
34	Special screw fixing choke bracket	1 605815
35	Cold start spindle	1 605804
36	Special washer for starter spindle	1 605806
37	Cold start spring	1 605805
38	Cover for cold start	1 605803
39	Special screw) Fixing	2 605811
40	Shakeproof washer) cover	2 90605812
41	Return spring for cam lever	1 605809
42	Cam lever for cold start	1 605808
43	Clamping screw for cam lever swivel	1 605807
44	Spacing washer Fixing cam	1 605810
45	Shakeproof washer lever to cold	1 601877
46	Special nutstart spindle	1 601838
47	Jet orifice	1 605827 1 605828
48	Spring	1 605826
49	Guide bush 'O' ring For jet orifice	1 RTC165
50		1 607815
51	Bush	1 512319
52	Special washer	1 605830
53 54	Carrier for jet orifice 'O' ring for carrier	1 12882
54 55	Adjusting screw for jet orifice	1 512307
56	10' ring for adjusting screw	1 512308
57	Needle valve (1.75mm)	1 AAU1484 Late type
58	Washer for needle valve	1 605852* For use with early type 2.22 mm needle valve
	Washer for needle valve	1 606301 For use with late type 1.75 mm needle valve
59	Float chamber	1 605836
60	Gasket for float chamber	1 605835
61	Special screw, long	4 605837
62	Special screw, short Fixing	2 605838
63	Spring washer float	6 605839
64	Plain washer chamber	6 605840
65	Float and arm	1 605833
66	Spindle for float	1 605834
	Gasket kit for carburetter	1 605857
	Overhaul kit for carburetter	1 606098
	Alfiliate bia idi amparadan	

^{*} NO LONGER SERVICED

FUEL SYSTEM - Carburetter, Zenith type, 2.6 litre Petrol

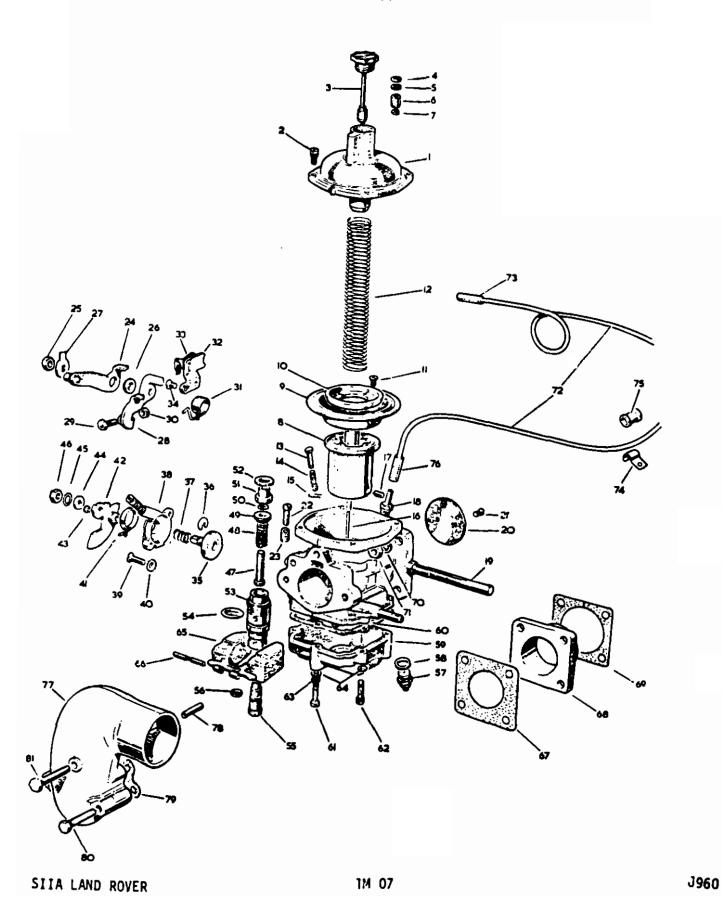


PLATE REF.	1	2	! ;)	4	DESCRIPTION	QTY.	PART No.	REMARKS
6 7	•	,					•	560265	
-			-			ner for carburetter	ļ	568365	
68						or carburetter	!	564446	
69						her for adaptor	1	568364	
70						sher) Fixing carburetter and	4	GHF332	
71	Nι	Ιţ	-(!	5/	16'	"UNF)) adaptor to cylinder head	4	GHF201	
	Sı	IC.	tio	'n	pi	ipe, carburetter to distributor	1	564602	For distributor with "screw-on"
	_						_		connection
72						ipe, carburetter to distributor	1	564603	For distributor
73	Rı	ıpl)ei	•	slo	eeve, suction pipe to distributor	1	574878	with 'push-on' _iconnection
74	۲.	11	n .	F۸	ρ,	suction pipe) On	1	275037*	
75	Ď,	ı	י אמי	r	, Tri	ommet for clip) engine	i	214229	
						neve, suction pipe to carburetter	i	574878	
77						ELBOW ASSEMBLY	,	596495	
7 <i>7</i>	~					for top breather hose	, i	568380	
79	٦.						, i	564447	
						her for inlet elbow	1		11
						(5/16" UNC x 23")) Fixing elbow	2	BH50520	
81						(5/16" UNC x 3")) to carburetter	Ţ	BH50524	H
	P	a	in	W	35	her)	3	RTC613	

^{*} NO LONGER SERVICED

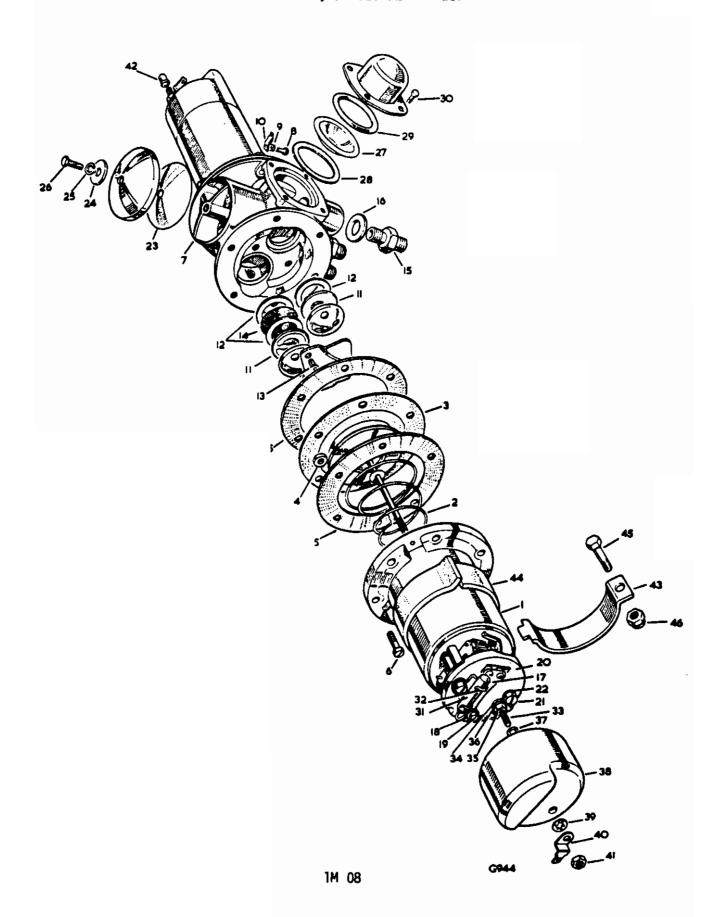


PLATE	
REF. 1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
	The state of the s
FUEL PUMP, DOUBLE ENTRY TYPE	1 4771500
	1 AZX1500
1 Coil complete	2 530884 *
2 Spring for armature	2 530885 *
3 Diaphragm complete	2 WZX1712
4 Roller for diaphragm	22 90608241
5 Joint washer diaphragm to body, inner	
Joint washer, diaphragm to body, outer	
6 Screw fixing coil housings to body	12 538501
7 Body	1 538485
8 Special screw) For earth	1 538502 *
9 Spring washer) terminal	1 538503 *
10 'Lucar' connector	1 538510 *
11 Valve assembly	4 AUB6062
12 Sealing washer for valve assembly	6 AUB676
13 Screw for valve assembly	4 538489 *
14 Filter	2 WZX1700
15 Unions, inlet and outlets	3 538498 *
16 Sealing ring for unions	3 AUB654
17 Rocker and blade	2 AUB6106
18 Dished washer	2 538507 *
19 Screw	2 538506 *
20 End plate	2 260585 *
21 Screw) Fixing	4 262308 *
22 Spring washer) end plate	2 262303 *
23 Joint washer for dished cover	1 AUA573
24 Dished washer) Fixing	7 538491
25 Spring washer) dished cover	1 605322
26 Bolt) to body	1 538493 *
27 Diaphragm for áir bottle	1 AUB656
28 Joint washer, diaphragm to housing	1 AUB795
29 Sealing ring, for air bottle cover	1 AUB657
30 Screw, fixing air bottle cover	4 538496 *
31 Condenser	1 AUB6179
32 Clip for condenser	1 245384
33 Terminal screw	2 262307 *
34 Spring washer for terminal	2 262303
35 Terminal nut	2 262306 *
36 Lead washer	2 262305 *
37 Washer for terminal screw	2 538508 *
38 Cover, black	2 538509 *
39 Shakeproof washer	2 601594
40 'Lucar' connector	
40 Encas Counterrot.	2 538510 *

^{*} NO LONGER SERVICED



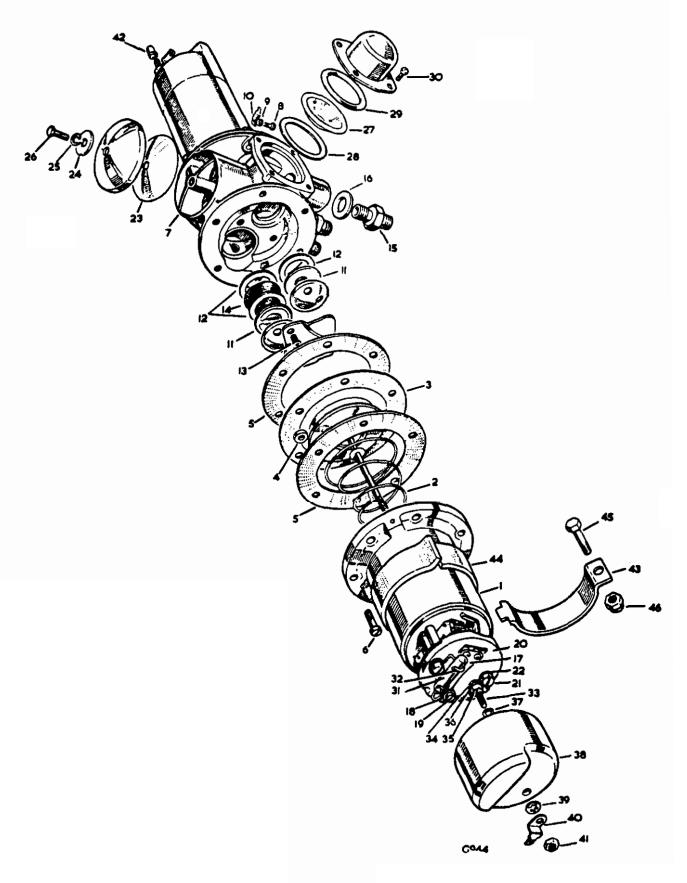


PLATE REF. 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
Terminal nut, fixing 'Lucar' connector Insulating sleeve for terminal Clamp plate Rubber strip	2 262309 * 2 538511 * 2 529141 * 2 534200 * 2 255208 2 GHF221 1 562719 * 4 255206 4 GHF331 4 GHF200 1 CZX1004

^{*} NO LONGER SERVICED

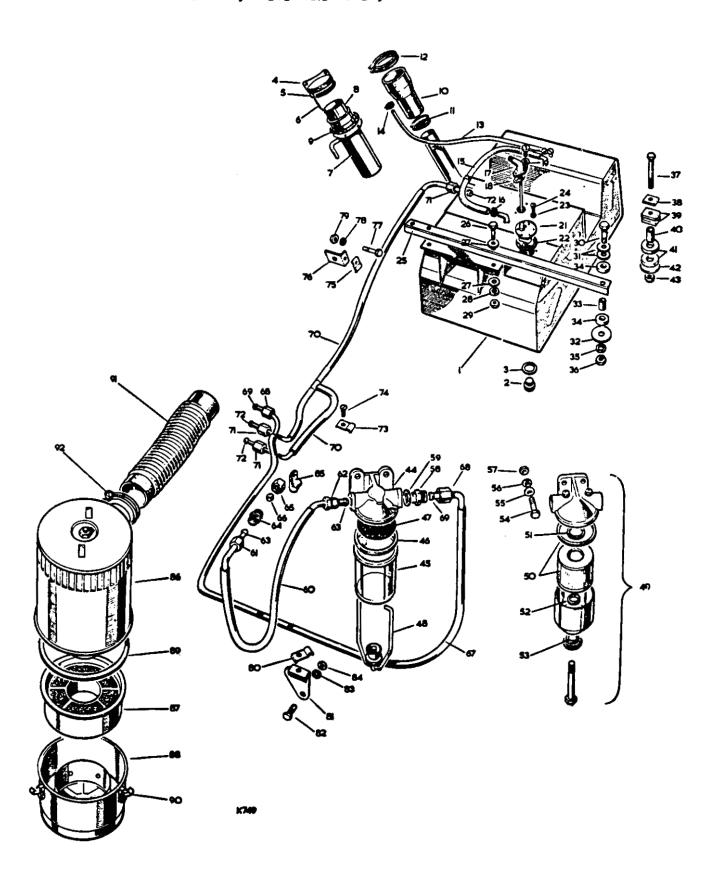


TE:	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
	FUEL TANK COMPLETE	1 90552971 Excent Station Wagon
	FUEL TANK COMPLETE	1 NRC5830 Station Wagon
	Drain nlug) For	1 235592
	Joint washer) fuel tank	1 515599
	TELESCOPIC FILLER TUBE COMPLETE	1 277259
	Filler cap	1 277260 7
	Joint washer for cap	1 505244 With ball valve
	Chain for filler cap	1 231190 in filler cap
	Filler tube	1 277261
	Extension tube for filler	1 277262
	Filler cap	1 504655 ¬
	Joint washer for cap	1 505244 With felt pad
	Chain for filler cap	1 231190 in filler cap
	Filler tube	1 504657
	Extension tube for filler	1 504656
	Grommet for fuel tank filler	1 500710
	Screw (2BA x }"))	4 77941
	Plain washer) Fixing	4 4030
	Spring washer) filler to	4 WM702001
	Special nut) body side	1 313385
	Nut (2BA)	3 RTC608
	Hose, tank to filler tube	1 543782
	Clip for hose, bottom	1 GHC1217
	Clip for hose, top	1 594753
	Breather hose for fuel tank	1 543767
		2 GHC406
	Clip for breather hose	
	Air balance hose for fuel tank	
	Clip for air balance hose	2 GHC406
	Outlet elbow complete for tank	1 500432
	Joint washer for outlet elbow	1 267837
	Spring washer) Fixing elbow	2 3101
	Screw (3BA x 9/16")) to tank	2 3972
	Gauge unit for fuel tank	1 90560612 Except Station Wagon
	Joint washer for gauge unit	1 RTC1148
	Gauge unit for fuel tank	1 555846 Station Wagon
	Joint washer for gauge unit	1 54648R
	Spring washer) Fixing gauge	6 3101
	Set screw (3BA x 📲)) unit to tank	6 3890
	Support for fuel tank	1 568802
	Bolt (¾" UNF x ¾"))	4 255207
	Plain washer)	2 RTC609 1 UNF
	Spring washer)	4 GHF331 fixing
	Locking plate)	2 277491*
	Square nut) Fixing support	2 277490 Except
	Nut (}" UNF)) to tank	2 GHF200 🔟 Static
	Bolt (?" UNF x ? "))	2 255245] Wagon
	Plain washer)	4 WD110061 2" UNF
	Spring washer)	2 GHF333 fixing
	Nut ()" UNF))	2 GHF202
		-

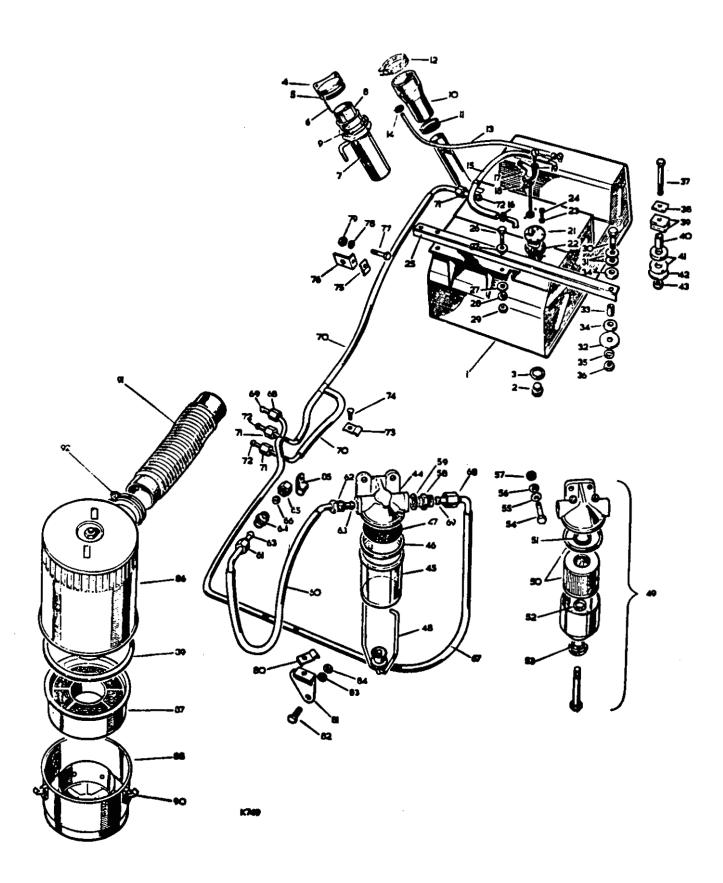

PLAT	1 2 3 4	DESCRIPTION	Q.	TY. PART No.	REMARKS
30	Rol+ /39 UNE 3393	1	9	256040	٦
	Bolt (3" UNF x 13")	{	2		1
	Plain washer, small		4	WD110061	
32	Plain washer, large) Fixing front of fuel	2.	3109	
33	Distance tube) tank to support and	2		
34	Rubber bush) chassis frame	4		
5	Spring washer)	2		Except Station Wagon
6	Nut (#" UNF))	2		
7	Bolt (#" UNF x 21")	?	?	BH606201	
8	Distance piece)	2	501070	1
9	Distance piece) Fixing rear of fuel	4		
0	Distance tube) tank to support and	2		
1	Mounting rubber) chassis frame	4		
2	Plain washer)	2	3933	
3	Self-locking nut (≹"		2	GHF223	
	Bolt (aृ" UNF x laृ"))		2	25F040	7
	Plain washer)	Fixing fuel	2	3109	i
	Distance piece)	tank to	2	90508544	
	Mounting rubber)	frame at	2	90508545	
	Spring washer)	front	2	GHF333	
	Nut (¾" UNF))		2	GHF 202	ì
	Bolt`(≱" UNÉ x 2}") ´)	2		
	Distance piece, top	j	2		Station Wagon
	Plain washer) Fixing	4	3933	
	Spring washer) fuel tank to	1	2265	
	Distance piece) frame at rear	2		
	Mounting rubber) Traine at rear	4		ľ
	Distance niece, botto	nm (?		Ĭ
	Self-locking nut (}"		2	GHF223	J
	FUEL SEDIMENT BOWL CO	MPLETE	1	267496	
A	Body only		1	2F8793 *	ר
5	Bowl only		i	236891	
6	Joint washer for bo	v:1	1	27H1330	AC Delco type
7	Gauze for bowl	•	ì	241223	
8	Retainer for bowl		i	108771	į
	Body only		i	514269 *	=
	Bowl only		i	236896	1
	Joint washer for bo	พไ	i	236895	Winac type
	Gauze for bowl	** *	'n	514270 *	minac cype
	Retainer for bowl		'n	240234	1
	Screw cap for retai	ner	i	240235	ا
9	FUEL FILTER COMPLETE		1	90577064	
0	Element and seal fo	r filter	i	J\$660	
ĭ	Centre seal, upper		j	JS657	
2	Centre seal, lower		1	AEU1147	
3	Seal for centre bol	+	1	606207	
	Seal for centre but	L		でいりとしん	


^{*} NO LONGER SERVICED

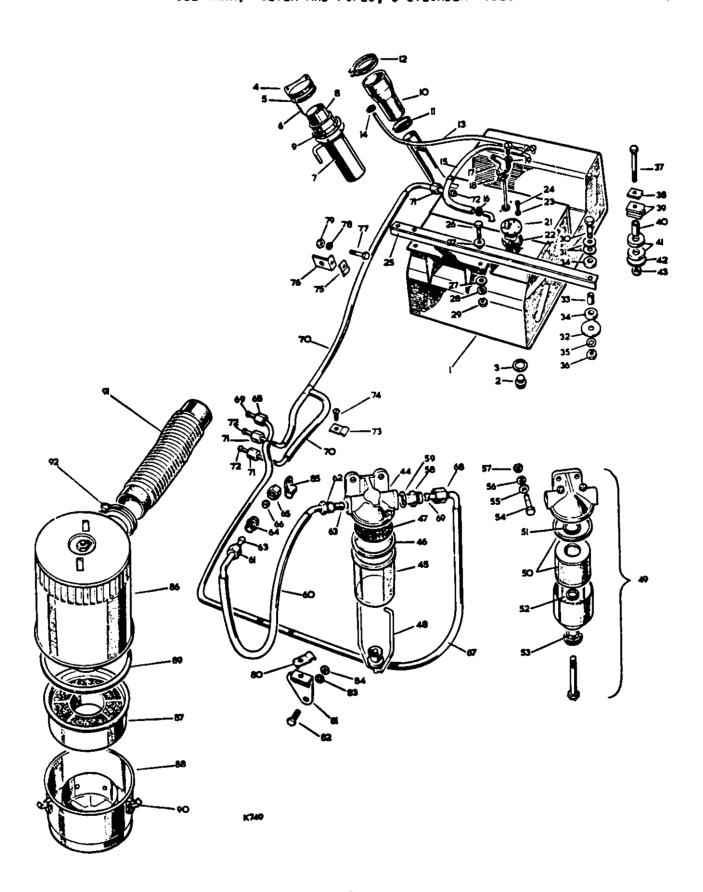


1M 12

```
PLATE
REF.
     1 2 3 4
                           DESCRIPTION
                                                        QTY. PART No.
                                                                    REMARKS
                                                        2 GHF120
    Bolt (5/16" UNF x 1") )
                                                          3830
                           ) Fixing sediment bowl
    Plain washer
                                                          GHF 332
                                                       2
                           ) to RH toe box
    Spring washer
                                                       2
                                                          GHF201
    Nut (5/16" UNF)
                                                       2
                                                          255208
    Bolt (1" UNF x 2") )
                                                        2
                                                          3900
                        ) Fixing fuel filter
55
    Plain washer
                                                        2
                                                          GHF 331
    Spring washer
                        ) to RH toe box
56
                                                        2
                                                          GHF 200
57
    Nut (1" UNF)
                                                        2
                                                          525530
                                                                    11 off when Zenith type
    Double-ended union for filter or bowl
58
                                                                    Jcarburetter is fitted
    Joint washer for union
                                                        2
                                                          267721
                                                          559884 *
    Petrol pipe, nylon, filter bowl to carburetter
                                                                    Ter use with
                                                        1
             ) Fixing pipe to filter
                                                        2
                                                          542845
                                                                     SU type
      Nut
                                                                    carburetter
                                                        2
                                                          542846
      Olive
             ) and carburetter
                                                          564581
    Petrol pipe, nylon, filter or bowl to carburetter
                                                        1
60
                                                           537297
                                                        1
61
      Nut, pipe to carburetter union
                                                           524894
                                                                     For use
      Nut, nipe to filter or bowl
                                                        1
62
                                                                     with Zenith
                                                        2
                                                           534797
63
      Olive
                                                           564580
                                                                     type
64
    Union for petrol pipe
                                                        1
                                                           537297
                                                                     carburetter
65
          ) Fixing union
                                                        1
                                                           568575
    Olive ) to carburetter
                                                        1
                                                           559885
    Petrol pipe, nylon, pump to filter or bowl
67
                                                        2
                                                           542845
68
             ) Fixing pine to
                                                        2
                                                           542846
59
      Olive ) pump and filter
                                                        1
    Petrol pipe, nylon, tank to pump
                                                           552675
70
                                                        2 542845
              ) Fixing pipe
71
                                                        2
                                                          542846
72
      Olive ) to pump
                                                        4
    Clip
                                                           552678
73
                  ) Fixing fuel pipe to
                                                        4
    Drive screw ) chassis sidemember
                                                           72626
74
                                                        1
                                                           552681
75
    Clip
                                                        1
                                                           NRC76
76
    Bracket
                         Fixing fuel pipe
    Bolt (2BA x §")
                                                        1
                                                           237121
77
                         to body
                                                        1
                                                           WM702001
78
    Spring washer
                       ) support bracket
                                                        1
    Nut (2BA)
                                                           RTC608
79
                                                        2
                                                           552681
80
    Clip
                                                        1
                                                           270297
                        Fixing fuel pipe
81
    Bracket
                                                        1
                                                           72626
    Drive screw
                      ) to chassis
    Bolt (2BA x 3")
                                                        3
                                                           234603
82
                        crossmember
                                                        3
                                                          3M702001
    Spring washer
83
                                                           RTC608
84
    Nut (2BA)
                                                           589806
85
    Clip fixing fuel pipe to hand brake bracket
                                                           543209
86
    AIR CLEANER
       Element for air cleaner
                                                        1
                                                           606613
87
                                                        1
                                                           600401
88
       Oil container
                                                           261414
89
       Washer for container
                                                        3 262068 *
90
      Toggle
91 Connection, air cleaner to carburetter adaptor or
                                                        1 517903
        elbow
   Clip, fixing connection to air cleaner and
                                                        2 594753
        adaptor
```

^{*} NO LONGER SERVICED

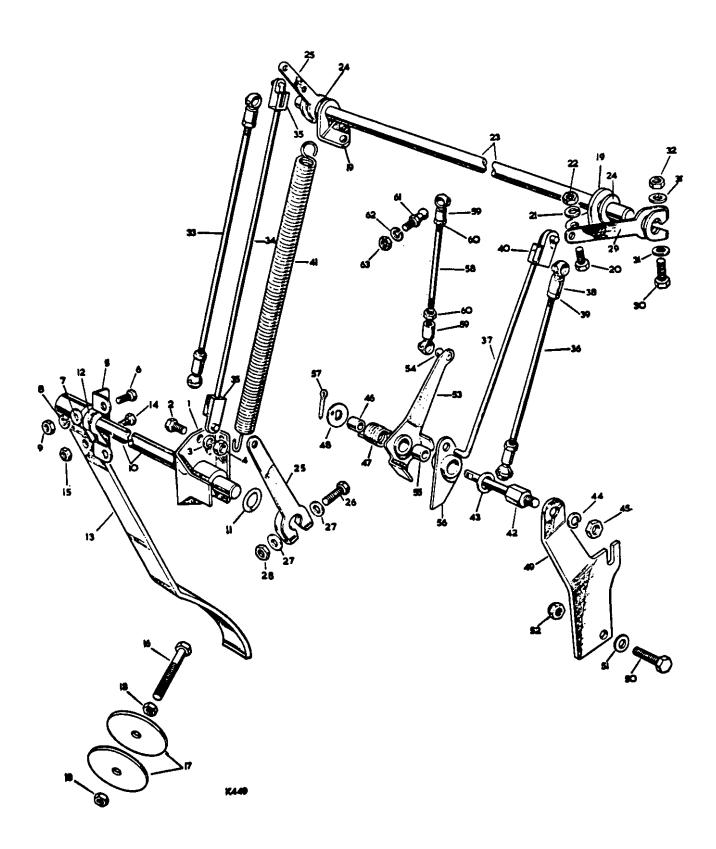

PLATI	1 2 3 4 DESCRIPTION	QTY	. PART No.	REMARKS	
1	Housing for accelerator shaft and pedal stop	1	277103		
2	Bolt (%" UNF x %")) Fixing housing	2	255204		
3	Spring washer) and pedal stop	2	GHF331.		
4	Nut (UNF)) to dash	2	GHF200		
5	Bracket for accelerator pedal shaft	1	272804		
6	Bolt (1" UNF x 1"))]	255206		
	Plain washer) fixing bracket	2	WP8019		
8	Spring washer) to dash Nut ({\frac{1}}" UNF))	2	GHF331 GHF200		
10	Shaft for accelerator pedal	1	236658	RH Sta	
	Shaft for accelerator pedal	i	277153	LH Stg	
11	Special washer) On accelerator	i	508962		
	Plain washer) shaft	1	RTC611		
13	Accelerator pedal	1	500257		
	ACCELERATOR PEDAL RESTRICTOR KIT	1	516057]
	Accelerator restrictor lever complete]	509407	*	
	Spring, accelerator restrictor]	264362	_	1
	Control rod, pedal shaft to cross shaft	ļ	90509550		00 4-3-
	Control rod, relay shaft to engine Stop clip for relay shaft	i	9050955 269132	8 ⁻	88 models.
	Bolt (}" UNF x lb")) Fixing clip	j	BH60409	1 RH Stg	
	Nut (1 UNF)) to shaft	i	GHF 200	, Wi 309	
	Anchor plate for restrictor spring	j	240708	_	
	Bolt (5/16" UNF x ½")) Fixing anchor	1	255223	٦	Up to vehicle
	Spring washer) plate to	1	GHF332	RH Stg	suffix 'C' incl
	Nut (5/16" UNF)) toe board	1	GHF201	7	sive
	Bolt (¼" UNF x 1½")) Lever stop Nut (½" UNF)) on toe board	1 2	255211 GHF200		ļ
	•	2	GHI ZOO	•	.
14	Bolt (5/16" UNF x 3")) Fixing pedal	j	255027		
15	Nut (5/16" UNF)) to shaft	1	GHF201		
16 17	Bolt (5/16" UNF x 12")) Plain washer) Pedal stop in floor	1	255029		
	Plain washer) Pedal stop in floor Nut (5/16" UNF))	2	2258 GHF201		
19	Bracket for accelerator cross shaft, 'L' shaped	2	236998	JAlternati	VAC
	Bracket for accelerator cross shaft, 'U' shaped	2	236665	1	VCJ
20	Bolt (%" UNF x %")) Fixing	4	255206	Ť	
21	Spring washer) bracket	4	GHF331	2 off on	LH Stg
22	Nut (1 UNF)) to dash	4	GHF200		
23	Cross Shaft for accelerator	j	277154	RH Stg	
24	Cross shaft for accelerator Distance washer for lever	1	277153 PTC605	LH Stg	
€.→		2	RTC605		
	LEVER ASSEMBLY FOR ACCELERATOR	2	277105	∏Ball join	t
05	Ball end for lever	2	1481	type	• .
25	Lever for accelerator	2	277475	Linkage c type	lip
26	Bolt (1 UNF x 11)) Fixing	2	BH60410		
27	Plain washer) levers	4	WB10604		
28	Nut (1 UNF)) to shaft	2	GHF200		
	1N 02			* NO LONGE	D CEDVICED

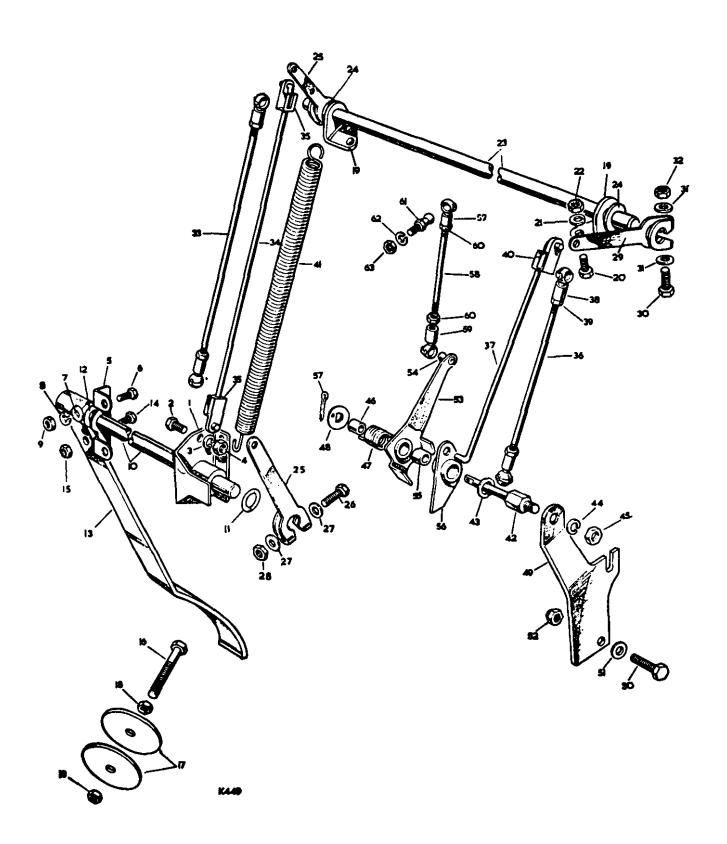

PLAT REF.	E 1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
	LEVER ASSEMBLY FOR CROSS SHAFT	1 277106* Up to vehicle
	Ball end for lever	1 1481 _suffix 'A'
29	Lever for cross shaft	1 531395 From vehicle suffix 'B' onwards
30	Bolt (ት UNF x 1ት")) Fixing	1 BH604101
31	Plain washer) lever to	2 WB106041
32	Nut (lunf)) cross shaft	1 GHF200
33	Control rod, pedal shaft to cross shaft	1 90509556_Ball ioint type]Alterna-
34	Control rod, pedal shaft to cross shaft	1 531390 Linkage clip tives
35	Linkage clip for control rod	2 531394 Jtype
36	Control rod, cross shaft to engine	1 90509558* Up to vehicle suffix 'A'
	Control rod, cross shaft to engine	1 531389 * Linkage clip type. From vehicle suffix 'B' to
37	Control and ourse shaft to survive	suffix ¹ C ¹ inclusive
37	Control rod, cross shaft to engine	1 531388 Linkage clip type. From
38	Ball joint socket for rods	vehicle suffix 'D' onwards 4 AAU2003 72 off (cross shaft to engi on linkage clip type. Up
39	Locknut for socket	4 RTC608 _to vehicle suffix 'A'
40	Linkage clip for control rod, cross shaft to	From vehicle suffix 'B'
	engine	2 531394 onwards
41	Return spring for pedal	1 277455
42	Spindle for carburetter bell crank	1 502900
43	Plain washer)	1 WB110061
44	Spring washer) Fixing spindle	1 GHF333
45	Nut (a" UNF))	1 GHF202
46	Spacer for spindle	1 502899
	Torsion spring for bell crank	1 502982 Up to engine suffix 'H' inclusive
	Torsion spring for bell crank	1 552223 From engine suffix 'J' onwards
48	Special washer for torsion spring	1 502898
	Bracket for accelerator controls	1 503430 For 5/16" diameter bolt fixing. Up to engine suffix 'C'
49	Bracket for accelerator controls	1 537707 * For 3" diameter bolt fixin
		From engine suffix ¹ D ¹
	Dala /5/168 tipe 18\	onwards
	Bolt (5/16" UNF x 1")) Plain washer) Fixing bracket	2 GHF103 7RH Stg
		2 3830 Up to engine 2 GHF242 suffix 'C'
50	Self-locking nut (5/16" UNF)) to steering Set screw (}" UNF x 1")) column support	2 GHF105 TRH Stg
	Plain washer) bracket	2 3036 From engine
52	Self-locking nut (%" UNF)	2 GHF243 _suffix 'D' onwards
	CARBURETTER BELL CRANK LEVER ASSEMBLY	<pre>1 504619 Up to engine suffix 'C'</pre>
	CARBURETTER BELL CRANK LEVER ASSEMBLY	1 531267 * From engine suffix 'D'
	Ball end for lever	1 1481 to suffix 'H'
. .	Bush for bell crank	1 277120 linclusive
53	CARBURETTER BELL CRANK LEVER ASSEMBLY	1 552097 7
54 55	Ball end for lever	1 1481 From engine suffix 'J'
55	Bush for bell crank	1 277120 Jonwards
		* NO LONGER SERVICED

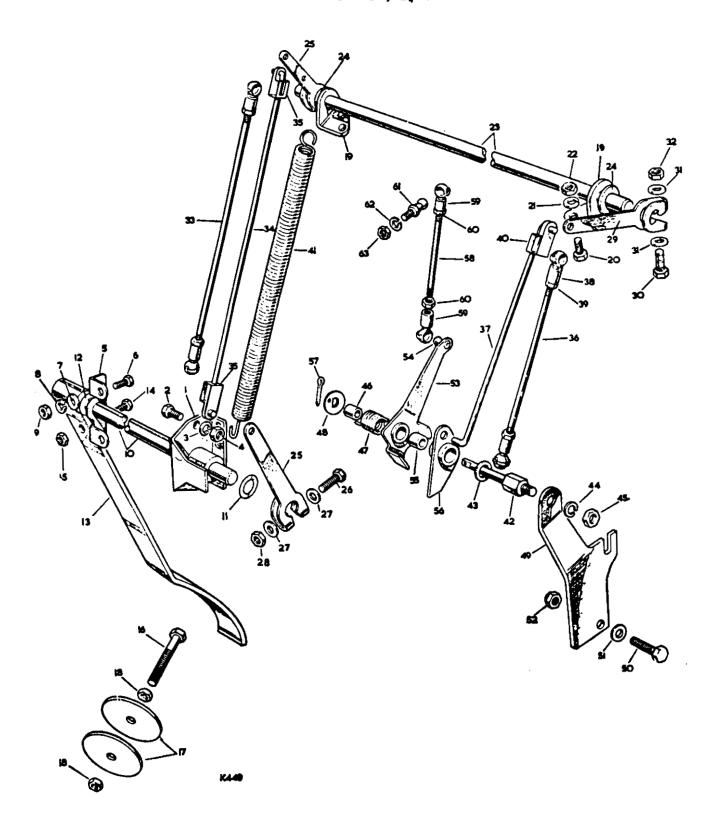


PLATE	E	1	2	3	4	DESCRIPTION	any	. PAR	T No.	REMARKS
	C	CAR	BU	RE'	ΓΤE	ER RELAY LEVER ASSEMBLY	1		621*	Up to engine
		В	al	1 (end	d for lever	1	148		」suffix 'C'
56	C	Car	bu	re	tte	er relay lever	1	504	620	From engine suffix 'D' onwards
57	S	Sp1	it	Þ	in	fixing levers to spindle	1	239	2	
	,	٠		۸1	~~	od and ball joint assembly	1	FRC	2533	~
	٠						ż		200	
	_					(1 UNF)	2		2533	For earlier type Up to
	C	sa i	•	Jo	int	•	2	ERU	2333	control rod, not lengine part of ERC2533 suffix
		cny	in			sher) Fixing rod to bell	2	GHE	331	ייניי
						NF)) crank and carburetter	2		200	l ·
EO						od, bell crank to carburetter	ຳ		439	٦ -
58							2		2003	. •
59					int		2		608	From engine suffix 'D'
60	Ļ	-00	ĸn	ut	(4	2BA)) control rod	2		168	onwards
61						for carburetter lever	1		331	Olimai us
62						sher) Fixing ball end to	1			1
63	N	Yut	(ŧ"	U١	NF)) carburetter lever	3	GMF	200	귀

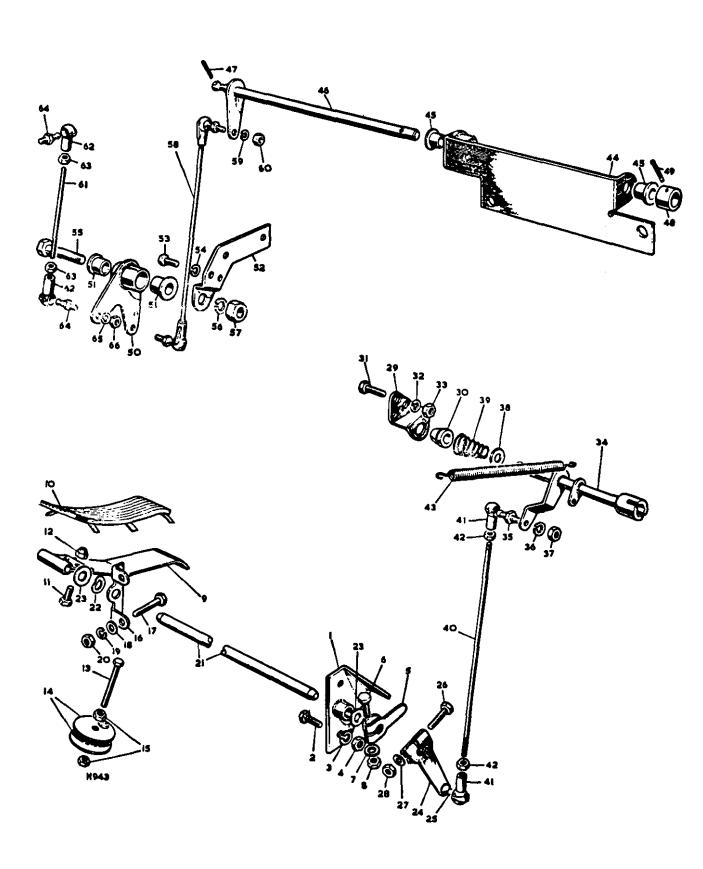


PLATE REF. 1 2 3 4 DESCRIPTION QTY, PART No. REMARKS 1 552975 RH Stg 1 Bracket for accelerator pedal and stop 1 552520 LH Stg Bracket for accelerator pedal and stop 2 Bolt (1 UNF x 1")) Fixing bracket 2 255204 3 Spring washer) and pedal sto
4 Nut (½" UNF)) to dash
Bolt (½" UNF x 1½")) Pedal stop
Locknut (½" UNF)) in bracket
5 Pedal stop lever 2 GHF331) and pedal stop 2 GHF200 1 255211 1 254850 LH Stg 230939 1 BH604101 Bolt (1 UNF x 11)) Fixing lever 2 WB106041 RH Stg Plain washer 7) to Nut (1" UNF) 1 GHF 200 8) pedal shaft 9 Accelerator pedal 1 500257 10 Pad for accelerator pedal 1 GLR303 Bolt (5/16" UNF x $\xi"$)) Fixing pedal 1 255227 Nut (5/16" UNF) 12) to shaft 1 GHF201 13 Bolt (5/16" UNF x 11")) 1 255029 14 Plain washer) Pedal stop in floor 2 2258 15 Nut (5/16" UNF) 2 GHF201 16 Bracket for accelerator pedal shaft 1 272804 17 Bolt (1" UNF x 1")) 2 255206 2 WP8019 2 GHF331 2 GHF200 1 90562714 RH Stg 18 Plain washer) Fixing bracket 19 Spring washer) to dash 20 Nut (1" UNF) Shaft for accelerator pedal Shaft for accelerator pedal 1 277153 LH Stg 1 508962 22 Special washer) On accelerator 23 Plain washer 2 RTC611) shaft 24 LEVER ASSEMBLY FOR ACCELERATOR Early models with 1 277105 SU carburetter * 1 90552522 Late models with Zenith LEVER ASSEMBLY FOR ACCELERATOR carburetter 25 1 1481 Ball end for lever Bolt (1" UNF x 11")) 1 BH604101 26 Plain washer on Nut (1 UNF) 2 WB106041 27 Fixing lever to shaft 1 GHF200 28 Mounting bracket for extension shaft 29 1 552524 Bearing in mounting bracket for shaft Bolt (% UNF x %) Fixing 545571 31 3 255206) mounting bracket) to dash 32 Spring washer 33 Nut (∦" UNF) 3 GHF331 3 GHF200 34 Extension shaft and lever 1 564793 RH Stg Extension shaft and lever LH Stg 1 564792 35 Ball end for extension shaft lever 1 273964 36 Spring washer) Fixing ball end 1 WM702001) to lever 37 Nut (2BA) 1 RTC608) For 38 Plain washer * 7 4514 39 Conical spring) extension 1 562717 . RH Stg Conical spring) shaft 1 542861 LH Stg * NO LONGER SERVICED

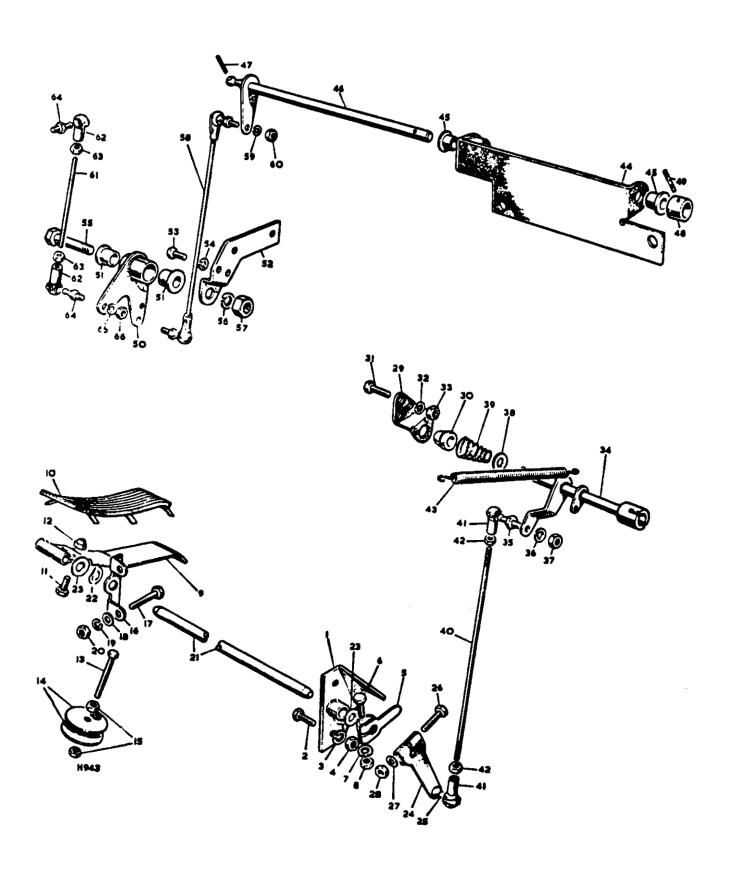


PLATE					
REF.	1 2 3 4	DESCRIPTION	Q.	TY. PART No.	REMARKS
	·-				
40	Control rod.	pedal shaft to extension shaft	1	564797	RH Stg
		pedal shaft to extension shaft	1	552526	LH Stg
41		cket for control rod	2	AAU2003	•
42	Locknut (2BA)	fixing socket to control rod	2	RTC608	
43	Return spring	, bell crank to extension shaft	1	277455	
44	BRACKET ASSEM	BLY FOR ACCELERATOR CROSS-SHAFT	1	552784	
45	Bearing for	cross-shaft		511127	
46	Accelerator c	ross-shaft and lever	1	552980	RH Stg
		ross-shaft and lever	1	552989	LH Stg
47	Spiral pin fo		1	542783	
48	Boss for cros		1	542762	
49	Spring dowel	fixing boss to shaft]	534021	
50		VER AND BUSHES ASSEMBLY]	598652	
51	Bush for be		2	238793	
52	Support brack	et for bell crank	į	562670	
53		UNC x 9/16")) Fixing support	5	253205	
54	Spring washer) bracket to cylinde) head	er 3	GHF331	
55	Centre pin) Fixing bell crank	1	542776	
56	Spring washer		1	GHF332	
57		C)) support bracket	1	256801	
58		cross-shaft to bell crank	1	564794	
59	Spring washer) Fixing control rod		W:1702001	
60	Nut (10 UNF)) to levers	2		
61		bell crank to carburetter	1	531439	
62	Ball joint		2	AAU2003	
63	Lockut (2BA)) control rod	2		
64			2	273964	l off with
65	Spring washer) to bell crank lever	2		Zenith type
66	Nut (2BA)) and carburetter	2	RTC608 _	carburetter

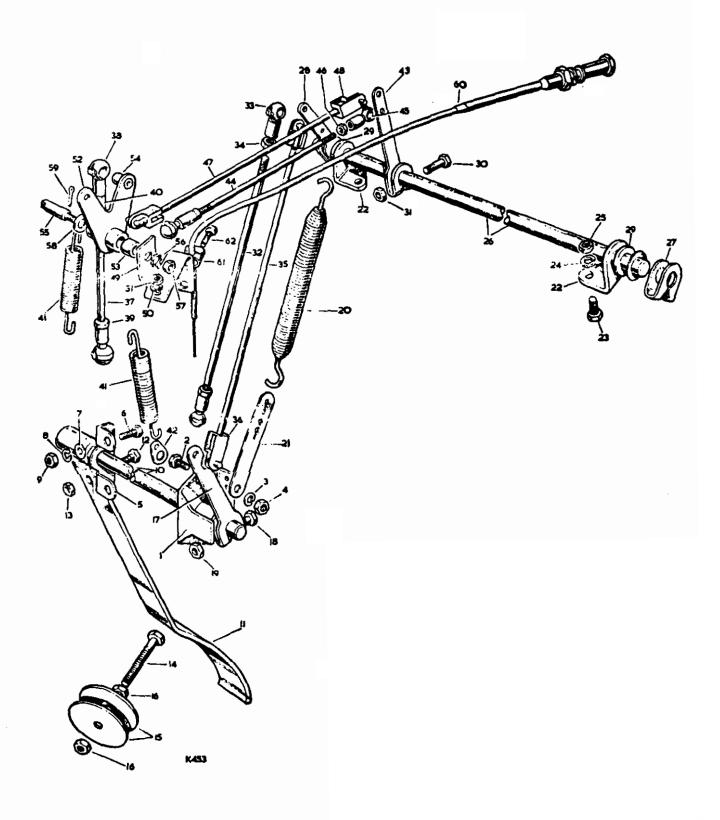


PLATE	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
,	Nousing for socilouster short and under the	1 077100
Ì	Housing for accelerator shaft and pedal stop	1 277103
2 3	Bolt (½" UNF x ½")) Fixing housing	2 255204
4	Spring washer) and pedal stop Nut (¼" UNF)) to dash	2 GHF331 2 GHF200
5	Bracket for accelerator pedal shaft	1 272804
6	Bolt (1 UNF x 1)	2 255206
7	Plain washer	2 WP8019
8	Spring washer) to dash	2 GHF331
	Nut (1" UNF))	2 GHF200
	Shaft for accelerator pedal	1 236658 RH Stg
	Shaft for accelerator pedal	1 277153 LH Stg
11	Accelerator pedal	1 500257
12	Bolt (5/16" UNF x { ")) Fixing pedal	1 255227
13	Nut (5/16" UNF)) to shaft	1 GHF201
14	Bolt (5/16" UNF x 2½")) Pedal	1 SH605201
	Plain washer) stop in	2 2258
16	Nut (5/16" UNF)) floor	2 GHF201
	LEVER ASSEMBLY FOR ACCELERATOR ON PEDAL SHAFT Ball end for lever	1 277105 Ball joint 1 1481 _type
17	Lever for accelerator on pedal shaft	l 1481 _ltype l 277475
17	Lever for acceserator on pedal share	type
18	Bolt (1" UNF x 11")) Fixing	1 BH604101
	Plain washer) lever to	2 WB106041
19	Nut (}" UNF)) shaft	1 GHF200
20	Return spring for pedal	1 231393
21	Anchor for return spring	1 543498
22	Bracket for accelerator cross shaft	2 236998
23	Bolt (4" UNF x %")) Fixing	4 255206
24	Spring washer) brackets	4 GHF331
25	Nut (1" UNF)) to dash	4 GHF 200
26	Accelerator cross shaft	1 277154
27	Stop clip for cross shaft	1 269132 2 off on LH Stg
	Accelerator lever on cross shaft from pedal	1 277472* Ball joint
28	Accelerator lever on cross shaft from pedal	type 1 277473 Linkage clip
20	Accelerator lever on cross shart from pedal	_ · · · · · · · · · · · · · · · · · · ·
29	Distance washer for cross shaft	type 2 RTC605
30	Bolt (1 UNF x 11) Fixing levers and	3 BH604101 4 off on LH Stg
	Plain washer) stop clip to	6 WB106041 8 off on LH Stg
31	Nut (1 UNF)) cross shaft	3 GHF200 4 off on LH Stg
32	Control rod, pedal shaft to cross shaft	1 90509556 7 Ball
33	Ball joint socket) For	2 AAU2003 joint
34	Locknut (2BA)) rod	2 RTC608 _jtype _
35	Control rod, pedal shaft to cross shaft	1 531390 RH Stg Linkage
26	Control rod, pedal shaft to cross shaft	1 537792 LH Stg clip
36	Linkage clip for control rod	2 531394
37	Control rod, bell crank to accelerator lever	1 277779 Overall length 3" Alter-
38	Control rod, bell crank to accelerator lever Ball socket)	1 537791 Overall length 31 natives 2 AAU2003
39	Nut (2BA)) For bell crank control rod	2 RTC608
40	Adjuster nut)	1 277778
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	* NO LONGER SERVICED
	1H A7	HO CONGER SERVICED


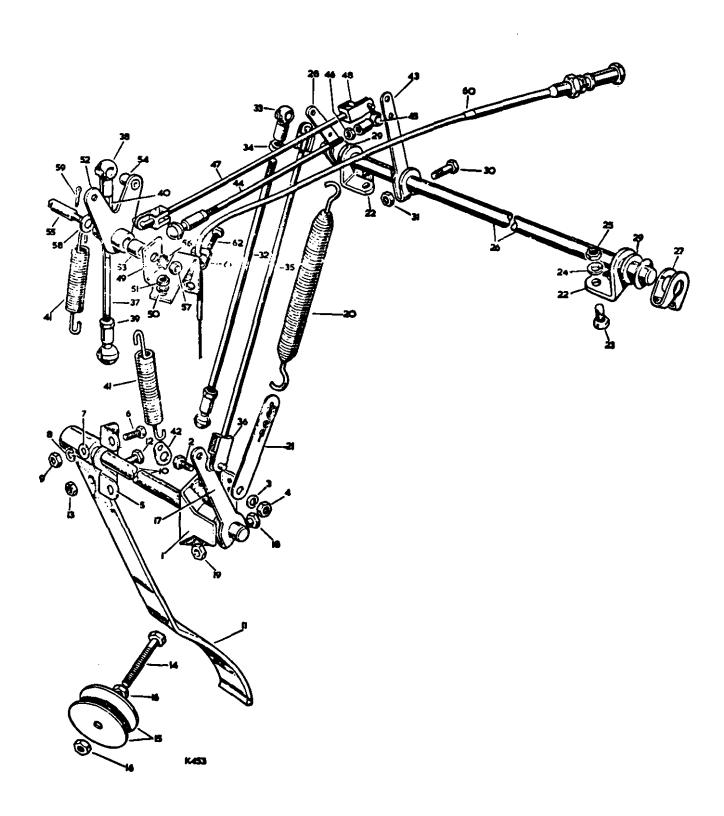


PLATE
REF. 1 2 3 4 DESCRIPTION QTY. PART No. REMARKS


```
41 Return spring for accelerator and stop levers on
      distributor pump
                                                       2
                                                          277502
42 Anchor for return spring
                                                       1
                                                          277565
    Accelerator lever on cross shaft to engine
                                                       1
                                                          277612*~
                ) Fixing
                                                       1
                                                          273964
                                                                   Ball joint type
    Ball end
    Spring washer ) ball end to
                                                       1
                                                          WM702001
    Nut (2BA) accelerator lever
                                                       1: RTC608
   Accelerator lever on cross shaft to engine
43
                                                       1
                                                          531395
                                                                   Linkage clip type
   Control rod, cross shaft to bell crank
                                                       1
                                                          504699*
45 Ball joint
                  ) For
                                                       2
                                                          AAU2003
                                                                   Ball joint type
  Locknut (2BA) ) control rod
                                                       2
                                                          RTC608
   Control rod, cross shaft to bell crank
                                                       1
47
                                                          531391
                                                                   Linkage clip type
                                                       2
   Linkage clip for control rod
                                                          531394
    Bracket for bell crank on distributor nump
                                                       1
                                                          544451
                                                                   Up to engine suffix 'J'
                                                                    inclusive
    Bracket for bell crank on distributor pump
                                                       1 564911
                                                                    From engine suffix 'K'
                                                                    onwards
                      ) fixing bracket to
                                                       4 WM702001 2 off on late
50
    Spring washer
                      ) distributor pump
    Nut (10 UNF)
                                                       4
                                                          257023 __ type bracket
51
    Bell crank complete on distributor pump
                                                       1
                                                          277450
                                                                    Bail joint type
52
    Bell crank complete on distributor pump
                                                       1
                                                          531392
                                                                    Linkage clip
                                                                    type
      Bush for bell crank
                                                       1
                                                          277453
53
      Ball end for bell crank
54
                                                       2
                                                         1481
                                                                    1 off on linkage clip type
    Pin for bell crank
                                                       1
                                                          277454
55
56
    Shakeproof washer ) Fixing pin to bell
                                                       1
                                                          78114
57
    Nut (1" UNF)
                       ) crank bracket
                                                        1
                                                          GHF200
                   ) Fixing bell crank
                                                          2208
58
   Plain washer
                                                       ì
59
                   ) lever to pin
                                                        1
                                                           2390
    Split pin
    'Engine stop' control
                                                          277478*
                                                                    Up to engine suffix 'G'
                                                        1
                                                                    inclusive
                                                                    From engine suffix "H" to
                                                        1
                                                          552688
    'Engine stop' control
                                                                    suffix 'J' inclusive
                                                           552689
60 'Engine stop' control
                                                        1
                                                                    From engine suffix 'K'
                                                                    onwards
                    ) Fixing control
                                                        1
                                                           239673
61
62 Screw (2BA x §")) outer cable
                                                          77758
                                                                    Alternative to 3 lines
                                                        1
                                                                    be low
    Bolt (2BA x ¼") ) to abutment
                                                       1
                                                          250962
                                                                   Alternative to line above
                                                          WM702001
    Spring washer
                    ) bracket on
                                                       1
                    ) distributor pump
    Nut (2BA)
                                                          RTC608
```

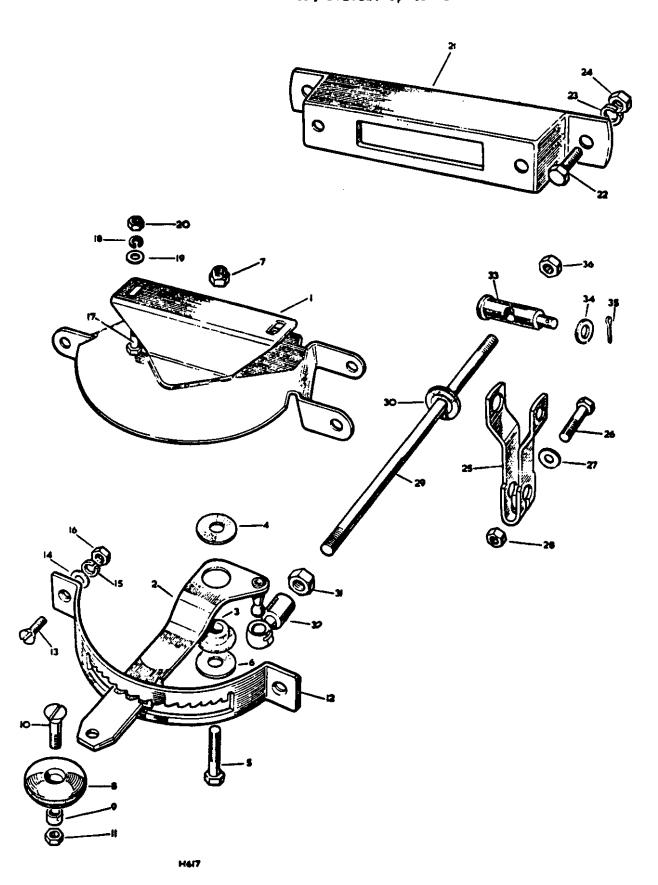

1N 09

PLATE		
	1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
	COOM NOT	GTT, FAIR NO. HERENAG
1	Housing for control quadrant	1 275706*
Ź	Lever and ball end for control	1 275709*
3	Bush for lever	1 275714
4	Washer for lever	1 275715*
5	Bolt (5/16" UNF x 1")) Fixing	1 GHF103
6	Plain washer) control lever	1 RTC610
7		1 GHF242
8		
	Knob for lever	1 552703*
9	Nylon spacer for knob	1 552555*
10	Special screw) Fixing knob	1 219673*
11	Nut (2BA)) to lever	1 RTC608
12	Quadrant plate	1 275713*
13	Special screw)	2 278386*
	Plain washer) Fixing quadrant plate	2 RTC609
15	Spring washer) to housing	2 GHF331
16	Nut (1" UF))	2 GHF200
	Bolt (2BA x ½"))	2 234603 7
	Plain washer) Fixing control	2 WC702101
	Spring washer) to dash, upper	2 WM702001
	Nut (2BA)	2 RTC608 Up to vehicle suffix 'C'
	Bolt (الله الله الله Bolt (الله الله الله Bolt (الله الله الله الله Bolt (الله الله الله الله الله الله الله الل	2 255206 inclusive
	Spring washer) control to	2 GHF331
	Nut (1" UNF)) dash, lower	2 GHF 200 _
17	Bolt (10 UNF x 1"))	2 257017 7
18	Spring washer Fixing control	2 WM702001
19	Plain washer) to dash, upper	4 WC702101
20	Net (10 UNE)	2 257023 From vehicle suffix 'D'
21	Mounting box for hand speed control	1 338428 to E' inclusive
22	Rol+ /1" INF v 1"\ \ Fiving mounting box	
23	Bolt (1 UNF x 1")) Fixing mounting box	4 255204
	Spring washer) and speed control	4 GHF331
24	Nut (1" UNF)) to dash, lower	4 GHF200 _
25	Operating lever for hand engine speed control	1 276013
26	Bolt (1" UNF x 11")) Fixing operating	1 BH604101
27	Plain washer) lever to accelerator	1 WB106041
28	Nut (1" UNF)) cross shaft	1 GHF200
29	Control rod for engine speed control	1 276014*
	Grommet in dash for control rod	1 312937
31	Nut (2BA)) For	1 RTC608
	Ball socket) control rod	1 AAU2003
	Joint pin) For	1 276015
	Plain washer) engine speed	1 2208
35	Split pin) control rod	1 3958
36	Nut (2BA) fixing control rod to joint pin	2 RTC608


^{*} NO LONGER SERVICED

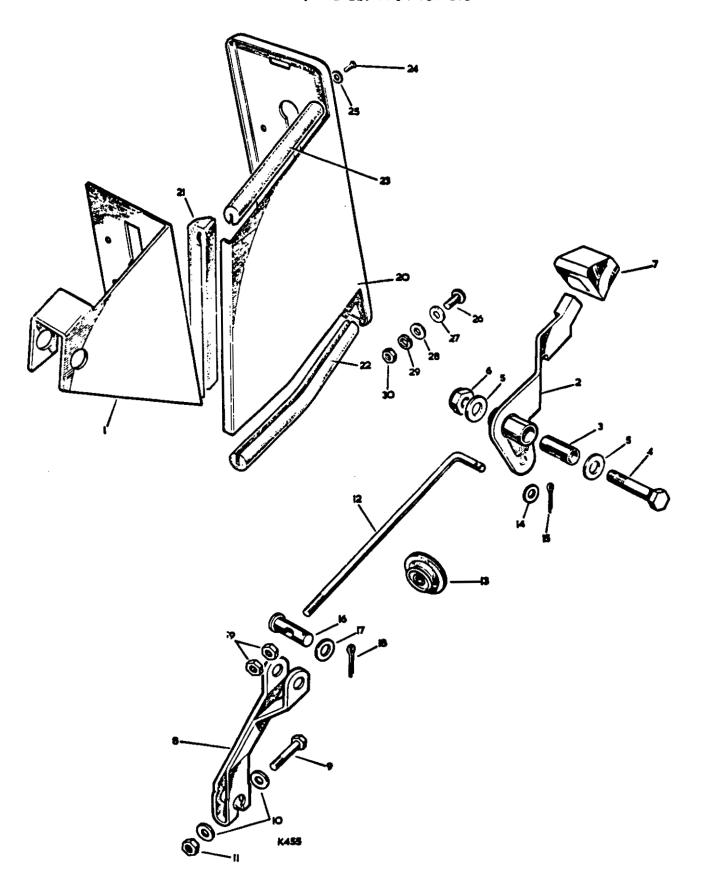

1N 10

PLATE						
REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS				
,	Hausing and guaduant for contuct	1 577331				
1	Housing and quadrant for control	1 90577065				
	Lever for control					
3	Distance tube for housing	1 569247*Long type 7 Alter-				
	Distance tube for housing	1 577332 Short type natives 1 256203 Alternatives				
4	Bolt (3" UNF x 13")) Fixing control					
-	Bolt (1 UNF x 1 ") lever and	1 BH604111]				
	Plain washer) tube	2 RTC618 Early models				
6	Self-locking nut (1 UNF)) to housing	1 GHF221 1 90577060				
7	Knob for lever	1 78384				
	Screw (10 UNF x 3")) Fixing knob	1 257023				
٥	Nut (10 UNF)) to lever Operating lever for cross shaft	1 569250				
8 9	Bolt (1 UNF x 11)) Fixing operating	1 BH604101				
10	Plain washer) lever to accelerator	2 WB106041				
iĭ	Nut (1" UNF)) cross shaft	1 GHF200				
12	Control rod for engine speed control	1 90569251				
13	Grommet in dash for control rod	1 312937				
	Plain washer) Fixing control rod	1 3902				
15	Split pin) to control lever	1 2392				
16	Joint pin) Fixing	1 276015				
17	Plain washer) control rod to	1 2208				
18	Split pin) operating lever	1 3958				
19	Nut (2BA) fixing control rod to joint pin	2 RTC608				
20	Mounting panel, LH) For control	1 569653 * RH Stg				
	Mounting panel, RH) housing	1 569654 LH Stg				
21	Rubber seal, rear) For	1 348537				
22	Rubber finisher, bottom) mounting	1 348541				
23	Rubber finisher, top) panel	1 348535				
24	Drive screw) Fixing mounting panel	6 AB604021				
	Plain washer) to control housing	6 4428				
26	Screw (2BA x 1"))	1 77869				
27	Plain washer) Fixing mounting	1 4030				
	Packing washer) panel to	1 4172				
29	Spring washer) dash, lower	1 WM702001				
30	Nut (2BA))	1 RTC608				


GROUP H
EXHAUST SYSTEM - Heat Shield - all 4 cylinder petrol models

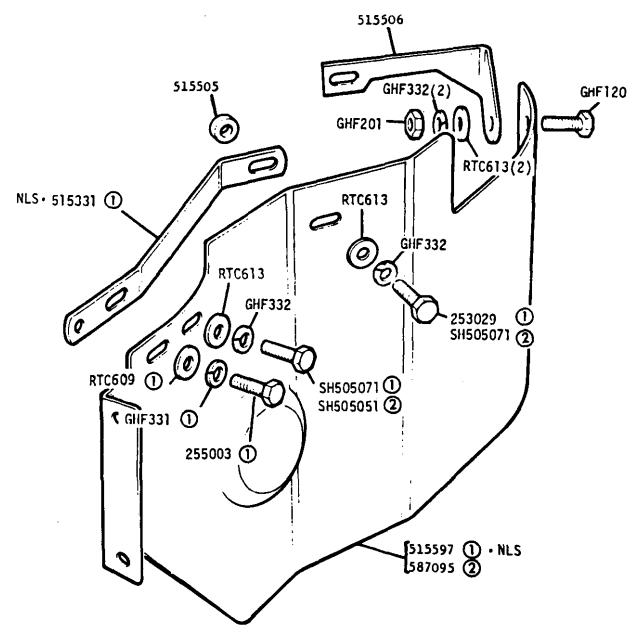

REMARKS


Heat shield assembly (Toe box) RH Stg 516496 • NLS Heat shield assembly (Toe box) LH Stg • NLS


Engine suffix A to HEngine suffix J onwards

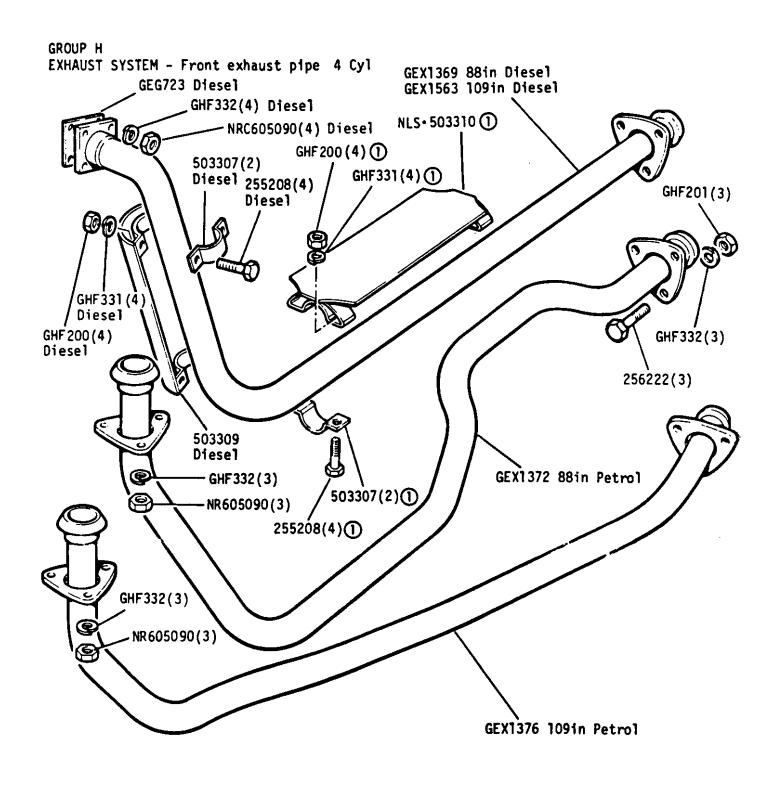


① Diesel models up to veh	icle suffix 'C' inclusive	
LAND ROVER	1N 11	2RE 326/A

GROUP H
EXHAUST SYSTEM - Intermediate Exhaust Pipe 88in 4 cyl

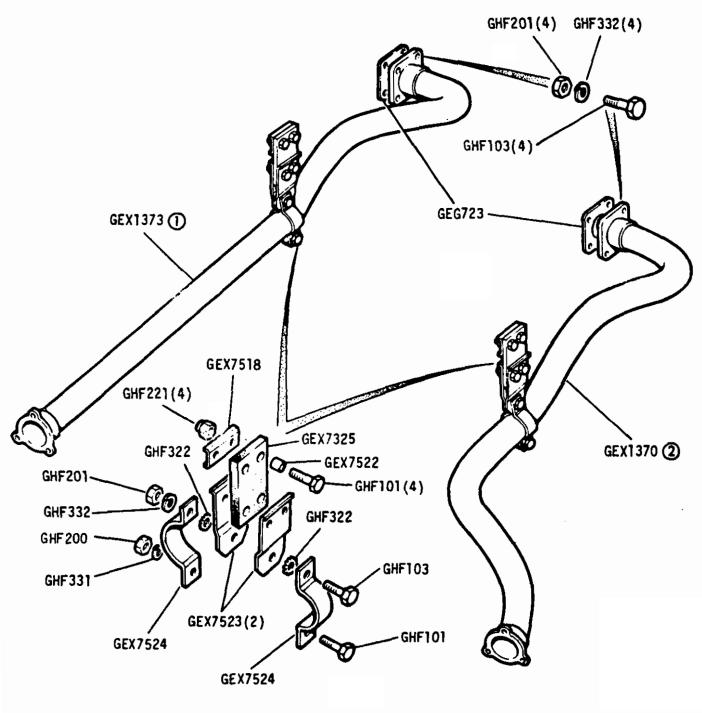

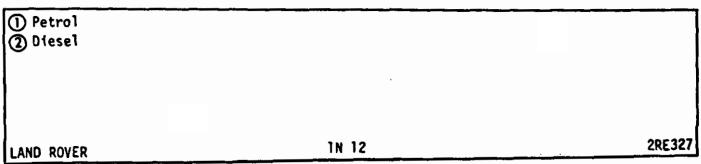

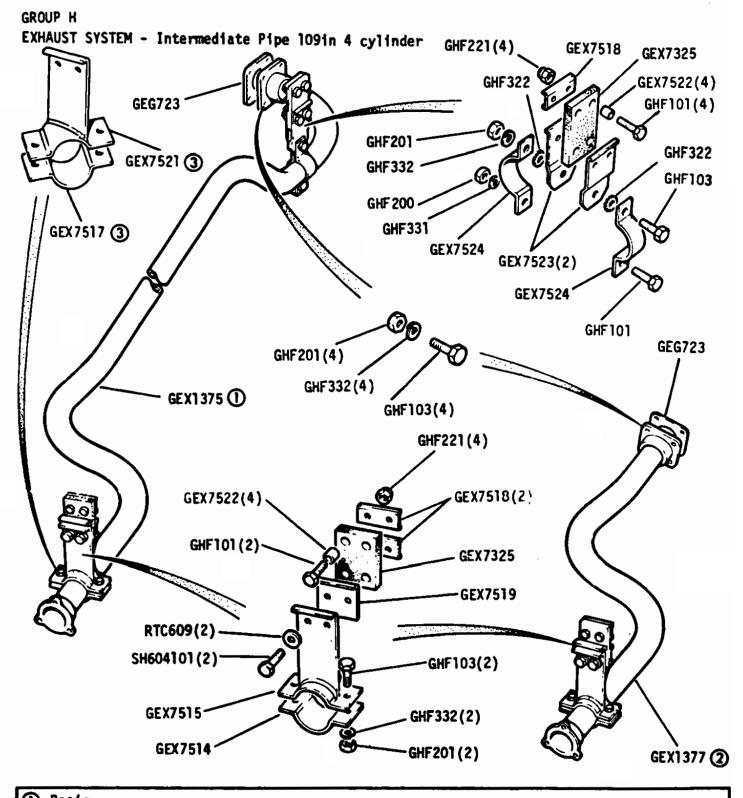

- Basic
 Station Wagon
- 3 Bracket and Saddle for alternative shaped pipe (GEX1375)

LAND ROVER

IN 12

7RE29


GROUP H EXHAUST SYSTEM - Silencer and tail pipe, all 4 cylinder models, except 109 Station Wagon SH604101(4) GEX3301 **←** RTC609(4) GEX7516 GEX7325 **GEX7519** GEX752Z(4)-GEX7518 -GHF101(4) GHF221(4) RTC609(4) GEX7518 GEX7522(4) GEX7325 GHF103 SH604101(2) RTCE09(2) 2552081 -GEX7518| GEX7516. 90517567 GHF221(2) GHF221(4) GEX7522(4) GEX 7518 239710(2) GHF221(2) **GHF332** GHF201 **GEX7518** RTC609(2) 90517567 **ĞEX7325 GEX7519** GHF331 GEX7521 **← → ⊝**0 GHF200 | SH604101(2) 239716 **€**□□ GHF103(2) **GEX7517** GHF332(2) GHF201(2) 598539 € (1) Fixings for 88in Fixings for 109in ③ Required for ⊕ only


1N 13

7RE 30


LAND ROVER

GROUP H
EXHAUST SYSTEM - Silencer and Tail Pipe 109 in 4cyl - Station Wagon

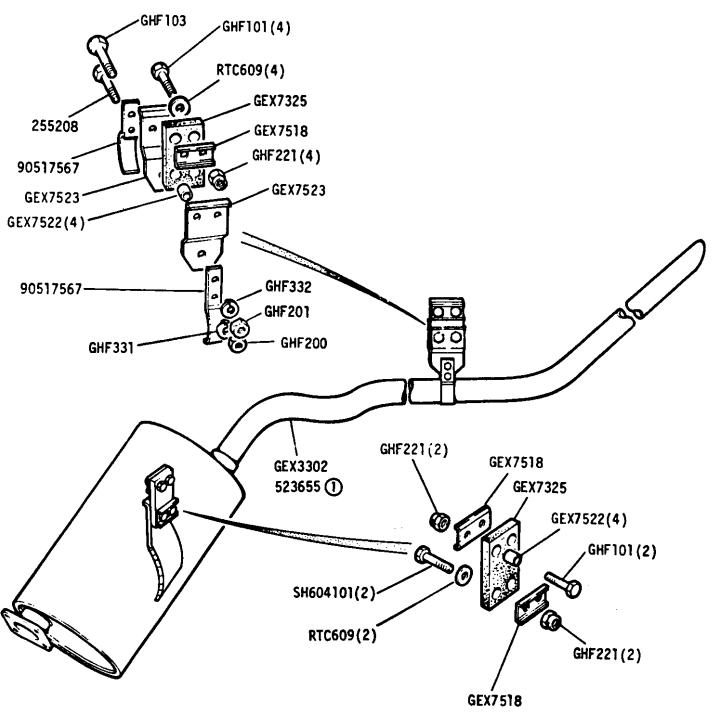

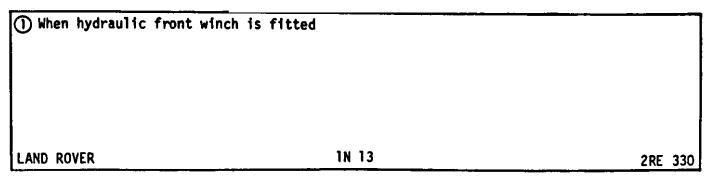


EXHAUST SYSTEM, 6-CYCINDER MODELS

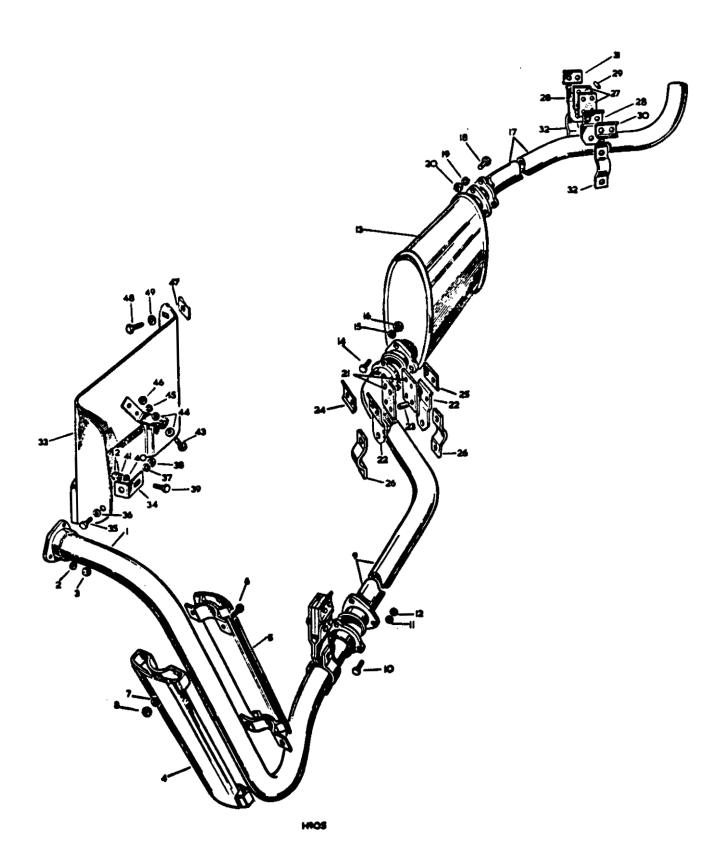

1N 14

PLATE
REF. 1 2 3 4 DESCRIPTION QTY. PART No. REMARKS

]	Front exhaust pipe complete	1	GEX1380
2	Spring washer) Fixing front exhaust		GHF 332
3	Nut (5/16" UNF)) pipe to manifold		NR605090
4	Heat shield) For front		552720
5	Heat shield) exhaust pipe		562781
			255208
6	Bolt (lune x lune)) Fixing heat shields		
7	Spring washer) together on	4	
8	Nut (1 UNF)) front exhaust pipe		GHF 200
9	Intermediate exhaust pipe complete	1	
10	Bolt (5/16" UNF x 1½")) Fixing front and		GHF104
11	Spring washer) intermediate exhaust	3	GHF332
12	Spring washer) intermediate exhaust Nut (5/16" UNF)) pipes together	3	
13	Exhaust silencer	1	GEX3307
14	Bolt (5/16" UNF x 1½")) Fixing	3	GHF104
15	Spring washer) intermediate pipe Nut (5/16" UNF)) to silencer	3	GHF104 GHF332 GHF201
	Nut (5/16" UNF)) to silencer	3	GHF 201
17	Tail pipe complete	ī	GEX 1383
18	Bolt (5/16" UNF x 13")) Fixing silencer		GHF104
	Spring washer) to	3	GHF332
20	Spring washer) to Nut (5/16" UNF)) tail pipe	3	
21	Flexible mounting for front and intermediate	3	0:11 201
۲.	——————————————————————————————————————	2	GEX7325
22	pipes Plate for flexible mounting		GEX7523
23	Distance piece) Fixing flexible	0	GEX7522
24	Clamp plate) mounting to	2	GEX7518
25	Packing plate) mounting plate	2	
	Bolt (1" UNF x 1")) and chassis	8	
	Seli-locking nut (1 UNF)) frame	8	
26	Pipe clamp, front and intermediate exhaust	4	
	Bolt (5/16" UNF x 1"))	4	
	Plain washer) Fixing Spring washer) pipe clamp Nut (5/16" UNF))	4	
	Spring washer) pipe clamp		GHF332
	Nut (5/16" UNF))		GHF201
27	Flexible mounting for tail pipe	1	GEX 7325
28	Plate for flexible mounting	2	GEX 7523
29	Distance piece) Fixing flexible		GEX 7522
30	Clamp plate) mounting to	1	GEX 7518
31	Packing plate) mounting plate		GEX7516
•	Bolt (\frac{1}{2}" UNF x 1") and chassis	4	GHF101
	Self-locking nut (1" UNF)) frame	4	GHF 221
32	Clamp for tail pipe	2	GEX7513
	Bolt (5/16" UNF x 1"))	2	GHF103
	Plain washer Fixing	2	RTC613
	Spring washer) pipe clamp	2	GHF 332
	Nut (5/16" UNF)	2	GHF 201
	HUL (S) TO UNIT)	2	aut 501

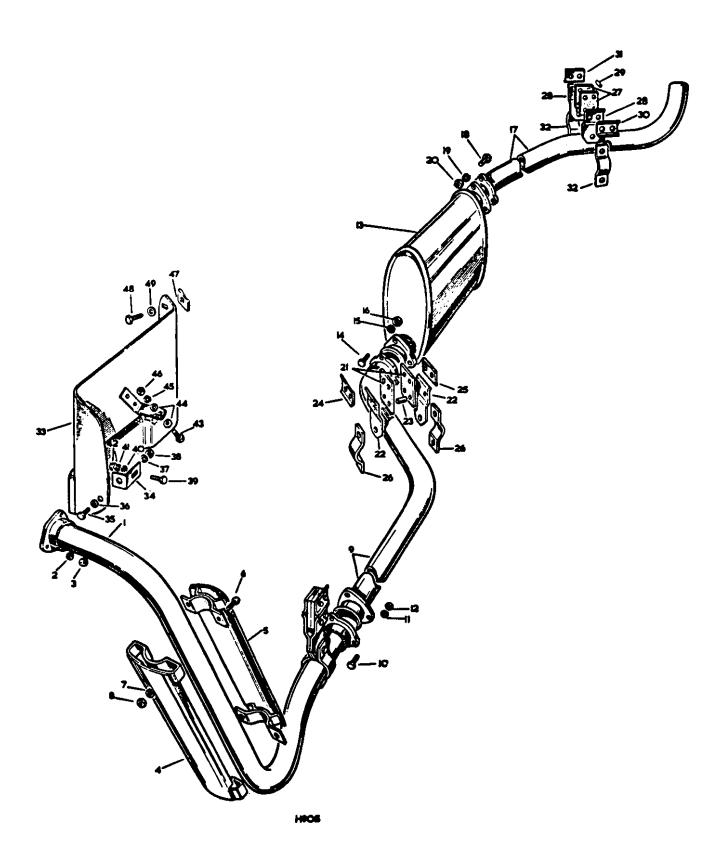

PLAT	E								
REF.		1	2 3	4	 	DESCRIPTION	0	TY. PART No.	REMARKS
33	н	lea	t sh	niel	d, exhaust	manifold	1	562758	
34					acket for I		í	5F27F3	
35					INF x 9/16"		i	255205	
36			in v) Fixing support bracket	i	WB106041	
37					her) to heat shield	i	GHF331	
38			''(} ') to hear shire in	i	GHF200	
39					 JNF x ≩"))	,	i	255245	
40			in v			Fixing bracket	i	WB110061	
41					her)	to dash support	i	GHF333	
42			()			CC das:1 Support	i	GHF202	
43					/ INF x 1") '	1	'n	GHF101	
44			in v			〈	Ŕ	3831	
45					her) Fixing	1	GHF331	
46			(<u>}</u> *) heat shield	'n	GHF200	
47			re r		" <i>'</i>) to toe box	'n	GHF713	
48					ng screw	/ CO COE DOX	i	78296	
49			in w			\	i	WC702101	



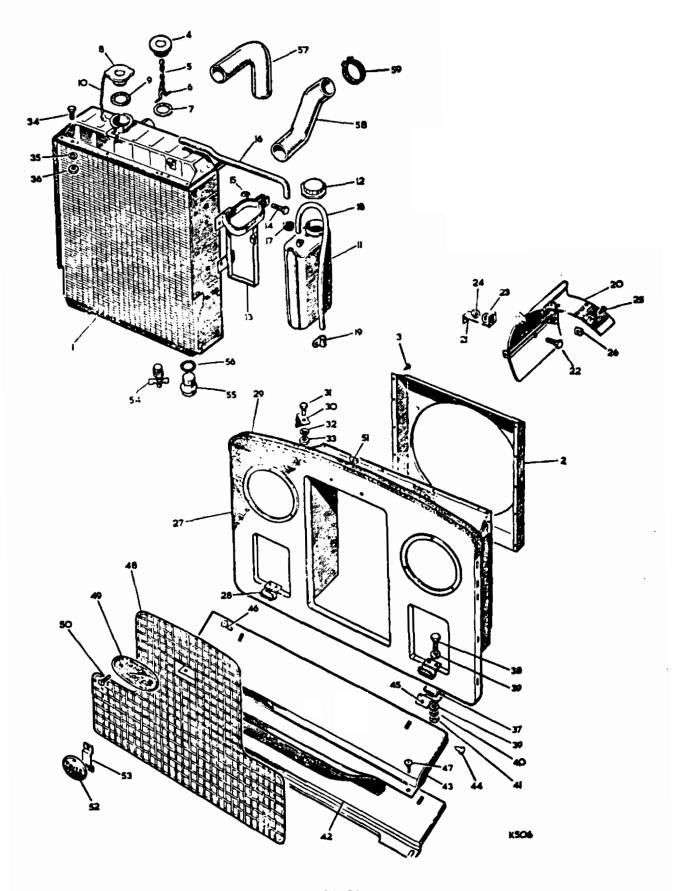


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1	RADIATOR BLOCK ASSEMBLY) (less cowl)) With overflow RADIATOR BLOCK ASSEMBLY) bottle provision (less cowl))	1 577609 2½ litre Petrol and Diesel models 1 577383 2.6 litre Petrol models
2	Cowl for fan, metal type	1 544848 * For use with blocks 568842 or 568843 2½ litre Petrol models
	Cowl for fan, plastic type	1 577342 For use with blocks 577382 and 577609, 21 litre Petrol models. Not part of radiator block assembly
	Cowl for fan, plastic type	1 562944 2.6 litre Petrol models. Not part of radiator block assembly
	Cowl for fan, metal type	1 559579 * For use with blocks 526772 or 568845 Diesel models
	Cowl for fan, plastic type	1 568916 For use with blocks 577382 and 577609. Diesel models. Not part of radiator block assembly.
3	Drive screw fixing cowl to radiator block	10 AB606031 Early 4 cylinder models with metal type fan cowl
	Self-tapping screw) Fixing cowl to Spring washer, double coil) radiator block	9 562979 For all plastic 9 564741 type fan cowls. Not part of radiator block assembly.
4	Filler cap for radiator, 10 lb pressure Filler cap for radiator, 9 lb pressure	1 242399 * Diesel Alter- 1 GRC118
5	Chain for filler cap	1 230328* For 10 1b bottle
	Chain for filler cap	pressure cap prov- 1 509769 For 9 lb ision pressure cap
6 7 8 9 10	Retainer for chain Joint washer for filler cap Filler cap for radiator, 9 lb pressure Joint washer for filler cap Chain for filler cap	1 230329 * For 10 lb 1 90516914 pressure cap. 1 GRC118 With overflow bottle 1 564999 provision 1 509769

^{*} NO LONGER SERVICED

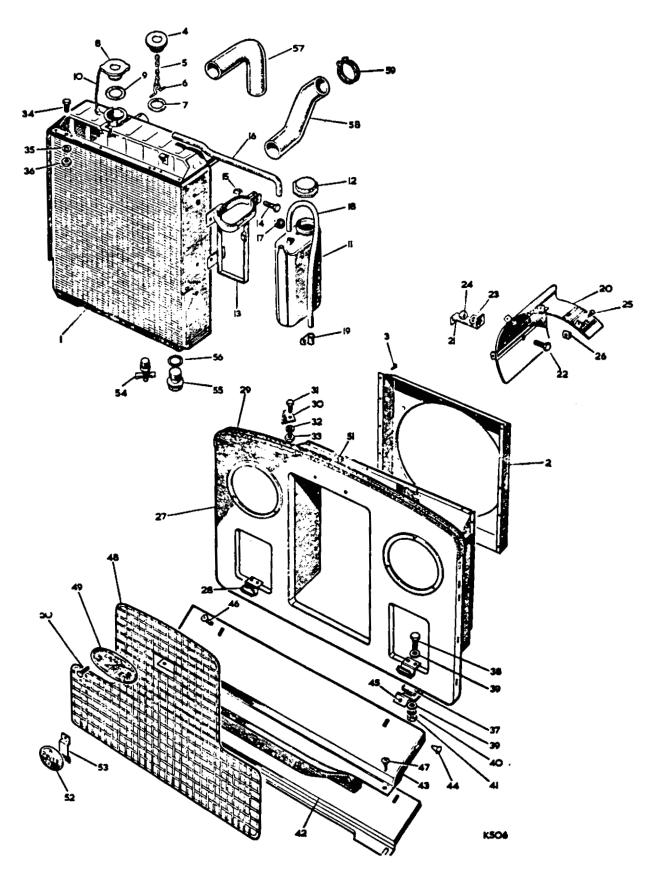


AT F.		QTY. PART No. REMARKS
1 2 3 4 5 6 7 8 9	Overflow bottle for radiator Cap for overflow bottle Carrier bracket for overflow bottle Bolt (½" UNF x ½")) Clamping bott Self-locking nut (½" UNF)) to carrier Hose, radiator to overflow bottle Clip, fixing hose Flexible pipe, overflow bottle outlet Clip, fixing outlet pipe Clip outlet pipe to bottle	1 564718 1 564719 1 598531 1 255208 1 GHF221 1 564720 2 GHC304 1 564724 1 219677 1 90577082
?0 ?1	Shroud for fan cowl Steady strip for shroud Steady strip for shroud	1 551714 1 531332]Alternatives 1 577874]
24 23 24 25 26	Boit (1" UNF x 3")) Fixing Plain washer	1 255206 2 RTC609 1 GHF331 1 GHF200 4 234603 4 251335 Alternative AB610051 fixings 12-volt AC/DC generator
	Shroud for fan cowl Drive screw) Spire nut) Bolt (2BA x 3")) Fixing shroud Spring washer) Nut (2BA))	1 559580 For early type radiator 3 AB610051 block fitted with metal 3 78237 type fan cowl. 21 litre 1 237119 Diesel. Except models 1 WM702001 fitted with lucas 2AC type 12 volt AC/DC generator
	Shroud for fan cow! Drive screw) Fixing Plain washer) shroud Steady strip for shroud Steady strip for shroud Bolt (½" UNF x ½")) Plain washer	1 568917 3 AB610051 3 WC702101 1 568922 * Alternatives block fitted with plastic fan cowl 21 litre Diesel models
	Shroud for fan cowl Drive screw, fixing shroud to fan cowl	1 569212]2.6 litre 1 AB610051 Petrol models
	Radiator grille panel complete * NO LONGER SERVICED	1 330950 * Models with headlamps in grille panel. American Dollar Area up to vehicle suffix 'F' to vehicle suffix 'F' inclusive. Up to vehicle suffix 'A' for other areas.

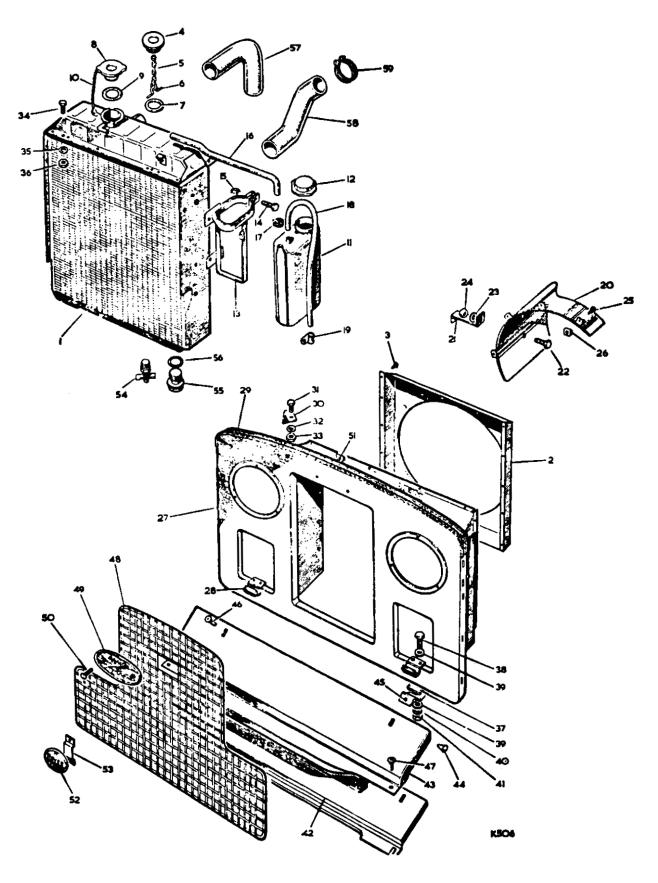

10 04

									
PLATE REF.	1 2 3 4	D D	ESCRIPTION	·-·	QTY.	PART No.	REMARKS		
27	Radiator	grille panel c	omplete		1	336466*	Models with grille panel vehicle suff suffix 'F' i Except Ameri Area.	. Fro ix 'B' nclusiv	m to e.
	Radiator	grille panel c	omplete		1	345573*	Models with wings. All vehicle suff onwards.	areas f	
28	Support	clip for grille	mesh		2	330150*			
	Pop rive	t, fixing clip	to grille pa	anel	4	300789			
29	Bonnet r	est strip, 35"	long		1	300824	_		
	Bifcurca	ted rivet, fixi	ng strip		10		Alternative		
	Spring c	lip, fixing str	1p		10		Jfixings.		
		on plate for ho		_	j	396124			
		bolt) Fixing		plate	2	303750			
	Plain wa	sher) to radi	ator grille		2	3900			
		t) baffle			2	79246			
		on plate for he			1		From vehicle	!	
31 32	Spring W	UNF x §")) Fi			, 1		suffix 'B' to suffix 'F	:1	
33	Not /1"	asher) to UNF)) gr			, i		inclusive		
34	Rolt (1	UNF x §")	Fixing		13	255206	Jinciasive		
35	Spring w	asher)	radiator blo	ock	13				
36	Nut ()"	asher) UNF))	radiator blo to_grille p	anel		GHF200			
37	Rubber b	uffer) Fixing	A	ls read	9030646	5		
38	Bolt (5/	16 UNF x 13")) grille pa	ne1	3	GHF 104			
39	Plain wa	sher) and front		6	3830			
40	Spring w	asher) bracket to	0	3	GHF 332			
41		6" UNF)) chassis f	rame	3	GHF222	761a4 Auga au		•
42		ron panel trip for front			1		Flat type pa Alternative		
		ixing strip	apron paner		8		shaped type.		
43	_	ron panel			ĭ	336786*	Shaped type	pane l	Up to
44		uffer for front	apron pane	1	4	310877	Alternative flat type.		veh- icle
45		bracket for pa			2	345192			suffix
		set bolt) Fix		2	78208	7		'F'
	Plain wa			on panel	2	3900	Early type		inclu-
AC	Spring w	asner thread-forming	to	uring	2	GUL 221	⊥ fixing		sive
46	Special	(1" UNC x 1")		ckets	2	78796	Late type fi	ixina	1
	Bolt (5/	'16" UNF x ⊋") ′) Fixing ap		2		7For flat	, x y	
	Spring w) panel to		2	GHF332	type front		ł
	Nut (5/1) at front		ž		apron panel		
	Drive so	•)	Fixing apr		72628	Early type	TFor	
			5	panel to			fixing	shaped	4
47	Special	thread-forming		chassis	=			type	
		(¾" UNC x ¾"))	at front	2	78795*	Late type	front	
							fixing	apron	
								panel	_1
						*	NO LONGER SET	RVICED	

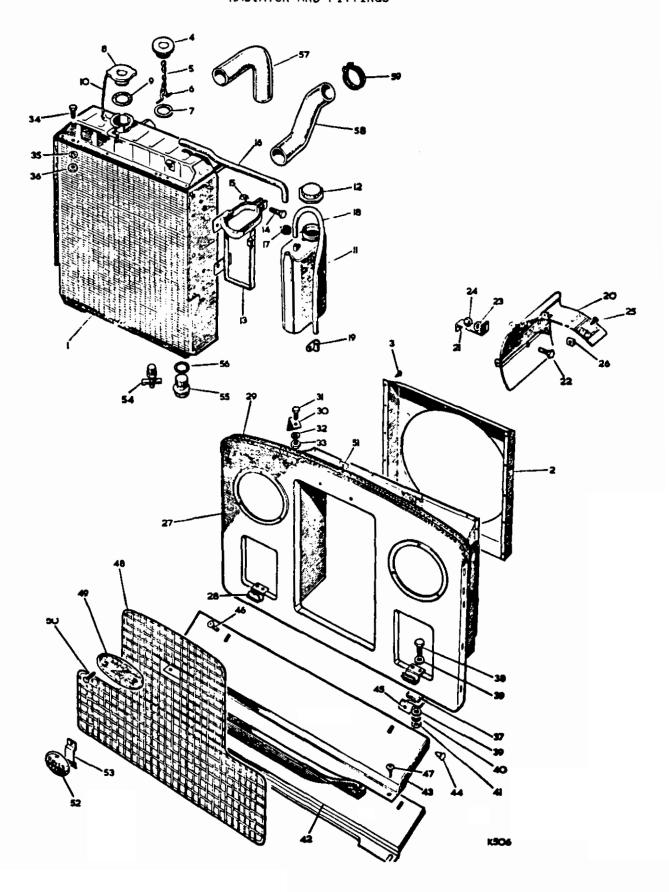

PLAT REF.	E 1 2 3 4 DESCRIPTION	Q.	TY, PART No.	REMARKS
	Front apron panel	1	395459	1
	Rubber buffer for apron panel	ä	310877	
	Special thread-forming screw (1" UNC x 1) fixing	-	3100,,	
	Apron panel to securing bracket	2	7879€	From vehicle suffix 'G'
	Special thread-forming screw (}" UNC x }")	4	70730	Trom venicle surrix u
	fixing apron panel to chassis at front	2	78795	İ
48	Grille for radiator	ì	330149	Up to vehicle suffix 'F'
-0		•	33017	inclusive
	Grille for radiator	1	345666	From vehicle suffix 'G'
	WITTE TO TAGIBEET	•	340000	onwards
49	'Land-Rover' nameplate	1	332670	Olivar as
50	Drive screw) Fixing namerlate and	ż	GHF 426	
51	Spire nut) grille to frille panel	2	78237	
52	'Diesel' badge	ī	320276	٦
53	Fixing bracket for badge	i	320333	Diesel models
J	Rivet) Fixing bracket	2	78255	
	Lockwasher) and badge to grille	2	78256	1
5Δ	Drain tap for radiator	1		7 Alternatives
	Drain plug for radiator	1	569047	
56	Joint washer for niug	i	213959	-
J (.	oome waster to prog	•	213.33	
57	Hose for radiator, top	1	GRH439	For early type 21 litre
58	Hose for radiator, bottom	i	GRH369	radiator Petrol
•		٠		blocks 568842 models
				or 568843
	Hose for radiator, ton	1	GRH585	7 For late type
	Hose for radiator, bottom	i	GR4609	radiator
		•	C	blocks 577382
				and 577609
	Hose for radiator, top	1	GRH439	For radiator 72} litre
	Hose for radiator, bottom	1	530585	with straight Petrol
	•			bottom models
				connection when
				[(568842) Lucas 2AC
				type 12-
	Hose for radiator, top	1	GRH439	For radiator volt
	Hose for radiator, bottom	1	543F29	with angled AC/DC
				bottom generator
				connection is fitted
				
		_	****	
	Hose for radiator, ton]	GRH530	72.6 litre
	Hose for radiator, bottom	1	GRH531	J Petrol models
				NA LANAPA CARVISIA
			*	NO LONGER SERVICED


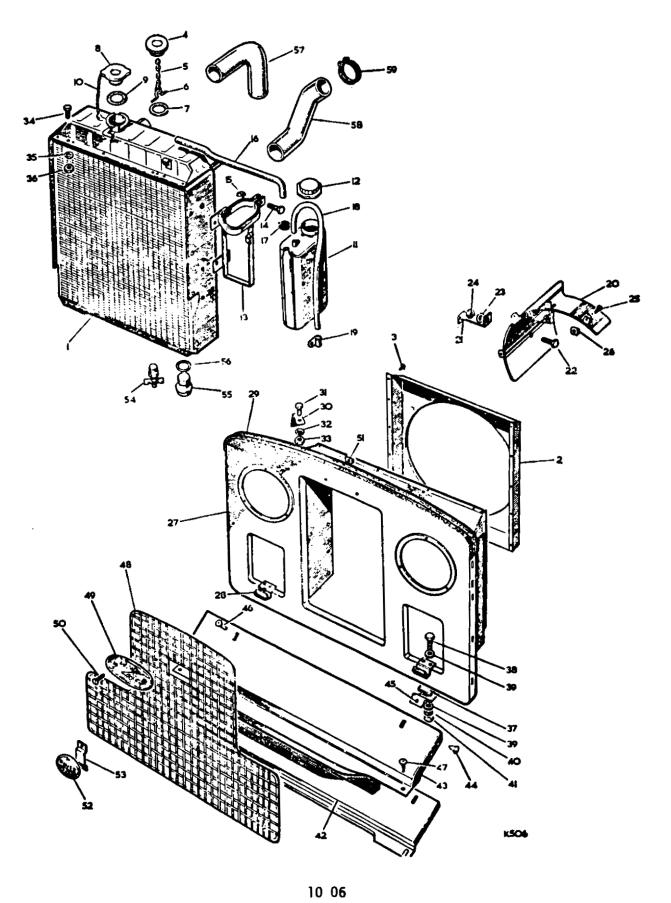


PLATE REF.	-	1 2	2_	3	DESCRIPTION	a	TY. PART No.	REMARKS
	Нс	se	1	for	radiator, top radiator, bottom	1 1	GRH369	For early type radiator block Diesel
					radiator, top radiator, bottom	1	GRH585 GRH609	For late type models radiator blocks 577382 and 577609
59	C.	lip	,	to	and bottom, for radiator hoses and bottom, for radiator hoses and bottom, for radiator hoses	_	GHC811 GHC1217 GHC913	Tarly models Late models Diesel models
	C.	lip		to	and bottom, for radiator hoses	4	GHC1217	2.6 litre Petrol models


ELECTRICAL - Distributor and Starter Motor, 2% litre Petrol

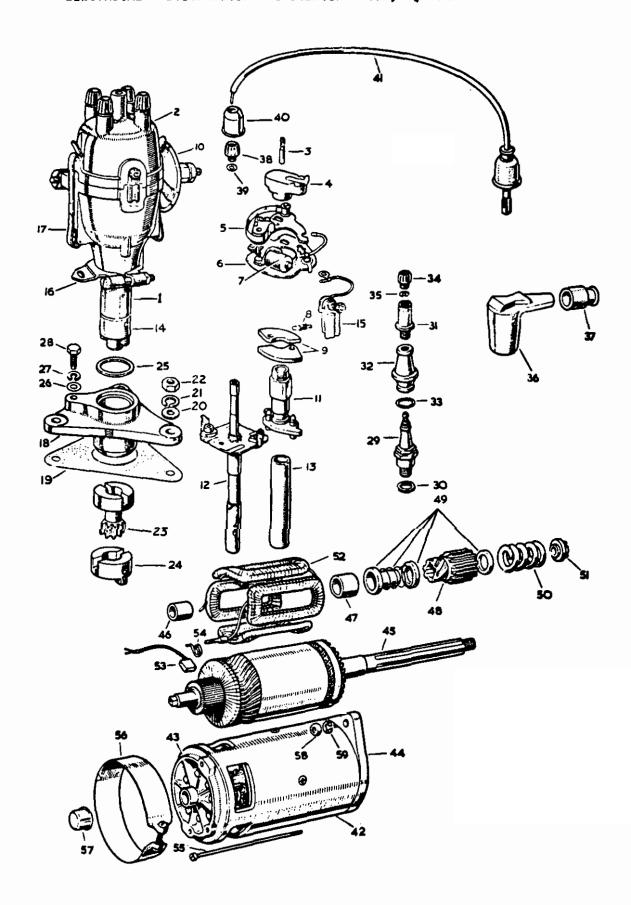

PLAT		
REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
1	DISTRIBUTOR COMPLETE	1 ERC4110 Ducellier
2	Distributor cap	1 GDC226
3	Brush and spring	1 AEU1428
4	Rotor arm	1 GRA123
5	Contact set	1 GCS125
3 4 5 7	Condenser	1 GSC113
10	Vacuum unit	1 AEU1429
	COMPONENTS FOR LUCAS TYPE DISTRIE	BUTORS
2	Distributor cap	1 GDC107+
	Distributor cap	1 GDC103++
3	Brush and spring	1 262703
4	Rotor arm	1 GRA101
	Contact points (quickafit)	1 GCS101
6	Contact breaker base plate (long pivot post)	1 503684) Alternatives
•	Contact breaker base plate (short pivot post)	1 90607607++)
7	Condenser for distributor	1 GSC111
8	Auto advance sorinos set	1 502285 * For distributor LU40609
•	Auto advance springs set	1 600476 For distributor Lu40944 and 41363
9	Auto advance weight	1 262708 * For distributor LU40609
,	Auto advance weight	1 539572 * For distributor LU40944
	•	and 41363
10	Vacuum unit	1 608111
11	Cam	1 245008 * For distributor LU40609
	Cam	1 605785++*For distributor LU40944 and 41363
12	Shaft and action plate	1 259990 * For distributor LU40609
	Shaft and action plate	1 539575 * For distributor LU40944
	•	and 41363
13	Bush for shaft	1 245012 * For distributor LU40609
	Bush for shaft	1 600334+ For distributor LU40944
	Bush for shaft	1 606895++ For distributor LU41363
14	Driving dog	1 513679
15	Terminal bush and lead	1 502283 For distributor LU40609
	Terminal bush and lead	1 600329 For distributor LU40944
	retimities busin and read	and 41363
16	Clamping plate	1 245003+ For distributor LU40609
	erempring proces	and 40944
	Clamping plate	1 245857 * For distributor LU41363
17	Clip for cover	2 502287 *
•	Sundry parts kit	1 245015 *
18	Adaptor	1 247672 * Up to engine suffix 'F'
. •	·	7:1 compression ratio on
	Adaptor	1 549610 From engine suffix 'G'
	riadh for	onwards 7:1 compression
		ratio. From engine suffi
		'A' onwards 8:1
		compression ratio.

⁺ For distributor with acorn nut connections ++ For distributor with push in type connections * NO LONGER SERVICED


ELECTRICAL - Distributor and Starter Hotor, 21 litre Petrol

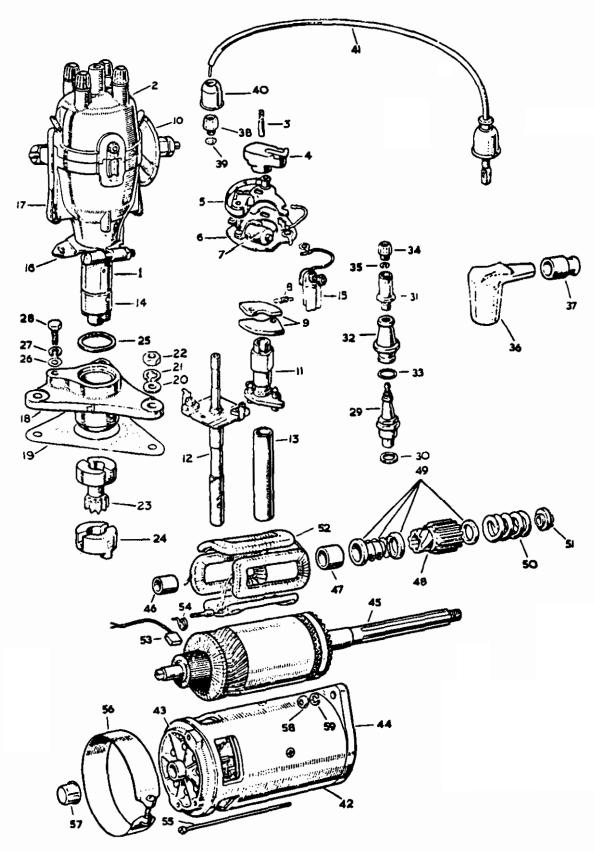

1	PLAT	· -				
20 Plain washer Fixing 3 3966 Spring washer adaptor 3 GHF332 21 Spring washer adaptor 3 GHF332 22 Nut (5/16" UNF) block 3 GHF201 Alternative to set bolt type fixing 23 Driving shaft for distributor, top 1 247806 Spline type shaft. Up to engine suffix 'F' 7:1 24 Distributor drive coupling 1 549611 Blade type coupling 1 549612 Blade type co	REF.	1 2 3 4 DESCR	IPTION	QT	Y. PART No.	REMARKS
20 Plain washer Fixing 3 3966 21 Spring washer 3 daptor 3 GHF332 22 Nut (5/16" UNF x & 1) 5 to cylinder 5 to c	19	Joint washer, adaptor to cv	linder block	1	247212	
Spring washer Spring washer Set bolt (5/16" UNF) Dock					3966	
22 Nut (5/16" UNF) block 3 GHF201 Alternative to set bolt type fixing 3 255227 Alternative to stud and nut type fixing 247806 Spline type shaft. Up to engine suffix 'F' 7:1 compression ratio only 54961 Blade type coupling. From engine suffix 'A' onwards From engine suffix 'A' onwards 8:1 compression ratio only 52278 1 52278 1 52278 1 52278 1 6			· -			
Set bolt (5/16" UNF x 2") Set bolt (5/16" UNF x 2") Set bolt (5/16" UNF x 2") Driving shaft for distributor, top 23 Driving shaft for distributor, top 24 Distributor drive coupling 25 Cork washer for distributor housing						Alternative to set bolt
Set bolt (5/16" UNF x &") 3 255227 Alternative to stud and nut type fixing 23 Driving shaft for distributor, top 1 247806 Spline type shaft. Up to engine suffix 'F' 7:1 compression ratio only 24 Distributor drive coupling 1 549611 Blade type coupling. From engine suffix 'G' onwards From engine suffix 'G' onwards From engine suffix 'A' onwards 8:1 compression ratio 25 Cork washer for distributor housing 1 52278 1 WB106041 1 CMF331 1 EMF331		(0) 10 0		-		
Driving shaft for distributor, top Distributor drive coupling Cork washer for distributor housing Fixing Cork washer for distributor housing Spring washer Det boil (1 UNC x 9.76") to adaptor Sparking plug Distributor drive sparking plug Joint washer for sparking plug Suppressor for sparking plug Joint washer for sparking plug Sparking plug cover Suppressor for sparking plug Suppressor for sparking plug Suppressor and cover for sparking plug Masher for cable nut Suppressor and cover for sparking plug Kubber boot for suppressor Cable nut Washer for cable nut HT wire Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) Distributor lead set I GHT173 For Ducellier distributor		Set bolt (5/16" line x 2")	\ DIOCK	3	255227	
Driving shaft for distributor, top 24 Distributor drive coupling 25 Cork washer for distributor housing 26 Plain washer 27 Spring washer 28 Det bolt (1" UNC x 9.716")) to adaptor 29 Sparking plug 29 Sparking plug 29 Sparking plug 20 Joint washer for sparking plug 30 Joint washer for sparking plug 31 Suppressor for sparking plug 32 Sparking plug cover 33 Sealing ring for plug cover 34 Cuble nut 35 Suppressor and cover for sparking plug 36 Suppressor and cover for sparking plug 37 Rubber boot for cable nut 40 Rubber boot for cable nut 40 Rubber boot for cable nut 40 Rubber boot for cable nut 41 Mire 42 Ad0408 43 Distributor to coil 44 (nut connection for distributor, bush-in 45 connection for coil) 46 Chile nut 47 Connection for coil 48 Cable nut 49 Cable nut 50 Distributor teads est 60 Distributor lead set 60 Distributor lead set 70 Distributor lead set 71 Sealing ring type shaft. Up to engine suffix 'F' 7:1 72 Sparking Blade type coupling, From engine suffix 'G' onwards 73 Rublo6041 74 Resil compression ratio 61 GHF331 62 Sparking plug 62 A N12Y For 8:1 compression ratio 63 engines 64 Ad041 64 Ad441 65 214279 *) 66 Suppressor and cover for sparking plug 67 Sparking plug cover 68 Ad441 69 214279 *) 69 214279 *) 60 Suppressor and cover for sparking plug 75 Suppressor and cover for sparking plug 76 Suppressor and cover for sparking plug 77 Sparking plug cover 78 Sparking plug cover 89 Cable nut 99 214279 *) 80 Suppressor and cover for sparking plug 90 214279 *) 91 Sparking plug 91 Ad0441 92 214279 *) 92 14279 *) 93 Sparking plug cover 94 Sparking plug cover 95 Sparking plug cover 96 Sparking plug cover 97 Sparking plug cover 99 214279 *) 90 Sparking plug cover 99 214279 *) 90 Sparking plug cover 90 Sparking plug cover 90 Sparking plug cover 90 Sparking plug cover 99 Sparking plug cover 90 Sparking plug cover 90		occ bote (5) it om x a /	,	•	20042	
Postributor drive coupling 1 549611 Blade type coupling. From engine suffix 'F' 7:1 compression ratio only rowards From engine suffix 'A' onwards 8:1 compression ratio engine Spring washer Fixing 1 WB106041 1 GHF331 2:3205	23	Driving shaft for distribut	or ton	1	247806	
Distributor drive coupling Distributor drive coupling. For Blade type coupling. Suffix 'A' onwards 8:1 compression Distributor drive coupling. For mengine suffix 'A' onwards 8:1 compression Distributor drive coupling. For distributor Distributor drive coupling. For distributor and in the property of the property	23	billying shall for discillat	or cop	•	247000	
Distributor drive coupling Blade type coupling. From engine suffix 'G' onwards From engine suffix 'G' onwards From engine suffix 'A' onwards 8:1 compression ratio Cork washer for distributor housing Plain washer From engine suffix 'A' onwards 8:1 compression ratio Est bolt (3" UNC x 9/16") to adaptor Sparking plug For Resil compression ratio engines Sparking plug Joint washer for sparking plug Joint washer for sparking plug Joint washer for sparking plug Joint washer						
engine suffix 'G' onwards From engine suffix 'A' onwards 8:1 compression ratio 25 Cork washer for distributor housing 26 Plain washer Fixing 1 WB106041 27 Spring washer distributor 1 GHF331 28 Set boilt (\frac{1}{2}\triangle UNC x 9.716\triangle) to adaptor 25,3205 Sparking plug 4 NB For 7:1 compression ratio engines 29 Sparking plug 4 N12Y For 8:1 compression ratio engines 30 Joint washer for sparking plug 4 240138 * Alternative 25,3205 Sparking plug cover 4 2402 to 5 lines 33 Sealing ring for plug cover 4 2402 to 5 lines 34 Cubile nut 9 214278 * 9 214278	24	Distributor drive counling		1	549611	
From engine suffix 'A' onwards 8:1 compression ratio 25 Cork washer for distributor housing 26 Plain washer Fixing 1	L 7	bisting at the cooping		•	343011	
conwards 8:1 compression ratio 25 Cork washer for distributor housing 26 Plain washer						
Cork washer for distributor housing 26 Plain washer 27 Spring washer 28 Set bolt (2" UNC x 9/16")) to adaptor 29 Sparking plug 29 Sparking plug 30 Joint washer for sparking plug 31 Suppressor for sparking plug 32 Sparking plug cover 33 Sealing ring for plug cover 34 Cable nut 35 Suppressor and cover for sparking plug 36 Suppressor and cover for sparking plug 37 Rubber boot for cable nut 38 Washer for cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 50 Silver sparking plug 51 Silver sparking plug 62 A Silver sparking plug 63 Suppressor and cover for sparking plug 64 Suppressor and cover for sparking plug 65 Silver sparking plug 66 Suppressor and cover for sparking plug 67 Sparking plug cover 68 Silver sparking plug 69 Silver sparking plug 60 Silver sparking plug 61 Silver sparking plug 61 Silver sparking plug 61 Silver sparking plug 62 Sparking plug 62 Sparking plug 63 Sparking plug 64 V0441 64 Silver sparking plug 64 Silver sparking plug 64 Silver sparking plug 64 Silver sparking plug 65 Silver sparking plug 65 Silver sparking plug 65 Silver sparking plug 65 Silver sparking plug 66 Silver sparking plug 67 Silver sparking plug 67 Silver sparking plug 68 Silver sparking plug 69 Silver sparking plug 60 Silver sparking plug 60 Silver sparking plug 60						
25 Cork washer for distributor housing 26 Plain washer						
Plain washer Fixing 1 WB106041 1 GHF331 252 bolt (1 UNC x 9/16") to adaptor Sparking plug 4 N12Y For 8:1 compression ratio engines 4 N12Y For 8:1 compression ratio engines 4 A0441 Suppressor for sparking plug 4 A0441 A18 A	25	Cork washer for distributor	housing	1	52278	
Spring washer distributor 1 GHF331 25 3205 25 25 25 25 25 25 25 25 25 25 25 25 25						41
Set boilt (2" UNC x 9/16")) to adaptor Sparking plug Sparking plug Sparking plug Joint washer for sparking plug Suppressor for sparking plug Sparking plug cover Sparking						••
Sparking plug Sparking plug Sparking plug Sparking plug Joint washer for sparking plug Suppressor for sparking plug Sparking plug cover Sparking plug		Set bolt (3" UND x 9.76")) to adaptor			
29 Sparking plug 4 N12Y For 8:1 compression ratio engines 30 Joint washer for sparking plug 4 40441 31 Suppressor for sparking plug 4 240138 *) Alternative 32 Sparking plug cover 4 214262) to 5 lines 33 Sealing ring for plug cover 4 90213172) below 34 Cable nut 9 214278 *) 35 Washer for cable nut 9 214279 *) 36 Suppressor and cover for sparking plug 4 WCX600 *) Alternatives to 37 Rubber boot for suppressor 4 240408) 5 lines above 38 Cable nut 5 214278 *) 39 Washer for cable nut 5 507001) HT wire 4 80603+ Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 1 GHT173 For Ducellier distributor			, daapto.			For 7:1 compression ratio
Sparking plug 30 Joint washer for sparking plug 31 Suppressor for sparking plug 32 Sparking plug cover		opariting prog		•		· ·
Joint washer for sparking plug 30 Joint washer for sparking plug 31 Suppressor for sparking plug 32 Sparking plug cover 33 Sealing ring for plug cover 34 Cable nut 35 Washer for cable nut 36 Suppressor and cover for sparking plug 37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 50 Suppressor 41 Suppressor 52 Suppressor 53 Sealing ring for plug cover 54 Suppressor 55 Suppressor and cover for sparking plug 56 Suppressor and cover for sparking plug 57 Rubber boot for suppressor 68 Suppressor 79 Suppressor 70 Suppressor 70 Suppressor 71 Suppressor 72 Suppressor 73 Suppressor 74 Suppressor 75 Suppressor 75 Suppressor 76 Suppressor 77 Suppressor 78 Suppressor 79 Suppressor 80 Suppressor 90 Supp	29	Sparking plug		4	N12Y	
Joint washer for sparking plug Suppressor for sparking plug Sparking plug cover Cuble nut Suppressor and cover for sparking plug Rubber boot for suppressor Cable nut Rubber boot for cable nut Suppressor As read Suppressor		opa		•		
Suppressor for sparking plug Sparking plug cover Sparking plug cover Sealing ring for plug cover Subject out Suppressor and cover for sparking plug Rubber boot for suppressor Rubber boot for cable nut Suppressor and cover for sparking plug Rubber boot for suppressor Rubber boot for cable nut Suppressor As read Suppressor As read Rubber boot for cable nut Suppressor As read Suppressor As read Rubber boot for cable nut Suppressor As read Rubber boot for cable nut Suppressor As read Rubber boot for cable nut As read Rubbe	30	Joint washer for sparking	plua	4	40441	
Sparking plug cover Sealing ring for plug cover Cuble not Washer for cable nut Rubber boot for suppressor Rubber boot for cable nut HT wire Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) Distributor lead set 4 214262) to 5 lines 4 90213172) below 9 214278 **) Alternatives to 1 214278 **) 5 214279 **) As read 80603+ 1 568766 GHT173 For Ducellier distributor						*) Alternative
33 Sealing ring for plug cover 34 Cuble nut 35 Washer for cable nut 36 Suppressor and cover for sparking plug 37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 4 90213172) below 9 214278 **) 4 WCX600 **) Alternatives to 4 240408) 5 lines above 1 214278 **) 1 Suppressor and cover for sparking plug 3 Washer for cable nut 5 214278 **) 4 Rubber boot for cable nut 5 507001) 4 WCX600 **) Alternatives to 4 240408) 5 lines above 5 214278 **) 6 Rubber boot for cable nut 7 Suppressor and cover for sparking plug 5 Suppressor and cover for sparking plug 6 WCX600 **) Alternatives to 7 Suppressor and cover for sparking plug 8 Suppressor and cover for sparking plug 9 214279 **) 9 Suppressor and cover for sparking plug 9 Suppressor and cover for sparki			J	4		
34 Cable not 35 Washer for cable nut 36 Suppressor and cover for sparking plug 37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 50 Ead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 9 214278 * 9 214279 * 9 2			i	4	902131	72) below
36 Suppressor and cover for sparking plug 37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 40 Rubber boot for cable nut 40 Ruber boot for cable nut 40 Ruber boot for cable nut 40 Ruber boot for cable nut 40 Rubber boot for cable nut 50 507001 568766 (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 4 WCX600 * 4 240408 5 214278 * 5 507001 7 See See See See See See See See See Se				9	214278	* . \$
36 Suppressor and cover for sparking plug 37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 40 Rubber boot for cable nut 40 Ruber boot for cable nut 40 Ruber boot for cable nut 40 Ruber boot for cable nut 40 Rubber boot for cable nut 50 507001 568766 (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 4 WCX600 * 4 240408 5 214278 * 5 507001 7 See See See See See See See See See Se	35	Washer for cable nut		ن	214279	*)
37 Rubber boot for suppressor 38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 50 El 14278 * 514279 * 50 El 1 El 2000 41 Distributor for distributor, push-in connection for coil) 42 240408 5 lines above 52 214278 * 53 El 2000 54 El 2000 55 El 2000 56 El 2000 56 El 2000 56 El 2000 56 El 2000 66 El 2000 67 El 2000 68 El 2000 69 El 2000 60 El			arking plug			
38 Cable nut 39 Washer for cable nut 40 Rubber boot for cable nut 5 214279 *) 41 Distributor lead set 5 214279 *) 5 507001) 42 As read 80603+ 1 568766 1 568766 1 GHT173 For Ducellier distributor	37		J , J	4	240408) 5 lines above
39 Washer for cable nut 40 Rubber boot for cable nut 5 507001 HT wire 48 Read, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 5 214279 *) 5 507001 1 568766 1 568766 1 GHT173 For Ducellier distributor	38			5	214278	* j
40 Rubber boot for cable nut HT wire Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 5 507001 As read 80603+ 1 568766 1 GHT173 For Ducellier distributor						•
HT wire Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set As read 80603+ 1 568766 1 568766 3 GHT173 For Ducellier distributor						j
Lead, HT, distributor to coil (nut connection for distributor, push-in connection for coil) 41 Distributor lead set 1 568766 1 GHT173 For Ducellier distributor				_		•
<pre>(nut connection for distributor, push-in connection for coil) 41 Distributor lead set</pre>		· -	41	1		
connection for coil) 41 Distributor lead set 1 GHT173 For Ducellier distributor				-		
41 Distributor lead set 1 GHT173 For Ducellier distributor						
	41			1	GHT173	For Ducellier distributor
		Distributor lead set		1	GHT130-	++ For Lucas distributor

⁺ For distributor with acorn nut connections
++ For distributor with push-in type connections
* NO LONGER SERVICED


ELECTRICAL - Distributor and Starter Motor, 21 litre Petrol

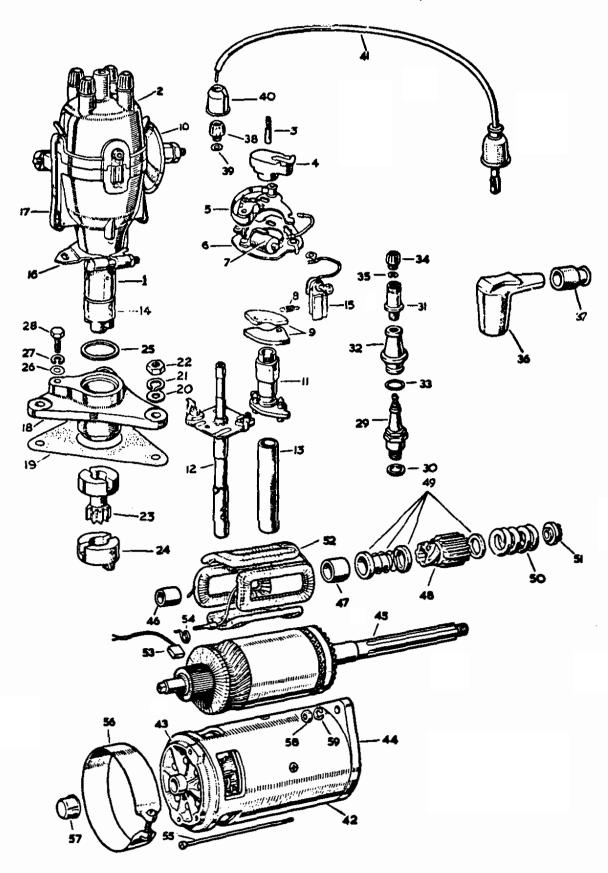

PLA REF.	· •	QTY. PART No. REMARKS
42	STARTER MOTOR COMPLETE	1 GEU419
43	End cover bracket, commutator	1 AEU1586
14	Bracket, drive end	1 608174
15	Armature	1 90608175
+3	Bush kit	1 608172
18		1 244711
19		1 607932
0		1 745007
, 0		1 AEU1367
33	Retention kit, armature shaft Brush set	1 GSB112
))		
	Sundry parts kit	1 90608178
	COMPONENT PARTS FOR STARTER MOTOR COMPLETE	GEU411 WHICH IS NO LONGER AVAILABLE
3	Bracket, commutator end	1 244706
4	Bracket, drive end	1 244713
5	Armature	1 244715
15	Bush, commutator end	1 242958
17	Bush, pinion end	1 244714
8	Pinion and sleeve	1 244711
19	Pinion retaining kit	1 607932
0	Main spring for pinion	1 7H5007
51	Nut for pinion	1 244709 For armature
	Cup) For armature	LU255463 1 90606219 *) For armature
2	Circlip) shaft Field coil for starter	1 606220) LU54245913 1 262861 *
3	Brush set	1 GSB103
3	Spring set for brushes	
55	Bolt for bracket	1 601754 2 244717 *
56 56		
ים 7	Cover band	1 244705 *
) /	Grease cap	1 243095
	Sundry parts kit	1 244718
8	Nut (}" UNF)) Fixing	2 GHF202
9	Spring washer) starter motor to	2 GHF333
	Fan disc washer) flywheel housing	1 90512305

^{*} NO LONGER SERVICED


ELECTRICAL - Distributor and Starter Motor, 2.6 litre Petrol

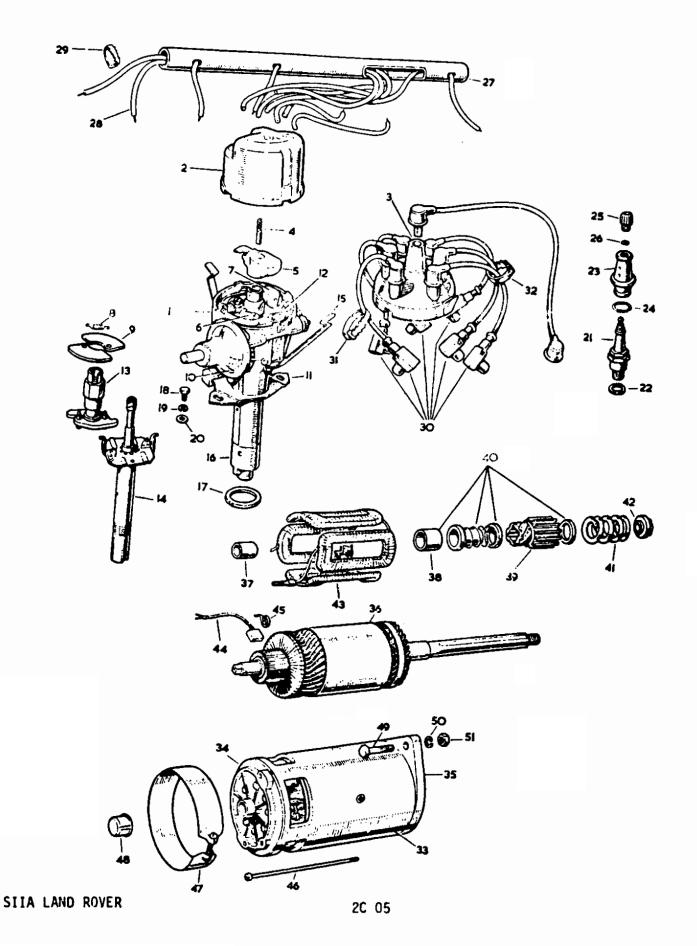

J961

	DISTRIBUTOR COMPLETE	1			
		•	541492*	Early type with side cable	Distributor and fittings are not inclu-
	DISTRIBUTOR COMPLETE	1	ERC545	fixing Late type with top cable fixing	ded in engine assembly
2	Distributor cap	1	GDC 101	For distrib	utor 541492
3	Distributor cap	i	GDC 115		utors 568729,
4	Brush and spring for cap	1	262703		
5	Rotor arm, standard	i	GRA102	For distrib	utors 541492, 735
	Rotor arm, speed limiting	1	CRA119	For distrib	utor ERC545
6	Contact points	1	GCS107	For distrib 568729	utors 541492,
	Contact points	1	GCS 101	For distrib ERC545	utors 597735,
7	Condenser	٦	GSC111		
8	Auto advance spring set	1		For distrib	utors 541492,
	Auto advance spring set	1	RTC1019*		utors 597735,
9	Auto advance weight	1	539572		
10	Vacuum unit	1	539573	For distrib 597735, ERC	utors 541492 , 545
	Vacuum unit	3	606574*	For distrib	
11	Clamping plate	1	245857*		
12	Base plate for contact breaker	1	502282	For distrib	utors 541492.
	Base plate for contact breaker	1	90607607		utors 597735
13	Cam	1	539578*		
14	Shaft and action plate	1	539575*		
15	Clip for cover	i	539575*		
16	Driving dog	1	513679		
	Sealing ring	1	9938*		
	Sundry parts kit	1	245015		
	Cork washer for distributor housing	1	52278		
	Set bolt (1" UNF x 9/16")) Fixing	1	253205		
	Spring washer) distributor to	1	GHF 331		
	Plain washer) cylinder block	1	WB106041		
	Distributor heat shield	Ţ	587001		
	Bolt (1" UNC x 9/16"))]	253205		
	Plain washer) Fixing heat shield	1	WB106041		
	Spring washer) to distributor flange Nut (1" UNC)]]	GHF331 GHF207		
	nuc (a one)	ı	onr 207		

^{*} NO LONGER SERVICED

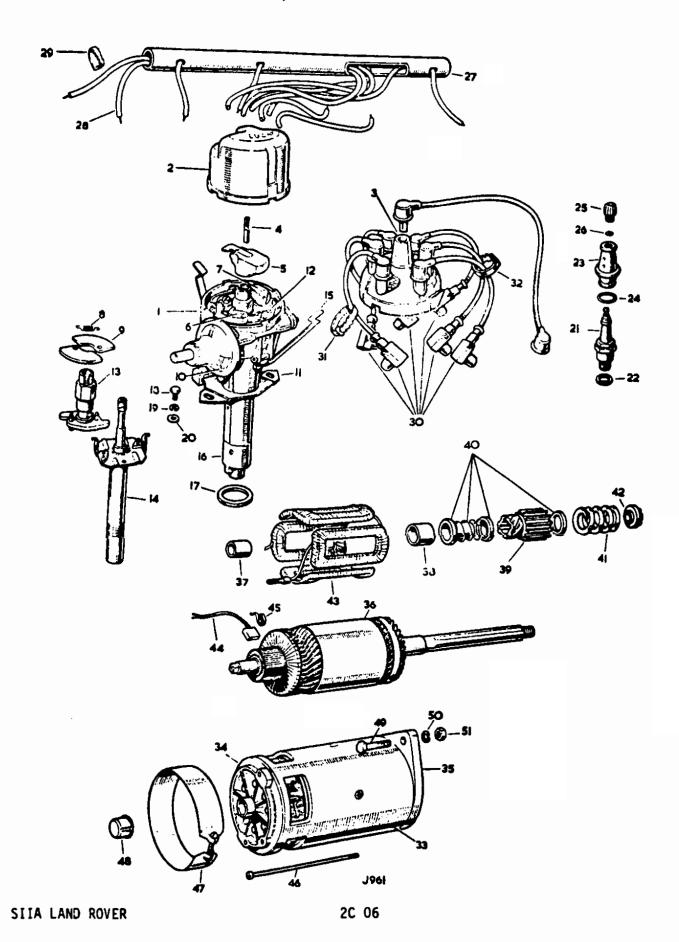


PLA	E		
REF.	1 2 3 4 DESCRIPTION	QT	IY. PART No. REMARKS
21	Sparking plug	6	N5
22	Washer for plug	6	40441
23	Cover for sparking plug	6	214262)
24	Rubber sealing ring for plug cover	6	90213172 For use in conjunction
25	Cable nut	6	214278 *) with early type
23	Rubber boot for cable nut	6	506679) distributor with
26	Washer for cable nut	6	· · · · · · · · · · · · · · · · · · ·
		9	
27	Ignition wire carrier	!	231234) fixing 558321 *\
28	Sparking plug lead set	ŀ	558321 *)
29	Cable cleat securing No.1 plug lead and coil		
	leads	ı	240429)
	Cable cleat securing Nos.1, 2 & 3 plug leads to	_)
	coil lead	1	240429)
30	Sparking plug lead set with integral spark plug	_) For use in conjunction
	covers	1	GHT127) with late type
31	Cable cleat) Securing plug and	4	240429) distributor with top
32	Cable cleat) coil leads	1	240428) cable fixing and coil) with 'push-in'
) connection.
	Smark plug lead conversion set with integral) For use in conjunction
	plug covers	1	574144 @) with late type
	Cable cleat) Securing plug and	4	240429 0) distributor with top
	Cable cleat) coil leads	ĺ	240428 @) cable fixing and coil
	,	٠) with terminal nut
) connection.
			<i>j</i>

[@] To enable latest type spark plug leads with integral covers to be fitted to vehicles with early type distributor and terminal nut type ignition coil, part numbers GDC115, 574144, 240429 and 240428 are required.


^{*} NO LONGER SERVICED

DISTRIBUTOR AND STARTER, 2.6 litre Petrol

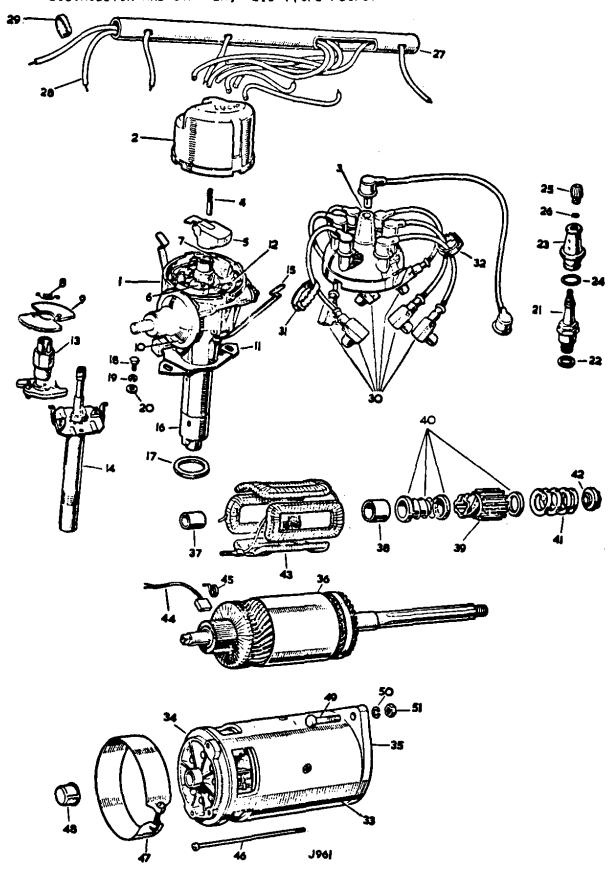

PLA'	-	OTY, PART No. REMARKS	
33	STARTER MOTOR COMPLETE	GEU419	
34	End cover bracket, commutator	AEU1586	
35	Bracket, drive end	608174	
36	Armature	90608175	
-	Bush kit	608172	
39	Pinion and sleeve	244711	
40	Pinion retaining kit	607932	
41	Main spring for pinion	7H5007	
	Retention kit, armature shaft	I AEU1367	
44	Brush set	I GSB112	
	Sundry parts kit	90608178	
	COMPONENT PARTS FOR STARTER MOTOR COMPLETE GEU411	HICH IS NO LONGER AVA	ILABLE
34	Bracket, commutator end	1 244706	
35	Bracket, drive end	244713	
36	Armature	244715	
37	Bush, commutator end	1 242958	
38	Bush, pinion end	244714	
39	Pinion and sleeve	1 244711	
40	Pinion retaining kit	1 607932	
41	Main spring for pinion	1 7H5007	
42	Nut for pinion	l 244709 For armatur	е .
	·	LU255463	
	Cup) For armature	1 90606219 *) For ar	
	Circlip) shaft	1 606220) LU5424	15913
43	Field coil for starter	1 262851 *	
44	Brush set	1 GSB103	
45	Spring set for brushes	1 601754	
46	Bolt for bracket	2 244717 *	
47	Cover band	1 244705 *	
48	Grease cap	1 243095	
	Sundry parts kit	1 244718	
	Set bolt (a Whit x 1"))	1 215703	
49	Bolt (3" BSF x 13")) Fixing starter motor	1 250543	
50	Spring washer) to flywheel housing	2 GHF333	
51	Nut (a BSF)	1 2827	


^{*} NO LONGER SERVICED

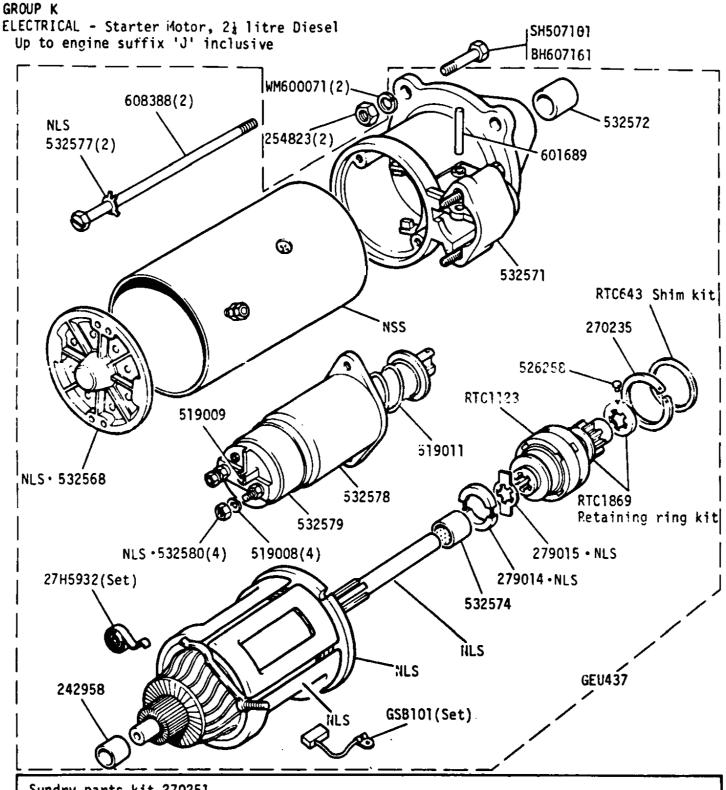

Sundry parts kit 270251 Starter motor complete GEU430 Terminal eyelet for starter cable 560874 Insulating boot for starter terminal 560875 Clip for starter cable 575082 • NLS

Fully sealed type Optional equipment see 2C 09 for details of components.

ELECTRICAL - Starter Notor, 21 litre Diesel From engine suffix 'K' onwards

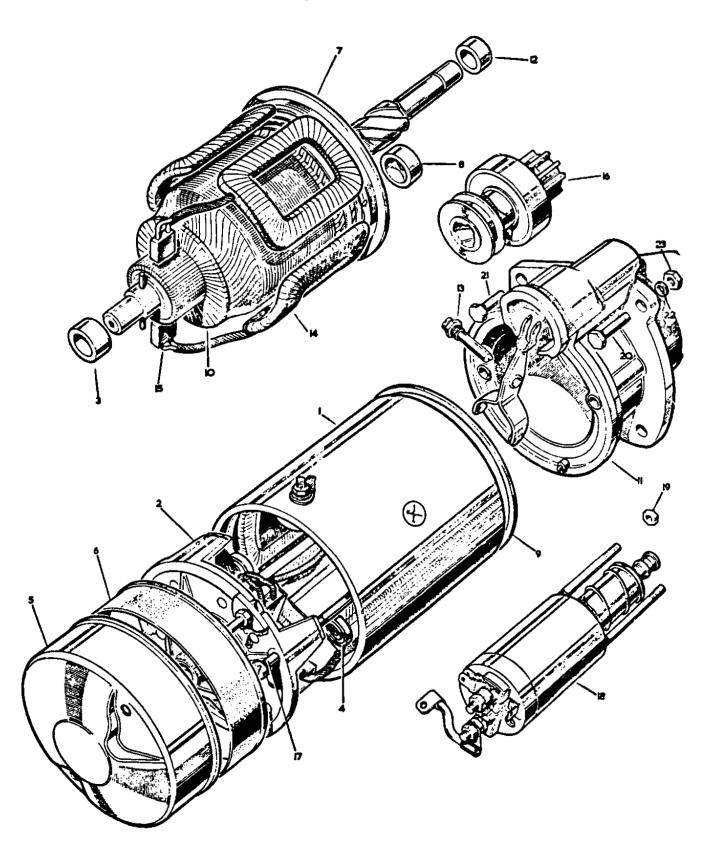


PLAT REF.	E 1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS
	From engine suffix 'K' onwards.			
1	STARTER MOTOR COMPLETE	1	GEU430	Fully sealed type (see footnote)
2	Bracket, commutator end	1	37H8531	
_	Bracket, commutator end	1	606504	For semi sealed starter
3	Bush, commutator end	i	608304	
4	Spring set for brushes	1	_	
5	Bracket cover kit, commutator end	i	JS370	For fully sealed starter
-	Cover band or starter	ì	606505	For semi sealed starter
6	Sealing ring for cover, commutator end	i	37H7618	· · · · · · · · · · · · · · · · · · ·
7	Intermediate bracket kit	i	607747	For fully sealed starter
•	Intermediate bracket	i	606506*	For semi sealed starter
8	Bush kit for bracket	j	608304	
9	Seal kit	1	607749	For fully sealed starter
10	Armature	i	605621	
11	Bracket for starter, drive end	1		For fully sealed starter
	Bracket for starter, drive end	i	606507*	For semi sealed starter
12	Bush kit for bracket	1	608304	
13	Pivot pan for starter motor	J		For fully sealed starter
. –	Pivot pin for starter	1	606508*	For semi sealed starter
14	Field coil for starter	1	279010*	
15	Brushes for starter motor, set	3	GSB101	
16	Drive (roller clutch) for starter	1	RTC254	
17	Bolt for starter motor	2	279019	For fully sealed starter
	Bolt for starter motor	2	608388	For semi sealed starter
18	Solenoid for starter motor	1	517474	
	Spindle and contact plate for starter			
	solenoid	1	605653	
19	Special nut for starter solenoid	2	605705	
	Sundry parts kit	1	605622	For fully sealed starter
	Sundry parts kit	1	270251	For semi sealed starter
20	Bolt (7/16" UNC x 1½"))	1	SH507101	
21	Set bolt (7/16" UNF x 2") Fixing	1	BH607161	
22	Spring washer) starter motor	3	WM600071	
23	Nut (7/16" UNF)	2	254823	

Footnote: Fully sealed type starter motor supplied as Service replacement for semi sealed type as fitted on Production.

^{*} NO LONGER SERVICED

ELECTRICAL - Dynamo and Fixings, 21 litre Petrol

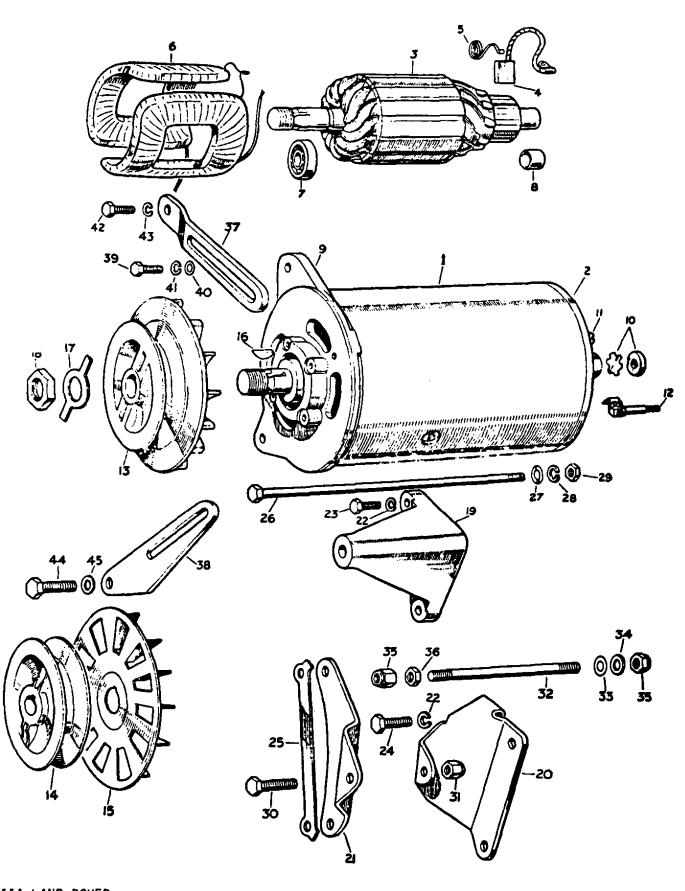


SIIA LAND ROVER

2C 10

DYNAMO COMPLETE	PLAT		QΤ	r. PART No.	REMARKS
Bracket, commutator end Brushes for dynamo Brushes for dynamo, set Brushes for dynamo, set Brushes for dynamo, set Brushes for brushes Spring set for brushes Spring set for brushes Spring set for brushes Brield coil for dynamo Brield coil for dynamo Brushes for dynamo Brushes for dynamo Brushes for dynamo, set Brushes for dynamo type C39 Bring set for brushes Brield coil for dynamo Brield coil for dynamo Brushes Brushes Brield coil for dynamo Brushes Brushes Brushes Brushes Brushes Brow dynamo type C39 For dynamo type C40 Brushes Brow dynamo type C39 For dynamo type C40 Brushes Brow dynamo					
2 Bracket, commutator end 3 Armature for dynamo	1	DYNAMO COMPLETE	1	GEU101	Type C40
2 Bracket, commutator end 3 Armature for dynamo		Bracket, commutator end	1	242669*	For dynamo type C39
3	2		1	514195	
## Brushes for dynamo, set 1 261483 For dynamo type C39 ## Brushes for dynamo, set 1 GGB102 For dynamo type C40 ## Spring set for brushes 1 261238 For dynamo type C40 ## Spring set for brushes 1 261238 For dynamo type C40 ## Field coil for dynamo 1 262860* For dynamo type C39 ## Field coil for dynamo 1 607141 For dynamo type C40 ## Bush, commutator end 1 271614 ## Bracket, drive end 1 242673* For dynamo type C39 ## Bracket, drive end 1 242673* For dynamo type C39 ## Bracket, drive end 1 24190* For dynamo type C39 ## Bush, commutator end 1 24190* For dynamo type C39 ## Bracket, drive end 1 242673* For dynamo type C39 ## Bracket drive end 1 271615* For dynamo type C39 ## Bracket drive end 1 242675 ## Bracket drive end 1 242673* For dynamo type C40 ## Bracket drive end 1 242673* For dynamo type C39 ## For dynamo 1 2532566 ## Bracket drive end 1 264436* For dynamo type C39 ## For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C39 ## For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C39 ## For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C39 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C40 ## Bracket drive end 1 264436* For dynamo type C4	3		1	509311	• • •
Brushes for dynamo, set 1 GGB102 For dynamo type C40 Spring set for brushes 1 261238 For dynamo type C39 Field coil for dynamo 1 262860* For dynamo type C39 Field coil for dynamo 1 262860* For dynamo type C39 For dynamo type C40 Field coil for dynamo 1 607141 For dynamo type C40 For dynamo type C39 For dynamo type C40 C39 For dynamo type C4			1	261483	For dynamo type C39
Spring set for brushes 1 261238 For dynamo type C39	4	Brushes for dynamo, set	1	GGB102	
Spring set for brushes Field coil for dynamo For dynamo type C40 For dynamo type C39 For dynamo type C39 For dynamo type C40 Oiler for dynamo Oiler for dynamo For dynamo type C40 For dynamo type C40 Oiler for dynamo For dynamo type C40 For dynamo typ			7	261238	
Field coil for dynamo	5	Spring set for brushes	3	RTC466	
Ball bearing, front 1 529221 8 Bush, commutator end 1 271614 8 Bracket, drive end 1 242673* For dynamo type C39 9 Bracket, drive end 1 514190* For dynamo type C40 0iler for dynamo 1 271615* For dynamo type C39 10 0iler for dynamo 1 514189 For dynamo type C40 11 Bolt for bracket 2 242675 Terminal, set 1 264436* For dynamo type C39 12 12 12 12 12 12 12 1			1	262860*	
8 Ball bearing, front 8 Bush, commutator end 8 Bracket, drive end 9 Bracket, drive end 1 242673* For dynamo type C39 1 514190* For dynamo type C40 0 iler for dynamo 1 271615* For dynamo type C40 0 iler for dynamo 1 514189 For dynamo type C40 11 Bolt for bracket 2 242675 Terminal, set 1 264436* For dynamo type C39 12 Terminal, set 1 532566 For dynamo type C39 13 Terminal, set 1 37H6836 14 Pulley for dynamo 1 522913 15 Fan for dynamo 1 522913 16 Woodruff key 1 1664 17 Lockwasher Fixing pulley 1 217781 18 Special nut 19 Spring washer to dynamo 21 Steady bracket for dynamo 22 Support bracket for dynamo 23 Steady bracket for dynamo 24 Set bolt (5/16" UNF x §")) support bracket 25 Locking plate for dynamo bolts 26 Bolt (5/16" UNF x 1§")) Fixing dynamo 30 Bolt (5/16" UNF x 1§")) Fixing dynamo 31 BX605111		Field coil for dynamo	1	607141	For dynamo type C40
Bush, commutator end 1 271614 Bracket, drive end 1 242673* For dynamo type C39 Bracket, drive end 1 514190* For dynamo type C40 Oiler for dynamo 1 271615* For dynamo type C39 Oiler for dynamo 1 514189 For dynamo type C39 Oiler for bracket 2 242675 Terminal, set 1 264436* For dynamo type C39 Terminal, set 1 532566 For dynamo type C39 Terminal, set 1		Ball bearing, front	1	529221	
9 Bracket, drive end 0iler for dynamo 1 271615* 1 271615* For dynamo type C40 For dynamo type C39 10 Oiler for dynamo 1 514189 10 For dynamo type C39 11 Bolt for bracket 1 242675 1 Terminal, set 1 264436* Sundry parts, set 1 37H6836 14 Pulley for dynamo 1 522913 15 Fan for dynamo 1 522913 16 Fan for dynamo 1 554055 Distance washer for fan 1 51664 17 Lockwasher	8		1	271614	
1 271615* For dynamo type C39		Bracket, drive end	1	242673*	For dynamo type C39
Oiler for dynamo 1 514189 Bolt for bracket Terminal, set 1 264436* Terminal, set 1 532566 Sundry parts, set 1 3746836 Pulley for dynamo 1 522913 15 Fan for dynamo 1 554055 Distance washer for fan 1 6 Woodruff key 1 1 1664 17 Lockwasher Fixing pulley Spring washer to dynamo 1 3746836 Alternatives 1 3466 20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer 23 Set bolt (5/16" UNF x §") support bracket 25 Locking plate for dynamo bolts 1 514189 For dynamo type C40 2 64436* For dynamo type C39 For dynamo type C40 2 52913 1 522913 1 524055 1 2578860 1 27781 277781 277781 277781 1 2778000 2 Spring washer 2 Sheosobil 2 Sheosobil 3 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x 12") Fixing dynamo 1 BX605111	9		1	514190*	
11 Bolt for bracket 2 242675 Terminal, set 1 264436* For dynamo type C39 12 Terminal, set 1 532566 For dynamo type C39 1 1 1 1 1 1 1 1 1		Oiler for dynamo	1	271615*	For dynamo type C39
Terminal, set Terminal, set Terminal, set Sundry parts, set Pulley for dynamo Stance washer for fan Kockwasher Fixing pulley Spring washer) to dynamo Special nut Support bracket for dynamo Steady bracket for dynamo Locking plate for dynamo bolts Solity (5/16" UNF x 12") Fixing dynamo Reference of the dynamo of		Oiler for dynamo			For dynamo type C40
Terminal, set Sundry parts, set 1 37H6836 14 Pulley for dynamo 1 522913 15 Fan for dynamo Distance washer for fan 1 554055 Distance washer for fan 2 533860 16 Woodruff key 1 1664 17 Lockwasher Fixing pulley Spring washer to dynamo 1 37H6836) Alternatives 18 Special nut 20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer Fixing anchor or 23 Spring washer Fixing anchor or 24 Set bolt (5/16" UNF x a") support bracket 25 Locking plate for dynamo bolts 26 Bolt (5/16" UNF x 1a") Fixing dynamo 30 Bolt (5/16" UNF x 1a") Fixing dynamo 1 BX605111	11	Bolt for bracket	2	242675	
Sundry parts, set 1 37H6836 14 Pulley for dynamo 1 522913 15 Fan for dynamo 1 554055 Distance washer for fan 2 533860 16 Woodruff key 1 1664 17 Lockwasher Fixing pulley 1 217781 Spring washer to dynamo 1 37H6836 Alternatives 18 Special nut Support bracket for dynamo 20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer Fixing anchor or 23 Spring washer Fixing anchor or 24 Set bolt (5/16" UNF x §") support bracket 25 Locking plate for dynamo bolts 1 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x 1§") Fixing dynamo BX605111			1		For dynamo type C39
Pulley for dynamo 1 522913 15 Fan for dynamo 1 554055 Distance washer for fan 2 533860 16 Woodruff key) 1 1664 17 Lockwasher) Fixing pulley 1 217781) Spring washer) to dynamo 1 37H6836) Alternatives 18 Special nut) 20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer) Fixing anchor or 23 Spring washer) Fixing anchor or 24 Set bolt (5/16" UNF x 3")) support bracket 25 Locking plate for dynamo bolts 1 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x 13")) Fixing dynamo 1 BX605111	iz	Terminal, set	1		For dynamo type (40)
15 Fan for dynamo Distance washer for fan 16 Woodruff key) 17 Lockwasher Fixing pulley 1 217781 Spring washer to dynamo 1 37H6836 Alternatives 18 Special nut 1 3466 20 Support bracket for dynamo 1 277999 21 Steady bracket for dynamo 1 278000 22 Spring washer Fixing anchor or 2 GHF332 24 Set bolt (5/16" UNF x 3") support bracket 2 SH605051 25 Locking plate for dynamo bolts 1 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x 12") Fixing dynamo 1 BX605111			•		
Distance washer for fan 16 Woodruff key 1664 17 Lockwasher Fixing pulley 1217781 Spring washer to dynamo 13746835 Alternatives 18 Special nut 13466 20 Support bracket for dynamo 1277999 21 Steady bracket for dynamo 1278000 22 Spring washer Fixing anchor or 2 GHF332 24 Set bolt (5/16" UNF x \(\frac{1}{2}\)) support bracket 2 SH605051 25 Locking plate for dynamo bolts 1501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x \(\frac{1}{2}\)") Fixing dynamo 1 BX605111					
1 1664 1 217781 217781 217781 37H6835 Alternatives 3466 20 Support bracket for dynamo 1 277999 21 Steady bracket for dynamo 1 278000 22 Spring washer	15				
17 Lockwasher Fixing pulley 1 217781 1 37H6836 Alternatives 1 37H6836 Alternatives 1 3466 20 Support bracket for dynamo 1 277999 21 Steady bracket for dynamo 1 278000 2					
Spring washer) to dynamo 1 37H6835) Alternatives 18 Special nut) 1 3466 20 Support bracket for dynamo 1 277999 21 Steady bracket for dynamo 1 278000 22 Spring washer) Fixing anchor or 2 GHF332 24 Set bolt (5/16" UNF x a")) support bracket 2 SH605051 25 Locking plate for dynamo bolts 1 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x la")) Fixing dynamo 1 BX605111			_		
18 Special nut) 20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer) Fixing anchor or 23 Set bolt (5/16" UNF x 3")) support bracket 25 Locking plate for dynamo bolts 26 Bolt (5/16" UNF x 12")) Fixing dynamo 37 Bolt (5/16" UNF x 12")) Fixing dynamo 38 Bolt (5/16" UNF x 12")) Fixing dynamo 39 Bolt (5/16" UNF x 12")) Fixing dynamo 10 BX605111	17	, , , , ,			
20 Support bracket for dynamo 21 Steady bracket for dynamo 22 Spring washer					Alternatives
21 Steady bracket for dynamo 22 Spring washer					
22 Spring washer			•		
24 Set bolt (5/16" UNF x 3")) support bracket 25 Locking plate for dynamo bolts 25 Locking plate for dynamo bolts 30 Bolt (5/16" UNF x 13")) Fixing dynamo 31 BX605111					
25 Locking plate for dynamo bolts 1 501198 Not required when front cover timing pointer is fitted 30 Bolt (5/16" UNF x 12")) Fixing dynamo 1 BX605111					
front cover timing pointer is fitted 30 Bolt (5/16" UNF x 12")					
pointer is fitted 30 Bolt (5/16" UNF x 1}")	25	Locking plate for dynamo bolts	1	501198	
30 Bolt (5/16" UNF x 13")					
		B 2. Ja 1940	_		pointer is fitted
31 Self-Tocking nut (5/16" UNF)) to front support 1 GHF242			1		
	31	Self-locking nut (5/16" UNF)) to front support	1	GHF242	

^{*} NO LONGER SERVICED

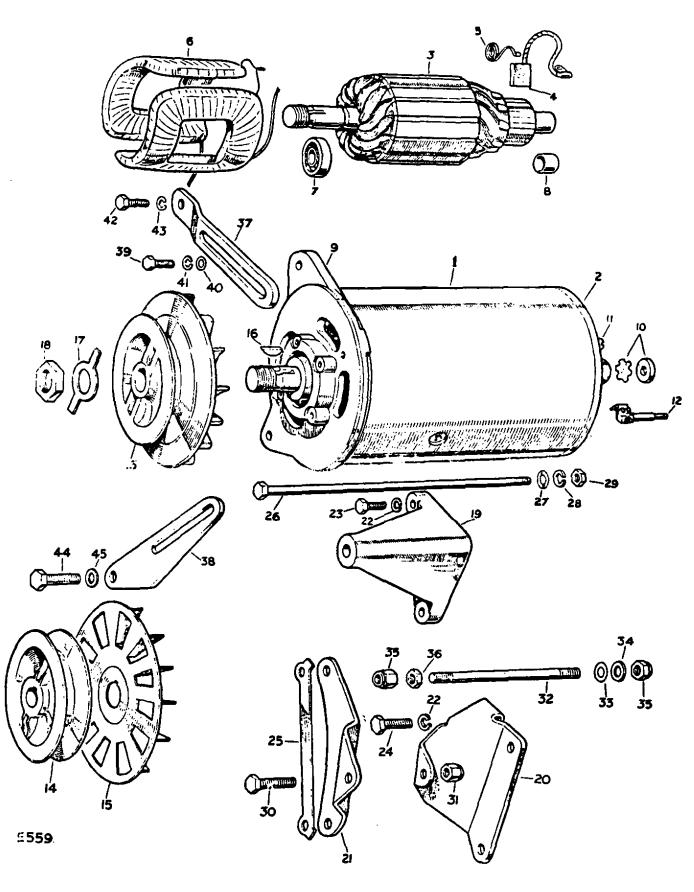


SIIA LAND ROVER

2C 11


PLA' REF.	· -	IPTION	_ ΩΤ	Y. PART No. REMARKS	
32	Special stud	1	1	526225	
33	Plain washer) Fixing dynamo	A/R	WB108051	
34	Plain washer) to support	2	RTC613	
35	Self-locking nut (5/16" UNF		2	GHF242	
36	Locknut (5/16" UNF))	ī	GHF201	
88	Adjusting link for dynamo	,	ĺ	514472	
39	Special bolt) Fixing		1	SH505071	
0	Plain washer) adjustin	g link	1	2256	
1	Spring washer) to dynam	_	j	GHF332	
4	Bolt (5/16" UNF x 31")) Fi		1	BH605261	
15		nk to front cover	1	2266	

GROUP K
ELECTRICAL - Dynamo, Sealed Bearing Type, 21 litre Petrol, 'Optional'

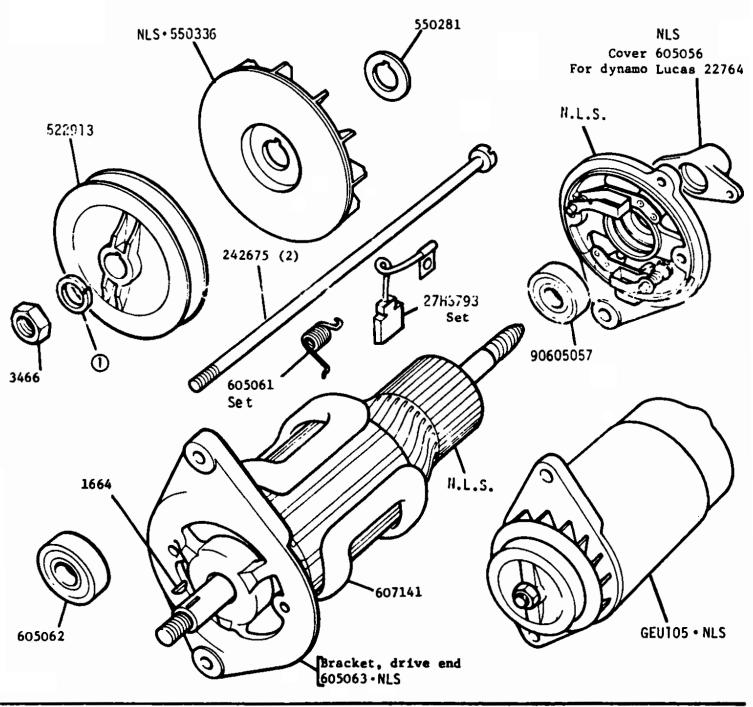

REMARKS
Sundry parts set 37H6836

ELECTRICAL - Dynamo and Fixings, 2.6 litre Petrol

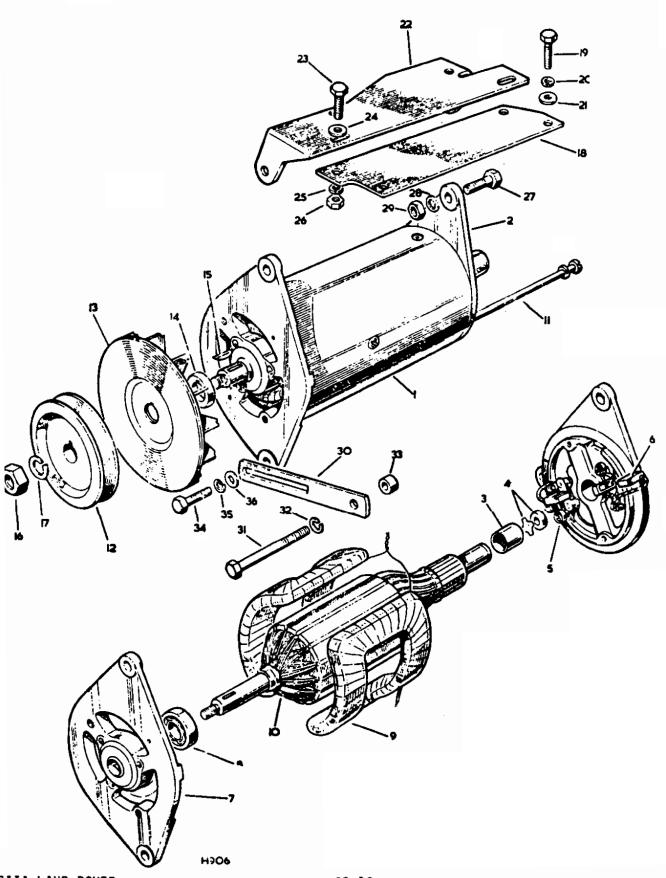


SIIA LAHD ROVER

1 DYNAMO COMPLETE 1 GEU104	
2 Bracket, commutator end 1 541313	
3 Bush for armature, commutator end 1 538628	
4 Oiler for dynamo 1 514189	
5 Springs, set, for brush tension 1 RTC466	
6 Brushes, set, for dynamo 1 GGB101	
7 Bracket, drive end 1 538629	
8 Ball bearing, drive end 1 529221	
9 Field coil for dynamo 1 538631 *	
10 Armature for dynamo 1 538630 *	
11 Bolt for bracket 2 538532	
Sundry parts kit 1 37H6836	
12 Pulley for dynamo 1 546287	
13 Fan for dynamo 1 554055	
14 Distance washer for fan 2 533860	
15 Woodruff key) 1 1664	
16 Special nut) Fixing pulley to dynamo 1 3466	
17 Spring washer) 1 37H6836	
18 Mounting Plate for dynamu 1 567761	
19 Set bolt (5/16" UNF x 1")) Fixing mounting 2 255426	
29 Spring washer) plate to 2 GHF332	
21 Plain washer) cylinder block 2 RTC613	
22 Anchor bracket for dynamo 1 532552	
23 Bolt (5/16" UNF X 1")) Fixing 2 255428	
24 Plain washer) anchor bracket 2 RTC613	
25 Spring washer) to 2 GHF332	
26 Nut (5/16" UNF)) mounting plate 2 GHF201	
27 Bolt (5/16" UNF x 1")) Fixing 2 255428	
28 Spring washer) dynamo to 2 GHF332	
29 Nut (5/16" UNF)) anchor bracket 2 GHF201	
30 Adjusting link for dynamo 1 564162	
31 Set bolt (5/16" UNF x 2½")) Fixing adjusting 1 255237	
32 Spring washer) link to 1 GHF332	
33 Distance piece) cylinder block 1 4075	
34 Set bolt (5/16" UNC x &")) Fixing adjusting 1 SH505071	
35 Spring washer) link to 1 GHF332	
36 Plain washer) dynamo 2 2266	

^{*} NO LONGER SERVICED


GROUP K
ELECTRICAL - Dynamo, 21 litre Diesel

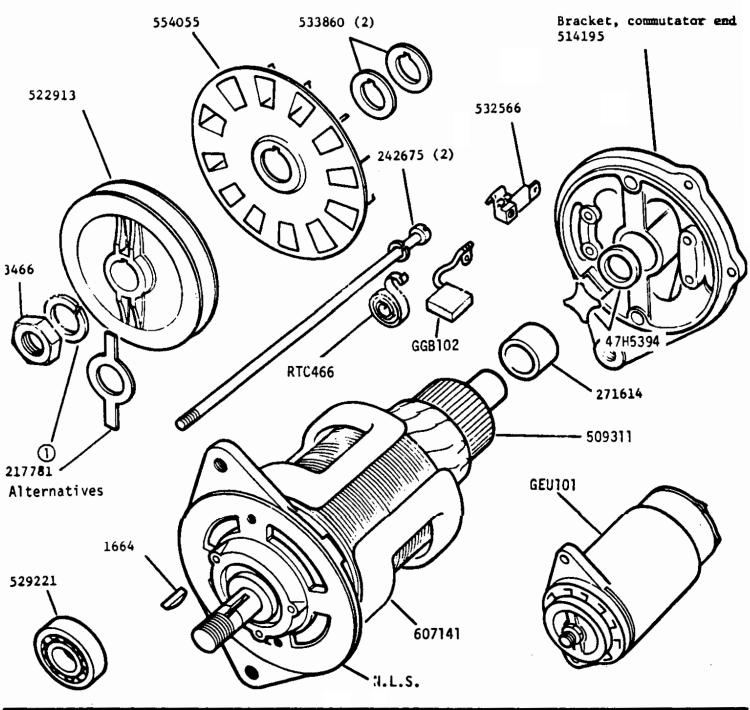

REMARKS


Sundry parts set 37H6836 ①

GROUP K
ELECTRICAL - Dynamo Fixings, 21 litre Diesel

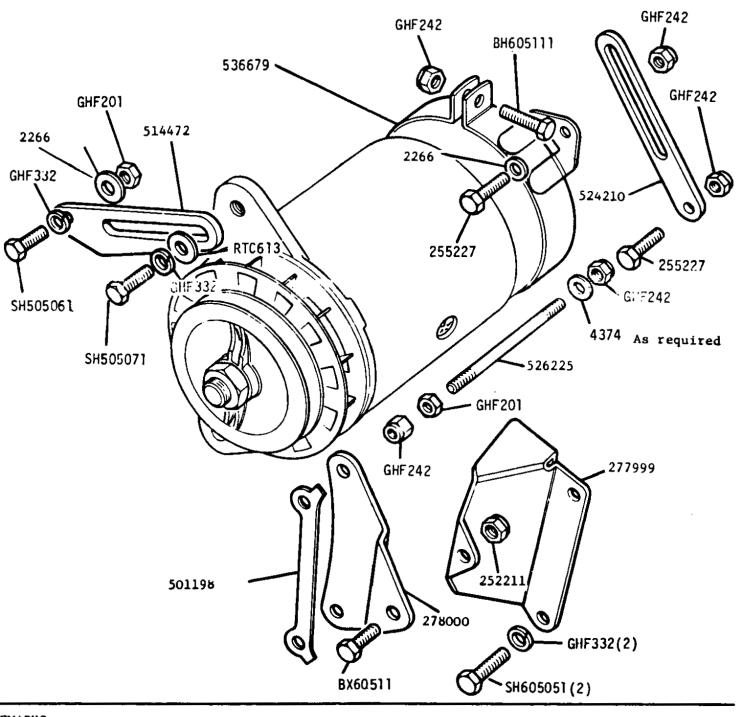


EMARKS

GROUP K
ELECTRICAL - Dynamo, Sealed Bearing Type, 21 litre Diesel, Optional

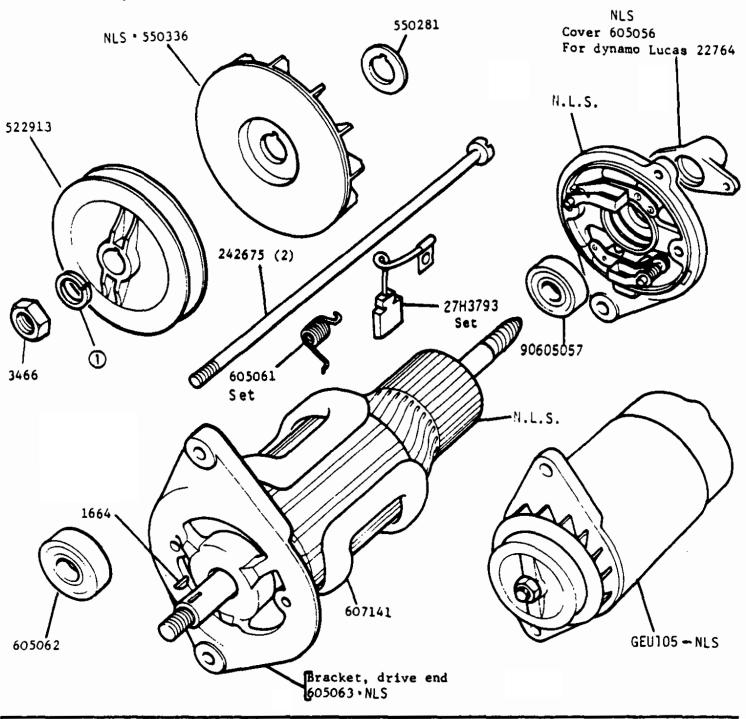

Sundry parts set 37H6836 (1)

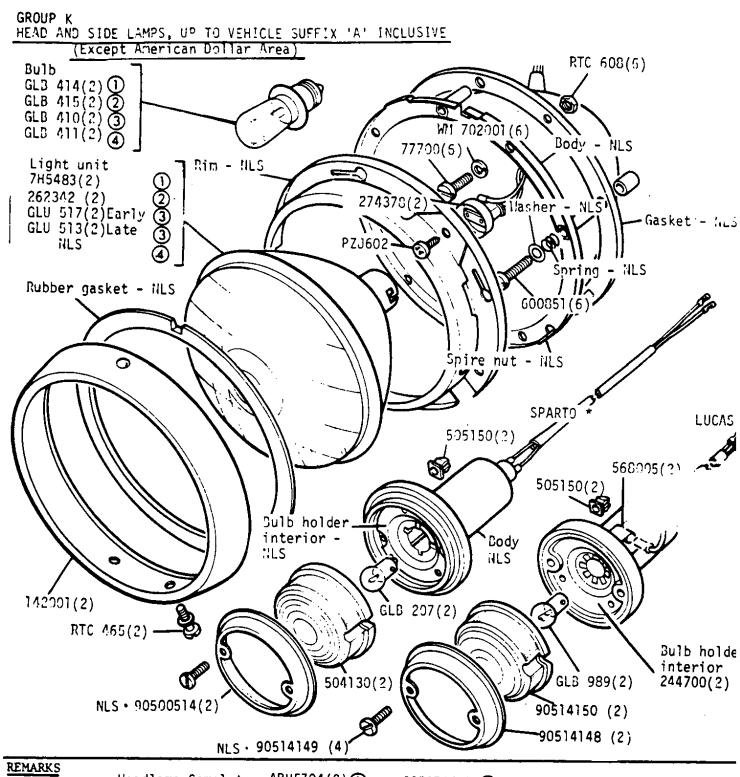

Headlamp Complete: ABU5794(2) 605070(2) 0.NLS

AEU1061(2) 3 RTC445(2) 4

5:de lamp Complete: Sparto 505144(2)-NLS

Lucas 510179(2) Alternatives


🛈 RH Stg

2 LH Stg Except Europe

3 11 Stg Europe except France

L! Stg France


GROUP K
STOP TAIL AND NUMBER PLATE LAMP, UP TO VEHICLE SUFFIX 'A' INCLUSIVE
(Except American Dollar Area)

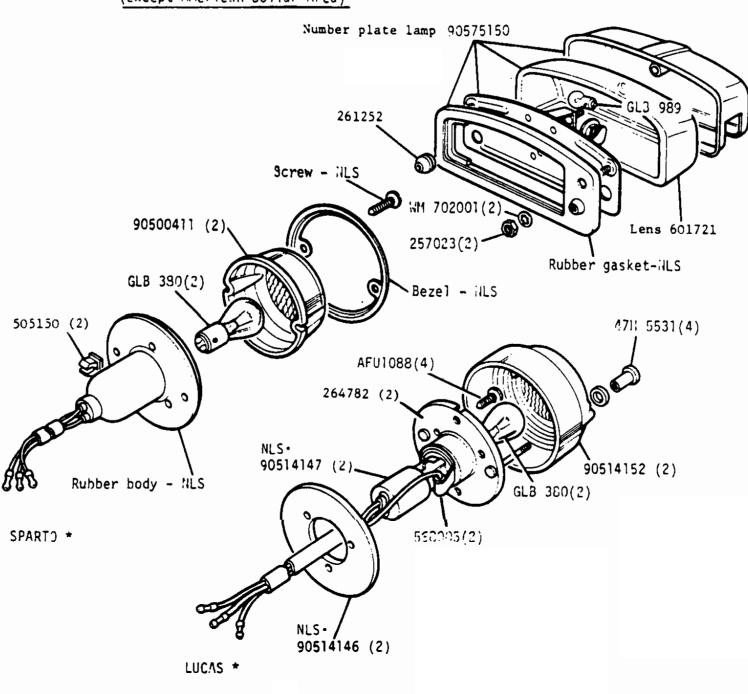

REMARKS

* Stop tail lamp: Sparto 276317(2)•NLS Alternatives Lucas 510176(2)

HEAD, SIDE, TAIL AND FLASHER LAMPS. From vehicle suffix 'B' onwards (Except American Dollar Area)

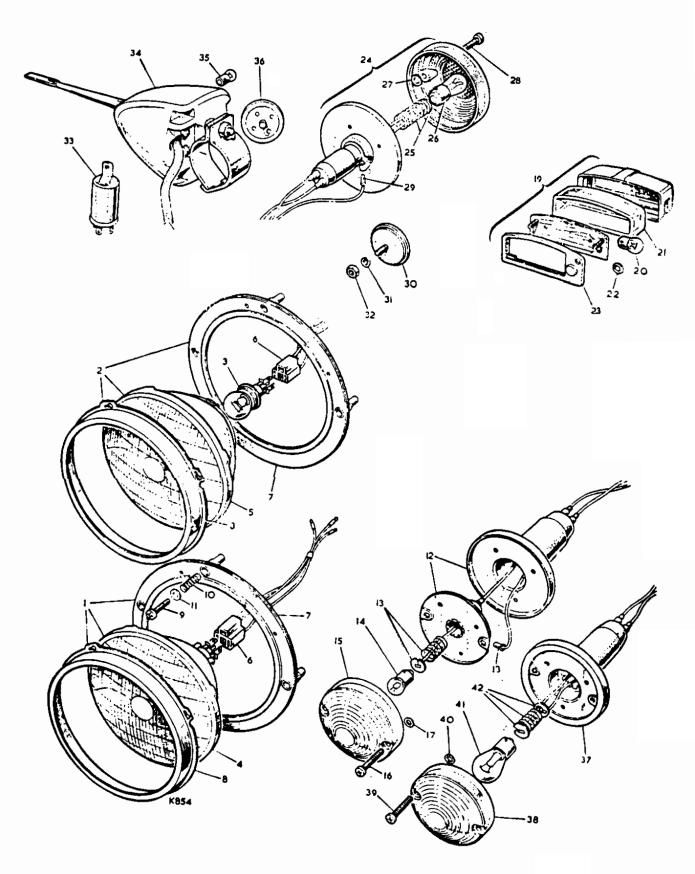

PLA	From Venicle Surfix 'B' Onwards, (Exc	CEI	L AMETICA	borrar	Area)	
REF		Q1	Y. PART No.	REMARKS		
1	HEADLAMP COMPLETE, SEALED BEAM	2	536006*	RH Stg	-	1
•	HEADLAMP COMPLETE, SEALED BEAM	2	536111		Except Europe	ľ
2	HEADLAMP COMPLETE	2	536112	1H Sta	Europe except	
2	READLAMP COMPLETE	4	330112		and Austria	ļ
	WELD LAND COURT FOR	_	506110			
	HEADLAMP COMPLETE	2	536113		France only	He ad-
	HEADLAMP COMPLETE	2		_	Austria only	lamps
3	Bulb for headlamp	2	GLB410	LH Stg	Europe except	in
					France	radi-
	Bulb for headlamp	2	GLB411	LH Stg	France only	ator
4	Light unit, sealed beam	2	GLU104	RH Stg		grille
	Light unit, sealed beam	2	GLU133		Except	panel
	ergno un of scared seam	_	•••		Europe	up to
_	Light unit, bulb type	2	GLU513	IH Sta	Europe	vehicle
5		2	536116	Lii Jig	cui ope	suffix
6	Adaptor and leads for headlamp					'F'
7	Rim for light unit	2	601999*			
8	Rim for headlamp, chrome	2	545149*			inclu-
9	Screw) For light unit	6	600024			sive
10	Spring for screw) adjustment and	6				
11	Fibre washer for screw) fitting headlamo to	6	600026			l .
) front grille				-	4
	UCADIAND CONDICTE CEALED DEAN	2	07110400	DII CA-	-	7
	HEADLAMP COMPLETE, SEALED BEAM	2	27H8499	_		1
	HEADLAMP COMPLETE, SEALED BEAM	2	27H82O7		except Europe	
	HEADLAMP COMPLETE, BULB TYPE	2			Europe	
	Bulb for headlamp	2	GLB410		Europe except	Ì
				France		
	Bulb for headlamp	2	GLB411	LH Stg	France only	
	Light unit, sealed beam	2	GLU104	RH Stg		Head-
	Light unit, sealed beam	2	GLU133	LH Stg	except Europe	lamps
	+ Light unit, sealed beam	2	٦	LH Stg	Europe except	in win
	+ This part is no longer available, use GLU513 and	GL	B410		and Italy	From
	Light unit, bulb type	2	GLU513		France and	vehicl
				Italy		suffix
	Adaptor and leads for headlamp	2	600226	•	•	'G'
	Retaining rim for light unit	2	515218			onward
	Special screw, fixing retaining rim	6	RTC 464			, ,,,,,,
	Gasket for headlamp	ž	531586			
		6				[
	Screw (10 UNF x &")) Fixing		78291			ì
	Spring washer) headlamp to	6	WM702001			1
	Nut (10 UNF)) front wing	0	257023		-	j
	SIDE LAMP COMPLETE	2	5361177		٦	
	Bulb holder and body complete	2		n to 40	hiclo	
			542037 U	n co ve	enicie	
	Bulb for side lamp	2	GLB207 s			
	Lens for side lamp	2	536151 h	nciusiv		
	Special screw fixing lens	4	542038		Sparto	
	SIDE LAMP COMPLETE	2	5751194		type	
	Bulb holder and body complete	2	606499 F			
	Bulb for side lamp	2	GLB207 s		G'	
	Lens for side lamp	2	536151 o	nwards		
	Special screw fixing lens	4	542038		1	
					-	

^{*} NO LONGER SERVICED

HEAD, SIDE, TAIL AND FLASHER LAMPS. From vehicle suffix 'B' onwards (Except American Dollar Area)


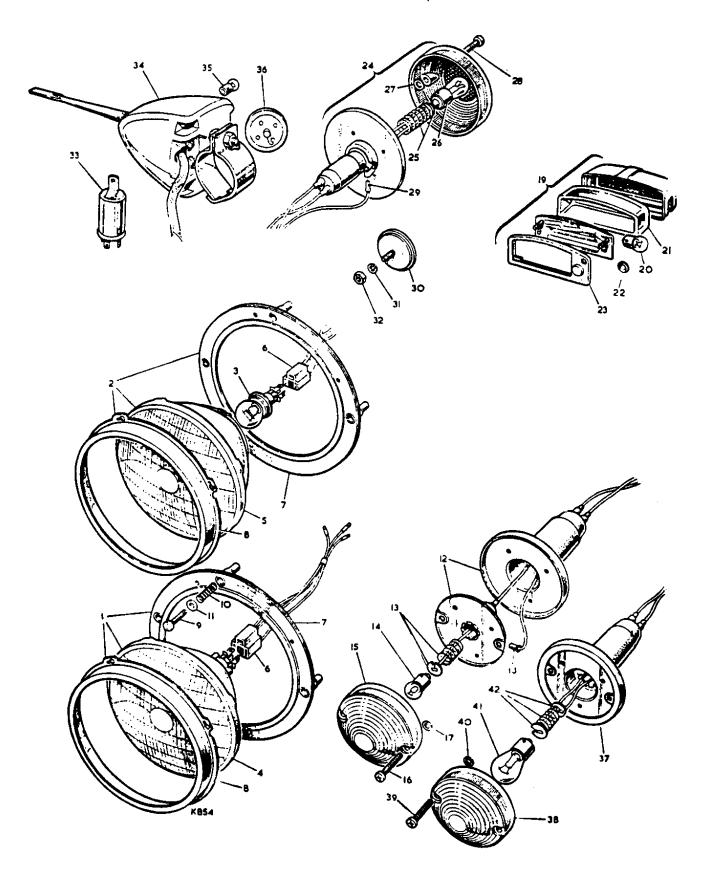


PLATE REF. 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
SIDE LAMP COMPLETE - Superseded by 589403 Bulb holder and base complete Bulb for side lamp Lens for side lamp Special screw, fixing lens SIDE LAMP COMPLETE - Superseded by 589403 Bulb holder and base complete Bulb for side lamp Lens for side lamp Special screw fixing lens SIDE LAMP COMPLETE Bulb for side lamp	2 WIPAC TYPE - 2 542049 Up to vehicle 2 GLB207 suffix 'F' 2 589283 inclusive 4 542042 2 WIPAC TYPE - 2 90606500 From 2 GLB207 vehicle 2 589283 suffix 'G' 4 542042 onwards for 2 589403 WIPAC TYPE France 2 GLB989
Lens for side lamp Screw and washer, fixing lens	2 589283 4 608005
12 SIDE LAMP COMPLETE - Superseded by 589404 13 Bulb holder, interior 14 Bulb for side lamp 15 Lens for side lamp 16 Special screw, fixing lens 17 Washer for special screw 18 Sleeve for terminal 18 SIDE LAMP COMPLETE - Superseded by 589404 18 Bulb holder, interior 18 Bulb for side lamp 18 Lens for side lamp 18 Special screw, fixing lens 18 Washer for special screw 18 Sleeve for terminal 18 Grommet for cable entry 18 SIDE LAMP COMPLETE - Superseded by 589404 18 Bulb for side lamp 18 Lens for side lamp 18 Screw and washer, fixing lens	2 LUCAS TYPE - 2 244700 Up to 2 GLB989 vehicle 2 589284 suffix 'F' 4 600523 inclusive 4 551430 2 568005 2 LUCAS TYPE - From 2 GLB989 vehicle 2 589284 suffix 'G' 4 600423 onwards 4 551430 2 568005 2 515060 2 LUCAS TYPE 2 GLB989 2 589284 4 608004
SIDE LAMP COMPLETE Bulb Lens Screw and washer, fixing lens	2 589404 PEREI TYPE 2 GLB989 2 589284 4 608004
Screw (4BA x ½")) Fixing Spring washer) side lamp Nut (4BA)) to wing	6 77899 6 WM704001 6 4023


HEAD, SIDE, TAIL AND FLASHER LAMPS. From vehicle suffix 'B' onwards (Except American Dollar Area)

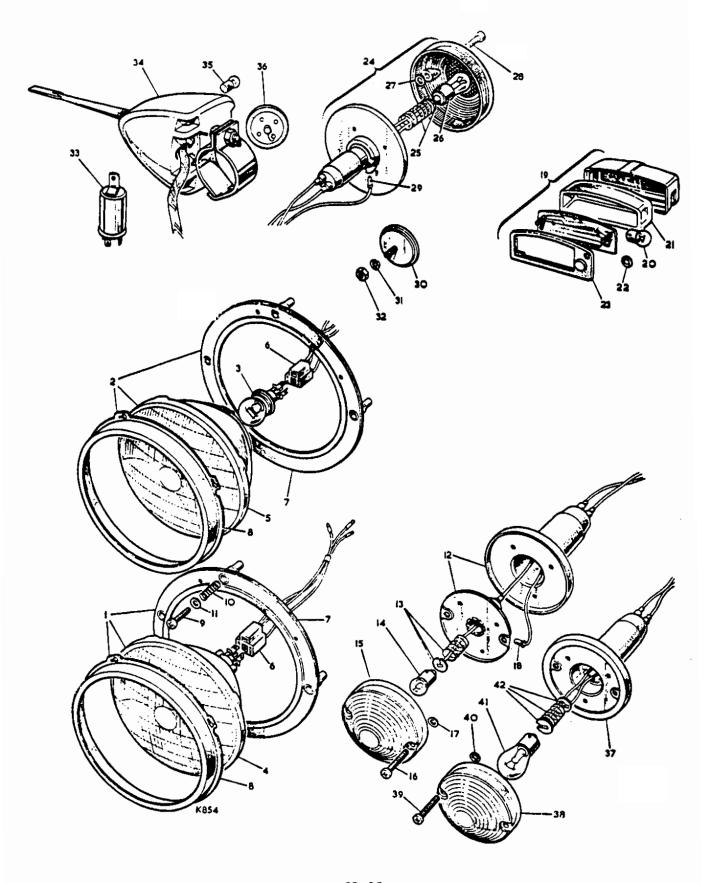

	LATE EF. 1 2 3 4 DESCRIPTION	QTY, PART No	. REMARKS
19 20 21 22 23	NUMBER PLATE LAMP Bulb for number plate lamp Lens Rubber grommet for wire Rubber gasket for lamp Spring washer Nut (10 UNF) STOP/TAIL AND REAR NUMBER PLATE LAMP Base for lamp Bulb for holder complete Bulb for lamp Lens for lamp Special screw, fixing lens	1 90575150 1 GLB989 1 601721 1 261252 1 261253* 2 WM702001 2 257023 2 532881 2 532879 2 532878 2 GLB380 2 532880 5 542036	
	STOP/TAIL AND REAR NUMBER PLATE LAMP Bulb holder and base complete Bulb for lamp Lens for lamp Special screw, fixing lens	2 531684 2 542045 2 GLB380 2 542043 4 542041	WIPAC TYPE - required for France
24 25 26 27 28 29	STOP/TAIL AND REAR NUMBER PLATE LAMP Bulb holder, interior Bulb for lamp Lens, stop/tail and reflex Special screw, fixing lens Sleeve for terminal	1 2 264782 2 GLB380 2 589448 4 551436 2 568005	LUCAS TYPE - Superseded by 589446
	STOP/TAIL AND REAR NUMBER PLATE LAMP Bulb Lens Screw and washer, fixing lens STOP/TAIL LAMP Base for lamp Bulb holder complete Bulb for lamp Lens for lamp Special screw, fixing lens	2 589446 2 GLB380 2 589448 4 608004 2 541520 2 532879 2 532878 2 GLB380 2 541521 4 542036	PEREI TYPE SPARTO TYPE
30 31 32	STOP/TAIL LAMP Bulb for holder and hase complete Bulb for lamp Lens for lamp Special screw, fixing lens Drive screw fixing lamp to rear body Screw (4BA x ½")) Fixing Spring washer) lamp to Nut (4BA)) rear body Red rear reflector Spring washer) Fixing Nut (2BA)) reflectors	2 541522 2 542045 2 GLB380 2 542044 4 542041 5 GHF421 6 77899 6 WM70400 6 4023 2 551595 2 WM70200 2 RTC608)

^{*} NO LONGER SERVICED


HEAD, SIDE, TAIL AND FLASHER LAMPS. From vehicle suffix 'B' onwards (Except American Dollar Area)

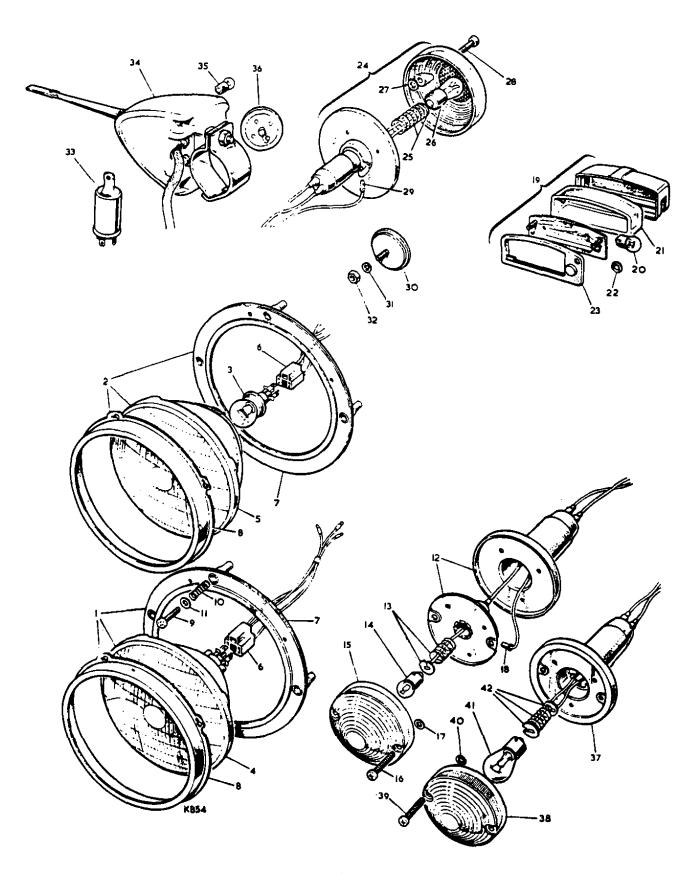

PLAT REF.			TY, PART No.	REMARKS	
F	LASHER INDICATOR COMPLETE ASSEMBLY	1	541755*		ix 'E' inclu- as standard
33 F	lasher unit	1	GFU103		
	Prive screw, fixing flasher unit	i	72628		
	ELF-CANCELLING SWITCH FOR FLASHER	i	90519866		
Š	Bulb for flasher switch	i	GL8643		
5	Wheel for flasher switch	i	522882*		
	eed lead for flasher switch	j	90519865		
	LASHER LAMP COMPLETE	4	536094	PERFT TYPE -	Up to vehicle
•	Lens	4	536152	TENET THE	suffix 'F'
	Special screw, fixing lens	8	542038		inclusive
	Bulb	4	GLB 382		merasive
	Bulb holder and body complete	4	542040*		
F	LASHER LAMP COMPLETE	4	536148	WIPAC TYPE -	Up to vehicle
-	Lens	4	542048		suffix 'F'
	Special screw, fixing lens	8	542042		inclusive
	Bu1b	4	GLB 382		
	Bulb holder and base complete	4	542046		
F	LASHER LAMP COMPLETE - Superseded by 589409	4	U . D .	LUCAS TYPE -	Up to vehicle
	Lens	4	AEU1058		suffix 'F'
	Special screw, fixing lens	8	600423		inclusive
	Special washer, fixing lens	Ŗ	551430		1110103170
	Bulb	á	GLB 382		
	Bulb holder, interior	4	37H5452		
F	LASHER LAMP COMPLETE	4	589409	PEREI TYPE -	Up to vehicle
	Lens	4	589295		suffix 'F'
	Screw and washer, fixing lens		608004		inclusive
	Bulb	4	GLB382		
	lasher unit	1	GFU116		٦
	lounting clip for flasher unit	1	567959		l
	rive screw fixing clip to dash	1	GHF423		
S	ELF-CANCELLING SWITCH FOR FLASHER	1	575114		1
	Bulb for flasher switch	1	GLB643		
	Mheel for flasher switch	1	522882		
	eed lead for flasher switch	1	90519865		
F	LASHER LAMP COMPLETE	4	575125	SPARTO TYPE	- (
	Lens	4	536152		1
	Special screw fixing lens	8	542038		1
	Bulb	4	GLB382		
_	Bulb holder and body complete	4	606501	UIDAA TUGO	From vehici
r	LASHER LAMP COMPLETE	4	575123	WIPAC TYPE	suffix 'G'
	Lens Special sense fiving land	4	542048		onwards
	Special screw, fixing lens	8	542042		
	Bulb Bulb holder and base complete	4	GLB382		1
	pulo notuer and pase complete	4	606502*		1

^{*} NO LONGER SERVICED

HEAD, SIDE, TAIL AND FLASHER LAMPS. From vehicle suffix 'B' onwards (Except American Dollar Area)

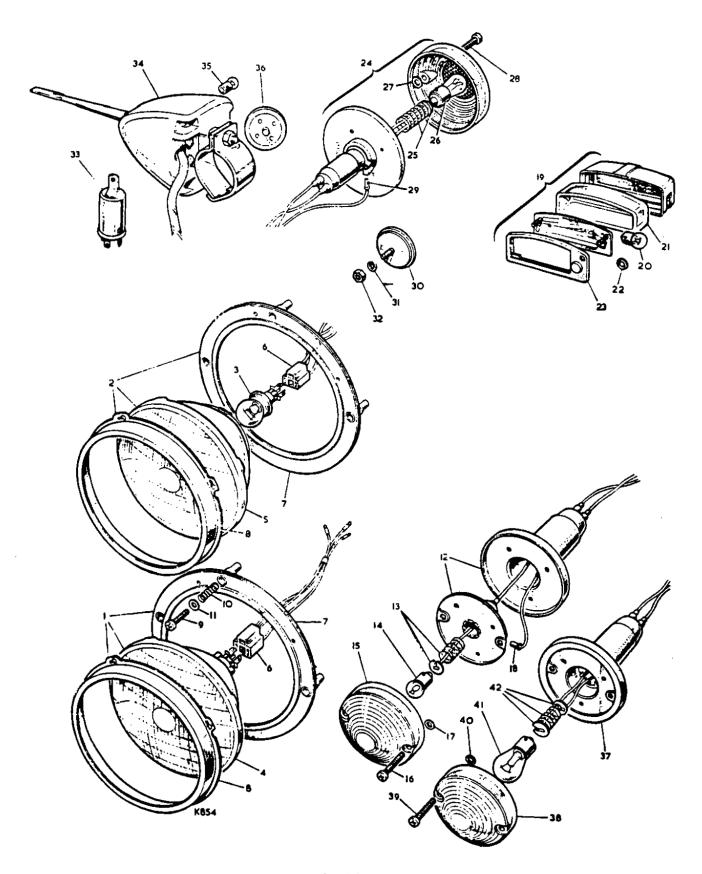


ELECTRICAL - HEAD, SIDE, TAIL AND FLASHER LAMPS
From vehicle suffix 'B' onwards. (Except America Dollar Area)

GROUP K

PLATE REF.		١	2	3_	4			DES	CRIPTIO	N	 ,_			QΤ	Y. PART No.		REMAR	oks .					
j	FĻ	A.S.I	HER	ا !	_AMP	COMP	LETE	- S	uperse	ded b	58 ب <u>ر</u>	39409		4		L	.UCAS	TYPE	: -	Ve	hicl	e sufi	fix
		Ler							•		•			4	AEU1058	3				' G	i on	wards	
				a ·	l sc	rew,	fixin	q le	ens e					8	600423								
						sher,							1	8	551430								
		Bu.				•								4	GLB 382								
				he	olde	er, in	terio	r						4	37H5452	•							
						term		•						4	568005								
						r cab		trv						4	601543								
1						COMP								4	589409	Р	FRE I	TYPE	: .	۷e	hicl	e sufi	fix
,		Lei			_, _ ,,									4	589285	•						wards	• • • •
				, ;	and	washe	r. fi	vin	lens					B	608004					•		WG1 43	
		Bu			,-		, , , ,	~ / / / /	, ((1)					4	GLB382								
	Sc	rev	v (41	за х	(] ()) Fix	ina	front				1	6	77899								
									r lamp					6	WM70400)1							
)) fro			•			1	5	4023								
									er lamı	n to	real	- bodv		6	GHF421								
									ssis c					2	236366								
									on RH i					2	240406	LF	l Sta						
									to das					ī	233770	-							
			-		•				harne) wir	פר		•									
					-						aland			1	4020	Di	esel						

HEAD, SIDE, TAIL AND FLASHER LAMPS (American Dollar Area)

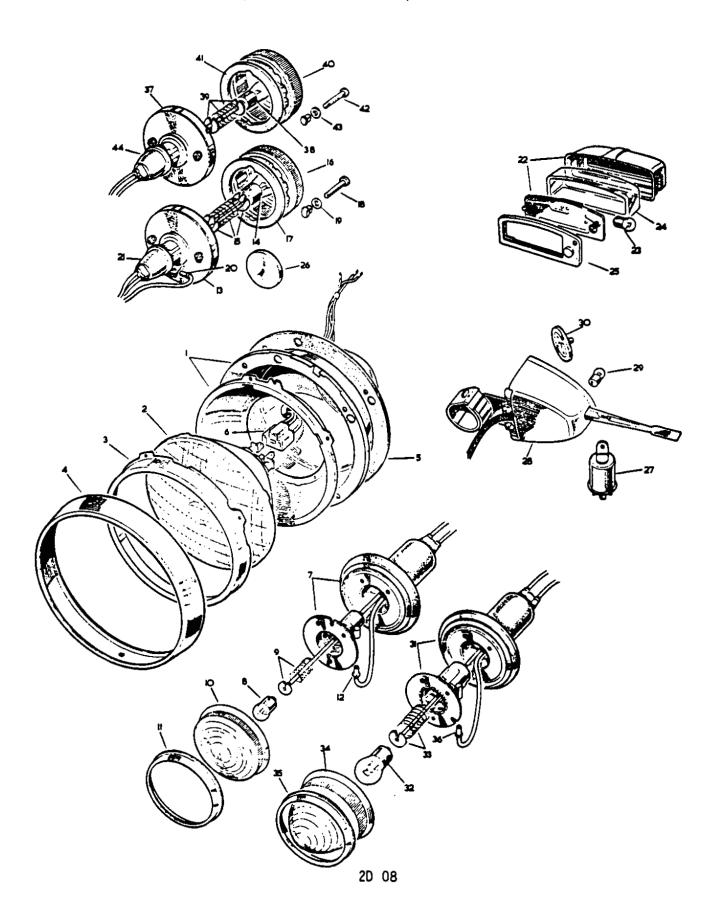


ELECTRICAL - HEAD, SIDE, TAIL AND FLASHER LAMPS (America Dollar Area)

HEADLAMP ASSEMBLY, SEALED BEAM 2 27H8207	PLAT		QT	Y. PART No. REMARKS
8 Bulb 2 ĠLB207 9 Bulb holder, interior 2 244700 10 Lens 2 271931* 11 Rim for lens 2 261640* 12 Sleeve for terminal 2 568005 SIDE LAMP COMPLETE 2 AAU1130 Bulb 2 GLB989 Lens 2 271931* Screw (4BA x ½")) Fixing 6 77899 Spring washer) side lamp to 6 MM704001 Nut (4BA)) front wing 6 4023 13 STOP/TAIL LAMP COMPLETE 2 532809 14 Bulb 2 GLB380 15 Bulb holder, interior 2 264782 16 Lens 2 37H6109 17 Gasket for lens 2 601717* 18 Special screw 2 601719* 19 Special washer 4 551430 20 Sleeve for terminal 2 568005 21 Grommet for cable entry 2 60349	2 3 4	Light unit Rim for light unit Rim for headlamp Gasket for headlamp Adaptor and leads for light unit Screw (2BA x ½")) Fixing headlamp Spring washer) to front	2 2 2 2 2 6 6	GLU133 515218 142001 531586 536116 77700 WM702001
14 Bulb 2 GLB380 15 Bulb holder, interior 2 264782 16 Lens 2 37H6109 17 Gasket for lens 2 601717* 18 Special screw 2 601719* 19 Special washer 4 551430 20 Sleeve for terminal 2 568005 21 Grommet for cable entry 2 600349 22 NUMBER PLATE LAMP COMPLETE 1 532810* 23 Bulb 2 GLB989 24 Lens 1 601721	8 9 10 11	Bulb Bulb holder, interior Lens Rim for lens Sleeve for terminal SIDE LAMP COMPLETE Bulb Lens Screw (4BA x ½")) Fixing Spring washer) side lamp to	22222266	GLB207 244700 271931* 261640* 568005 AAU1130 GLB989 271931* 77899 WM704001
23 Bulb 2 GLB989 24 Lens 1 601721	14 15 16 17 18 19 20	Bulb Bulb holder, interior Lens Gasket for lens Special screw Special washer Sleeve for terminal	2 2 2 2 4 2	GLB380 264782 37H6109 601717* 601719* 551430 568005
26 Red reflector complete 2 240542*	23 24 25	Bulb Lens Gasket for lens	2 1 1	GLB989 601721 261253*

^{*} NO LONGER SERVICED

HEAD, SIDE, TAIL AND FLASHER LAMPS (America Dollar Area)

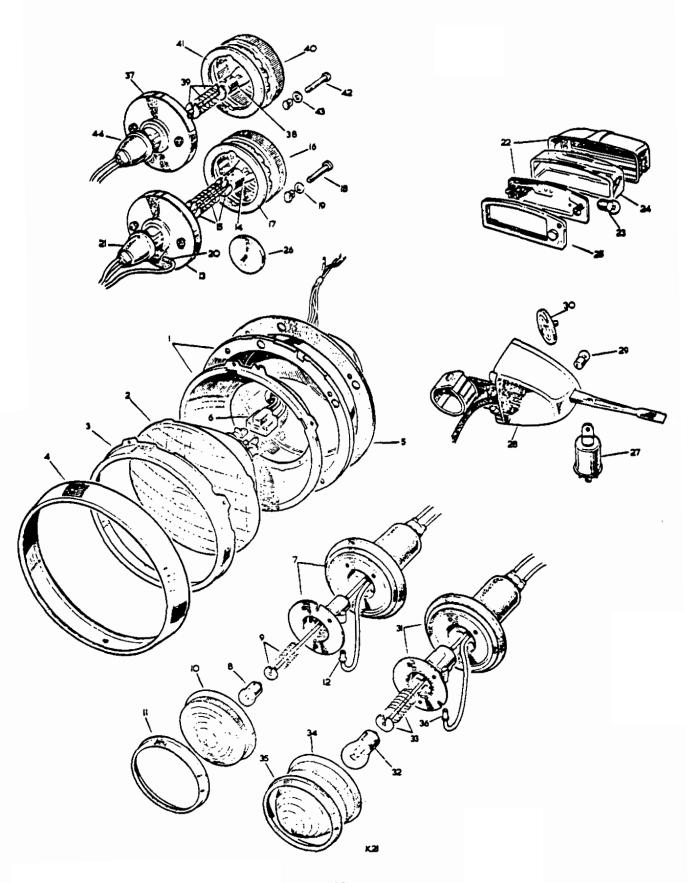


ELELCTRICAL - HEAD, SIDE, TAIL AND FLASHEP LAMPS (America Dollar Area)

PLA	TE 1 2 3 4 DESCRIPTION	QTY, PART No.	REMARKS
-			
27	Flasher unit	1 GFU103	
	Drive screw, fixing flasher unit	1 72628	
28	SELF-CANCELLING SWITCH FOR FLASHER	1 9051986	6
29	Bulb	1 GLB643	
30	Wheel for flasher switch	1 522882	
31	FRONT FLASHER LAMP	2 532806	
32	Bulb	2 GLB38?	
33	Bulb holder interior	2 37H5452	
34	Lens	2 37H6928	
35	Chrome rim for lens	2 261640*	
36	Sleeve for terminal	2 568005	
	Screw (4BA x 📲)) Fixing front	6 77899	
	Spring washer) flasher lamp	6 WM70400	1
	Nut (4BA)) to wing	6 4023	
37	REAR FLASHER LAMP COMPLETÉ	2 532807	
38	Bulb	2 GLB382	
39	Bulb holder interior	2 27H5452	
40	Lens	2 601720	
41	Gasket for lens	2 601717*	
42	Special screw	2 601719*	
43	Special washer	4 551430	
44	Grommet for cable entry	6 600349	

^{*} NO LONGER SERVICED

ROUP K
INSTRUMENTS, POSITIVE EARTH SYSTEM, UP TO VEHICLE SUFFIX 'C' INCLUSIVE

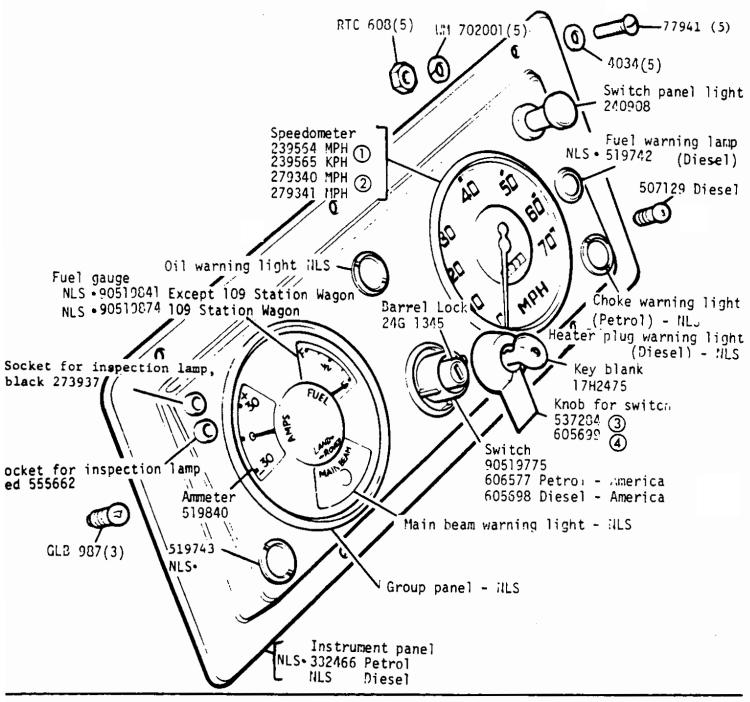

REMARKS


U 38in

2 109in also 83in when 7.50 x 16 tyres are fitted

3 For switch 90519775 and 606577


For switch 605698

STARTER SWITCH AND CHOKE CONTROL, POSITIVE EARTH SYSTEM UP TO VEHICLE SUFFIX TOT INCLUSIVE

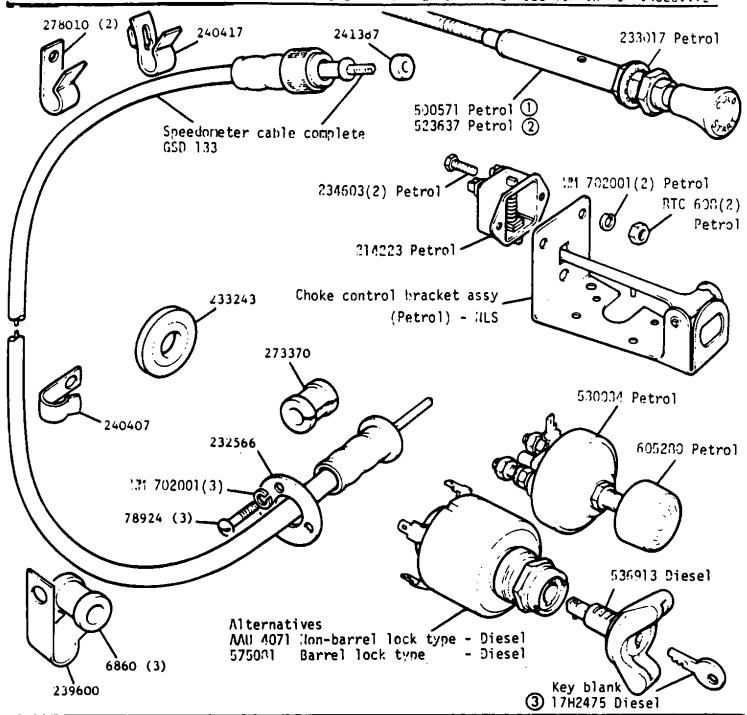


REMARKS

- 1 Must be used with Carburetter without starter heater element
- 2 Must be used with Carburetter with starter heater element
- 3 For switch 575081

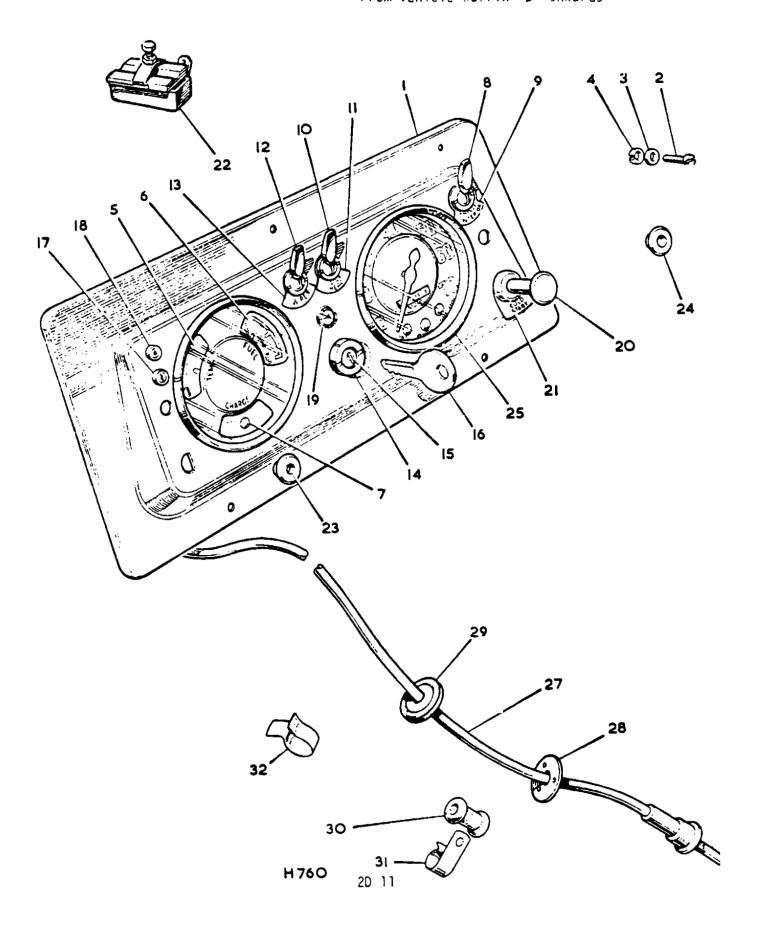

PLA		
REF	1 2 3 4 DESCRIPTION	QTY, PART No. REMARKS
1	Instrument panel	1 345052
2	Set screw (2BA x ¿"))	5 77941
3	Plain washer) Fixing instrument	5 4034
4	Soring washer) pane!	5 WM702001
	Nut (2BA))	2 RTC608
	Gauge panel complete	1 560744
5	Water temperature gauge	1 560746
5	Fuel gauge	1 555835
7	Warning light, charging, red	1 555837
	Bulb for warning light	1 GLB987
	Switch for panel lights	1 RTC430) Except
	Nameplate for switch 'PANEL'	1 560404) Station Wagon
8	Switch for panel and interior lights	1 555877) Station
ğ	Nameplate for switch 'PANEL/INTERIOR'	1 560405) Wagon
10	Switch for lamps	1 1H9077
11	Nameplate for switch 'SIDE/HEAD'	1 560407
12	Switch for wiper motor	1 555778
	Nameplate for switch 'WIPER'	1 560410*
14	Switch for ignition and starter	1 551508)
15	Barrel lock for ignition switch	1 24G1345) Petrol models
16	Key blank	1 17H2475)
	Switch for heater nlug and starter	1 575081)
	Barrel lock and key for starter heater switch	1 536913) Diesel models
	Key blank	1 17H2475)
17	Socket for inspection lamp, black	1 273937*
	Socket for inspection lamp, red	1 555662
•	Bulb for panel lights	2 GLB987
19	Warning light, fuel (blue)	1 560756 2½ Litre Diesel models
20	Cold start control complete	1 552682 2½ Litre Petrol models
	Cold start control complete	1 552683 2.6 Litre Petrol models
	Gremmet for cold start cable	1 235113 2½ Litre Petrol models
21	Nameplate for control 'COLD START'	1 560411) Petrol
22	Switch for cold start warning light	1 563318*) models
	Nameplate for control 'ENGINE STOP'	1 560412 Diesel models
23	Plug, large) For redundant	1 338016
24	Plug, small) holes in namel	3 338013
25	Speedometer and warning lights, miles	1 540114)
	Speedometer and warning lights, kilometres	1 540115) 88 models
	Speedometer and warning lights, miles	1 540117)109 models. Also 21 litro
	Speedometer and warning lights, kilometres	1 500118) on 88 models. Petrol 8
)wher 7.50" x 16" Diesel
)tyres are fitted _models
	Speedometer and warning lights, miles	1 559159)
	Speedometer and warning lights, kilometres	1 559160) 2.6 litre Petrol models
	Bulb for warning light on speedometer	3 GLB987
	The state of the s	

^{*} NO LONGEP SERVICED

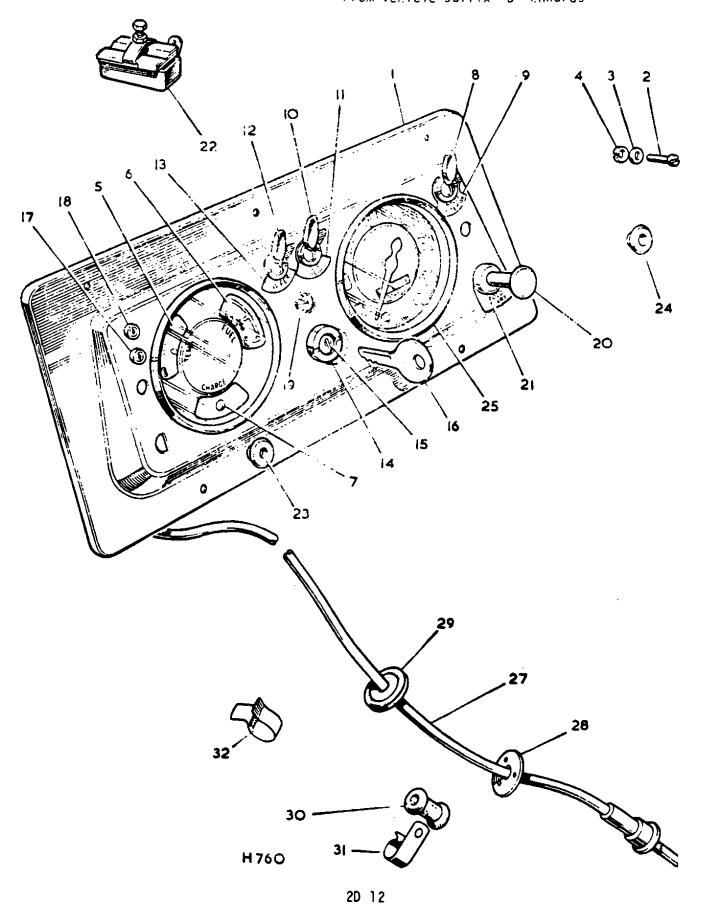



GROUP K

ELECTRICAL - INSTRUMENTS, NEGATIVE EARTH SYSTEM From vehicle suffix 'D' onwards.


PLA	·-			
REF.	1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS
27	Cable complete for speedometer	1	GSD133	21 litre Petrol and Diese models
	Cable complete for speedometer	1	GSD138	2.6 litre Petrol models
28	Retaining plate for cable	1	232566	
	Spring washer) Fixing	3	WM702001	
	Set screw (2BA x ½")) retaining plate	3	78924	
	Felt washer for speedometer	1	241387	
29	Rubber grommet, in dash) For speedomete	er l	233243	
30	Rubber grommet, on cable) cable	4	6860	5 off on 2.6 litre Petrol models
	Rubber grommet for speedometer cable at fu	ıel		
	pu	ן סותו	273370	
31	Clip) For	1	239600	3 off on 2.6 litre Petrol models
32	Clio) speedometer	1	240407	
	Clip) cable	1	278010	
	Clio)	1	240417	
	Clip) For sheedometer cable	1	268883)	2½ litre Diesel
	Distance washer) at camshaft cover	۴	RTC840)	models

GROUP K HORN AND WINDSCREEN WIPER, POSITIVE EARTH SYSTEM UP TO VEHICLE SUFFIX 'C' INCLUSIVE 4-cylinder models.

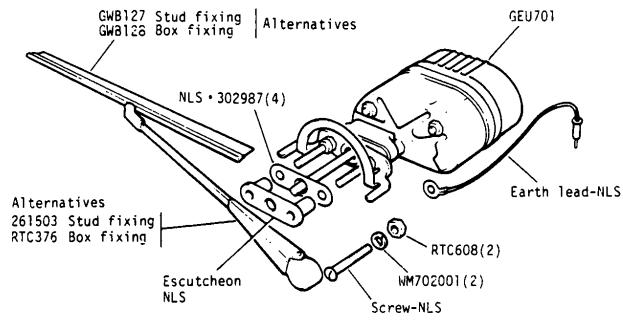

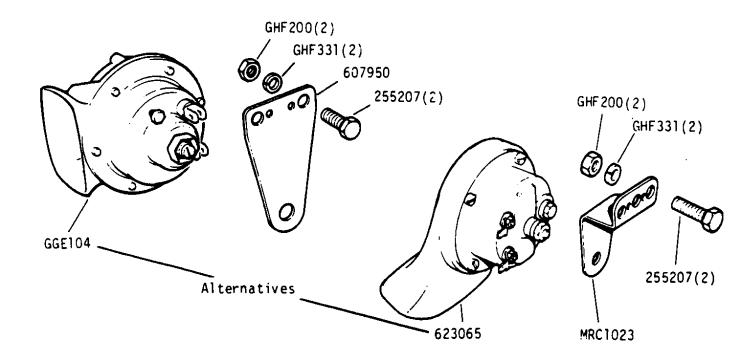


Contact set 600638 for Clearhooter type horns 575191 and 600890 NLS

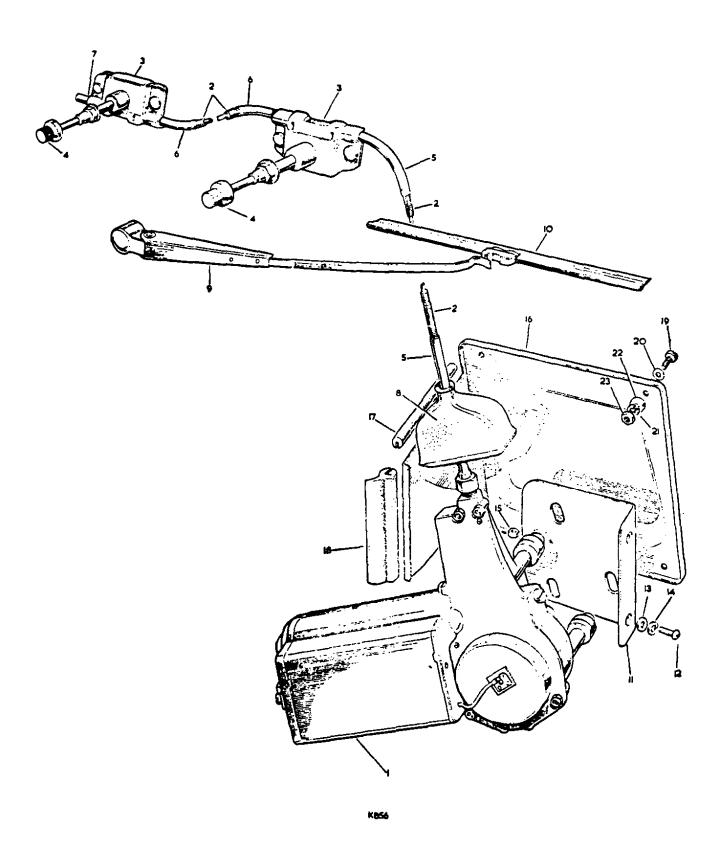

PLA1	· -	DESCRIPTION	0.0	Y. PART No. REMARKS
		DESCRIPTION	41	T. FART NO. REPARKS
ו	Windscreen wiper moto	r complete	1	GEU714
2	Flexible drive cable	•	ì	RTC202
	Gear and con rcd		j	90608307
3	Wheelbox for wiper		2	551227
4		r wheelbox and wiper arm	2	605904
5	Outer casing, motor t		ī	555754*
6	Outer casing, wheelbo		1	555702*
7	Outer casing, wheelbo		1	575047
8	Rubber cover for wine		1	338846*
	Threaded ferrule for	wiper motor	ì	37H3694
٩	Arm for winer blade,	for RH side	1	37H7847
	Arm for wiper blade,		1	37H7848
10	Wiper blade		2	GWB128
11	Mounting bracket for	wiper motor	1	338794*
12	Screw (1" UNF x 3"))		3	78755
13	Plain washer)	mounting	3	RTCE17
14	Spring washer)	bracket to	3	GHF331
15	Nut (¾" UNF)	LH glove box	3	GHF200
16	Cover plate for wiper		1	345079*
17	Rubber finisher) Fo		7	348541
18	Rubber seal) co	ver plate	7	348537
19	Screw (2BA x { "))		Ą	78177
20	Plain washer)	Fixing cover	4	4030
21		plate to LH	4	NM702001
22		glove box	4	4172
23	Nut (2BA)	-	4	RTC608

^{*} NO LONGER SERVICED


WINDSCREEN WIPER, NEGATIVE EARTH SYSTEM. From vehicle suffix 'F' onwards

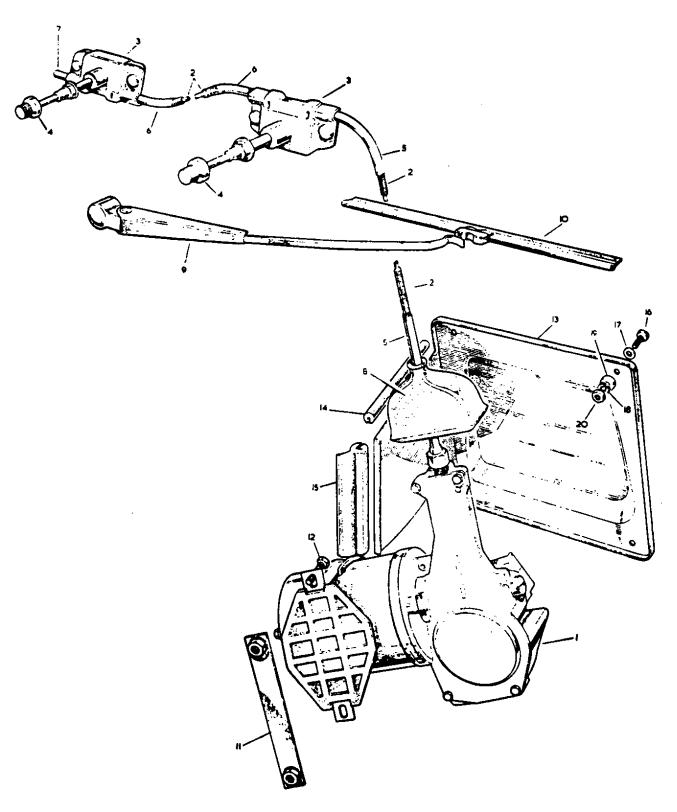


X 057

PLATE								
REF.	1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS				
}	Windscreen wiper motor complete	1	GEU708					
	Shaft and gear for wiper motor	1	37H2736					
2	Flexible drive cable	1	RTC202					
3	Wheelbox for wiper	2	560887					
4	Spindle and gear for wheel box	2	605904					
5	Outer cable, motor to wheelbox	1	560965					
6	Outer casing, wheelbox to wheelbox	1	. AAU1909					
7	Outer casing, wheelbox end	1	575047					
8	Rubber cover for winer motor in dash	1	338846					
	Threaded ferrule for wiper motor	1	37H3694					
9	Arm for wiper blade, for RH side	1	37H7847)				
	Arm for wiper blade, for LH side	1	37H7848)Vehicle suffix 'F' only				
10	Wiper blade	2	GWB128)				
	Arm for wider blade, LH	7	RTC819)				
	Arm for wiper blade, RH	3	RTC822)From vehicle suffix 'G'				
	Wiper blade	2	GWB195)onwards				
13	Nut plate for wiper motor	1	560967					
	Mounting strap for wiper motor	1	606929					
	Mounting pad for winer motor	1	150844					
12	Set screw (%" UNF x %") fixing wiper motor to day	sh						
	and nut pla	te 2	78898					
	Cover plate for wiper motor	ו	345079					
14	Rubber finisher) For	1	348541					
15	Rubber seal) cover plate	1	348537					
16	Screw (2BA x 📲))	4	<i>1</i> 8177					
17	Plain washer) Fixing cover	4						
	Spring washer) plate to LH	4	WM702001					
	Distance washer) glove box	4						
20	Nut (2BA)	4	RTC608					

GROUP K
GENERAL ELECTRICAL EQUIPMENT, POSITIVE EARTH SYSTEM UP TO VEHICLE SUFFIX 'C' INCLUSIVE

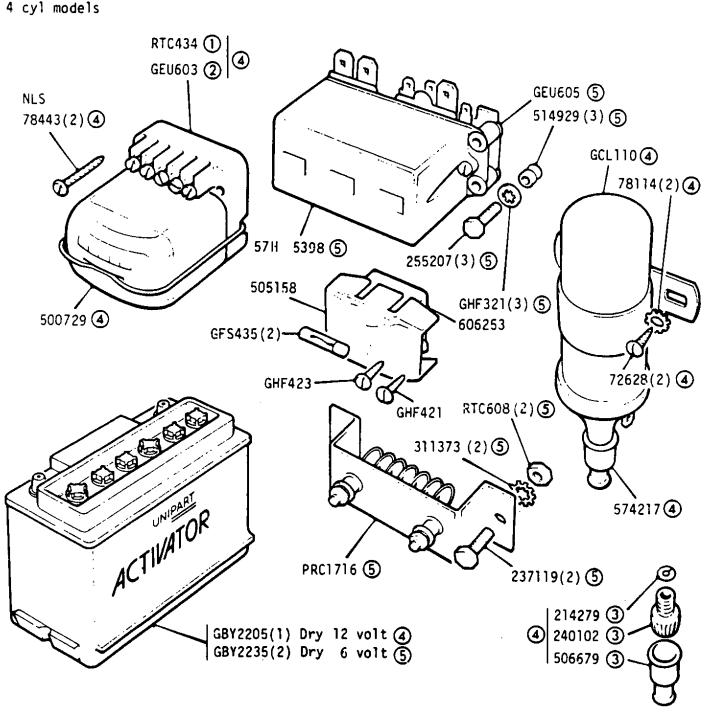


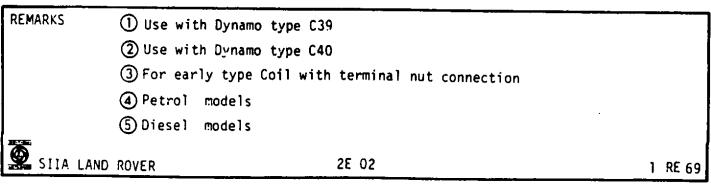


GROUP K ELECTRICAL HARNESS AND CABLES, POSITIVE EARTH SYSTEM 4-CYLINDER PETROL MODELS UP TO VEHICLE SUFFIX 'C' INCLUSIVE Rear crossmember harness 519783 Lead rear number plate lamp. 500559 Frame harness NLS • 519784 88 NLS • 526440 109 528900 109 Station Wagon. Extension lead for stoplight switch **€** : ILS Lead for fuel tank unit 531591 • NLS Dash harness 519782 Cable, Battery to switch 501690 Cable, coil to distributor 528963 50552 (2) -Cable, switch to starter 501691 Rubber boot - NLS Dynamo harness 526360 Lead, starter motor to earth PRC2068 255208 Cable, battery to 239558 GHF 201 Lead, dynamo harness to 90510912(2) 510170 (2) carburetter - 'ILS (1) GHF120 GHF 331 **GHF 200**

<u>remarks</u>

1 For carburetter with starter heater element

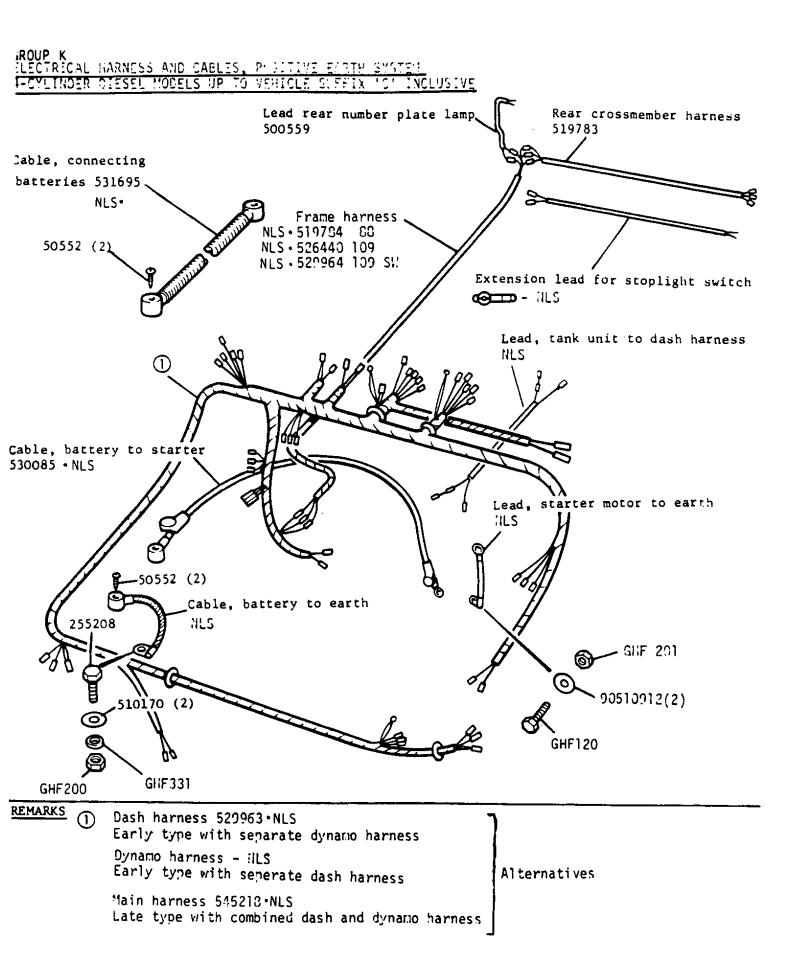


GENERAL ELECTRICAL EQUIPMENT, NAGATIVE EARTH SYSTEM 4-cylinder models. From vehicle suffix 'D' onwards

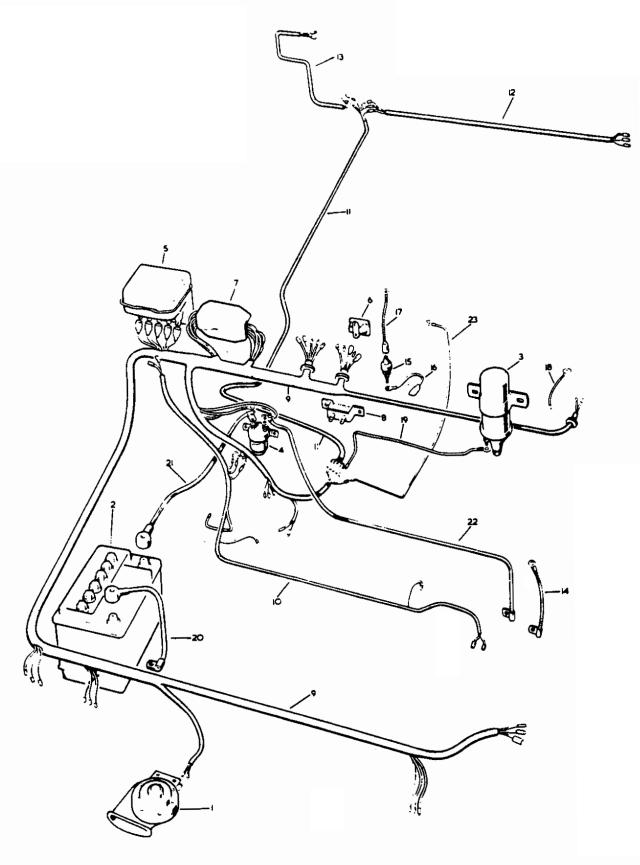

Windtone horn, low note 1 600890 Clearhooter type)Alter-Windtone horn, low note 1 623065 Mixo type natives Windtone horn, low note 1 621500 Contact set for windtone horn 1 600638* Clearhooter type Contact set for windtone horn 1 600638* Clearhooter type Mounting bracket for horn 1 607950 Lucas type Contact set for windtone horn 1 607950	PLAT		QΤ	Y. PART No.	REMARKS
Windtone horn, low note Windtone horn, low note Windtone horn, low note Windtone horn, low note Contact set for windtone horn Mounting bracket for horn Mounting bracket for horn Bolt (!" UIF x !") Fixing horn to Spring washer battery support/ Spring washer battery support/ Nut (!" UNF) mounting bracket 2 GHF201 Protector plate for horn Self-locking nut (!" UNF) fixing protector plate to radiator grille 2 Activator, dry, 12 volt Activator, dry, 12 volt Activator, dry, for volt Split washer Fixing coil Split washer Coil Drive screw Fixing coil Split washer Coil Drive screw Fixing coil Starter solenoid switch Spring washer For solenoid Nut (!" UNF x !") Example 1 2 Size Spring washer Fixing solenoid Spring washer Fixing Fixing Spring washer Spring washer Fixing Spri	۱	Windtone horn, low note	1	500890	Clearhooter type)Alter-
Windtone horn, low note Contact set for windtone horn Mounting bracket for horn Mounting bracket for horn Bolt (" UNF x ") Fixing horn to Spring washer battery support/ Spring washer battery support/ Self-locking nut (" UNF) mounting bracket Protector plate for horn Self-locking nut (" UNF) fixing protector plate to radiator grille Activator, dry, 12 volt Activator, dry, 6 volt I GBY2205 Petrol models Self-locking nut " UNF) fixing protector plate Activator, dry, 6 volt I GBY2205 Petrol models Self-locking nut For 26012 For early type coil Rubber boot for ignition coil Rubber boot for acorn nut) ignition Split washer Coil 124279 connection Split washer Coil 124279 connection Spring washer Fixing coil 2 7828 Spring washer For solenoid 2 575014 Spring washer For solenoid 2 575014 Spring washer For solenoid 2 575019 Spring washer For solenoid 2 575023 Spring washer Standard			1		
Contact set for windtone horn Contact set for windtone horn Nounting bracket for horn Mounting bracket for horn Bolt (ij "UIF x ") Fixing horn to Spring washer battery support/ Spring washer battery support/ Self-locking nut (i "UNF) fixing protector plate to radiator grille Activator, dry, 12 volt Activator, dry, 6 volt I gmyzeos I gmyzeos Activator, dry, 6 volt I gmyzeos I			i		
Contact set for windtone horn Mounting bracket for horn Bolt (1" UIF x 1") Fixing horn to Spring washer) battery support/ Nut (1" UNF) mounting bracket to radiator grille Activator, dry, 12 volt Activator, dry, 6 volt Ignition coil Rubber boot for ignition coil Rubber boot for acorn nut) for Rubber boot for acorn nut) ignition Split washer) coil Drive screw Fixing coil Spring washer) For solenoid Nut (10 UNF) 2 255207 Spring washer) to dash Cover for regulator box Cover for regulator box Cover for regulator box Cover for fuse box		•	i		
Mounting bracket for horn Mounting bracket for horn Bolt ("UNF x ") Fixing horn to 2 255207 Spring washer) battery support/ 2 GHF331 Nut ("UNF) mounting bracket 2 GHF200 Protector plate for horn Self-locking nut ("UNF) fixing protector plate to radiator grille 2 Activator, dry, 12 volt 3 1 GEV205 Activator, dry, 6 volt 1 1 GBY2205 Ignition coil 1 1 GCL110 Rubber boot for ignition coil 1 574217 Acorn nut			ì		
Mounting bracket for horn 1 607950 Lucas type			i		▼ •
Bolt (•	i		
Spring washer battery support/ 2 GHF31 Nut (\frac{1}{2}" UNF) mounting bracket 2 GHF200 Protector plate for horn 396124 Self-locking nut (\frac{1}{2}" UNF) fixing protector plate to radiator grille 1 GBY2205 Activator, dry, 12 volt 1 GBY2205 Diesel models Activator, dry, 6 volt 2 GBY2235 Diesel models Iqnition coil 1 GCL110 Rubber boot for ignition coil 574217 Acorn nut For 1 240102 For early type coil Rubber boot for acorn nut) ignition 506679 with terminal nut Split washer coil 1 214279 connection Drive screw Fixing coil 2 78628 Shakeproof washer to dash 2 78114 4 Starter solenoid switch 1 3185952 models Spring washer For solenoid 2 575014 Nut terminal post 2 90575015 Bolt (10 UNF x \frac{1}{2}") 2 257019 Fan disc washer fixing solenoid 2 513282 Spring washer to dash 2 WH702001 Nut (10 UNF) 2 257023 Voltage regulator box 1 GEU603 Cover for regulator box 1 GEU605 Screw (10 UNF x \frac{1}{2}") Fixing 3 79054 Diesel models 3 3902 Spring washer Fixing 2 3101 Drive screw regulator 2 AB606021 Fuse box 1 GO5253 Cover for fuse box 1 GF8435 Fuse, 35 amo Drive screw fixing fuse box 1 AB610051			2		cadas type
Nut (UNF					
Protector plate for horn Self-locking nut (1" UNF) fixing protector plate to radiator grille Activator, dry, 12 volt Activator, dry, 6 volt I GBY2205 Rubber boot for ignition coil Rubber boot for acorn nut) ignition Split washer) For 1 240102) For early type coil Rubber boot for acorn nut) ignition 1 506679) with terminal nut Split washer) to dash 2 78114 Starter solenoid switch 1 13H5952 models Spring washer) For solenoid 2 575014 Nut 10 UNF x 12") 2 257019 Fan disc washer fixing solenoid 2 575014 Nut (10 UNF) 2 257029 Fan disc washer fixing solenoid 2 575015 Bolt (10 UNF) 2 257023 Voltage regulator box 1 6EU603 Cover for regulator box 1 6EU603 Cover for regulator box 1 6EU603 Cover for regulator box 1 6EU605 Special nut (10 UNF)) to dash 3 79239 Voltage regulator for instruments, 10 volt 1 8HA4602 Spring washer) Fixing 3 79054 Drive screw) regulator 1 6E66523 Cover for fuse box 1 606523 Cover for fuse box 1 606523 Cover for fuse box 1 606523 Cover for fuse box 1 6666021 Fuse box 1 6666021 Cover for fuse box 1 6666021 Fuse box 1 6666021 Cover for fuse box 1 6666021 Fuse box 1 6666021 Cover for fuse box 1 6666021 Cover for fuse box 1 6666021 Fuse box 1 6666021 Cover for fuse box 1 6666021 Cover for fuse box 1 6666021 Fuse box 1 6666021 Cover for fuse		Nut (1" UNE)) mounting bracket			
Self-locking nut (\frac{1}" UNF) fixing protector plate to radiator grille 2					
to radiator grille Activator, dry, 12 volt Activator, dry, 6 volt 1 GBY2205 Petrol models GBY2235 Diesel models GCL110 Rubber boot for ignition coil Acorn nut For Rubber boot for acorn nut) ignition Split washer Orive screw Fixing coil Spring washer Fixing solenoid Spring washer Fixing regulator box Cover for regulator box Cover for regulator box Screw (10 UNF x 1 ") Fixing Fixing solenoid Spring washer Fixing Fi		Self-locking nut /1" INF) fiving protector plate	ı	330127	
2 Activator, dry, 12 volt		to radiator office	2	GHE221	
Activator, dry, 6 volt 3 Ignition coil Rubber boot for ignition coil Rubber boot for acorn nut) ignition Split washer Orive screw Fixing coil Starter solenoid Spring washer) For solenoid Spring washer Spring was	2		_		Petrol models
Jignition coil Rubber boot for ignition coil Acorn nut Por Rubber boot for acorn nut) ignition Split washer Ocil Shakeproof washer Shakeproof washer Spring	-		•		
Rubber boot for ignition coil	3		1		ד אויינים וויינים וויינים ו
Acorn nut	•		1.		1
Rubber boot for acorn nut) ignition Split washer			i		For early type coal
Split washer			'n	506670	with terminal nut
Drive screw Fixing coil 2 72628 Shakeproof washer to dash 2 78114 4 Starter solenoid switch 1 13H5952 models		Split washer) coil			
Shakeproof washer to dash 2 78114 2					Connectivit
Starter solenoid switch 1 13H5952 models		Shakenroof washer) to dash			Petrol
Spring washer) For solenoid Nut) terminal post 2 90575015 Bolt (10 UNF x a") 2 257019 Fan disc washer) Fixing solenoid 2 513282 Spring washer) to dash 2 WH702001 Nut (10 UNF)) 2 257023 5 Voltage regulator box 1 GEU603 Cover for regulator box 1 500729 Drive screw, fixing regulator box 1 GEU605 Cover for regulator box 1 GEU605 Cover for regulator box 1 GEU605 Screw (10 UNF x la")) Fixing 3 79054 Plain washer) regulator box 3 3902 Special nut (10 UNF) 1 to dash 3 79239 6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 Fuse box 1 606253 Cover for fuse box 1 605253 Cover for fuse box 1 GFSA35 Drive screw, fixing fuse box 1 AB610051	4				
Nut					inode 15
Bolt (10 UNF x g")) Fan disc washer					
Fan disc washer) Fixing solenoid 2 513282 Spring washer) to dash 2 WH702001 Nut (10 UNF)) 2 257023 5 Voltage regulator box 1 GEU603 Cover for regulator box 2 78443* Current/voltage regulator box 1 GEU605 Cover for regulator box 1 GEU605 Cover for regulator box 3 79054 Plain washer) Fixing 3 79054 Plain washer) regulator box 3 3902 Special nut (10 UNF)) to dash 3 79239 6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amo 1 GF\$435 Drive screw, fixing fuse box 1 AB610051					
Spring washer) to dash 2 MH702001 Nut (10 UNF)) 2 257023 5 Voltage regulator box 1 GEU603 Cover for regulator box 1 500729 Drive screw, fixing regulator box 1 GEU605 Cover for regulator box 1 GEU605 Cover for regulator box 1 600442 Screw (10 UNF x 1½")) Fixing 3 79054 Plain washer) regulator box 3 3902 Special nut (10 UNF)) to dash 3 79239 6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amo 1 GF\$A35 Drive screw, fixing fuse box 1 AB610051					}
Nut (10 UNF)			2		
Voltage regulator box Cover for regulator box Drive screw, fixing regulator box to dash Current/voltage regulator box Cover for regulator box Cover for regulator box Screw (10 UNF x 1½") Fixing Plain washer pregulator box Special nut (10 UNF) to dash Voltage regulator for instruments, 10 volt Spring washer Fixing Drive screw pregulator Cover for fuse box Cover for fuse box Fuse, 35 amb Drive screw, fixing fuse box T GEU603 T GEU603 T GEU603 T FOR A43* T GEU603 T FOR A443* T GEU605 T BEU605 T FOR A443* T GEU605 T BEU605 T GEU603 T FOR A443* T GEU605 T BEU605 T					ļ
Cover for regulator box Drive screw, fixing regulator box to dash Current/voltage regulator box Cover for regulator box Screw (10 UNF x 1½")) Fixing Plain washer) regulator box Special nut (10 UNF)) to dash Voltage regulator for instruments, 10 volt Spring washer) Fixing Drive screw) regulator 7 Fuse box Cover for fuse box Fuse, 35 amp Drive screw, fixing fuse box 1 500729 1 7 Fuse box 1 600442 1 7 Fuse box 1 606253 1 606253 1 606253 1 606253 1 606253 1 606253 1 606253	5				
Drive screw, fixing regulator box to dash Current/voltage regulator box Cover for regulator box Screw (10 UNF x.12")) Fixing Plain washer) regulator box Special nut (10 UNF)) to dash Voltage regulator for instruments, 10 volt Spring washer) Fixing Drive screw) regulator Cover for fuse box Cover for fuse box Fuse, 35 amp Drive screw, fixing fuse box Drive screw, fixing fuse box Table 1 GFS435 Table 2 T8443* Telephoto		Cover for regulator box			
Current/voltage regulator box Cover for regulator box Screw (10 UNF x.la")) Fixing Plain washer		Drive screw, fixing regulator box to dash			= =
Cover for regulator box Screw (10 UNF x.1%")) Fixing Plain washer) regulator box Special nut (10 UNF)) to dash Voltage regulator for instruments, 10 volt Spring washer) Fixing Drive screw) regulator 7 Fuse box Cover for fuse box Fuse, 35 amp Drive screw, fixing fuse box 1 600442 3 79054 Bha4602 3 3902 3 101 BHA4602 2 3101 2 AB606021 1 606253 1 606253 1 GFS435		Current/voltage regulator box	_		
Screw (10 UNF x.1%")) Fixing 3 79054 Plain washer) regulator box 3 3902 models Special nut (10 UNF)) to dash 3 79239 6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amb 1 GFS435 Drive screw, fixing fuse box 1 AB610051		Cover for regulator box	i		
Plain washer) regulator box 3 3902 models Special nut (10 UNF)) to dash 3 79239 6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amb 1 GFS435 Drive screw, fixing fuse box 1 AB610051		Screw (10 UNF x 13")) Fixing	3		Diesel
Special nut (10 UNF)) to dash 6 Voltage regulator for instruments, 10 volt Spring washer) Fixing Drive screw) regulator 7 Fuse box Cover for fuse box Fuse, 35 amp Drive screw, fixing fuse box 1 AB610051			_		
6 Voltage regulator for instruments, 10 volt 1 BHA4602 Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amb 1 GFS435 Drive screw, fixing fuse box 1 AB610051			3		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
Spring washer) Fixing 2 3101 Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amo 1 GFS435 Drive screw, fixing fuse box 1 AB610051	6	Voltage regulator for instruments, 10 volt	Ĭ		-
Drive screw) regulator 2 AB606021 7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amp 1 GFS435 Drive screw, fixing fuse box 1 AB610051		Spring washer) Fixing	2		
7 Fuse box 1 606253 Cover for fuse box 1 505158 Fuse, 35 amp 1 GFS435 Drive screw, fixing fuse box 1 AB610051			_		
Cover for fuse box 1 505158 Fuse, 35 amb 1 GFS435 Drive screw, fixing fuse box 1 AB610051	7		ī		
Fuse, 35 amp 1 GFS435 Drive screw, fixing fuse box 1 AB610051		Cover for fuse box	1		
Drive screw, fixing fuse box 1 AB610051		Fuse, 35 amo	1		
Drive screw, locating fuse box 1 GHF421		Drive screw, fixing fuse box	i		
		Drive screw, locating fuse box	1	GHF 421	


GEMERAL ELECTRICAL EQUIPMENT, NEGATIVE EARTH SYSTEM 4-cylinder models. From vehicle suffix 'D' onwards

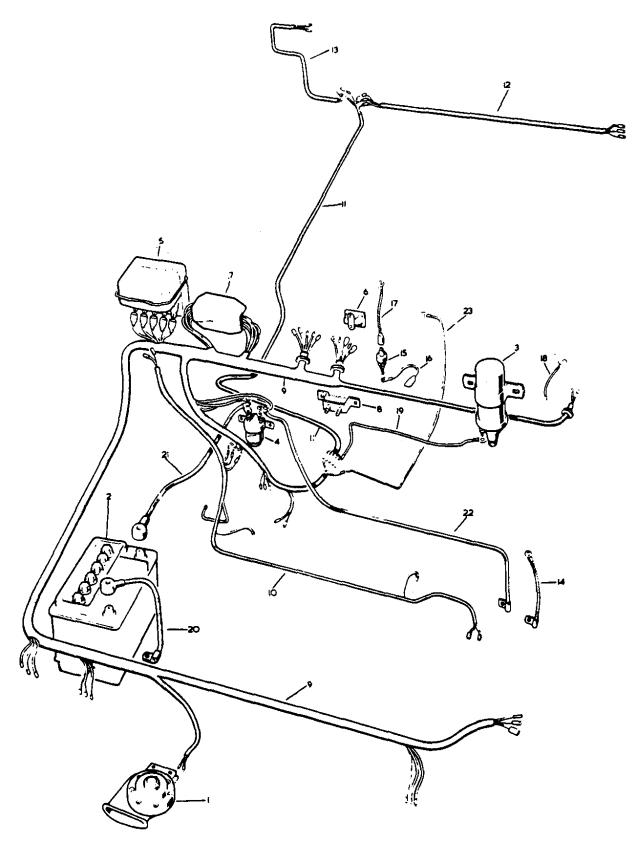



REF	TE DESCRIPTION	QI	Y. PART No. REMARKS
8	Resistor for heater plugs	1	PP.C1716)
.,	Bolt (10 UNF x ₹"))	2	257015) Diesel
	Shakeproof washer) Fixing resistor to dash	2	311373) models
•	Nut (10 UNF))	2	257023)
٥	Dash harness	1	556776)Petrol models. Un to vehicle
10		1	555799)vehicle suffix 'E' inclusive
	Dash harness	Ţ	560899)Petrol models. From vehicle
	Engine harness	1	560969*)suffix 'F' onwards
	Dash and dynamo harress	ו	559058 Diesel models. Up to vehicle suffix 'E' inclusive
	Dash harness	1	560904 Diesel models. From vehicle suffix 'F' onwards
11	Frame harness	1	519784 88 models)Up to vehicle
	Frame harness	1	526440 109 models)suffix 'E')inclusive
	Frame harness	1	528900 109 Station Wagon)Up to Petrol models)vehicle
	Frame harness	1	529964* 109 Station Wagon)suffix Diesel models)'E')inclusive
12	Rear crossmember harness	1	519783 Up to vehicle suffix 'E' inclusive
	Frame and rear crossmember harness	1	560903* 88)Petrol)From
	Frame and rear crossmember harness	i	560898* 109)models)vehicle
	Frame and rear crossmember harness	i	560901* 109 Station) suffix Wagon) 'F'
	Frame and rear crossmember harness	7	560977* 88)))))))))) onwards
	Frame and rear crossmember harness	1	560975 109)Diesel)
	Frame and rear crossmember harness	i	560976* 109 Station (models) Wagon)
13	Lead for rear number plate lamp	1	500559 All America Dollar Área Ontional for other areas
14	Lead, starter motor to earth	1	219649 Petrol models
	Lead, starter motor to earth	1	531672* Up to vehicle suffix)
	Lead, starter motor to earth	1	'D' inclusive)Diese 90575183 From vehicle suffix)models 'E' onwards)
	Fan disc washer for earth lead at starter motor	1	90512305
	Bolt (5/16" UNF x 3")) Fixing starter	i	and the same of th
	Fan disc washer) earth lead to	ż	
	Nut (5/16" UNF)) chassis frame	ζ. 1	GHF201
15		i	555762) Up to vehicle)
16		,	555800*) suffix 'E')Except
17	Lead, inhibitor socket to windscreen	1	555801*) inclusive)Station Wagon
17	Lead, winer switch to earth	i	555800* Station Wagon.Up to vehicle suffix 'E' inclusive
10	Lead, winer motor to earth	7	55580]*)
14.	e 🔪 e e e e e e e e e e e e e e e e e e		:
H	Fan disc washer) Fixing earth	7	90519807) Up to vehicle suffix 'E'

GENERAL ELECTRICAL EQUIPMENT, NEGATIVE EARTH SYSTEM 4-cylinder models. From vehicle suffix 'D' onwards

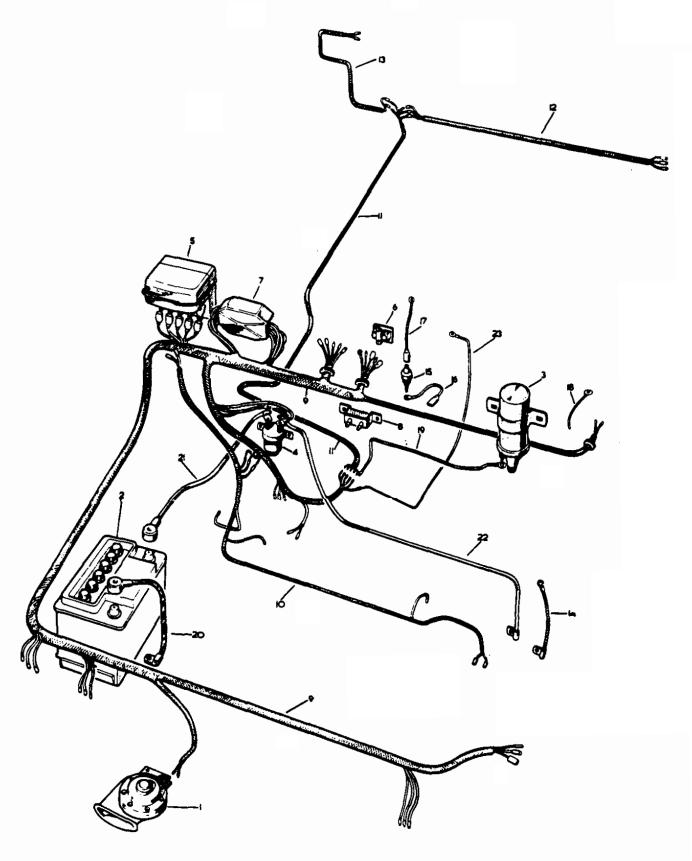




GENERAL ELECTRICAL EQUIPMENT, NEGATIVE EARTH SYSTEM 4-cylinder models. From vehicle suffix 'D' onwards

PLA REF	_		TY. PART No.	REMA RKS
	Cable, switch to wiper motor	1	560965*	From vehicle suffix 'F'
1,9	Cable, coil to distributor, low tension	1	528963	
	Cable, coil to distributor, low tension	1	579243	Lucar type) Alter-)Petro connections) natives)model
20	Cable, battery to earth	1	551318	,
21	Cable, hattery to solenoid switch	1	551319	Ś
	Cable, battery to earth	1)′
	Cable, battery to starter	1	551347*	Up to vehicle suffix) 'D' inclusive)Diesel
	Cable, battery to starter	1	560902*	From vehicle suffix)models 'E' onwards
	Cable, connecting batteries	1	55163R	ý
	Drive screw, fixing battery cables	2	50552	4 off on Diesel models
	Pubber cover for battery terminal	1	263158*	-
22	Cable, solenoid switch to starter	1	501691) Petrol
	Rubber boot for starter cable	2	500990*) models
	Bolt (引" UNF x 译")) Fixing	1	255208	()
	Fan disc washer) battery	2	510170) Diesel models
	Spring washer) earth cable	ן	GHF331	j
	Nut (3" UNF)) to frame	ו	GHF200	j
	Warning label 'NEGATIVE EARTH'	1	348433*	·
	Pop rivet, fixing label to grille namel	2	78257	
	Lead, tank unit to dash harness	1	529966*	Diesel models)Up to vehicle
23	Lead for fuel tank unit	1		Petrol models)suffix 'E')inclusive)Part of frame)harness on)later model


GENERAL ELECTRICAL EQUIPMENT, NEGATIVE EARTH SYSTEM 6-cylinder models.

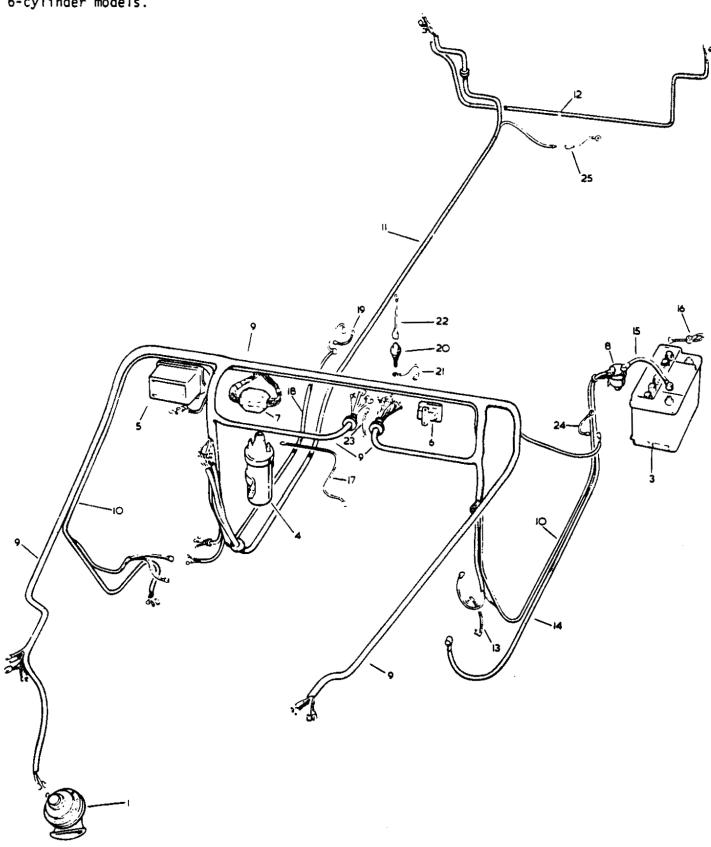

PLA REF		<u>a</u> 1	TY. PART No.	REMARKS
1	Windtone horn, complete with bracekt	1	560749	
ı	Contact set for windtone horn	1		Lucas type
		7		
	Contact set for windtone horn	ì		Clearhooter type
	Rubber grommet for horn]	234041*	
	Bolt (1" UNF x 1")) Fixing horn bracket		255206	
	Spring washer) to the box or	?		
	Nut (1 UNF)) bridge plate	?	GHF 200	
	Protector plate for horn	1	396124	
	Self-locking nut (}" UNF) fixing protector plate	_		
	to radiator grille	2	GHF 221	
3	Activator, dry, 12 volt	1	GBY2205	
۵	Ignition coil	1	GCL110	
	Rubber boot for ignition coil	1	574217	
	Terminal nut)	1	510237*	
	Acorn nut) For ignition coil	1	240102	 For early type coil wit
	Rubber boot)	1	506679	 terminal nut connection
	Solit washer)	1	214279*)
	Bolt (1" UNF x 1"))	1	255207	
	Plain washer) Fixing coil	1	6LC+0o	
	Spring washer) to engine	1	GHF331	
	Nut (å" UMF)	1	GHF200	
5	Current voltage control box	1	GEUA07	
	Cover for control box	1	600442	
	Rubber seal for cover	1	507810*	
	Screw (10 UNF x 12")) Fixing	3	79054	
	Plain washer) control box	3	3902	
	Special nut (10 UMF)) to dash	3	70000	
6	Voltage regulator for instruments	Ĭ		
•	Drive screw) Fixing regulator	2		
	soring washer) to dash	2	3101	•
7	Fuse box	1	506253	
•	Cover for fuse box	i	505158	
	Fuse, 35 amo	2		
	Drive screw, fixing fuse box	ï	GHF423	
		-	GHF 423	
8	Drive screw locating fuse hox	1	PTC461	
Ç	Starter solenoid switch	1		
	Soring washer) For solenoid	2		F
	Nut) terminal post	2	90575019	•
	Bolt (10 UNF x §"))	2	257019	1
	Spring washer) Fixing solenoid switch	2		1
	Fan disc washer) to seat base	2		
_	Nut (10 UNF)	?	257023	
9	Dash harness	1	5~U/5a*	Up to vehicle suffix 'E'
	Dack havened	-	FC0010	inclusive
	Dash harness	1	שוצטחה	From vehicle suffix 'F'
3.0	D ha	•	550530	onwards
10	Dynamo harness	1	560532	A 10
11	Frame harness	ļ) Up to vehicle suffix 'E
			NA 114 4 4	1 1 0 0 1 1 1 0 1 1 0 0
12	Rear crossmember harness Frame and rear crossmember harness	1) inclusive From vehicle suffix 'F'

^{*} NO LOMGER SERVICED


GENERAL ELECTRICAL EQUIPMENT, NEGATIVE EARTH SYSTEM 6-cylinder models

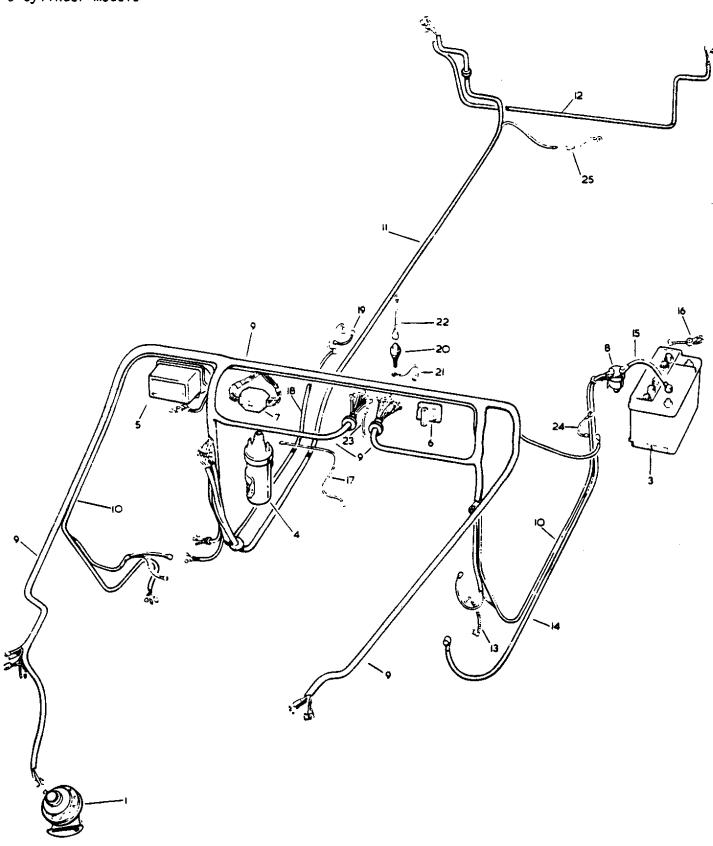

PLA REF		ат	Y. PART No.	REMARKS	
13	Lead, starter motor to earth	1	219649		
	Bolt (5/16" UMF x 1")) Fixing starter	i	GHF120		
	Fan disc washer) earth lead to		90510912		
	Nut (5/16" UMF)) chassis frame	ī			
14		ì			
15	Cable, battery to starter solenoid	1			
	Cable, battery to earth, negative	1			
	Drive screw, fixing hattery cables	ż			
17	Cable, coil to distributor, low tension	ï	559163*	Un to vehicle s inclusive	uffix 'E'
	Cable, coil to distributor, low tension	1	5289K3	Vehicle suffix	'F' only
	Lead, coil to distributor, low tension	1			
18	Cable, fuel pump feed	1	905F0577	* Un to vehicle inclusive	suffix 'E'
	Cable, fuel numn feed	1	559750*	From vehicle su onwards	ffix 'F'
10	Lead, fuel pump to earth	3	559141*		
	Bolt (2BA x)"))	j			
	Fan disc washer) Fixing earth lead	i			
	Spring washer) to fuel numb bracket	ĺ	MM702001		
	Nut (ŽBA))	1	RTC608		
20	Inhibitor socket for wider motor leads	1	555762)Except
21	Lead, winer switch to inhibitor socket	1	555800*	Up to vehicle suffix 'E')Station)Wagon
22	load jabibisan saakat ta waxaan	,	EEE 001#	inclusive)
23	Lead, inhibitor socket to windscreen Lead, winer switch to earth	1		Station Wagon. suffix 'E' incl	Un to vehicle
24	Earth lead for winer motor	1	555801*	7 E INC.	usive
~ ~	Drive screw) Fixing earth	1) Up to vehicle	cuffic III
	Fan disc washer) lead to dash	1) inclusive	SUITE E
	Cable, switch to winer motor	i	T	,	ffic ICI
	out it a serious to minds strikes	1	00 030 T	onwards	· · · · ·
25	Earth lead for fuel tank gauge	1	239688	UIIWEI US	
-	Drive screw) Fixing earth	•	72626		
	Fan disc washer) lead to body	j			
	Warning label, 'NEGATIVE EARTH'	i			
	Pop rivet, fixing label to grille manel	2	78257		

^{*} NO LONGER SERVICED

GROUP L CHASSIS FRAME

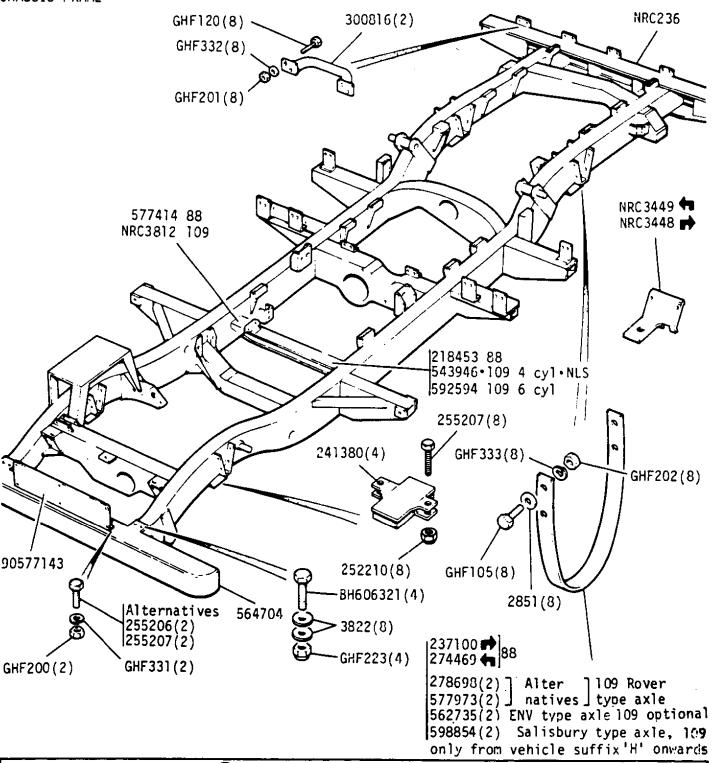


Chassis Frame NRC4642 88 ①
Chassis Frame NRC4355 109 4 cyl ①
Chassis Frame NRC4356 109 4 cyl Station Wagor ①
Chassis Frame 594697 109 6 cyl
Chassis Frame NRC4354 109 6 cyl Station Wagon
① When supplying for vehicles prior to vehicle 'D', the following parts must be fitted:
Shaft for handbrake relay 552746 and Self locking nut GHF223

SIIA LAND ROVER


2F 02

GROUP L CHASSIS - Battery Casing and Air Cleaner Support

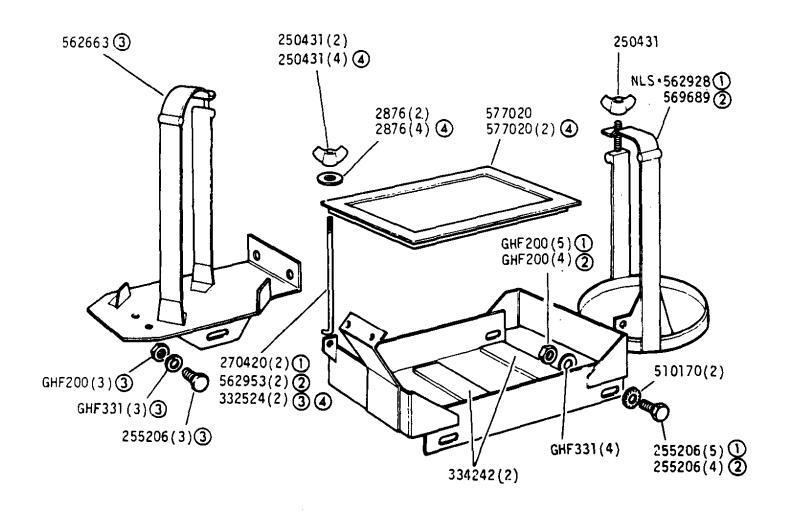


- ① 4 cylinder vehicles with integral horn protector plate
- ② 4 cylinder vehicles with separate horn protector plate
- 3 6 cylinder
- 4 Diesel

GROUP L

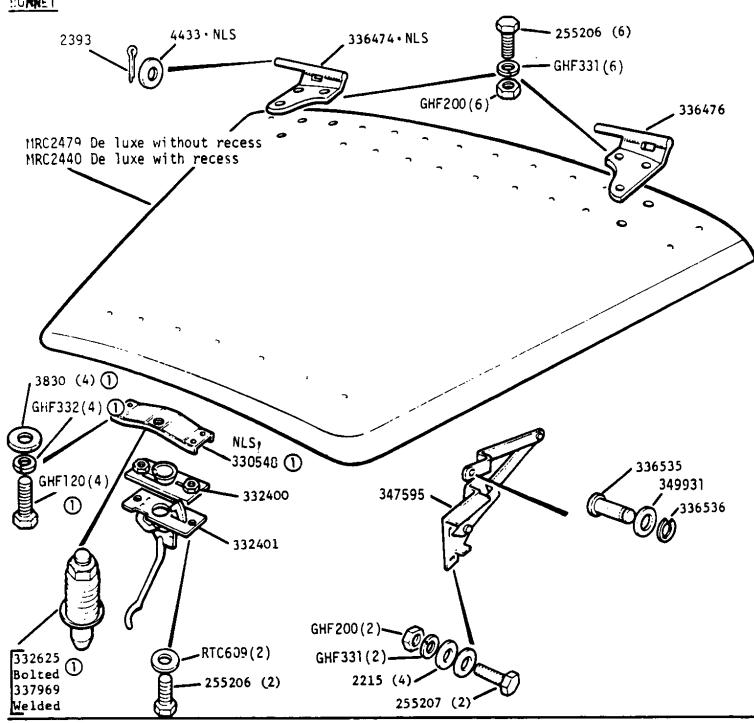


<u>REMARKS</u>


1 For earlier type standard bonnet

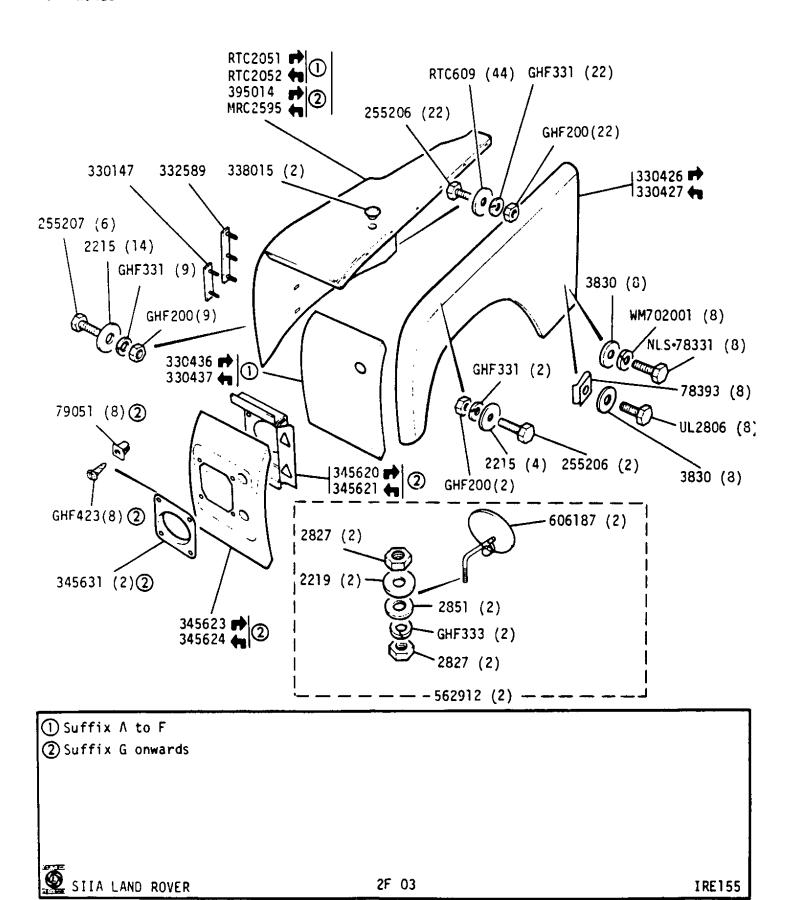


GROUP L COVER PANELS FOR FRONT WINGS

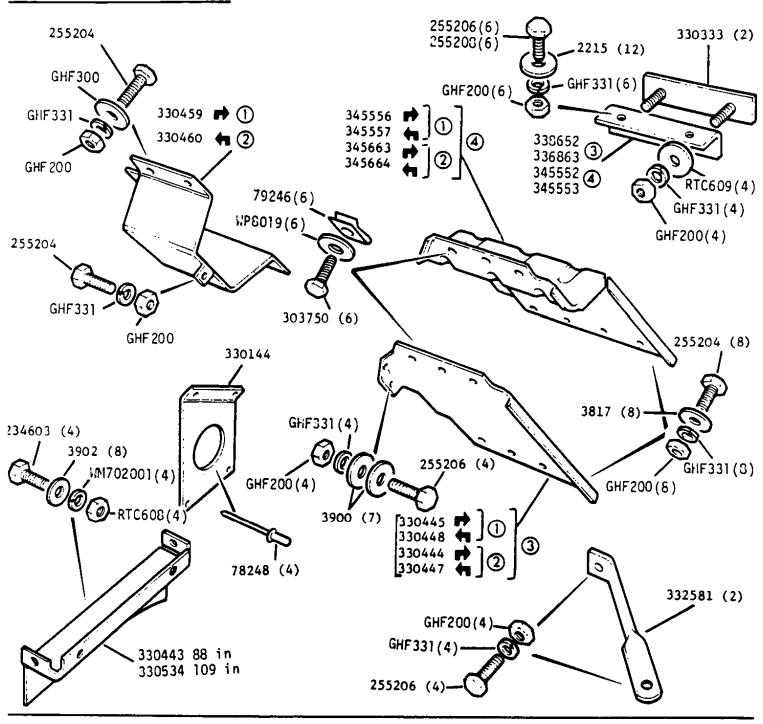

- RH Strg
- ② LH Strg
- 3 Suffix A to F
- 4 Suffix G onwards

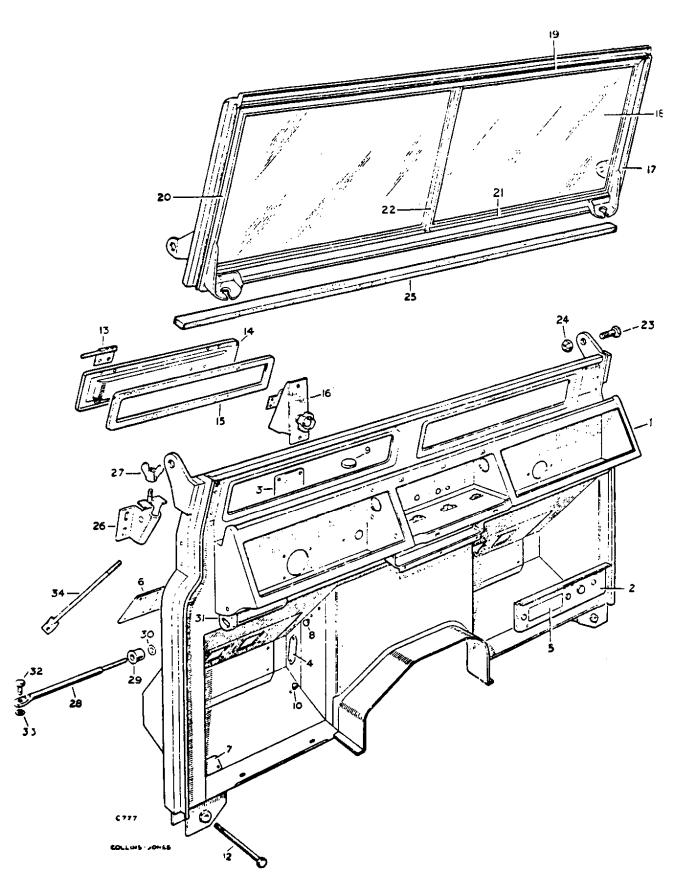


PLA REF	-	a.	TY. PART No. REMARKS
ı	Dash complete	1	345879* 4 cylinder models
'	Dash complete	i	345611* 6 cylinder models
	Mounting bracket for control panel	, i	34588?) 4 cylinder)
		7	
2	Pop rivet, fixing bracket to dash	′	
2	Panel for controls	1	332775* Petrol models) vehicle
	Panel for controls	1	332726* Diesel models) suffix 'C'
	Screw (2BA x 3")) Fixing	6	77869) inclusive
	Spring washer) panel	6	WM702001)
	Plain washer) to	6	WC702101)
	Nut (2 BA)) dash	3	RTC608)
	Rubber edge finisher, outer) For dash	2	348370*)Up to vehicle) 4 cylinder
	Rubber edge finisher, centre) top rail	1	348371*)suffix 'C') models
	•)inclusive)
	Finisher for dash top casing	1	345077 From vehicle suffix 'D'
		•	to suffix 'E' inclusive
	Finisher for dash top casing	1	345591 From vehicle suffix 'F'
		•	onwards
	Drive screw) Fixing	2	AB610051) From vehicle
	Plain washer) finisher	2	
	Spire extension nut) to dash	2	•
3	Cover panel for steering cutout	1	78237) Onwards 304111*
J	Rivet fixing cover plate	4	
		4	401 . 11
4	Cover plate for accelerator pedal hole	I	303990*
	Bolt (½" UNF x ≩")) Fixing	2	
	Spring washer) cover plate	2	GHF331
	Nut (}" UNF)) to dash	2	GHF 200
	Blanking plug 5/16" dia.) For accelerator	2	
	Blanking plug ½" dia.) pedal hole	1	338015
5	p jorannon omotor in acom	1	306421*)
	Bolt (}" UNF x &")) Fixing	2	255206) Petrol) Up to
	Spring washer) cover	2	GHF331) models) vehicle
	Nut (1 UNF) panel	2	GHF200) suffix 'C'
	Cover panel or dash for hand speed control	1	275742*´) Diesel j inclusive
	Grommet in dash for hand speed control rod	1	236389) models)
	Blanking plate for hand throttle aperture	1	345883m) 4 cylinder
	Pop rivet) Fixing	7	78257) models from
	Bolt (1 UNF x 1")) plate	3	255204) vehicle
	Spring washer) to dash	3	
	Nut (\frac{1}{2}" UNF))	3	GHF200) 'D' onwards
	Mounting box on dash for hand speed control) 1	338428)
	Grommet in dash for hand speed control rod	1	312937)
	Bolt (½" UNF x ½")) Fixing control	Δ	255204) Diesel models. From vehicle
	Soring washer) and mounting	4	GHF331) suffix 'D' to suffix 'E'
	Nut (1" UNF)) box to dash	4	GHF200) inclusive
e	Pop rivet filling maint drain hole	?	78248
C	Cover plate for pedal holes	Ĭ	330143) 4 cylinder
	Rivet fixing plate	8	•
	Plate for brake and clutch medals	1	338086* RH Stg) All 4 cylinder
	Plate for brake and clutch pedals	1	338085 LH Stg) models. Also 6
) cylinder models. Up
) to vehicle suffix
) ^k F' inclusive
	Plate for brake and clutch pedals	1	345636 RH Stg) 6 cylinder models.
	Plate for brake and clutch nedals	1	345637*LH Stg) From vehicle suffix
) 'G' onwards
	AP AP		•
	2F 0 5		* NO LONGER SERVICED

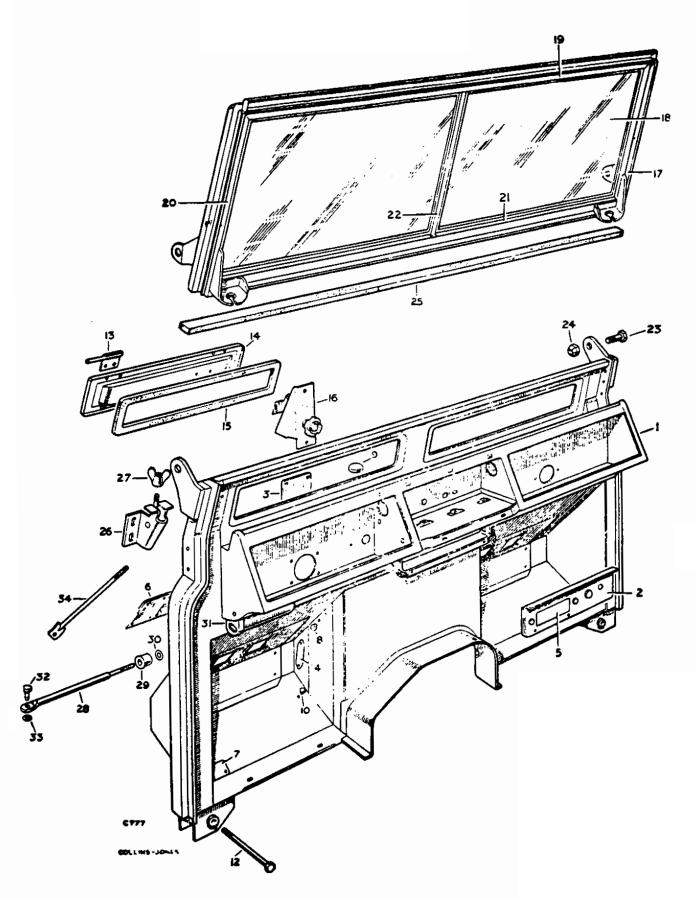


PLA' REF.	E 1 2 3 4 DESCRIPTION	זם	Y. PART No. REMARKS
	Rivet (3/16" Imex) fixing medal mlate to dash	12	78697
	Cover plate for the panel, LH	ij	
	Cover plate for the parel, RH	i	332088* LH Stg
	Rivet (3/16" Imex) fixing cover plate to dash	•	78697
	Drive screw, earth point on dash	' <u>-</u>	
8	Rubber nlug for redundant accelerator holes	5	
Q	Plastic plug, 15" dia. for demister holes	2	338027)
	Plastic nlug, 12" dia. for demister holes	2	338009) Alternatives
	Plastic nlun, 2" dia. for demister holes	2	328028)
	Plastic nlug, 15" dia, for bridge plate	ī	338027
	Plastic plug, 11/16" dia.) For heater	2	338019)
	Plastic plum, ?" dia.) nine holes	2	
	Plastic plug, }" dia. for hand throttle hole	1	338020 Petrol models
	Plastic nlug, 9/16" dia. for choke control hole	1	
	Rubber nlug, 3.5/32" dia. for hanjo bolt access		ή 6-cylinder
	hole	1	36868A) Petrol
	Rubber grommet, 11" dia. for bridge plate	1	368427) models
	Plastic nlug, }" dia.) For redundant windscreen	1	
	Plastic nlug, { dia.) washer holes in dash	1	
) panel		
	Rubber grommet for din switch lead	1	233243 6-cylinder Petrol models
	Rubber blug, 7/16" dia. for windscreen washer		
	holes in outer vent namel	2	338014
10	Rubber plug, redundant accelerator ston hole	1	
	Pubber plug for filling redundant clin holes	F	73198 21 litre Petrol models
			<pre>1 off on Diesel models</pre>
	Buffer for bonnet panel on dash front	2	372647
	Bolt (5/16" UNF x 2")) Fixing dash to	4	255227
	Plain washer) steering box	10	3830
	Self-locking nut (5/16" !NF)) support brackets	٥	GHF242
12	Tie bolt (}" UNF)) Fixing dash	2	336738
	Plain washer) to	4	WC112081
	Nut (1 UNF)) chassis	2	NH608041
	Vanhilatan hinas DU	~	220060+ \ Fan washilahan
12	Ventilator hinge, RH	2	
13	Ventilator hinge, LH	2	
	Screw (2BA x 3")) Fixing		78399*) fixed by screws
	Spring washer) hinges		WM702001) and nuts
	Plain washer) to] <u>6</u>	
	Nut (2BA)) lid	Я	RTCF08)

^{*} NO LONGER SERVICED

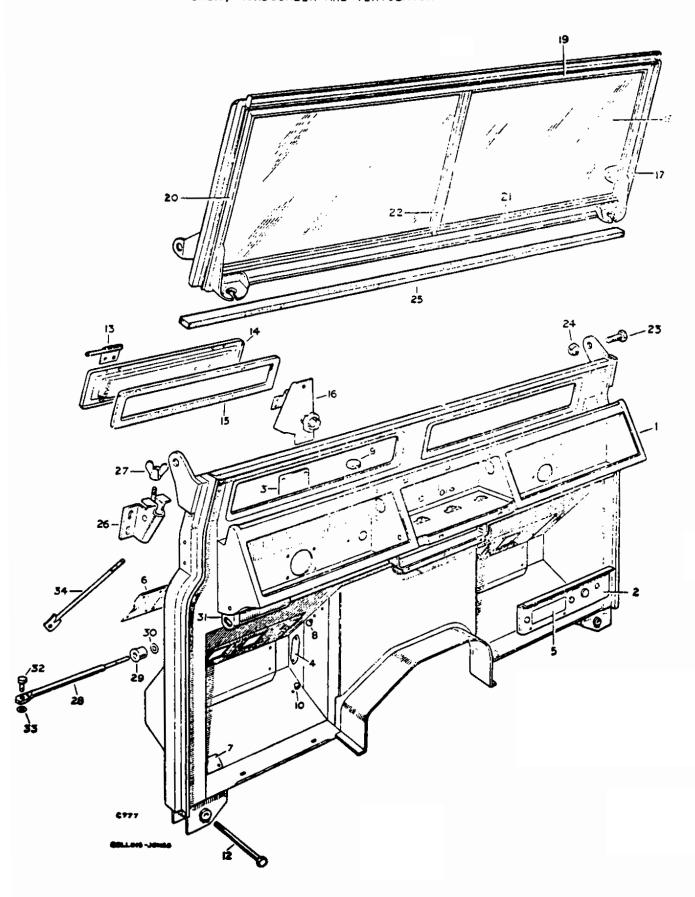



		QT	Y. PART No.	REMARKS
	Vandilator lid and bings for John Bil	,	245045	
	Ventilator lid and hinge for dash, RH		345845	
14	Ventilator lid and hinge for dash, LH		345846	Fan washilahan lid dak
	Hinge bin for ventilator lid	4		For ventilator lid with
3.5	C - 11 61 F 11 - 1	^		welded hinges.
	Sealing rubber for ventilator lids		330621	0
١٣	Ventilator control mechanism complete			Quadrant type
	Knob and fixing screws for ventilator control	2	332327	For quadrant type ventilator
	Cinalin for contileton control back	2	220500+	control.
	Circlip for ventilator control knob	7.	3205005	For screw type ventilator
	During agent	A	ADC 100E1	control.
	Drive screw)		AB610051	{
	Spire nut)		78237	₹
	Bolt (2 BA x \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \		234603) } For computing vertilator
	Plain washer, small) control) For screw type ventilator) control.
	Plain washer, medium) to dash		4034 385 <i>2</i>	Control.
	Plain washer, large)		აიი∠ WM702001	. ₹
	Spring washer)	8	RTC608	·
	Nut (2 BA)) Taptite screw (10 UNF x 3")) Fixing venti-			For quadrant type)Alterna-
	Plain washer) later control)ventilator)tives
	Drive screw) to dash		AB610051	
	Plain washer)		4034	'₹
	Spire nut)		78237	〈
	Set bolt (2 BA x ½")) Fixing		234603)
	Plain washer) control to		%C702101	1
	Spring washer) ventilator lid		VM702001	
	the the masker) ventile and the	_	PH 7 07.00 1	
17	WINDSCREEN COMPLETE ASSFMBLY, toughened glass	1	337643*	
	WINDSCREEN COMPLETE ASSEMBLY, laminated glass		338845*	
18	Glass for windscreen, toughened		337644	
	Glass for windscreer, laminated	2	MRC6526	
	Glazing strin for glass 14	ft	78159	
าูด	Retainer for windscreen glass, RH top	1	330668	
	Retainer for windscreen alass, LH ton	1	330669	
50	Retainer for wirdscreen glass, side	?	330667	
21	Retainer for windscreen glass, RH bottom	1	347F37	
	Retainer for windscreen glass, LH bottom	1	347638	
22	Cover for centre strin	1	330670*	Up to vehicle suffix 'C'
				inclusive
	Cover for centre strin	1	336422	From vehicle suffix 'D'
				onwards
			AB604031	
23			256280	
	Screw (3" UNF x 13")) Fixing		255288)	
	Plain washer) windscreen to	4	3650	
24	Turret nut (1 UNF)) dash	2	549043	
25	Rubber sealing strin for windscreen	1	305430	

^{*} NO LONGER SERVICED

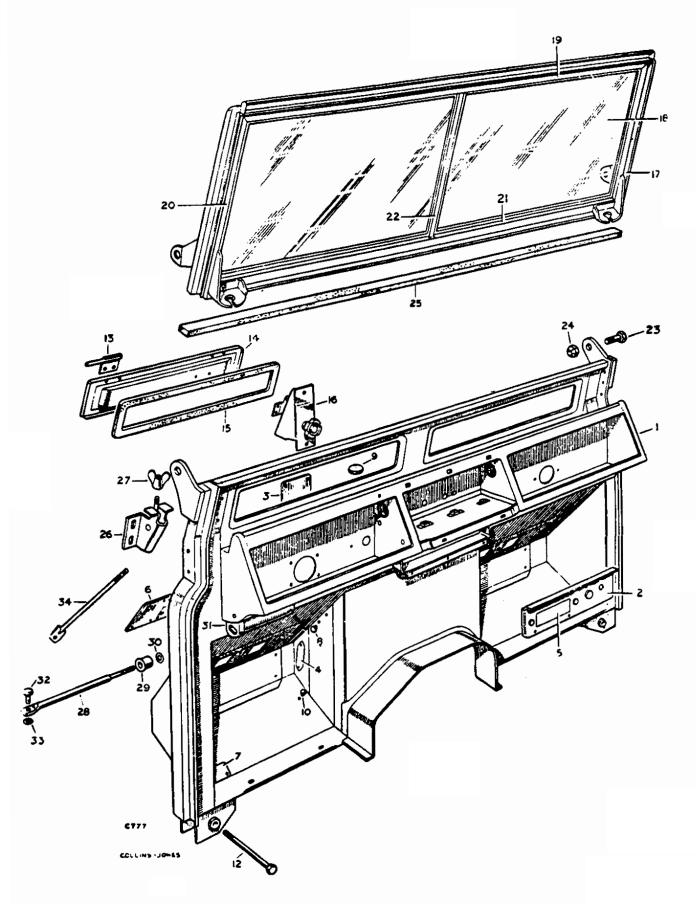


PLA		QTY, PART No. REMARKS
	End filler for windscreen sealing strip	2 330850
	Buffer for top of windscreen	1 332550) Only required when
	Pon rivet fixing huffer	4 78410)hood is fitted
	Fastener for windscreen, RH	1 338194) Turret
26	Fastener for windscreen, LH	1 338195*) nut tyne
27	Wing nut for fastener (5/16" BSF)	2 303729*)
	Wing nut for fastener (5/16" UNF)	2 332098*) Alternatives.
	Turret nut (5/16" UNF) plastic capped	2 338240)
	Set bolt $(5/16" \text{ UNF x §}^{\circ})$) Fixing	4 SH605051
	Plain washer) fasteners	4 RTC610
	Spring washer	4 GHF 332
	CHECK STRAP ASSEMBLY	2 306474
28	Rod for check strap	2 332715
Sä	Buffer for check stran	2 306471
30	Plain washer)	4 4035
•	Spring washer) Fixing buffer to rod	2 GHF331
	Nut $(\frac{1}{2}$ " UNF)	2 GHF200
	Check strap mounting bracket, RH	1 334959
31	Check stran mounting bracket, LH	1 334960
•	Bolt (\frac{1}" UNF x \frac{1}{3}" long))	8 255205)
	Plain washer) Fixing	8 GHF300) Early models
	Spring washer) mounting bracket	8 GHF331)
	Plain washer) to dash	8 RTC609)
	Nut (3" UNF)	8 GHF200
32	Clevis nin) Fixing check strap	2 306564
33	Plain washer) rod to	4 3815*
	Solit pin) front door	2 RTC614
31	Tie bar for dash support	1 332588 For 5/16" UNF bolt and nut
J.,		fixing. Up to vehicle suffi
	Tie bar for dash support	1 345549 PH Stg) For 4" UNF bolt ar
	Tie bar for dash support	1 346370 LH Stg) nut fixing. From) vehicle suffix 'B') onwards
	Nut (₹" BSF) fixing tie bar to dash	2 2827) Alternative
	Nut (3" UNF) fixing tie bar to dash	2 GHF202) fixings
	Bolt (5/16" UNF x 3"))	1 255227)
	Spring washer) Fixing	1 GHF332)Up to vehicle suffix 'A'
	Nut (5/16" UNF)) tie bar to	1 GHF201)
	Bolt (}" UNF x { ") support bracket	1 SH605071)
	Soring washer) on chassis frame	1 GHF333) From vehicle suffix 'B'
	Nut (a" UNF)	1 GHF202) onwards
	Licence holder	1 544573 Plastic type
	E-conde increel	1 5-575 Finality Cyte

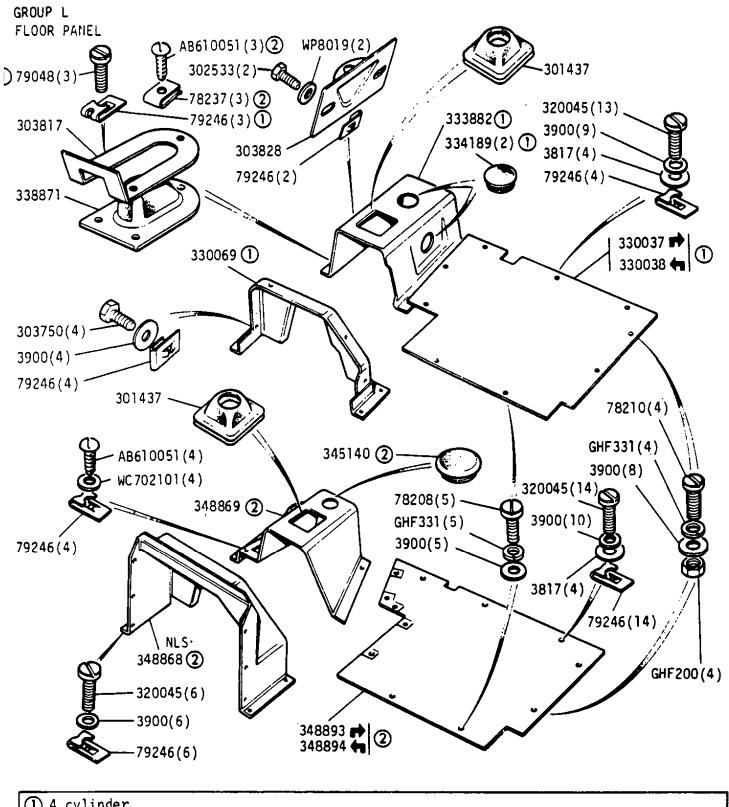

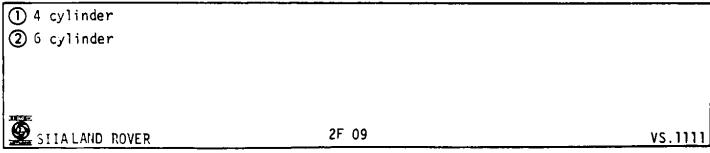


GROUP L SEAT BASE

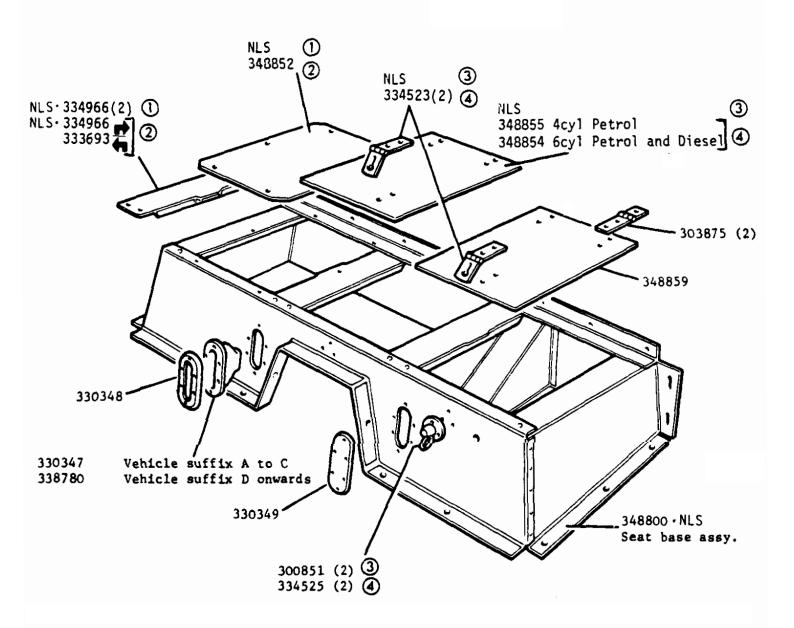


- ① For one locker lid type seat base
- ② For two locker lid type seat base
- 3 Circular base turnbackle
- Semi- circular base turnbuckle


ROUP L EAT BASE FIXINGS

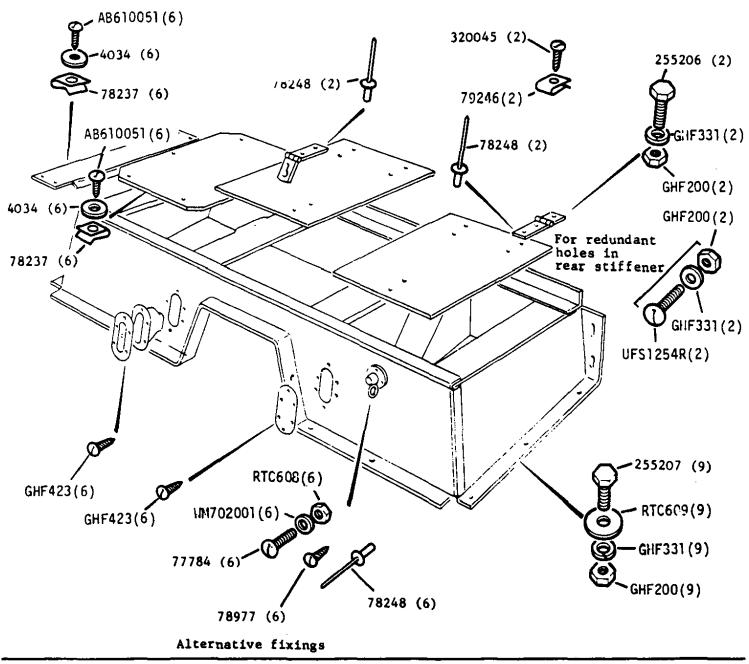

GROUP L
CENTRE TOOL TRAY

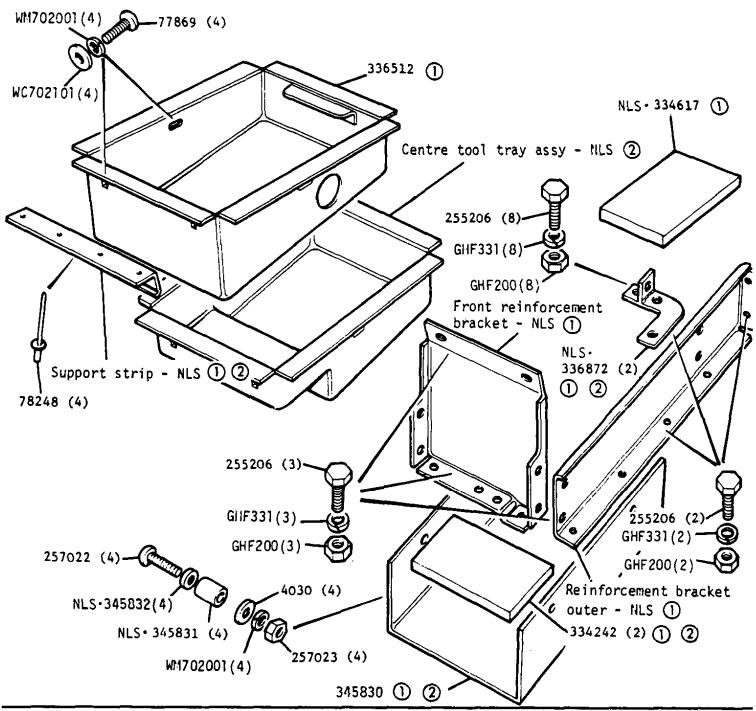

- ① Diesel
- ② 6 cyl Petrol

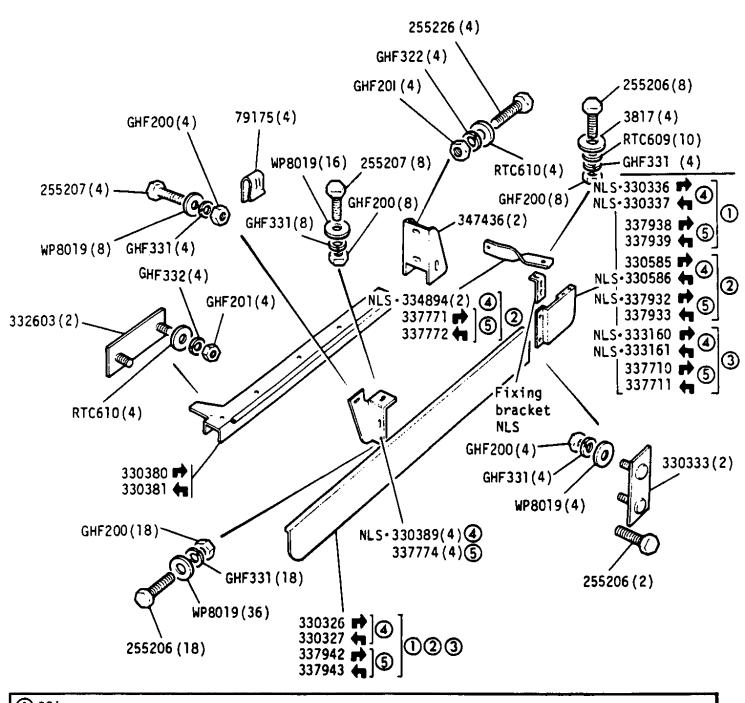

- ① 88in
- (2) 109 in
- 3 109in Station Wagon
- (4) Deep sills
- (5) Narrow sills


S S


SIIA LAND ROVER

2F 11


1 RE 161


GROUP L BODY - Front Door

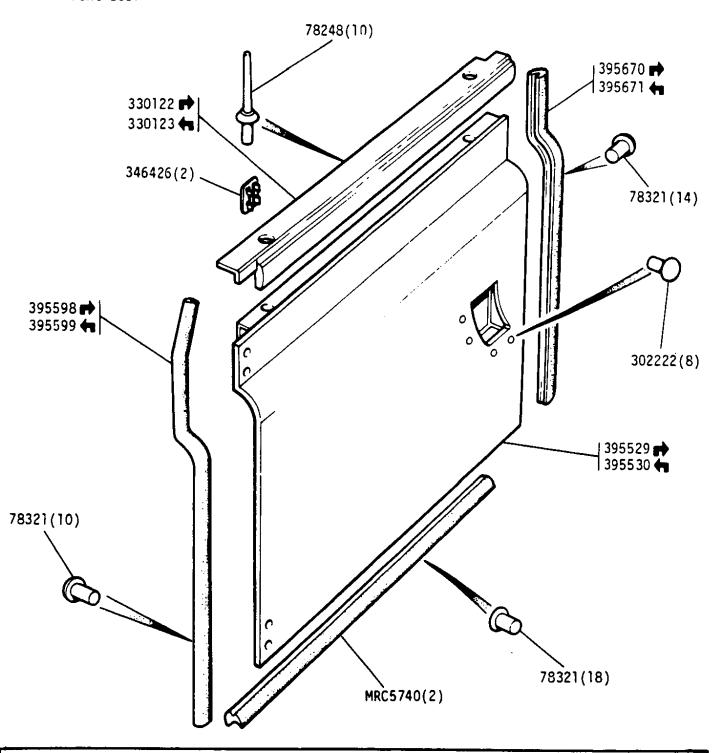


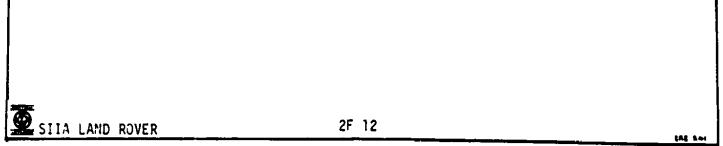

GROUP Ł
BODY - Sidescreen for front door

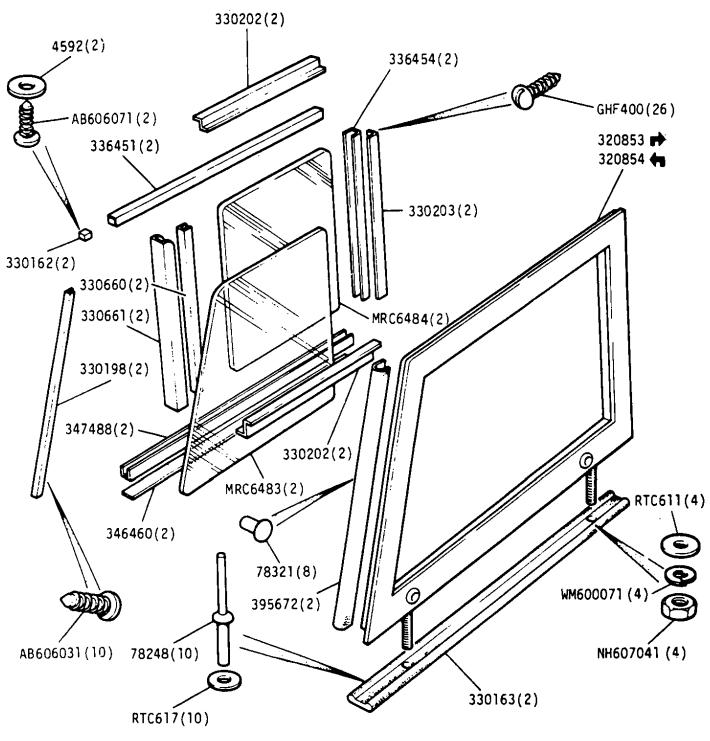

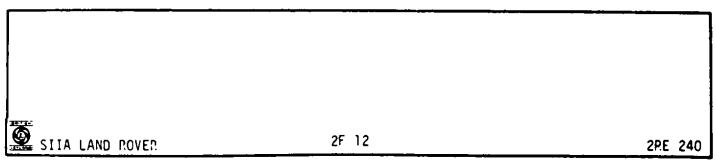


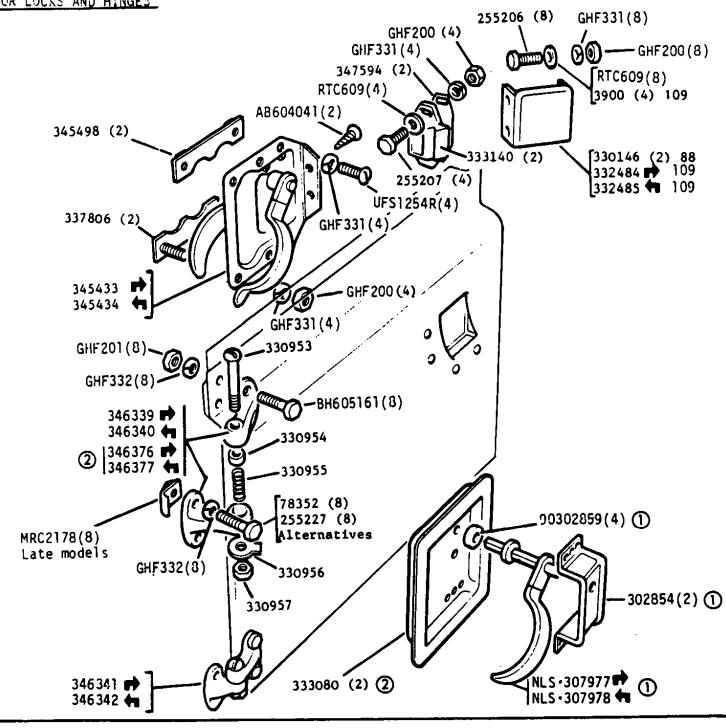

1) For early type lock with detachable inner handle.


Incorporating bracket for exterior mirror. Optional.

REAR SIDE DOORS-109IN STATION WAGON

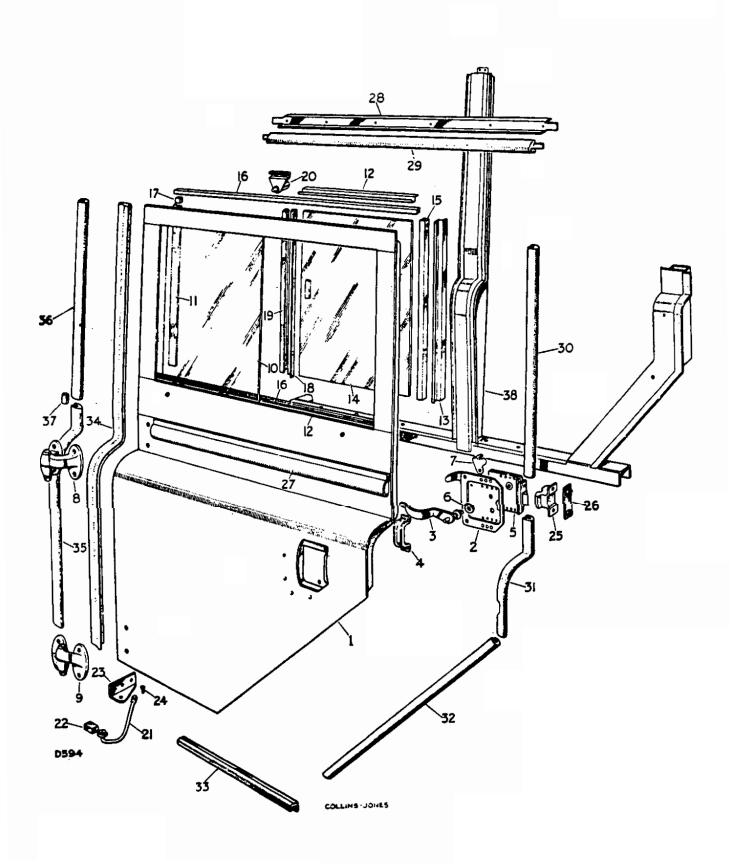


PLAT REF.	E 1 2 3 4 DESCRIPTION	QTY, FART No.	REMARKS
REF.	1 2 3 4 DESCRIPTION	QTT. FARE NO.	NDWA INS
	DEAD CIDE DOOD ACCEMENT DU	1 320857	
,	REAR SIDE DOOR ASSEMBLY, RH REAR SIDE DOOR ASSEMBLY, LH	1 320858.	
1	DOOR LOCK, MOUNTING AND HANDLE ASSEMBLY PH) With non-detachable
	DOOR LOCK, MOUNTING AND HANDLE ASSEMBLY LH) inner handle
2	Mounting plate for door lock	2 333080)
۲.,	Door handle complete, RH	1 307977	\$
3	Door handle complete, LH	1 307978*	Ś
4	Bracket for door handle, outer mounting	2 302854) For early type
	Door lock complete, RH	1 345433) lock with detachable
5	Door lock complete, LH	1 345434	
6	Sealing washer, handle to cover	2 9030285	
	Screw (2 BA x ½"))	8 313858*	
	Spring washer) Fixing lock,	12 WM70200	1)
	Nut (2 BA) brackets and	12 RTC608	}
	Plain washer) cover together	8 RTC618 4 314203	}
	Screw (2 BA x 3")	1 333271*	· / \
7	Locking catch, RH Locking catch, LH	1 333272	₹
′	Screw (2 BA x \ \frac{1}{2}"))	2 313860*	{
	Plain washer, large)	2 4034) Models with pivot
	Plain washer, small) Fixing catches	2 3902) type catch.
	Spring washer)	2 WM70200	
	Nut (Ž BA)	6 RTCF08	j
	Locking catch, RH	1 345435) Spring loaded type
) catch _
	Locking catch, LH	7 345436) With plunger
) operating inside lock) case
			•
	Rivet fixing door lock cover to outer manel	8 302222	D 124
	Screw (}" UNF x }")) Fixing) lock	8 UFS1254	R Alternative to 2 lines below
	Screw retainer, RH) assemblies	2 337805	
	Screw retainer, LH) to door	2 332733	
	Spring washer) lock cover	8 GHF331	,
	Nut (i UNF)	8 GHF200	
	Drive screw, fixing lock assembly to door	2 AB60404	1
	Door hinge, upper RH	1 346339	
8	Door hinge, upper LH	7 346340	
	Door hinge, lower RH	1 346341	

^{*} NO LONGEP. SERVICED

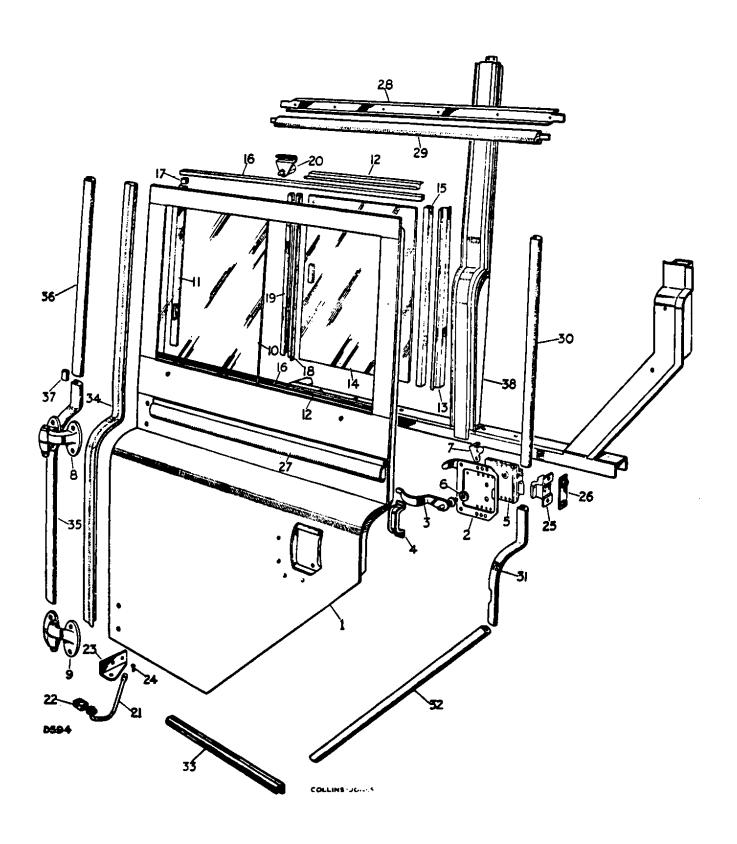

PLAT REF.		<u></u> 01	Y. PART No.	REMARKS
9	Door hinge, lower LH		346342	
-	Bolt (5/16" UNF x 2")) Fixing	8		
	Spring washer) door hinge to	8		
	Nut (5/16" UNF)) door frame	8		
10	Fixed window for sidescreen	Ž		
11	Retainer for sidescreen, fixed window	2		
	Drive screw (¾" No.6) fixing retainer to			
	frame	10	AB606031	
12	Filler, top and bottom, for side screen	4	333081	
13	Filler, rear, for sidescreen	2	330203	
	Packing strip, for glass channel	2	333082	
JΔ	Sliding window with knob for sidescreen	2	333089	
15	Sliding light channel, rear	2	336454	
16	Sliding light channel, top and bottom	4	347489	
	Drive screw (}" No.6) fixing sliding channel		GHF 400	
17	Buffer for sidescreen sliding window at top	2	330162	
	Plain washer) Fixing	5	4592	
• •	Drive screw) buffer	2	AB606071	
18	Sealing rubber for sliding glass	2	330660	
19	Channel for sliding glass sealing rubber	2	330661	
20	Sliding window catch	2	332435	
	Pop rivet fixing catch	4	78248	
21	Rod for check strap, RH	1	333041	
21 22	Rod for check strap, LH Buffer for check strap, short	ا ئ	333204	
22	Buffer for check strap, long	2	306295 333445	
	Door check bracket, RH, for rear side door	j	MRC 4753	
23	Door check bracket, LH, for rear side door	i	333096	
	Bolt (5/16" UNF x 13")	4	255229	
	Bolt (5/16" UNF x 1")	4	GHF103	
	Shakeproof washer) Fixing brackets to	8	GHF 322	
	Shim) chassis frame	8	305232	
	Nut (5/16" UNF)	8	GHF201	
24	Clevis pin)	2	302828	
_	Plain washer, small) Fixing door check rod	4	3947	
	Plain washer, large) to bracket	Ź	RTC609	
	Split pin)		3958	
	Bolt, top (5/16" UNF x 23"))		BH605201	
	Bolt, bottom (5/16" UMF x 3") Fixing door		BH605241	
	Plain washer) hinge to			off when nut plate is use
)'BC' post			•
	Spring washer) at bottom		GHF332	
	Nut (5/16" UNF)		GHF201	4 Off when nut plate is us
	Nut plate)		333710	
25	Striking plate for rear side door locks		333140	
	Shim P=14 / 17 1815		347594	
	Bolt (la UNF x la)		255207	
	Plain washer Fixing striking plate		RTCA09	
26	Spring washer) to 'D' post		GHF331	
۷0	Nut plate)		346241	
27	Waist moulding, rear side door RH Waist moulding, rear side door Lh	1	333719	
41	maise indutating, rear side door in	ı	333720	

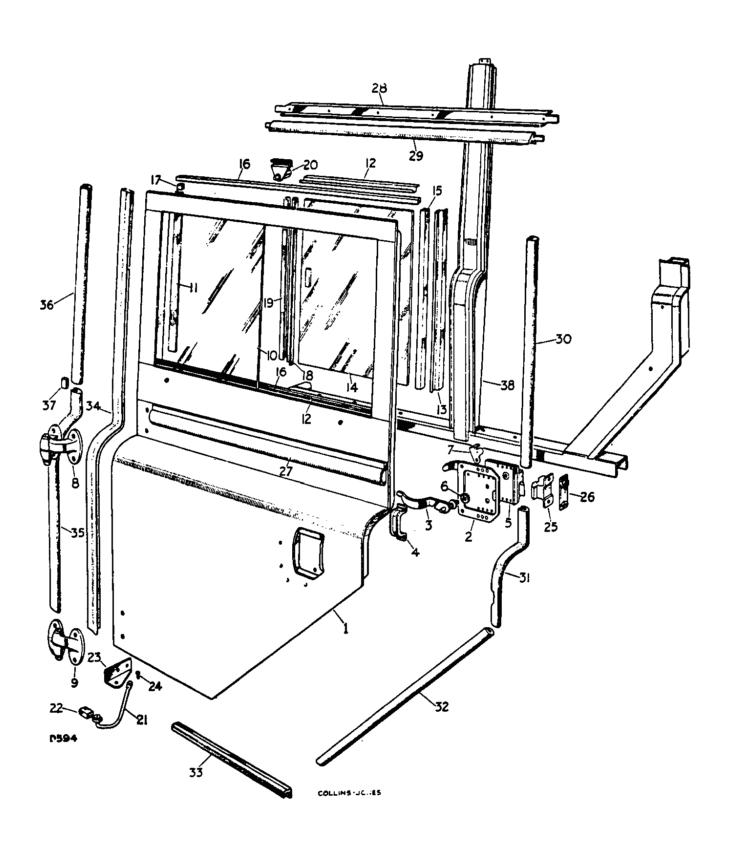


PLA REF	TE DESCRIPTION	Q 1	TY. PART No.	REMARKS
	Special bolt)	16	302533	-
	Plain washer) Fixing moulding to doors	16	2630	
	Snire nut)	16	79246	
	Seal retainer for rear side door, RH top	1	MRC2381	
28	Seal retainer for rear side door, LH top	1	MRC2382	
29		2	333228	
	Rivet fixing seal to retainer	12	78321	
	Screw (2BA x 4"))	8	77869	
	Plain washer) Fixing seal and	8	3902	
	Spring washer) retainer to cant rail	8	WM702001	
20	Nut (2BA)	8	RTC608	
30	Door sealing rubber for upper vertical 'D' most	2		
	Rivet fixing seal to 'D' post	10	78321	
	Door sealing rubber for lower vertical 'D'		222263	
31	post, RH	1	333261	
31	Door sealing rubber for lower vertical 'D'	,	222262	
	post, LH Pivot fiving coal to IDI and	10		
32	Rivet fixing seal to 'D' post Door sealing rubber for sloping 'D' post		78321 395674	
J.	Rivet fixing seal to 'D' post	2	78321	
33	Door sealing rubber at rear side sills, bottom	8 2	333233	
33	Rivet fixing seal to sill	8	78321	
34	Door sealing rubber at 'C' post	2	333229	
•	Rivet fixing seal at 'C' post	22	78321	
	Door sealing rubber at 'B' post, lower, RH	1	395670	
35	Door sealing rubber at 'B' post, lower, LH	i		
•••	Rivet fixing seal to 'B' post	12	78321	
36	Door sealing rubber at 'B' post, upper	2	395674	
	Rivet fixing seal to 'B' post	10		
37	Filler piece for 'B' post seal	2	330850	
	Frame for front and rear side doors, RH	ī		
38	Frame for front and rear side doors, LH	1		
	Bracket, sill channel to panel	6	330389*	
	Bolt (¼" UNF x ¾"))	12	255207	
	Plain washer) Fixing brackets	24	WP8019	
	Spring washer) to sill channels	12	GHF331	
	Nut (\frac{1}{2}" UNF)	12	GHF200	
	Bolt plate)	2	332603	
	Plain washer) Fixing sill channels	4	RTC610	
	Spring washer) to dash cillar	4	GHF332	
	Nut (5/16" UNF))	4	GHF201	
	Bracket for sill, rear end RH	1	333259	
	Bracket for sill, rear end LH	Ĭ	333260*	
	Bolt (5/16" UNF x ¼") Plain washer	8		
	Plain washer) Fixing hracket Plain washer) to sill and		RTC610	
	Spring washer) chassis frame	2	WP185	
	Nut (5/16"UNF)		GHF332 GHF201	
	Plug for redundant hole on 'BC' post, bottom	2	338021	
	5 for regulating hore on bo posts button	€.	3300Z I	

^{*} NO LONGER SERVICED

GROUP L BODY - Rear Body - 88in

SIIA LAND ROVER

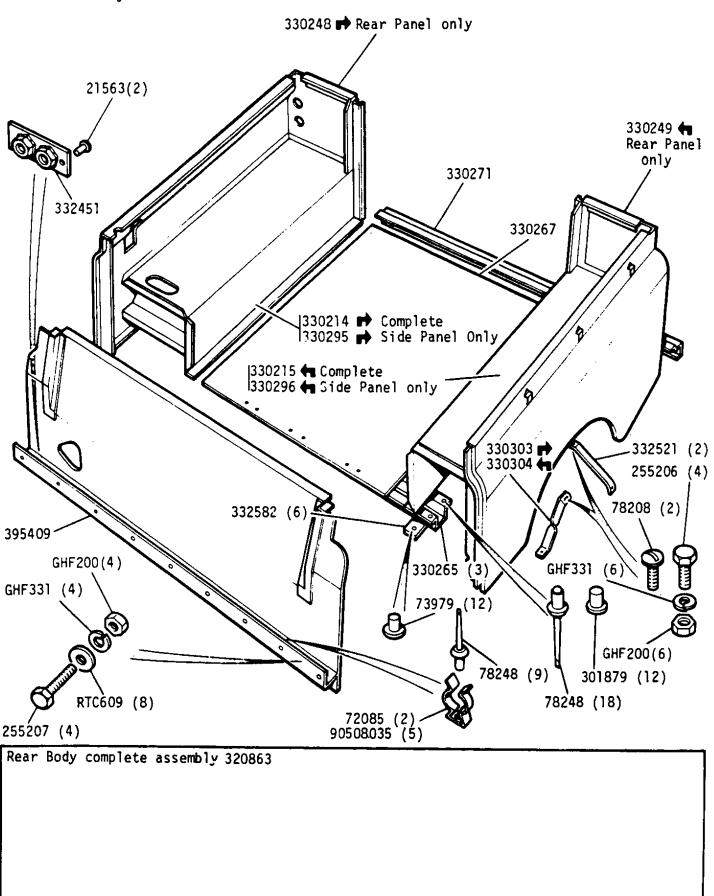

2G 02

3RE 32

GROUP L BODY - Cover Panels and Spare Wheel Clamp - Rear Body 88in 77869(2) WM702001(2) WC702101(2) 502951 RTC608(2) 330366 AB606031(2) MRC2244

MRC2245


← 78248(9) 4030(4) AB608031(4) 78248(6) ① RTC608(4). 330367 WC702101(4)-WM702001(4) 302934 ① GHF333 (1) 77869(4) 3982 ① 330208 ① 330212(2) ① GHF200(8)① 303847 ① 2284 ① GHF221 (1) - 3831 🕦 GHF331(8) ① 3842 ① RTC609(8) ① 302933 ① 255206(8) ① GHF101 (1) (1) Except Station Wagon

2G 02


3RE 30


SIIA LAND ROVER


GROUP L BODY - Cappings - 88in

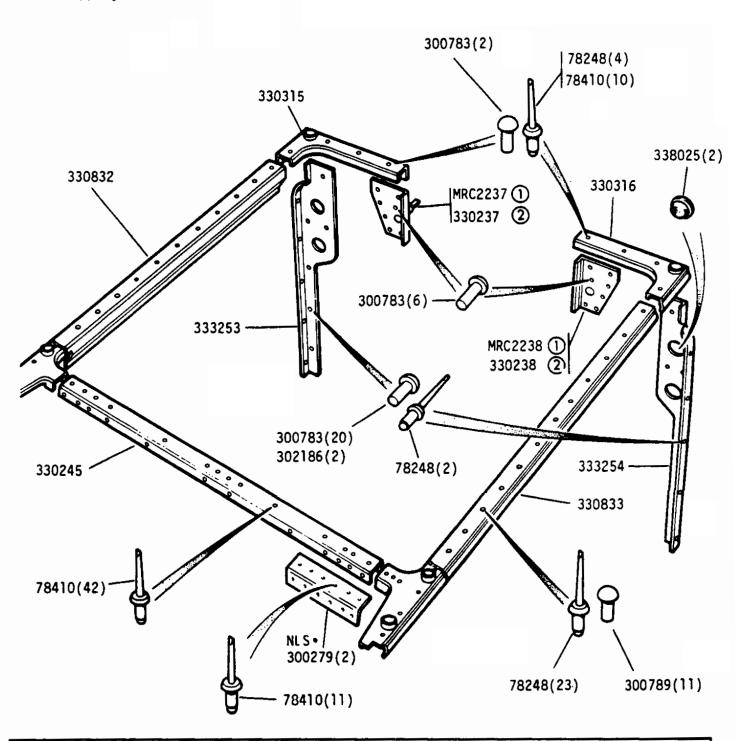


- ① Except Station Wagon
- Station Wagon

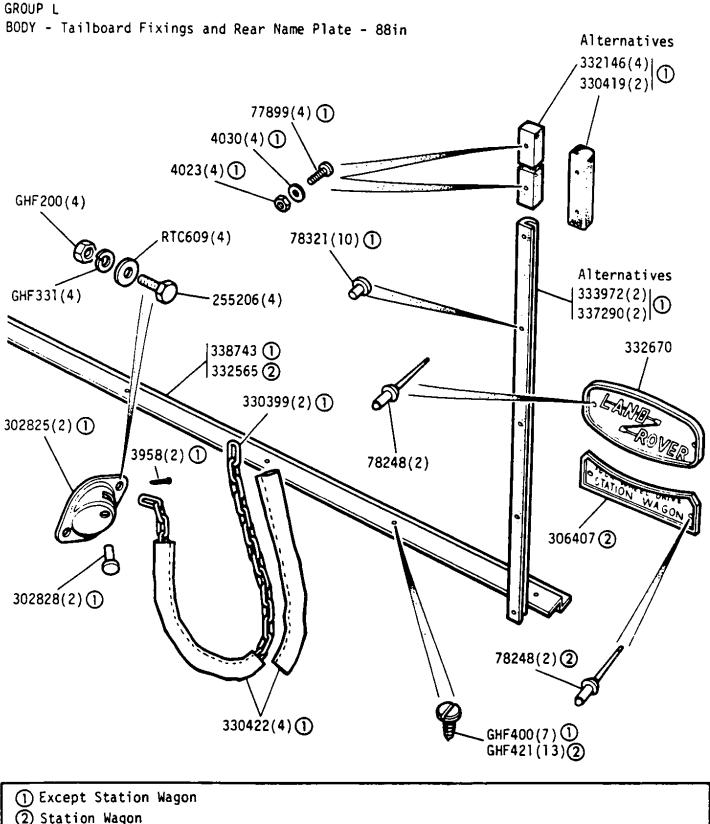

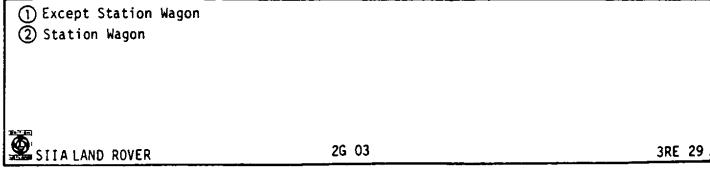

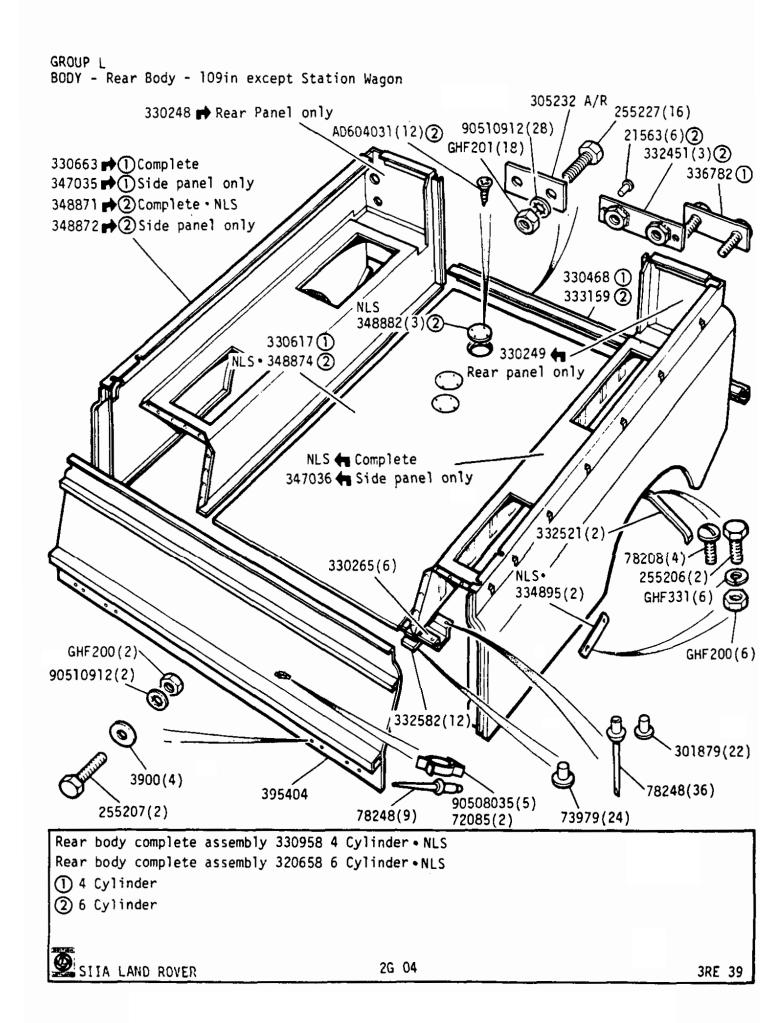


GROUP L
BODY - Cover Panels - Rear Body - 109in except Station Wagon

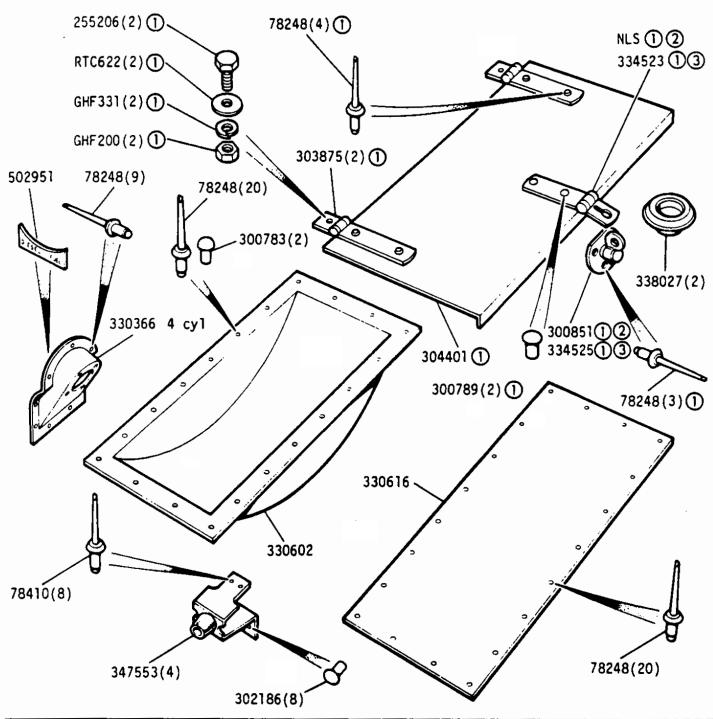


- 1 Double quantities for 4 cylinder vehicles
- ② Circular base turnbuckle
- 3 Semi circular base turnbuckle

GROUP L BODY - Spare Wheel Mounting and Rear Lamp Cover Panels - 109in except Station Wagon

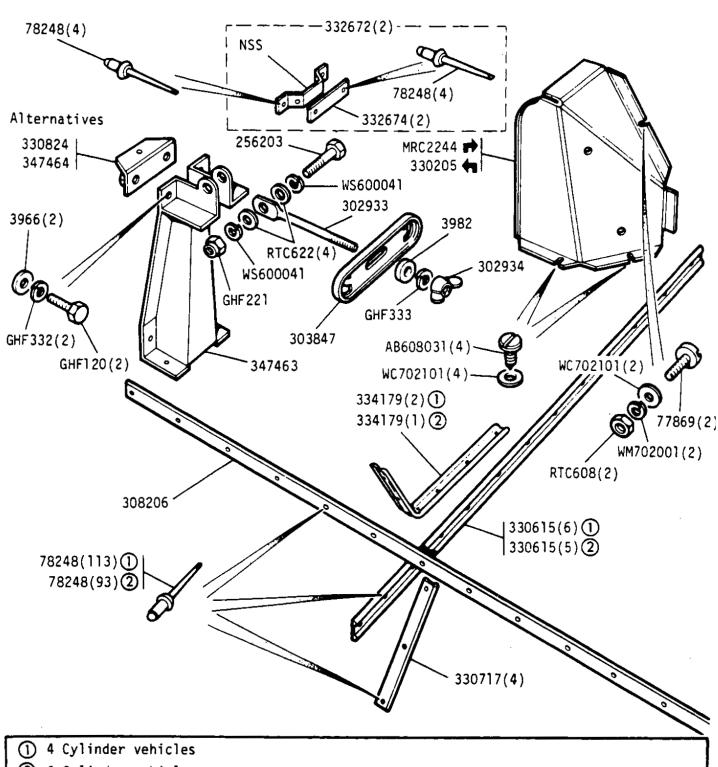

② 6 Cylinder vehicles

GROUP L BODY - Cappings - 109in except Station Wagon

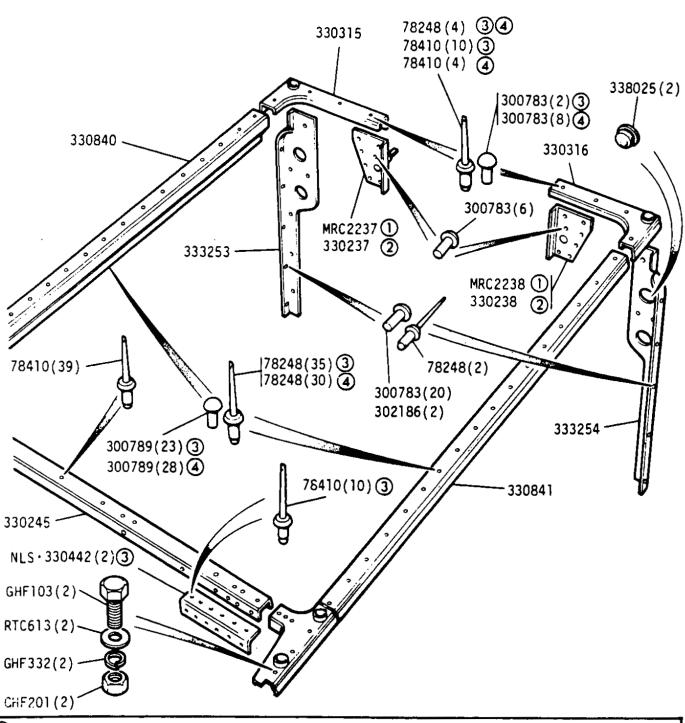



- 1) Except hard top with rear door
- ② Hard top with rear door
- 3 4 cylinder vehicles
- 6 cylinder vehicles

SIIA LAND ROVER

2G 05


GROUP L
BODY - Tailboard Fixings and Rear Nameplate - 109in except Station Wagon

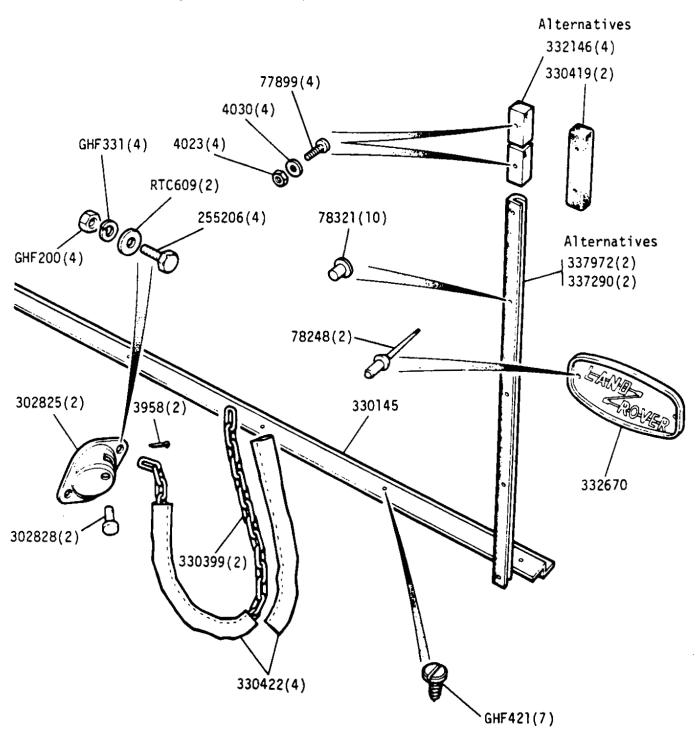

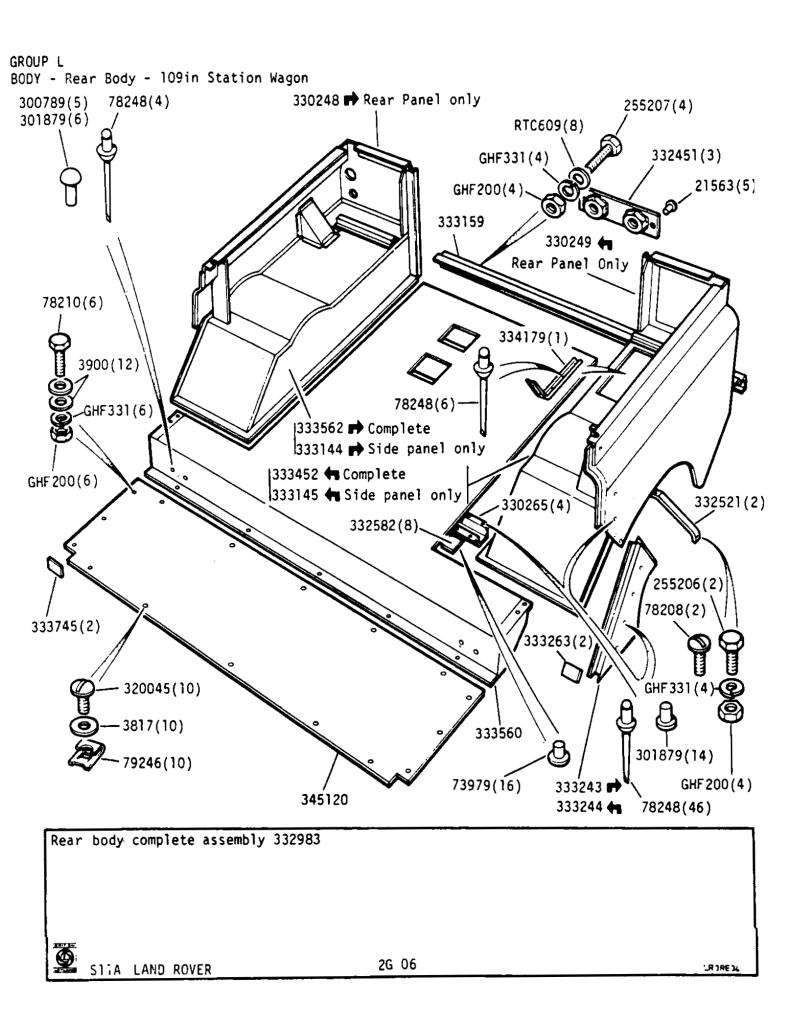


GROUP L
BODY - Cover Panels - Rear Body - 109in Station Wagon

SIIA LAND ROVER

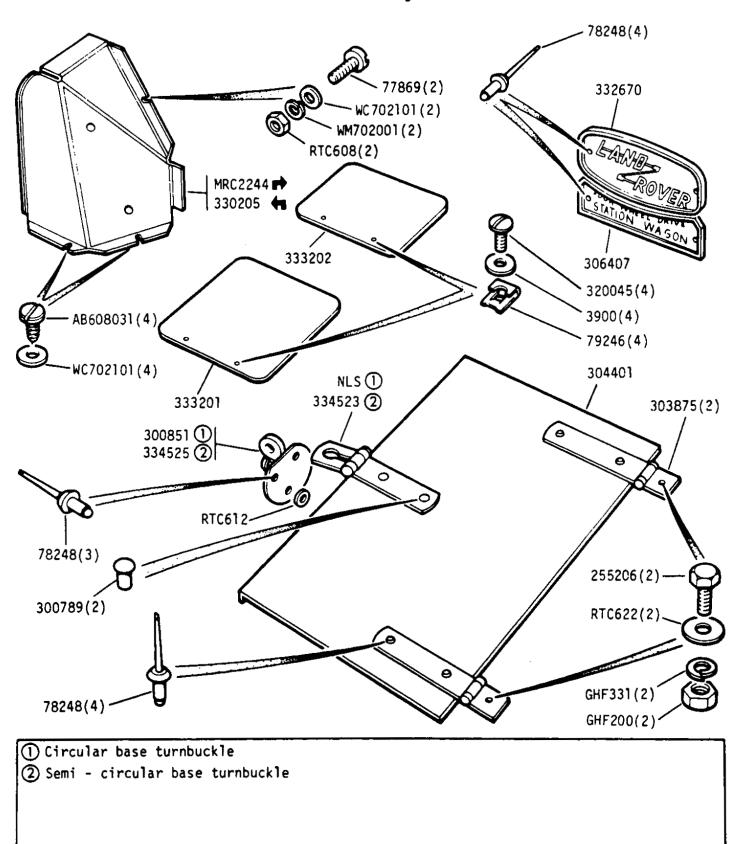


2G 07


GROUP L
80DY - Toe Panel and Harness Brackets - 109 in Station Wagon

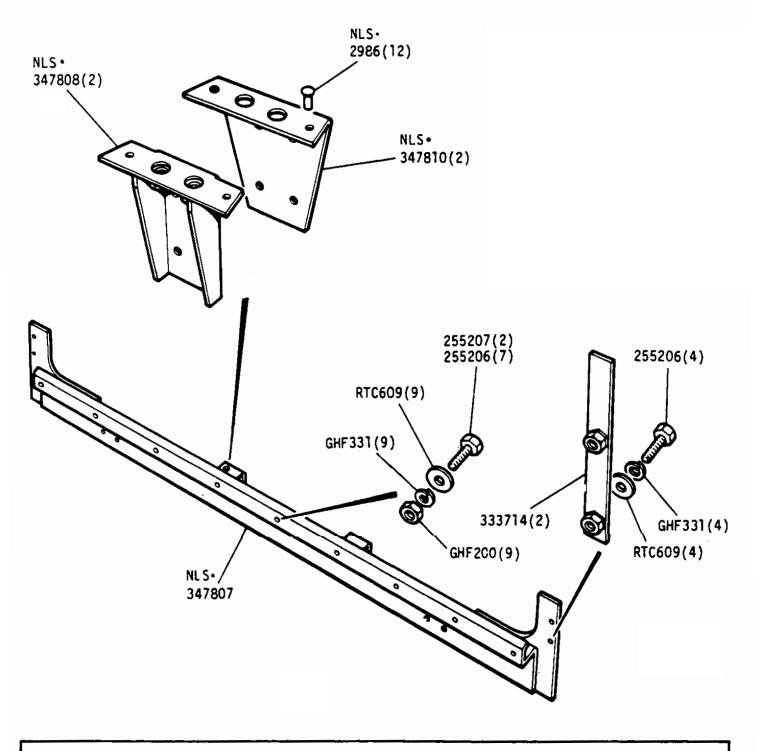


ROUP L

ODY - Cappings - 109in Station Wagon

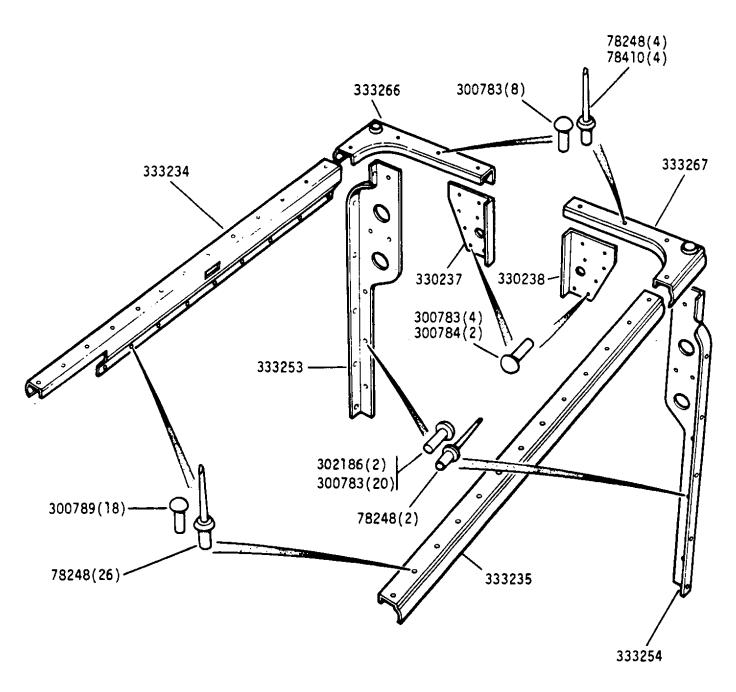


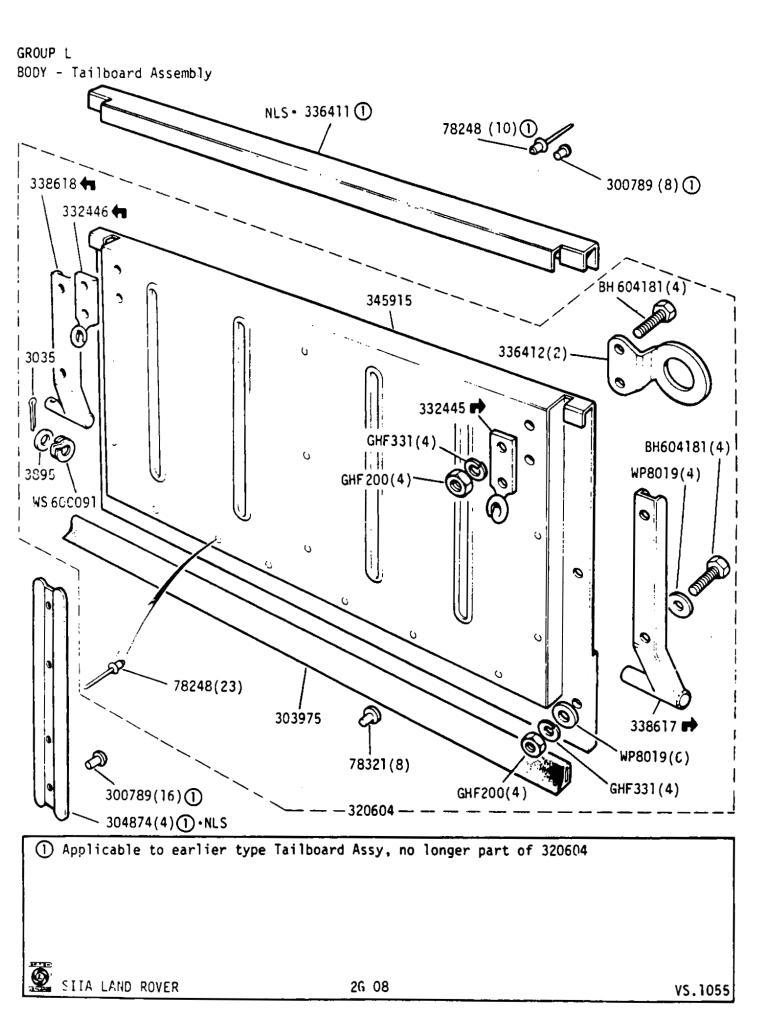

GROUP L SIDE PANEL AND FIXINGS, 88 AND 109 STATION WAGON.

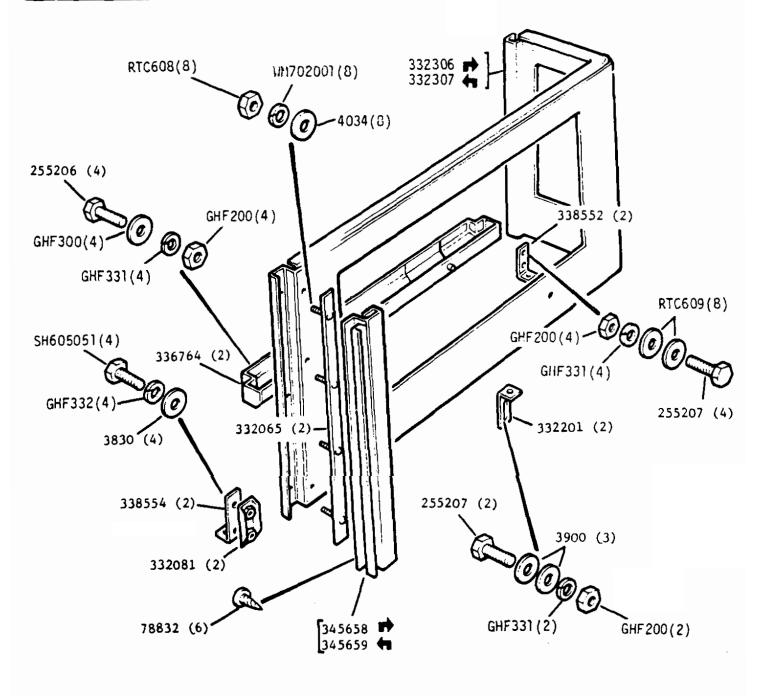


GROUP L
REAR SIDE WINDOWS, 88 AND 109 STATION WAGON

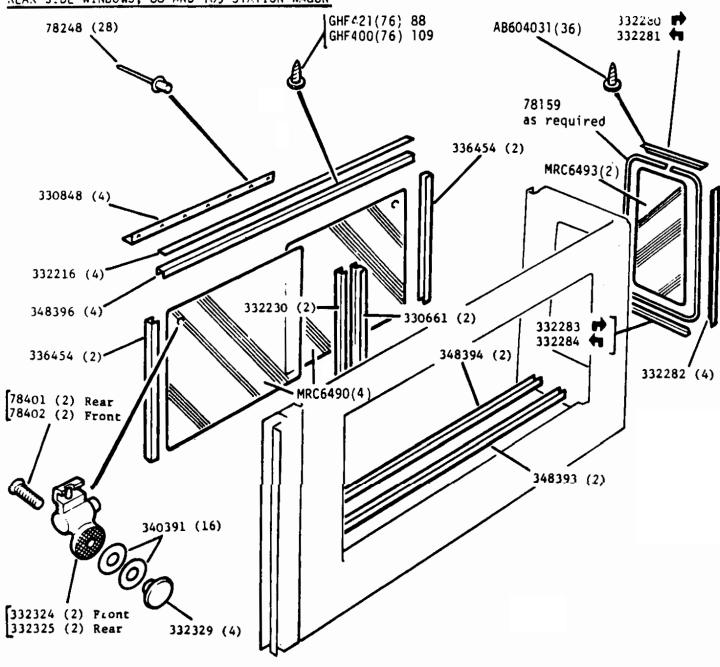


<u>REMARKS</u>


GROUP L
SEALING RUBBERS AND FIXINGS 88 AND 109 STATION WAGON

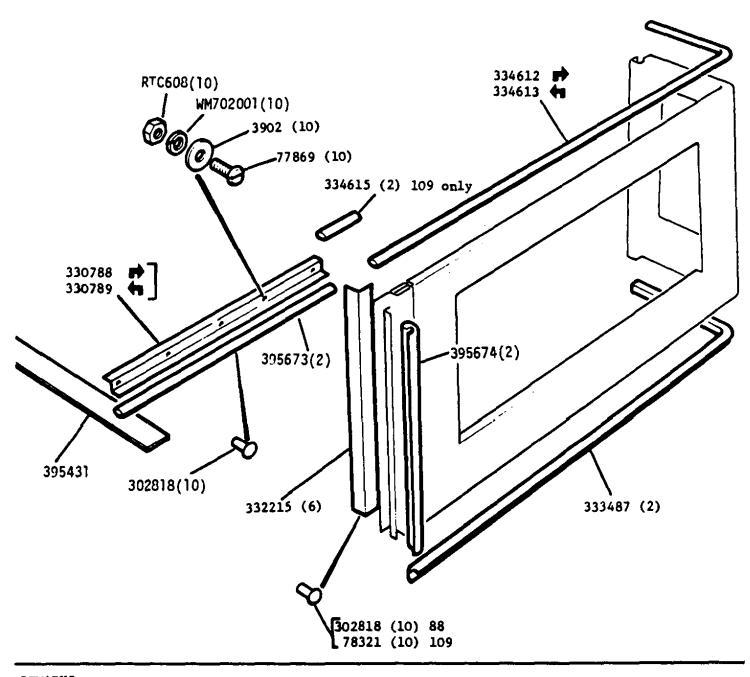

GROUP L
FIXINGS AT REAR UPPER BODY, 88 AND 109 STATION WAGON

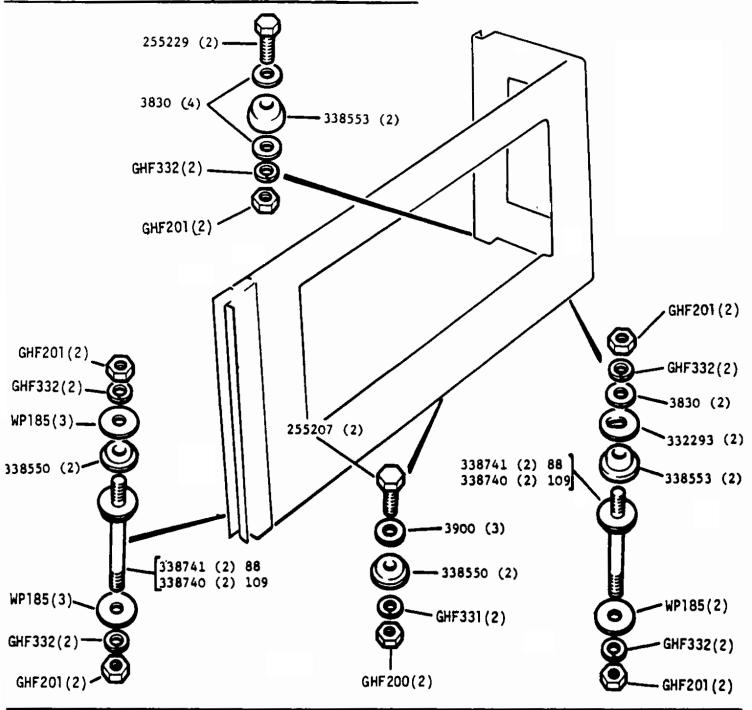


GROUP L
ROOF AND TROPICAL ROOF PANEL, 88 STATION WAGON

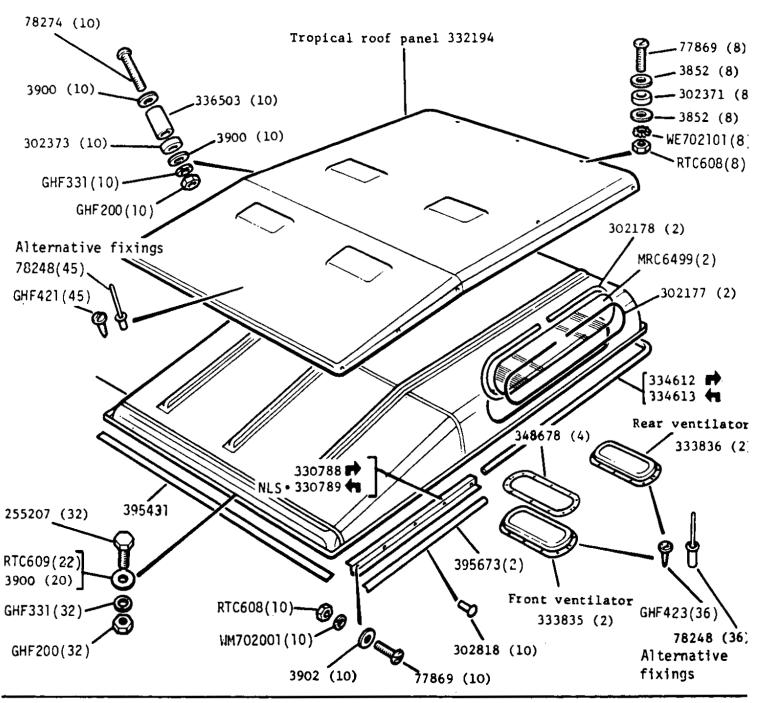

Roof and tropical assy 332198

ROUP L DOF AND TROPICAL ROOF PANEL, 109 STATION WAGON

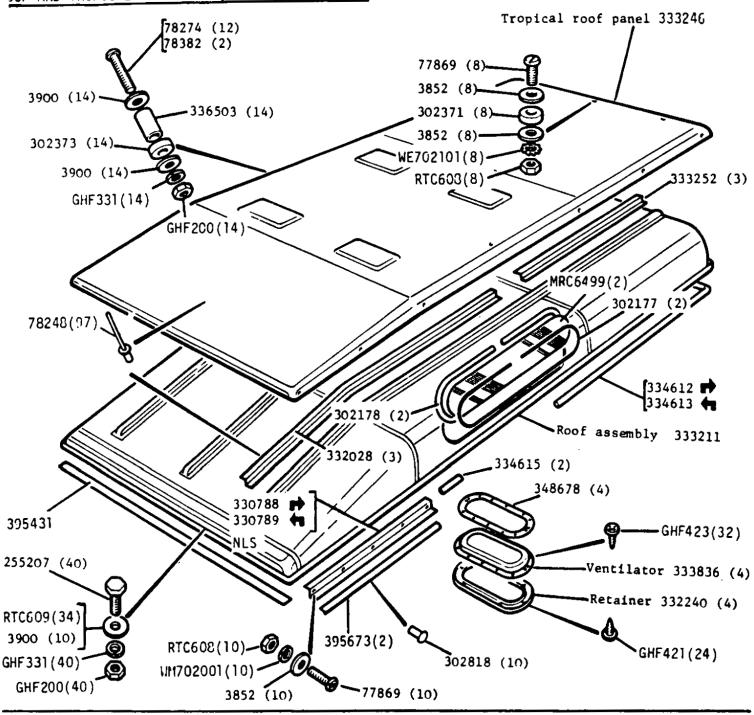



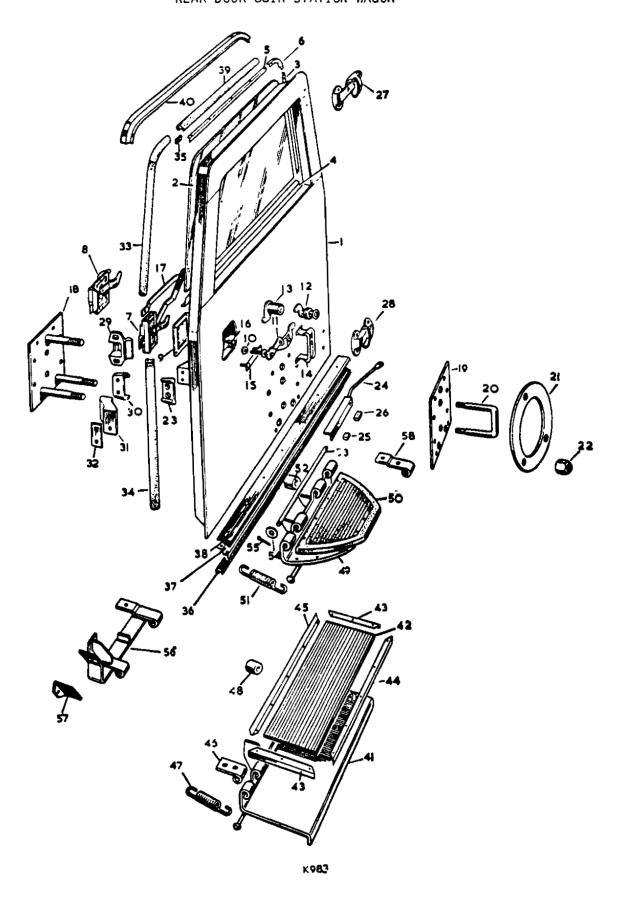


PLATE REF.	1 2 3 4	DESCRIPTION		٥	TY. PART No.	REMARKS
,	REAR DOOR COMPLE	ETE ASSEMBLY		1	RTC1421	
1	Rear door			ì	337781	
2	Glass for rear	r door		i	333031	
3		lass, vertical		ż	333033	
4	Retainer for			ī	333032	
5	Retainer for			i	333034	
Ġ	Retainer for			ż		
		ixing retainers		32		
7	DOOR LOCK, MOL	INTING AND HANDLE ASS	EMBLY	1		Cam lever type lock with extended inner handle
8	DOOR LOCK, MOU	UNTING AND HANDLE ASS	SEMBLY	1	337801	Cam lever type lock with
				•		short inner handle
9	Mounting plate	for door lock		1	333080	• -
10	Washer, handle			i)detachable inner handle
11	Door handle w			i		•
12	Barrel lock	Tour		i	306036*	
13	Barrel lock			1	320609	Late type with plain catch. Cam lever type
	You for ham	rel lock, ZENI type		1	307289	
14	Bracket for do	on handle		, i		State key number
1-4	Screw (2 BA x			6) For early type lock with detachable
	Spring washer	. •				inner handle.
	Plain washer) together			WC702101)	
	Nut (2 BA))		6		
	Rivet)	4	302222	
	Special screw)	4	UFS12548	R 2 off when screw retainer is
) Fixing	_		fitted
15		r, door lock, bottom) door]	337805	
	Nut retainer) lock	1		
	Spring washer)		GHF331	
	Nut (}" UNF))	4	GHF200	
		fixing lock assembly	to door	2	AB604041	
16	Locking millar			1	332434*)	For early type
) Fixing millar		1	3902)	lock with hook
	Spring washer) to door		1	WM702001)	
	Nut (2 BA))		1	RTC508)	
17	Waist rail loc	ck handle protection	strio	1	333037*) For lock
	= Bolt (}" UNF :	₹ }")) Fixing strip		2	255207) with extended
	Spring washer			2	GHF331) inner handle
	Nut (}" UNF)	j		ī	GHF200)
18	Wheel stud pla	ate ´		j		Not part of Rear Door
	- F · ·			,		Complete Assembly

* NO LONGER SERVICED

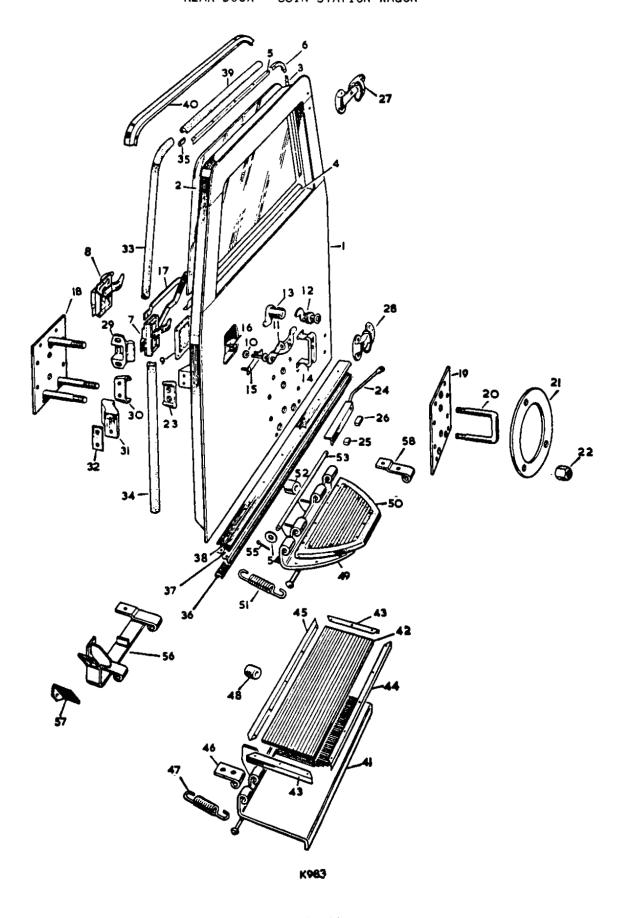


PLAT REF.		DESCRIPTION		arv	'. PART No.	REMARKS	
19	Clamp plate for spar	e wheel stud plate	1	1	333446)
	Bolt (}" UNF x }")		8	8	78210		j
	Spring washer) clamp plates to			GHF 331		j
	Nut (½" UNF)) rear door			GHF200) Not part of
20	'U' bolt for spare v		1	7	MRC1210) Rear Door
	Nut (3" UNF) fixing		- 1	4	NH608041) Complete
21	Retaining plate for		•	1	333439) Assembly
22	Wheel nut 59/64" acr		•	6	217361)	Alter-)
	Wheel nut, 1.1/16" a			F		natives)
23	Male dovetail for re			1	33?942		
	Screw (1" UNF x 1")			2	78389		
	Spring washer) male dovetail			GHF331		
	Nut (¾" UNF)) to door	_	_	GHF200		
24	Rod for check strap]	333041		
25	Buffer for check str	*	,	!	306295		
26 27	Buffer for check str			 1	333445 333036		
27 28	Hinge for rear door,		•	1	346341		
20	Hinge for rear door, Bolt (5/16" UNF x 2'			-	BH605161		
	Soring washer) to door			GHF332		
	Nut (5/16" UNF)) frame		4	GHF201		
	Bolt (5/16" UNF x 3")) // dine		4	255227		
	Plain washer) Fixing		4	3830		
	Spring washer) door hinges		4	GHF332		
	Nut (5/16" UNF)) to body		4	GHF201		
	Bolt (1" UNF x 11")	,) <u> </u>	,	1	SH604121		
	Spring washer) Fixing		1	GHF331		
	Plain washer, thick) check strap		2	4075		
•	Plain washer, thin) rod to floor		2	3947		
	Nut (3" UNF))	,	2	GHF200		
29	Striking plate			1	333140		
	• •	Fixing		2	GHF101		
	Plain washer)	striking	As req		3817		
	Spring washer)	plate to		2	GHF331		
30	Nut (1" UNF))			2	GHF200		
30 31	Female dovetail for re Spacer for female dove			1	332147 332943		
31	•	ixing dovetail to space	a r e	2	78233		
	Screw (2" UNF x 2"))	ixing doverail to space		2	255207		
		Fixing spacer to		2	3900		
32	Shim)	LH rear pillar		2	305232		
	Spring washer)	F			GHF 331		
33	Seal for door sides			3	395674		
34	Seal for door side, LI	H bottom		1	332553		
35	End filler piece for			Δ	330850		
	Rivet fixing seals to		2.	2	302818		
36	Rubber seal, door, bo			1	332564		
37	Seal retainer, door be]	332566		
38	· · · · · · · · · · · · · · · · · · ·			1	332565		
	Drive screw fixing re	tainer and strip	1.	3	GHF421		

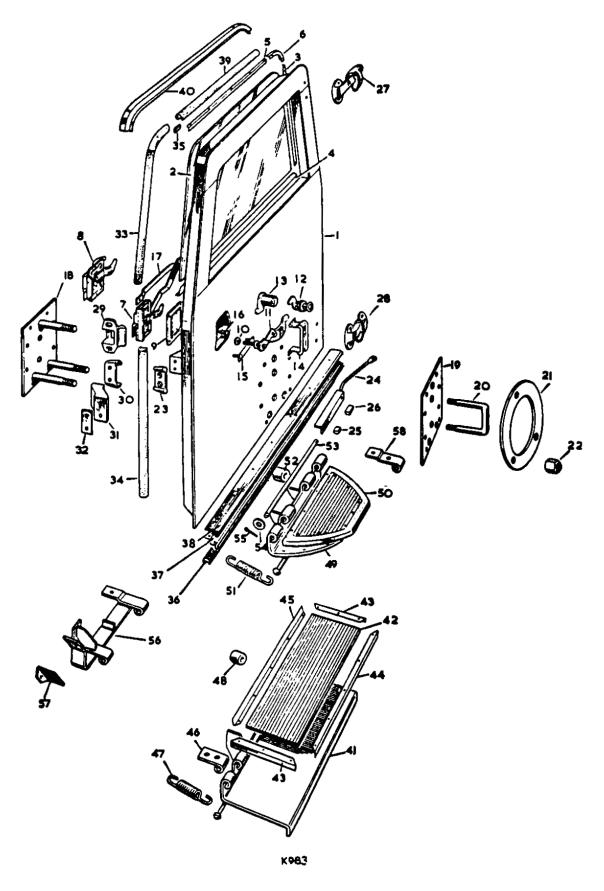

2H 04

PLA REF		Q1	IY. PART No.	REMARKS
39	Seal for rear door, top	1	396113	
	Rivet fixing seal	11	302818	
40	•	1	332151	
	Screw (2BA x ½")) Fixing	ġ		
	Plain washer) retainers	9	3902	
	Spring washer) to roof	ģ		
	Nut (2BA)) panel	9		
41	REAR STEP	1	501053*	Oblong step, overall widt
42	Rubber mat for step	1	245137*	2
43	Retainer for rear step mat, side	ż		
44	Retainer for rear step mat, front	ī		
45	Retainer for rear step mat, rear	j		
,,,	Rivets fixing mat end cappings		4022	
46	Hinge centre for rear step	2		
77,	Rolt (3" UNE x 4")) Fixing bings centre	2		
	Bolt (}" UNF x 4")) Fixing hinge centre Locknut (}" UNF)) to rear step	4		
	Bolt (3" UNF x 13")) Fixing	2		
	Bolt (a UNF x a")) hinge centre	2		
	Locker) to rear	2		
	Plain washer) cross	2	2251	
	Packing washen) member	2		
	Packing washer) member	2		
	Shakeproof washer) Fixing hinge centre			
47	Self-locking nut (%" UNF)) to rear crossmember	2		
47	Spring for rear step	2		
48	Buffer for rear step	ļ	304125	
	Plain washer) Fixing buffer to Drive screw) rear crossmember	1	4030 GHF424	
	REAR STEP	1	508947*	Oblong step, overall widt
	Rubber mat for rear step	1	508957*	2
	Retainer for rear step mat, side	ż		
	Retainer for rear step mat, front	ī	508959*	
	Retainer for rear step mat, rear	i	508958*	
	Rivet fixing mat retainers		4022	
	Hinge, centre for rear step RH	17		
	Hinge, centre for rear step LH	, 1	526472*	
	Hinge pin for rear step	3	509120	
	Spring washer) Fixing		2286	
	i i i i i i i i i i i i i i i i i i i	2		
		2		
		2		
	Bolt (3" UNF x 18")) Fixing			
	Distance piece) centre	2		
	Packing washer hinges			
	Plain washer) to rear	2	3933	
	Locknut (3" UNF)) crossmember	2		
	Support bracket for rear step Set bolt (%" UNF x 1")) Fixing support bracket	1	526473*	
) and centre hinge to			
) rear crossmember	2	GHF105	
	Spring for rear step	1	264362	
				Continued
			*	NO LONGER SERVICED
	211 04			

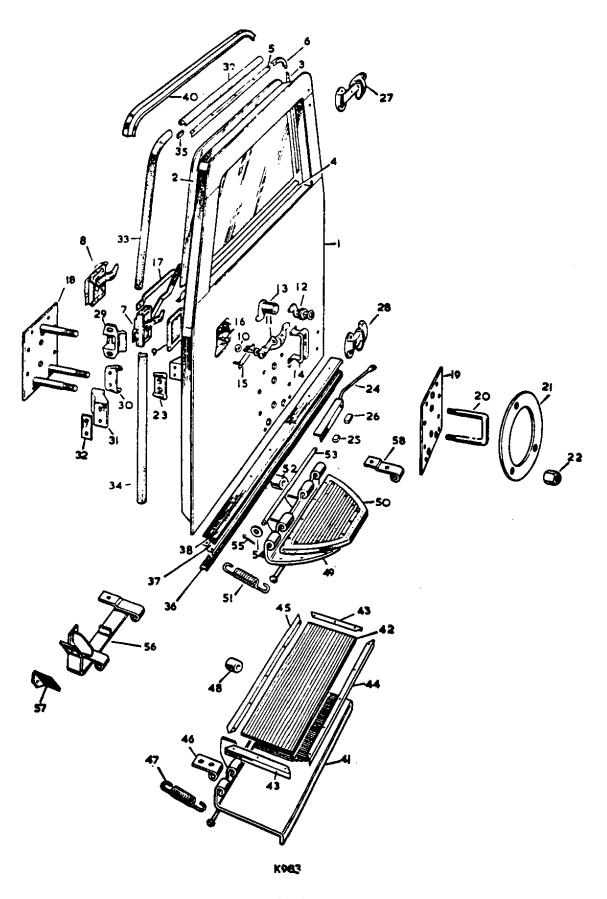


2H 05

52 Buffer for rear step Plain washer) Fixing buffer to Drive screw) rear cross-member 53 Hinge pin for rear step Spring washer) 54 Plain washer) Fixing hinge pin 55 Split pin) 1 304125 1 4030 1 GHF424 1 509120 2 WR110061 2 WR110061	PLA REF.		QT	TY. PART No. REMARKS
Plain washer Fixing buffer to 1 4030 Drive screw rear cross-member 1 GHF424 Buffer for underside of rear step 1 304125 Plain washer Fixing buffer 1 4030 Screw (2 BA x * * * * * * * * * * * * * * * * * *		Ruffer for rear sten	1	304126
Drive screw rear cross-member 1 GHF424				
### Buffer for underside of rear step 1 304125 Plain washer Fixing buffer 1 4030 Screw (2 BA x \{ \}") to step 1 51797 Rubber mat for rear step 1 51797 Rivet 7 307840 Screw (2 BA x \{ \}") Fixing mat 4 77869 Spring washer to step 4 M4702001 Nut (2BA) Hinge, centre for rear step RH 1 526472* Bolt (\{ \}" UNF x \{ \}\{ \}") Fixing centre 2 500588 Plain washer hinges to rear 2 500588 Plain washer hinges to rear crossmember 2 604723* Support bracket for rear step 1 526473* Support bracket for rear step 1 526473* Support bracket for rear step 1 526472* Support bracket for soring 1 5600061 Support bracket and centre hinge bin 2 M8110061 Support bracket for soring 1 517977 to the left of PT0 appertu Support bracket and hinge centre, LH 1 552132 Support bracket for soring 1 552132 Bolt (5/16" UNF x 1\{ \}") Fixing support 2 855029 Plain washer bracket for soring 1 552132 Bolt (5/16" UNF x 1\{ \}") Fixing support 2 855029 Plain washer bracket for soring 1 552132 Bolt (5/16" UNF) Prixing support 2 855029 Plain washer bracket for soring 1 552132 Bolt (5/16" UNF) Prixing support 2 855029 Plain washer bracket for soring 1 552132 Bolt (5/16" UNF) bracket to rear 2 86472* Bolt (5/16" UNF) Prixing support 2 855029 Bolt (5/16" UNF) Prixing support 2 855029 Bolt (5/16" UNF) Bracket to rear 2 80472* Bolt (5/16" UNF) Bracket to rear 2 80472* Bolt (5/16			1	
Plain washer Fixing buffer 1 4030 1 77758			1	
Screw (2 BA x \ \frac{2}{3}") to step			1	
REAR STEP			_	
Rubber mat for rear step 1 517977 opposite PTO apperture Rivet 7 307840		Screw (2 ba x gm)) to step	ı	///58
Rivet	49		1	
Screw (2 BA x \ \frac{1}{2}") Fixing mat			1	
Spring washer			7	
Nut (2BA)			4	
Hinge, centre for rear step RH 1 526471* Hinge, centre for rear step LH 1 526472* Bolt (3" UNF x 18") 2 256042 Distance piece Fixing centre 2 501070 Packing washer hinges to rear 2 500588 Plain washer cross-member 2 333 Locknut (3" UNF) 2 GHF223 Support bracket for rear step 3 526473* Set bolt (3" UNF x 1"), fixing support bracket and centre hinges to rear cross-member 2 264362 Spring for rear step 1 304125 Plain washer Fixing buffer to 1 4030 Drive screw rear cross-member 1 6HF424 Hinge pin for rear step 1 509120 Spring washer Fixing hinge pin 2 WR110061 Spring washer Fixing hinge pin 2 WR110061 Split pin 786000 REAR STEP 1 NRC2340 Semi-circular step, offset Rivet 3 307840 Screw (2 BA x ½") Fixing mat 4 77869 Spring washer to step 4 MM702001 Nut (2BA) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½") Fixing support 2 255029 Plain washer bracket to rear 2 CHF242 Crossmember CRC600 CRC610 Self-locking nut (5/16" UNF) bracket to rear 2 CHF242 Crossmember CRC600 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 CRC610 C		Spring washer) to step	4	WM702001
Hinge, centre for rear step LH		Nut (2BA)	4	RTC608
Bolt (]* UNF x 12*) 2 256042			1	526471*
Distance piece Fixing centre 2 501070 Packing washer hinges to rear 2 500588 Plain washer cross-member 2 3933 Locknut (}{2}" UNF) 2 GHF223 Support bracket for rear step 1 526473* Set bolt (}{2}" UNF x 1"), fixing support bracket and centre hinges to rear cross-member 2 GHF105 501 Spring for rear step 1 264362 Buffer for rear step 1 304125 Plain washer Fixing buffer to 1 4030 Drive screw rear cross-member 1 GHF424 51 Hinge pin for rear step 1 509120 Soring washer Fixing hinge pin 2 WR110061 54 Plain washer Fixing hinge pin 2 WR110061 55 Split pin REAR STEP 1 NRC2340 Semi-circular step, offset Rivet 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer to step 4 WM702001 Nut (2BA) 7 Anchor bracket and hinge centre, LH 1 552132 Solit (5/16" UNF x 1½") Fixing support 2 255029 Plain washer bracket and anchor Self-locking nut (5/16" UNF) bracket to rear 2 GHF242 Drossmember CHF224 CHF224 Drossmember CHF224 CHF242 Drossmember CHF23 CHF242 Drossmember CHF242 CHF242			1	
Packing washer hinges to rear 2 500588 Plain washer cross-member 2 3933 Locknut (a UNF) Support bracket for rear step 1 526473* Set bolt (a UNF x l"), fixing support bracket and centre hinges to rear cross-member 2 GHF105 51 Spring for rear step 1 264362 52 Buffer for rear step 1 304125 Flain washer Fixing buffer to 1 4030 Drive screw rear cross-member 1 GHF424 53 Hinge pin for rear step 1 509120 Spring washer 1 WS600061 54 Plain washer Fixing hinge pin 2 WR110061 55 Split pin 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rivet Spring washer to step 4 WM702001 Nut (2BA) 77869 Spring washer to step 4 WM702001 Nut (2BA) 78169 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x la") Fixing support 2 255029 Plain washer bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF) bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Rivet Spring washer bracket to rear 2 GHF242 Plain washer bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Plain washer bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Plain washer bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Plain washer bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Plain washer bracket to rear 2 GHF242 Plain washer bracket to rear 2 GHF242 Crossmember Crossmember 2 GHF242 Plain washer bracket to rear 2 GHF242 Plain washer bracket to rear 2 GHF242 Plain washer bracket to rear 2 GHF242 Plain washer bracket and anchor 2 GHF242 Plain washer br		Bolt (3" UNF x 18"))	2	256042
Plain washer) cross-member 2 3933 Locknut (a UNF)		Distance piece) Fixing centre	2	501070
Plain washer) cross-member 2 3933 Locknut (a UNF)		Packing washer) hinges to rear	2	500588
Support bracket for rear step Set bolt (i UNF x l"), fixing support bracket and centre hinges to rear cross- member 2 GHF105 Spring for rear step 1 264362 Buffer for rear step 1 304125 Plain washer) Fixing buffer to 1 4030 Drive screw) rear cross-member 1 GHF424 53 Hinge pin for rear step 1 509120 Spring washer) Fixing hinge pin 2 WR110061 55 Split pin) 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset 7 307840 Screw (2 BA x i) Fixing mat 4 77869 Spring washer) to step 4 WM702001 Nut (2BA)) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring Bolt (5/16" UNF x li) Fixing support 2 255029 Plain washer) bracket and anchor Self-locking nut (5/16" UNF) bracket to rear 2 GHF242 Crossmember		Plain washer) cross-member	2	3933
Set bolt (a UNF x 1"), fixing support bracket and centre hinges to rear cross- member 2 GHF105 Spring for rear step 1 264362 Buffer for rear step 1 304125 Plain washer) Fixing buffer to 1 4030 Drive screw) rear cross-member 1 GHF424 Soring washer) 1 WS600061 Plain washer) Fixing hinge pin 2 WR110061 Split pin) 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rivet) 7 307840 Screw (2 BA x a mathematical mathemat		Locknut (¾" UNF)	2	GHF223
Set bolt (a UNF x 1"), fixing support bracket and centre hinges to rear cross- member 2 GHF105 Spring for rear step 1 264362 Buffer for rear step 1 304125 Plain washer) Fixing buffer to 1 4030 Drive screw) rear cross-member 1 GHF424 Soring washer) 1 WS600061 Plain washer) Fixing hinge pin 2 WR110061 Split pin) 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rivet) 7 307840 Screw (2 BA x a mathematical mathemat		Support bracket for rear step	1	526473*
bracket and centre hinges to rear cross- member 2 GHF105 Spring for rear step 1 264362 Buffer for rear step 1 304125 Plain washer) Fixing buffer to 1 4030 Drive screw) rear cross-member 1 GHF424 Sapring washer) 1 WS600061 Flain washer) Fixing hinge pin 2 WP110061 Split pin) 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet) 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer) to step 4 WM702001 Nut (2BA)) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½")				
member 2 GHF105 51 Spring for rear step 1 264362 52 Buffer for rear step 1 304125 Plain washer) Fixing buffer to 1 4030 Drive screw) rear cross-member 1 GHF424 53 Hinge pin for rear step 1 509120 Spring washer) 1 WS600061 54 Plain washer) Fixing hinge pin 2 WR110061 55 Split pin) 2 RTC600 REAR STEP 1 NRC7340 Semi-circular step, offset Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet 1 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer 1 to step 4 WM702001 Nut (2BA) 1 4 RTC608 56 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½")		bracket and centre hinges to rear cross-		•
Spring for rear step Buffer for rear step Plain washer Fixing buffer to 4030 Drive screw rear cross-member 1 6HF424 Hinge pin for rear step 1 509120 Spring washer Fixing hinge pin 2 WR110061 Fixing hinge pin 2 WR110061 Fixing hinge pin 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet Name of the left of PTO appertu Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer to step 4 WM702001 Nut (2BA) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½") Fixing support 2 255029 Plain washer bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242 Crossmember			2	GHF 105
Buffer for rear step Plain washer) Fixing buffer to Drive screw) rear cross-member Hinge pin for rear step Spring washer) REAR STEP Rubber mat for rear step Rivet Spring washer) to step Rivet Spring washer) to step Nut (2BA) Support bracket and hinge centre, LH Anchor bracket for spring Bolt (5/16" UNF x 1½")) Fixing support Plain washer) bracket to rear Self-locking nut (5/16" UNF) bracket to rear Comparison of the support Comparison of the suppo	51			
Plain washer Fixing buffer to 1 4030 Drive screw rear cross-member 1 GHF424 53 Hinge pin for rear step 1 509120 Spring washer W\$600061 54 Plain washer Fixing hinge pin 2 WR110061 55 Split pin REAR STEP 1 NRC2340 Semi-circular step, offset Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer to step 4 WM702001 Nut (2BA) 4 RTC608 Support bracket and hinge centre, LH 1 552132 56 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½") Fixing support 2 255029 Plain washer bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242	52	Buffer for rear step	i	
Drive screw rear cross-member 1 GHF424 53 Hinge pin for rear step 1 509120 54 Plain washer Fixing hinge pin 2 WR110061 55 Split pin 2 RTC600 REAR STEP 1 NRC2340 Semi-circular step, offset Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer to step 4 WM702001 Nut (2BA) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½") Fixing support 2 255029 Plain washer bracket to rear 2 GHF242 Crossmember COMPART COMPART REAR STEP 1 NRC2340 Semi-circular step, offset REAR STEP 1 NRC2340 Semi-circular step, offs			i	
Hinge pin for rear step Soring washer Plain washer Fixing hinge pin REAR STEP Rubber mat for rear step Rivet Spring washer Spring washer Nut (2BA) Support bracket and hinge centre, LH Anchor bracket for spring Bolt (5/16" UNF) Self-locking nut (5/16" UNF)) Bracket to rear 1			i	
Spring washer) WS600061 WR110061 WR110060 WR11	53	, =	i	
Plain washer	- •	9 · 1 · · · · · · · · · · · · · · · · ·	i	
Split pin) 2 RTC600 REAR STEP	54			
REAR STEP Rubber mat for rear step Rivet Screw (2 BA x ½")) Fixing mat Spring washer Nut (2BA) Support bracket and hinge centre, LH Support bracket for spring Bolt (5/16" UNF x 1½") Self-locking nut (5/16" UNF)) bracket to rear Screw (5/16" UNF) Self-locking nut (5/16" UNF)) bracket to rear Screw (2 BA x ½")) Fixing support Screw (2 BA x ½")) Fixing support Spring washer Sprin		,		· · · · · ·
Rubber mat for rear step 1 517977 to the left of PTO appertu Rivet 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer 1 to step 4 WM702001 Nut (2BA) 1 552132 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½") 1 Fixing support 2 255029 Plain washer 1 bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242 Crossmember	•	, , , , , , , , , , , , , , , , , , ,	_	
Rivet 7 307840 Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer) to step 4 WM702001 Nut (2BA)			1	NRC2340 Semi-circular step, offset
Screw (2 BA x ½")) Fixing mat 4 77869 Spring washer) to step 4 WM702001 Nut (2BA)			1	51/9/7 to the left of PTO appertur
Spring washer) to step 4 WM702001 Nut (2BA) 4 RTC608 Support bracket and hinge centre, LH 1 552132 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1%)) Fixing support 2 255029 Plain washer) bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember			7	307840
Nut (2BA) 56 Support bracket and hinge centre, LH 57 Anchor bracket for spring Bolt (5/16" UNF x 1½") Plain washer Self-locking nut (5/16" UNF)) bracket to rear crossmember ARTC608 1 552132 1 552133 2 255029 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242 Crossmember			4	· · · · · · ·
S6 Support bracket and hinge centre, LH 1 552132 57 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½")) Fixing support 2 255029 Plain washer) bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember			4	
57 Anchor bracket for spring 1 552133 Bolt (5/16" UNF x 1½")) Fixing support 2 255029 Plain washer) bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember			4	* * =
Bolt (5/16" UNF x 1½")) Fixing support 2 255029 Plain washer) bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember]	
Plain washer) bracket and anchor 2 RTC610 Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember	57	Anchor bracket for spring	1	
Self-locking nut (5/16" UNF)) bracket to rear 2 GHF242) crossmember				
) crossmember				
•			2	GHF242
Continued) crossmember		
				Continued

* NO LONGER SERVICED

PLATE REF. 1 2 3 4	DESCRIPTION	Q1	Y. PART No. REMARKS	
SEF. 1 2 3 4 58 Hinge, centre RH Set bolt (3" UNF Spring washer Bolt (3" UNF x 1) Distance piece Self-locking nut Spring for rear s Buffer for rear s Drive screw Plain washer Hinge pin for reas Spring washer Plain washer	x l"))		552129 GHF105 GHF333 255249 501070 GHF243 264362 304125 GHF424 4030 509120 2286	
Split pin) Fixing hinge pin)	2	3833 RTC600	

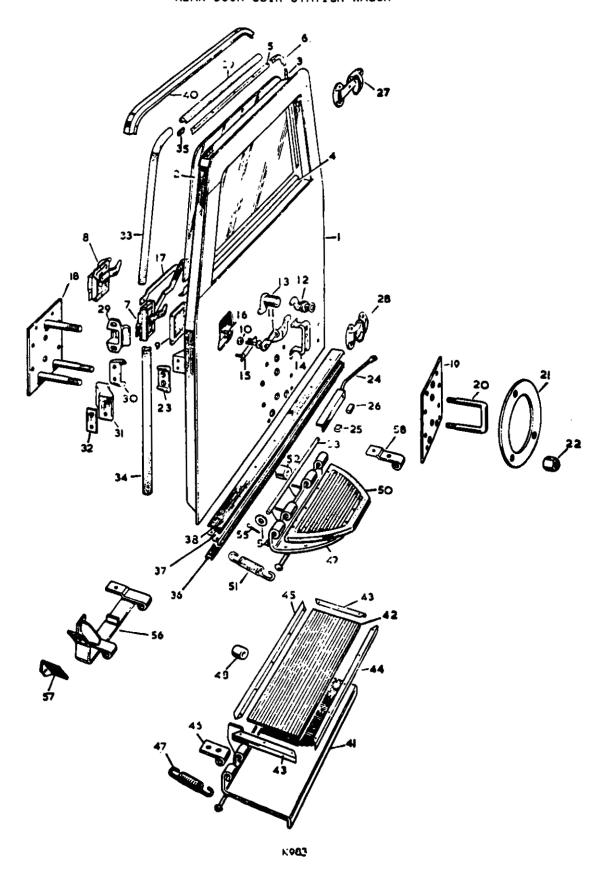

2H 06



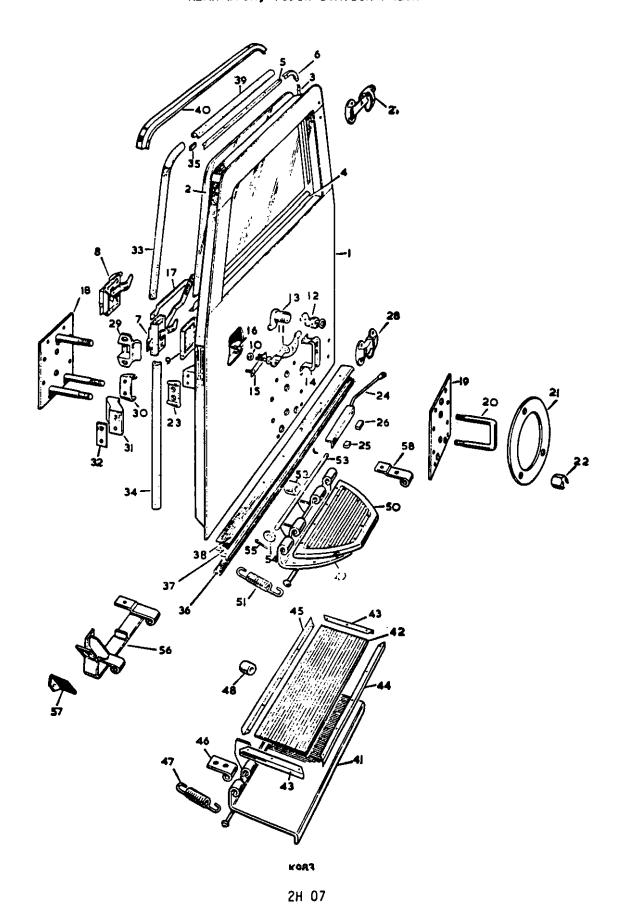


PLATE REF.	1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
[REAR DOOR COMPLETE ASSEMBLY	1 RTC1421
ו י	Rear door	1 337781
2	Glass for rear door	1 333031
3	Retainer for glass, vertical	2 333033
4	Retainer for glass, bottom	1 333032
5	Retainer for glass, top	1 333034
F	Retainer for glass, corners	2 333035
	Drive screw, fixing retainers	32 AB606031
7	DOOR LOCK, MOUNTING AND HANDLE ASSEMBLY	1 337789 Cam lever type lock with extended inner handle
8	DOOR LOCK, MOUNTING AND HANDLE ASSEMBLY	1 337º01 Cam lever type lock with short inner handle
9	Mounting plate for door lock] 333080)For early type lock with
10	Washer, handle to cover	1 90302859)detachable inner handle
11	Door handle with lock	1 332432*)
12	Barrel lock	1 306036* Early type) with hook)
		catch,) Alternatives
		locking)
		pillar type)
13	Barrel lock	1 320609 With plain)
		catch, cam)
		lever tyne)
	Key for barrel lock, Zeni type	1 307289 State key no.) Alternatives
• •	Key blank, FP series	1 CD31709B)
14	Bracket for door handle	1 302854) For early type
	Screw (2BA x ½"))	6 313858*) lock with detachable
	Spring washer) Fixing lock	6 MM702001) inner handle
	Plain washer) together	4 ምር702101) 6 RTC608)
	Nut (2BA)) Rivet)	a 302222
	Special screw) Fixing	4 UFS1254R 2 off when screw retainer
) door lock	is fitted
15	Screw retainer, door lock, bottom) to cover	1 337806
. •	Nut retainer	7 345498
	Spring washer)	4 GHF331
	Nut (¾" UMF)	4 GHF200
	Drive screw, fixing lock assembly to door	2 AB6040A1
] F	Locking millar for catch	1 332/34*) For early type
	Plain washer)	1 3902) lock with hook
	Spring washer) Fixing pillar to door	1 HM702001) catch
	Nut (2BA))	1 RTC608)
17	Maist rail lock handle protection strip	1 333037)
	Bolt (1" UNF x 3")) Fixing	2 255207)
	Spring washer) strip to	2 GHF331) For lock with extended
18	Nut (i UNF)) door	1 GHF200) inner handle 1 333435 Not part of Rear Door
10	Wheel stud plate	1 333435 Not part of Rear Door Complete Assembly

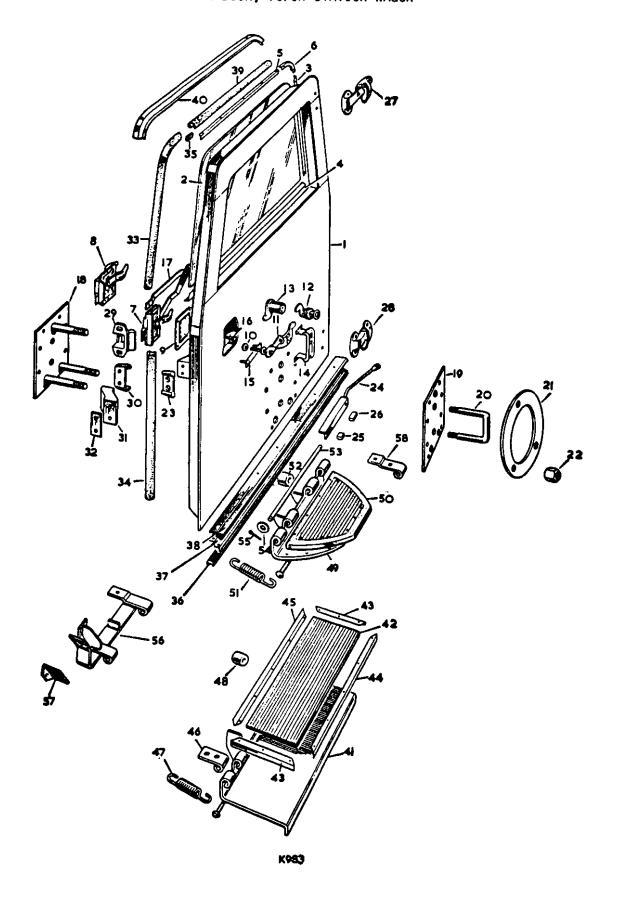


PLA1	E 1 2 3 4 DESCRIPTION	ΩТ	Y, PART No.	REMARKS	
19	Clamp plate for spare wheel stud plate	1	333446)
• • •	Bolt ($\frac{1}{2}$ " UNF x $\frac{3}{4}$ ")) Fixing stud and	8	78210) Not part of
	Spring washer) clamp plates	8	GHF311) Rear Door
	Nut (%" UNF)) to rear door	Ř	GHF 200) Complete
20	'U' bolt for spare wheel support	1	MRC1210) Assembly
	Nut (1" UNF) fixing 'U' bolt to door	2	NH608041)
21	Retaining plate for spare wheel	ī	333439		\
22	Wheel nut, 59/64" across flats	6	217361)	Alter-	j
	Wheel nut, 1.16" across flats	6		natives	j
	Male dovetail for rear end door	1	332942		•
	Screw (½" UNF x l")) Fixing	2	78389		
	Spring washer) male dovetail	2	GHF331		
	Nut $(\frac{1}{2}$ " UNF)) to door	2	GHF200		
24	Rod for check strap	1	333041		
25	Buffer for check strap, short	1	306295		
26	Buffer for check strap, long	1	333445		
27	Hinge for rear door, upner	1	333036		
28	Hinge for rear door, lower	1	346341		
	Bolt (5/16" UNF x 2")) Fixing	4	BH605161		
	Spring washer) hinge to	4	GHF332		
	Nut (5/16" UNF))	4	GHF201		
	Bolt (5/16" UNF x 2"))	4	255227		
	Plain washer) Fixing door	4	3830		
	Soring washer) hinges to body	4	GHF332		
	Nut (5/16" UNF)) Bolt (½" UNF x 1½"))	4	GHF201 SH604121		
	Soring washer) Fixing	1	GHF331		
	Plain washer, thick) check strap red	2	4075		
	Plain washer, thin) to floor	2	3947		
	Nut (*" UNF))	². 2	GHF200		
29	Striking plate	ົ້າ	333140		
LJ	Bolt (1" UNF x 1"))	ż	GHF101		
		ls read	3817		
	Spring washer) plate to rear	2	GHF 331		
	Nut (1" UNF)) of body	2	GHF200		
30	Female dovetail for rear door on body	ī	332147		
31	Spacer for female dovetail	i	332943		
	Screw (1" UNF x 3") fixing dovetail to spacer	2	78233		
	Set bolt (lune x lune x	2	255207		
	Plain washer) Fixing spacer to	2	3900		
32	Shim) LH rear pillar	2	305232		
	Spring washer) LH rear ofllar	2	GHF331		
33	Seal for door sides	3	395674		
	Seal for door side, LH bottom	1	332563		
35	End filler for seals	4	330850		
	Rivet fixing seals to body	22	302818		

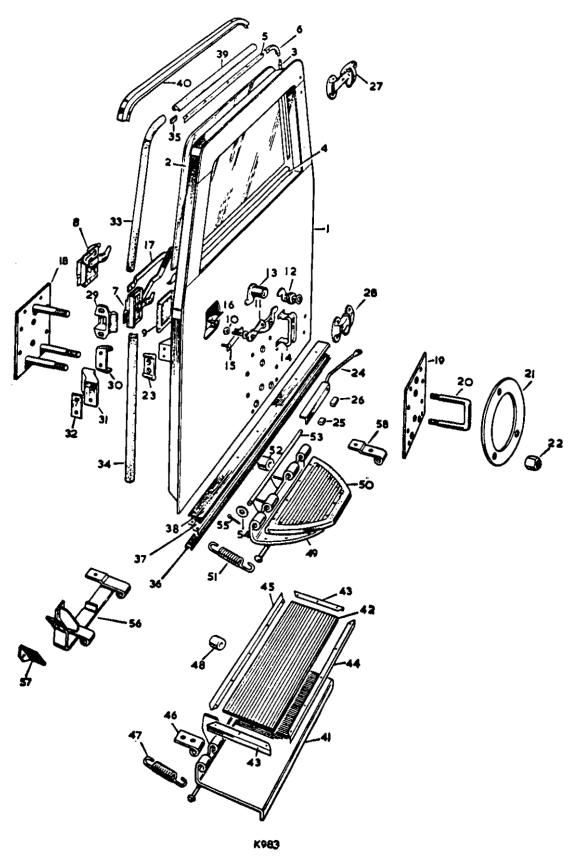

2H 09


PLA	TE						
REF.		Q:	ry. Part No.	REMARKS			
36	Seal for rear door, bottom	1	3325F4				
37		i	332756				
38	Protection strip for rear door, bottom	i	333203				
Jo	Drive screw (?" No.6), fixing seal and retainer	•	333203				
	to floor	13	GHF421				
30	Seal for rear door, too	ij	396113				
J .	Rivet fixing seal	ำi	302818				
40	Retainer for rear door seal, ton	ij	332151				
-0	Screw (2BA x \ "))	ģ	77869				
	Plain washer) Fixing retainers	ģ	3902				
	Spring washer) to roof panel	9	WM702001				
	Nut (2 BA)	á	RTC608				
	nuc (t un)	•	11.0.700				
41	REAR STEP	1	501053*	Oblong.	steo,	overall	width
42	Rubber mat for step	1	245137*	193"			
43	Retainer for rear sten, side	2		•			
44	Retainer for rear step mat, front	1	245135*				
45	Retainer for rear step mat, rear	1	245134*				
	Rivets fixing mat end cappings	16	4022				
46	Hinge, centre for rear step	2	245131				
	Bolt (₹" UMF x 4")) Fixing hinge centre	2	BH606321				
	Locknut (3"UNF)) to reat step	4	NT606041				
	Bolt (¿" UNF x ¿")) Fixing hinge centre	2	SH604071				
	Locker) to rear cross-member	2	235731				
47	Spring for rear step	2	2643F2				
48	Buffer for rear step	1	304125				
	Plain washer) Fixing buffer to		4030				
	Drive screw) rear cross-member	Ť	GHF424				
	REAP STEP	1	508947*	Oblana	sten.	overall	width
	Rubber mat for rear sten	1	508957*	11}"	2007,		
	Retainer for rear step mat, side		245135*				
	Retainer for rear step mat, front	ĩ	508959*				
	Retainer for rear step mat, rear	i	508958*				
	Rivet, fixing mat end campings	14	4022				
	Spring for rear step	1	254352				
	Buffer for rear step	i	304125				
	Plain washer) Fixing buffer	i	4030				
	Drive screw) rear cross-member	1	GHF 424				
	Rubber buffer for underside of rear step	1	304125				
	Plain washer) Fixing buffer	1	4030				
	Screw (2 BA x a long)) to step	1	77758				
	Hinge pin for rear step	1	509120				
	Plain washer) Fixing	2	WB110061				
	Solit pin) hinge pin	2	RTC600				

^{*} NO LONGER SERVICED

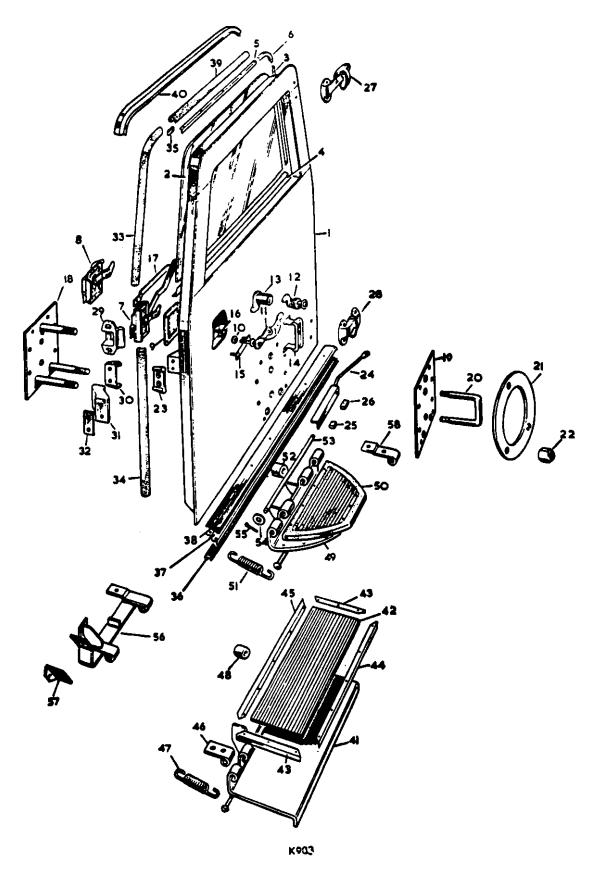

2H 10


PLA REF.		٥	TY. PART No.	REMARKS
		_		
49	REAR STEP Rubber mat for rear step	1	523589 517977	With hinge brackets
	Rivet)	7	••••	welded to rear cross-
	Screw (2 BA x)")) Fixing mat		77860	member. Up to vehicle
	Spring washer) to step			suffix 'C' inclusive.
	Nut (2 BA))	۵		
51	Spring for rear sten	1	264362	
52	Buffer for rear step	}	T T -	
	Plain washer) Fixing buffer to	1	4030	
	Drive screw) rear cross-member	1		
53	Hinge pin for rear step	1	••••	
54	Plain washer) Fixing	2.		
55	Split pin) hinge pin	2	RTC600	
	REAR STEP	1		
	Rubber mat for rear step	וַ		hinge brackets bolted
	Rivet)	7		
	Screw (2 BA x ½")) Fixing mat	-	77869	From vehicle suffix 'D'
	Spring washer) to step	_	WM702001	onwards
	Nut (2 BA)	4	111 31, 30	
56	Support bracket and hinge centre, LH	j		
57	Anchor bracket for spring	1		
	Bolt (5/16" UNF x 1%")) Fixing support	2		
	Plain washer) bracket and anchor	2		
	Self-locking nut (5/16" UNF)) bracket to rear) cross-member	2	GHF242	
58	Hinge, centre RH	1		
	Set bolt (∄" UNF x l")) Fixing RH	1	 , .	
	Spring washer) centre hinge to) rear cross-member	1	GHF333	
	Spring for rear step	1	264362	
	Buffer for rear step	1	312027	
	Drive screw) Fixing buffer to	1	GHF 423	
	Plain washer) rear cross-member	1	4030	
	Hinge pin for rear step	1		
	Spring washer)	1		1
	Plain washer) Fixing hinge pin	2		
	Split pin)	2		

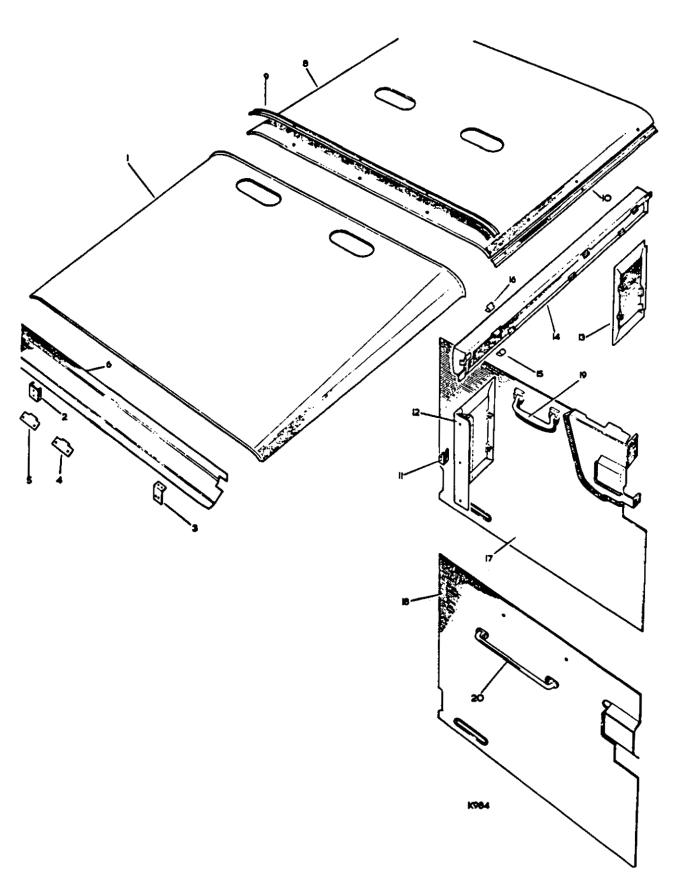

PLA'				
REF.	1 2 3 4 DESCRIPTION	QΤ	Y. PART No.	REMA RKS
7	Deaf Asia format annual	•	221.401	
1	Roof trim, front portion	1	331491	
2	Bracket, cant rail to roof frame		331168)	874
3	Bracket for roof trim, front portion	4	349218.)	Alternatives
	Drive screw (1" No.6) fixing bracket to cant rail		GHF421	
	Drive screw (3" No.6)) Fixing	ġ	GHF421	
	Plain washer, rear) roof frame	5	4592	
	Plain washer, front) to bracket	4	3852	
	Centre bracket, canopy panel	1	331391	
5	Outer bracket, canony namel	2		
,	Canopy trim panel	j	331607	
	Plain washer) Fixing trim panel	3		
0	Drive screw (½" No.6)) to brackets	3	GHF 421	
8 9	Head cloth, rear portion	ו	331508*	
.9	Fixing strip, head cloth, front and rear	2		
	Drive screw (3" No. 5)) Fixing Plain washer) strip to roof	F	GHF421 4592	
	Plain washer) strip to roof Retainer for roof trim		332240	
			GHF711	
	Spire nut) Fixing retainer Drive screw) to vent		GHF421	
10	Side rail, head cloth, rear nortion			
10	Plain washer) Fixing	2	4428	
	Drive screw (1" No. 6)) side manel	2		
	Drive screw (3" No. 6)) side manel Bolt (10 UNF x 3") Fixing	2		
	Plain washer) side panel to	2		
	Nut (10 UNF)) roof at rear	2		*
11	Fixing bracket, RH, sidelight casing, front		331192*)	Early
	Fixing bracket, LH, sidelight casing, front		331193*)	
	Sidelight casing, trimmed, RH, front GREY	ī	331186*	
12	Sidelight casing, trimmed, LH, front GREY	i		
	Sidelight casing, trimmed, RH, front BLACK	1	320682	
	Sidelight casing, trimmed, LH, front BLACK	1	320683	
	Drive screw) Fixing casing		GHF 421	
	Plain washer) to bracket	6	4592	
	Sidelight casing, trimmed, RH rear, GREY	1	331179*	
13	Sidelight casing, trimmed, LH rear, GREY	1	331180*	
	Sidelight casing, trimmed, RH rear, BLACK	1	320684	
	Sidelight casing, trimmed, LH rear, BLACK	1	320685	
	Drive screw (1 No. 6)) Fixing casing	2	GHF421	
	Plain washer) to manel	2.	4592	
_	Roll trim for cant rail, RH, GREY	1	331497*	
14	Roll trim for cant rail, LH, GREY	j	331498*	
	Roll trim for cant rail, RH, BLACK	1	320686	
		1		
	Urive screw (3" No. 6) fixing roll trim to body	4	ABF04041	
	Roll trim for cant rail, LH, BLACK Drive screw (3" No. 6) fixing roll trim to body	1	320687 AB604041	


^{*} NO LONGER SERVICED

BODY TRIM-88IN STATION WAGON

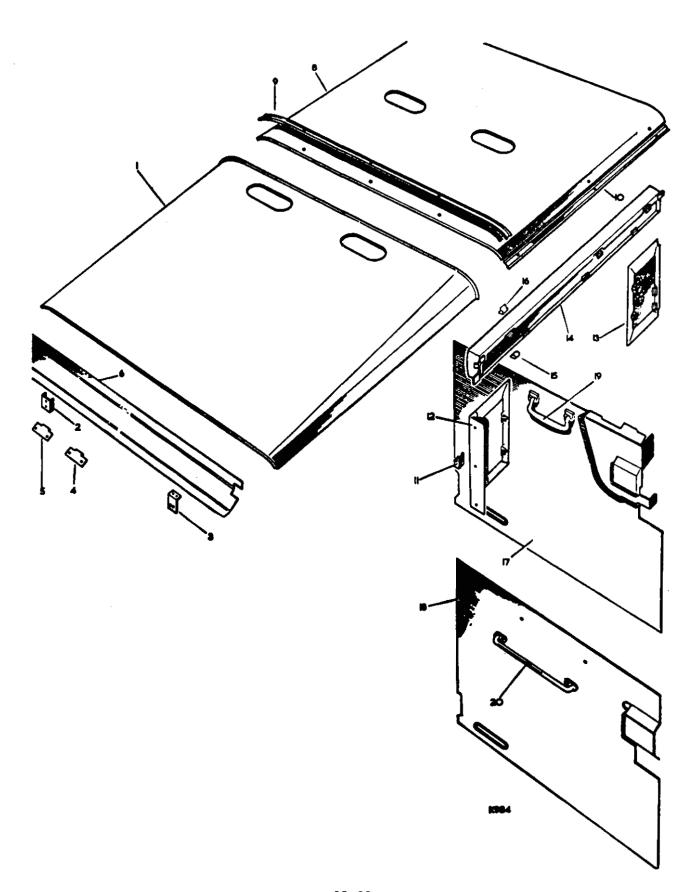


PLAT	=				
REF.	1 2 3 4	DESCRIPTION	QTY	. PART No.	REMARKS
15	Retaining clip) Fixing	8	331071	
	Edge clip		8	349899	
	Rear door trim		1	331638*	When door lock with extended inner handle is fitted.
18	Rear door trim	casing, GREY	1	345426*)	When door lock with short
	Rear door trim			•	inner handle is fitted
		" No 6) fixing lock casing to d		GHF421	
19	Door pull hand	le	ו	306460) Alternative to
	Drive screw (§	" No. 10) fixing handle to door	2	AB610051) grab handle
20	Door grab hand	le)Fixing grab	1	345450)	
		NF x ∄"))handle to door	2	255207 j	Alternative to
	Spring washer)		GHF331)	pull handle

^{*} NO LONGER SERVICED

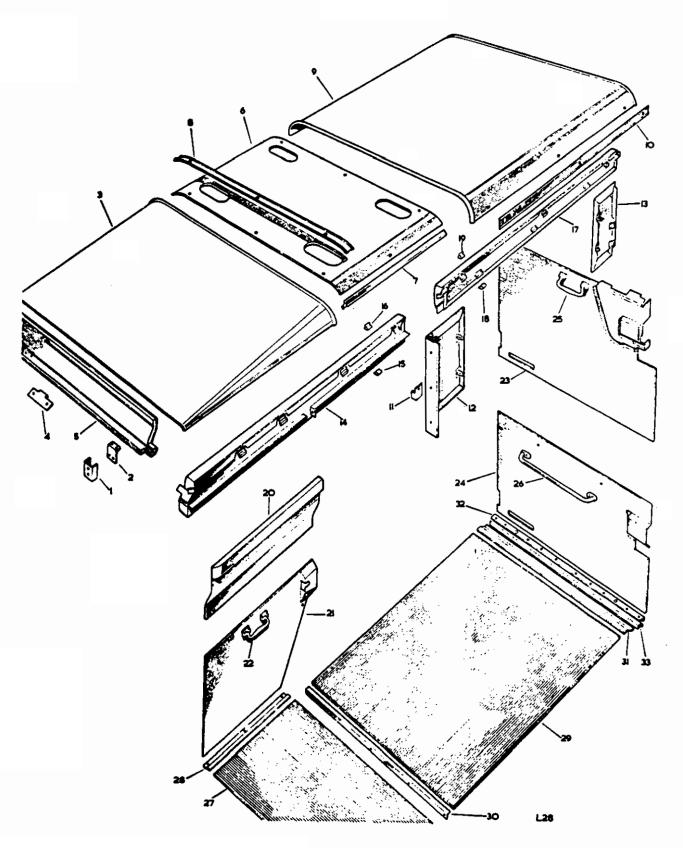

PLAT REF.	E 1 2 3 4	DESCRIPTION	aty	. PART No.	REMARKS
1	Bracket, cant	rail to roof frame	4	331168)	Alternatives
2		nof trim, front portion		349218	
•		3" No.f), fixing bracket to cant ra			
3	Roof trim, fr		ĺ	331491	
	Plain washer		Ģ	4502	
	Drive screw (Ģ	GHF 421	
4		t for canopy trim panel	1	331391	
5	Canopy trim o		1	331507	
	Plain washer		3	385 <i>2</i>	
		<pre>1" No.6)) to centre bracket</pre>	3	GHF421	
	Headcloth, in]	331610	
7		intermediate headcloth		331216	
8		for intermediate headcloth		331203	
^		<pre>1 No.6) fixing side rail to roof</pre>	_	GHF 421	
9	Headcloth, re		1	331605*	
10		r rear headcloth	2	331547	
11	Urive Screw (}" No.6) fixing strip to roof	5	GHF 421	\ F==1
1 1		t, RH side light casing, front t, LH side light casing, front	1	331192*) models
		sing, front, RH GREY	1	331186*) mode is
12		sing, front, LH GREY	, 1	331187*	
12		sing, front, RH BLACK	i	320682	
		sing, front, LH BLACK	i	320683	
	Drive screw (}" No.6)) Fixing casing	Ŕ	GHF 421	
	Plain washer		6	4592	
		sing, rear, RH GREY	ì	331179*	
13		sing, rear, LH GPEY	i	331180*	
		sing, rear, RH BLACK	1	320684	
		sing, rear, LH BLACK	. 1	320685	
	Drive screw (}" No.6)) Fixing casing	2	GHF421	
	Plain washer) to panel	?	4592	
_		nt rail, RH front GREY	1	331589*	
14		int rail, LH front GREY	j		
		int rail, RH front BLACK	1	320711	
		int rail, LH front BLACK	1	320712	
16	Retaining of	p) Fixing roll	8		
15) trim	8	349899	
٦F		No.6) fixing roll trim to body	6	AB604041	
17		nt rail, RH rear GREY	1	331497 * 331498 *	
17		nt rail, LH rear GREY nt rail, RH rear BLACK	1	320686	
		int rail, kn rear black	i	320687	
18		n) Fixing roll	8	331071	
19	Edge clin) trim	8	349899	
		3" No.6) fixing roll trim to body	Ą	AB604041	
		, and the second	•		


^{*} NO LONGER SERVICED

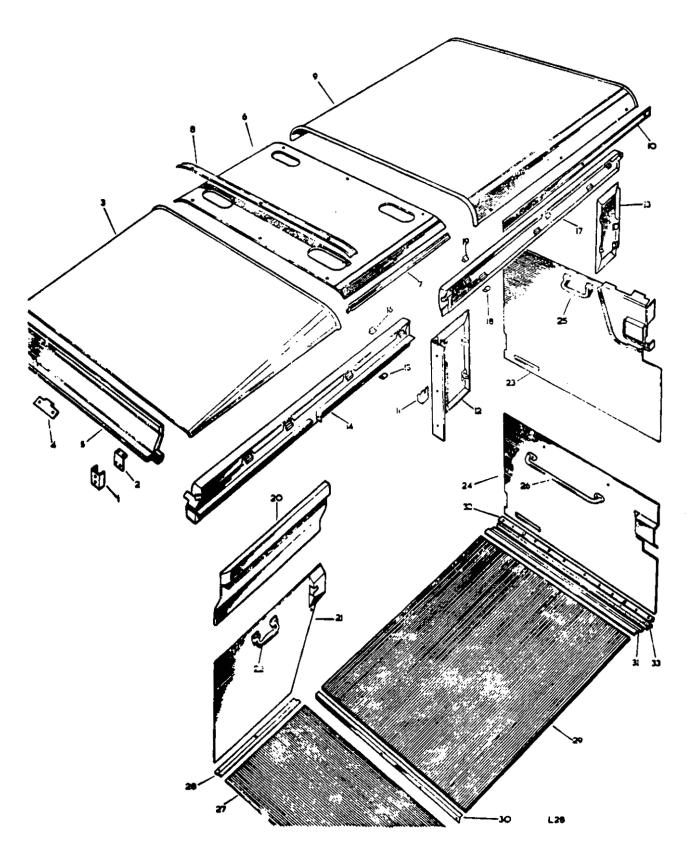

ILA IEF.		QT	Y. PART No.	REMARKS
10	Door trim unper, centre, RH GPEY	3	339990	
	Door trim upper, centre, LH GREY	Í	330907*	
	Door trim upper, centre, RH BLACK	i	320713*	
	Door trim upper, centre, LH BLACK	į	320714*	
	Drive screw (3" No.6), fixing trim to door	10		
!1	Door trim lower, centre, RH GREY	1	349974*	
	Door trim lower, centre, LH GREY	i	349975*	
	Door trim lower, centre, RH BLACK	i	320715	
	Door trim lower, centre, LH BLACK	ī	32071£	
2		2	306460	
	Drive screw (2" No.10), fixing handle to door	4	AB610051	1
	Captive nut for drive screw	4	PFS510	
:3	Rear door trim casing, GREY	1	331638*	When door lock with
				extended inner handle is
-Δ	Rear door trim casing, GREY	7	345426	fitted) When door lock with short
7	Rear door trim casing, BLACK	j) inner handle is fitted
	Drive screw (2" No.6), fixing door casing	5	GHF 421	/ Timer handle is licted
5	Door pull handle for rear door	ĭ	306460)Alternative to grab handle
	Drive screw (%" No.10), fixing handle to door	ż	AB61005	
6	Door grab handle	ì) Alternative to pull handle
٠	Set bolt (½" UNF x ¾")) Fixing grab handle	ż	255207) Alternative to putt handle
	Spring washer) to door	2	GHF 331	
!7	Intermediate floor rubber mat	ຳ	331481	,
	Retainer for floor mat, Intermediate	2	331480	•
	Rear floor rubber mat	'n	331670	
Ō	Retainer for rear floor mat, front end	ì	331669*	
•	Pop rivet fixing retainer	ż	78248	
1	Retainer for seal and rear floor mat, rear end	í	332756	
	Protection strip for rear door, bottom	i	333203	
3	Sealing rubber for rear door, bottom	i	3325F4	
•	Drive screw, fixing retainer, strip and seal to	•	J. 7. J.	
	floor	13	GHF 421	•

^{*} NO LONGER SERVICED

FRONT SEAT SQUABS

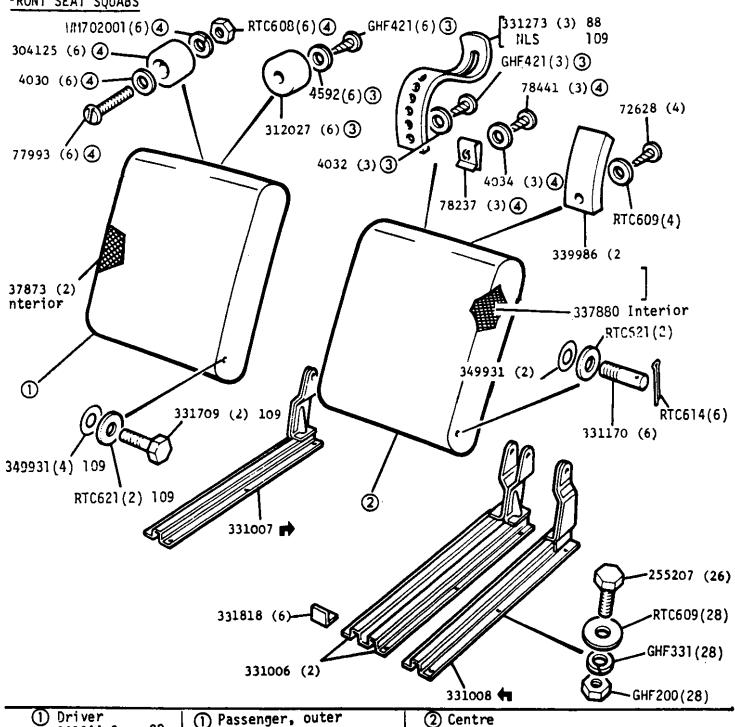

① Driver 349644 Grey 88 320698 Black 88 349562 Grey 109 N 320702 Black 109 NLS・349565 Grey 1095W 320708 Black 1095W


1 Passenger, outer
349644 Grey 88 and 109
320698 Black 88 and 109
NLS-349563 Grey 1095W
320709 Black 1095W

NLS-349645 Grey 88 and 109 320701 Black 88 and 109 NLS-349564 Grey 1095U

320710 Black 1095W

3 For squab with spring interior

4 For squab with foam interior

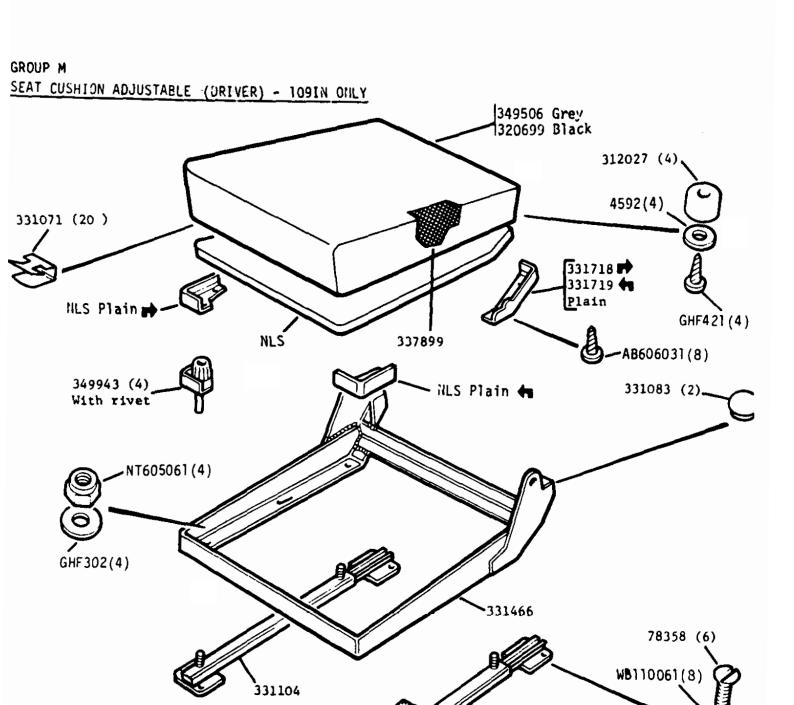


<u>REMARKS</u>


GHF331(8)-

GHF200(8)-

331102 **——** 331103 **—**

GROUP M
SEAT CUSHION - NON ADJUSTABLE

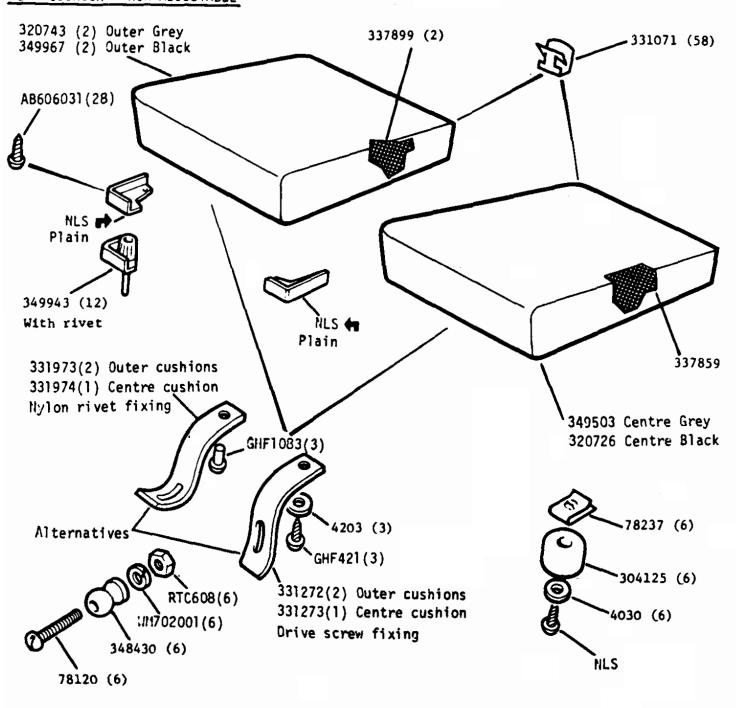


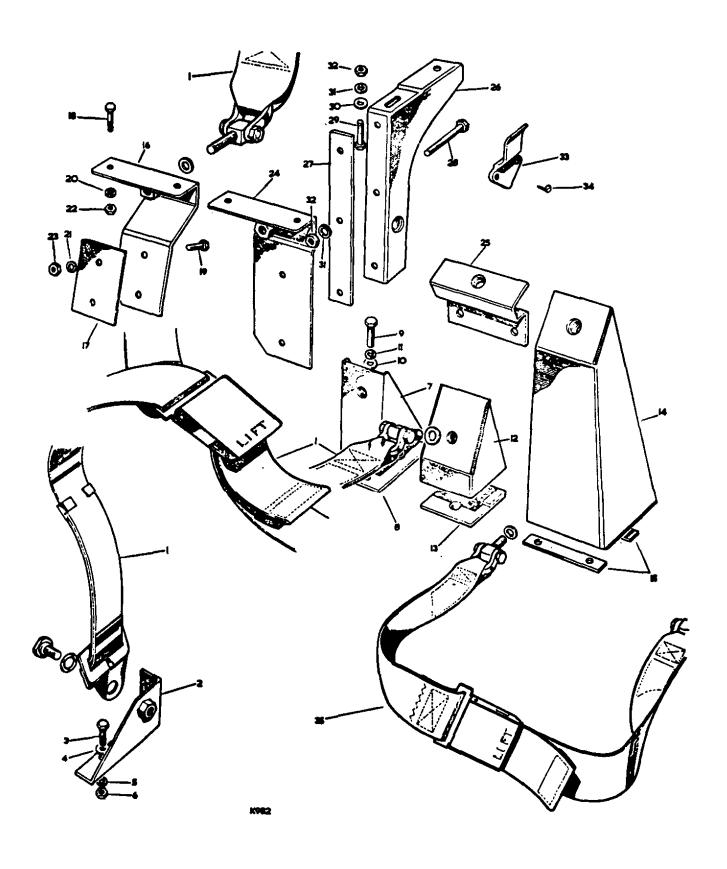

PLA1	· -	DESCRIPTION	01	TY. PART No. REMARKS	
1	Safety harness for front		?	347509 All models	
ı	ANCHOPAGE KIT, RH)	seat, outer	- 6. 1	320631*)88. Except when	1
	ANCHOPAGE KIT, LH)		י ו	320632*)cab is fitted.	-
	ANCHORAGE KIT, RH)		;	320633) 88. With	
	ANCHORAGE KIT, LH)		,	320634) truck cab	
		For safety harness	1	320635)109 with hard top	\
	ANCHORAGE KIT, LH)	in savery nerness	1	320636)or full length hood	1
	ANCHORAGE KIT, RH)		1	320637) 109. With	}
	ANCHORAGE KIT, LH)		j	320638) truck cab	
	ANCHORAGE KIT, RH)		י ו	320639*)109 Station	
	ANCHORAGE KIT, LH)		i	320640*)Wagon	İ
2	Sill gusset, RH		i	345100	İ
L	Sill gusset, LH		i	345101	1
3	Bolt (}" !!!!F x }")) Fixing	ż		
4	Plain washer) sill gusset	2	WP8019	
5	Spring washer) to seat	2	GHF 331	
6	Nut (1" UNF)) hase	2	GHF200	
1,	Self-locking nut (7/16		r.	200	
	227. 10211112 1140 (7)	bolt to cab rail	1	252163 88. With truck cab	Fitted
7	Gusset bracket at bbul		2	33875?)	as
8	Washer plate complete)Fixing	2	3365F7)	standard
9	Set bolt (1" UNF x 1"		4	255208)88. All models	on all
10	Plain washer)bracket	4	WP8019)	Home
11	Spring washer)to floor	4	GHF331)	Market
12	Gusset bracket at bulk	•	2	345123)	models
13	Clamp plate complete) Fixing	2	345725)	from
	Set bolt (5/16" UNF x	1")) gusset	2	GHF103)109. Except	vehicle
	Soring washer) bracket	4	GHF332)Station Wagon	suffix
	Plain washer) to floor	4	2266)	יםי
74	Gusset bracket at bulk	rhead	?	348738*)	onwards
ነና	Washer plate)	Δ	336147*)	ontional
	Bolt (1" UNF x 7")) Fixing gusset	8		on
	Spring washer) to bulkhead	R	GHF331)	Export
3.6	Nut (1" UNF))	8	GHF200)	models
16	Shoulder bracket, RH		ļ	338753*)	}
	Shoulder bracket, LH	`	Ĭ	328754*)	1
17	Washer plate	· ·	?	336566*)	
18	Bolt (1" UNF x 7")) Fining shoulder	4	255208)88.	
19	Bolt (5/16" UNF x ζ")) Fixing shoulder	4	255227)Except when	\
20	Spring washer) bracket to	4	GHF331)cab is fitted	
21 22	Snring washer Nut (ϡ" UNF)) bulkhead	4	GHF332) GHF200)	
23	Nut (\$ 0MF) Nut (5/16" UMF)	〈	4	GHF201)	
24	Shoulder bracket, RH	,	1	338759*)	
/ <u>.</u> •	Shoulder bracket, LH		i	338760*)	
	Bolt (1" UNF x 1")	1	Δ	255208)	
	Bolt (5/16" UNF x ;) Fixing	<u> </u>	255227)109. With hard	
	Spring washer) shoulder bracket	Δ	GHF331)ton or full	
	Spring washer) to bulkhead	Δ	GHF332)length hood	1
	Nut () UNF))	4	GHF200)	1
	Nut (5/16" ÚNF)	j	4	GHF201)	
25	Shoulder bracket and o	cab mounting	2	336577 109, with cab _]

^{*} NO LONGER SERVICED

FRONT SEAT SAFETY HARNESS AND ANCHORAGE

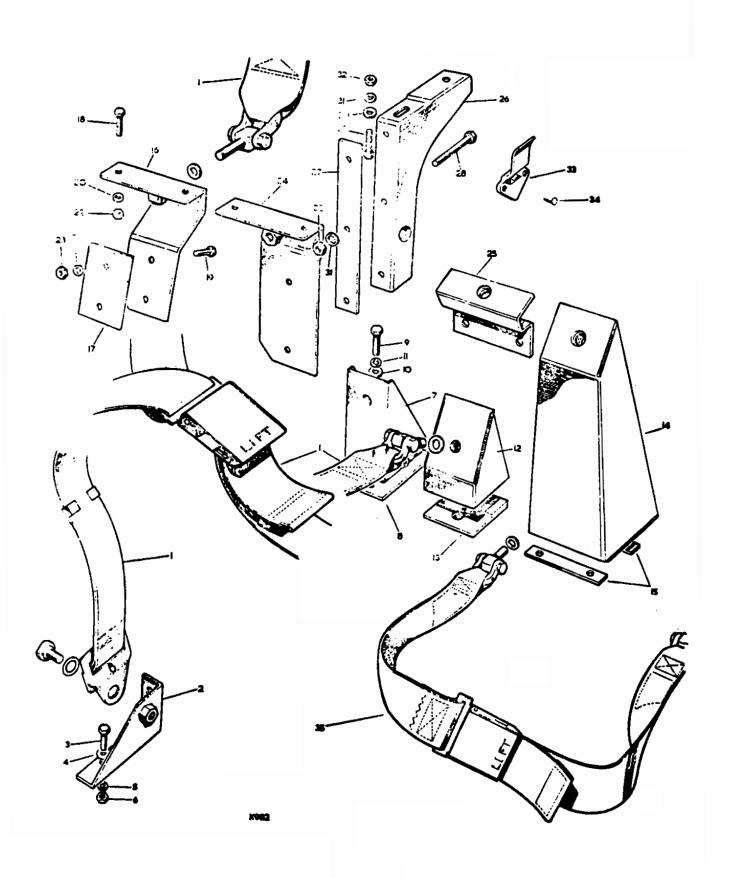


FRONT SEAT SAFETY HARNESS AND ANCHORAGE

PLATI	-	RIPTION	<u>a1</u>	Y. PART No.	REMARKS	···
26	Shoulder bracket, RH		1	348473)	ר
	Shoulder bracket, LH		1	348474		Fitted
27	Washer plate)	2	348447		as stan-
28	Bolt (½" UNF x 2¾") Fixing shoulder	6	255219	109 Station Wagon	dard on
29	Bolt (¾" UNF x å") bracket to	2	255206)	all Home
30	Plain washer) door post	2	WP8019)	Market
31	Spring washer) and cant rail	8	GHF 331		Models
32	Nut (1 UNF)	j	8	GHF200)	from
	Stowage hook for safety h	narness	2	345117*	For lift latch	vehicle
33	Stowage hook for safety)	narness	2	346885*	For push button	suffix
					harness Irving	' D'
	Stowage hook for safety l	narness	2	347541	For press button	onwards
					harness Britax	Optional
34	Drive screw, fixing hook		4	AB604031		on
						Export
						_models
	Front seat safety harness,	centre	1		All models	
	Gusset bracket at bulkhead		2	338752)	
	Washer plate complete) Fixing	2	336567)	
	Set bolt (%" UNF x %") gusset	4	255208)88	ì
	Plain washer) bracket	4	WP8019)	
	Spring washer) to floor	4	GHF331)	Optional
	Gusset bracket at bulkhead		2.	345123)	Equipmen
	Clamp plate complete		2	345125)109	
	Set bolt (5/16" UNF x 1") Fixing clamp	4	GHF103)Except	
	Spring washer) plate to	4	GHF 332)Station Wagon @	}
	Plain washer) bulkhead	4	225F)	_

@ Note: Anchorage point for centre harness is provided in normal build on late 109 Station Wagons. To convert early models, fit the panel assembly 347807 See 2G07

^{*} NO LONGER SERVICED



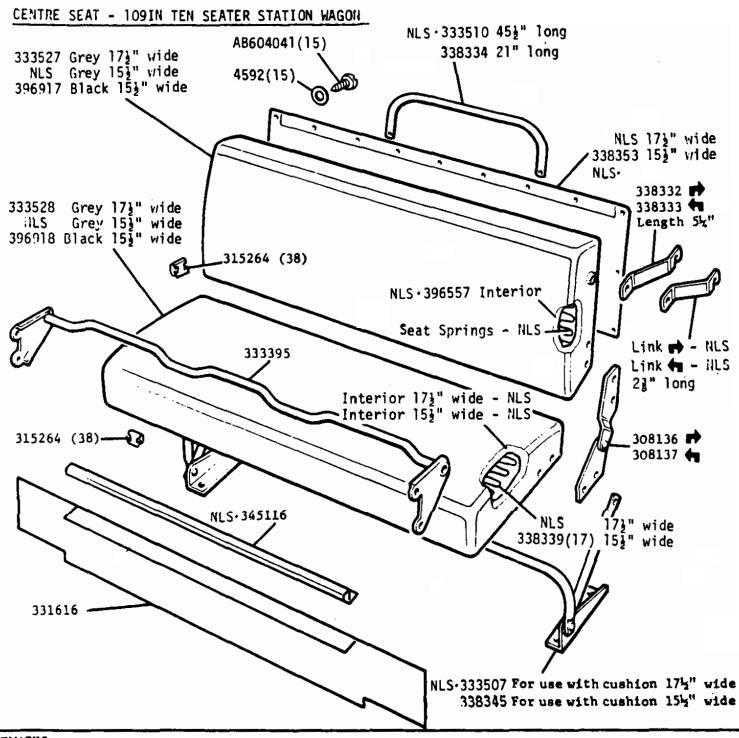


Centre seat assembly Grey
Centre seat assembly Grey
Centre seat assembly Black 33


NLS NLS 396916

With cushion 17½"wide With cushion 15½"wide

GROUP M
FIXINGS FOR CENTRE SEAT - 109IN TEN SEATER STATION HAGON

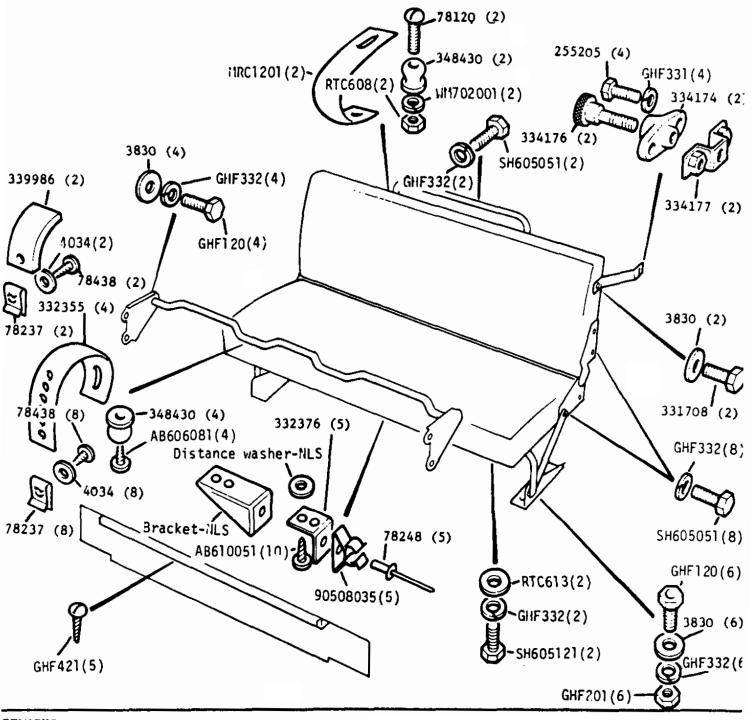


GROUP M
CENTRE SEATS - 1091H TWELVE SEATER STATION WAGON

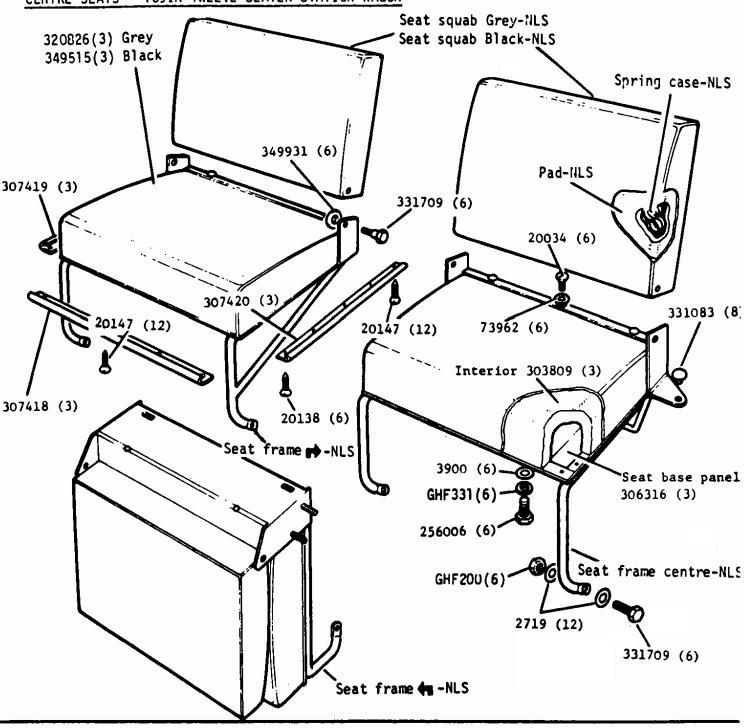

<u>REMARKS</u>


REAR SEATS AND MISCELLANEOUS FITTINGS-88IN STATION WAGON

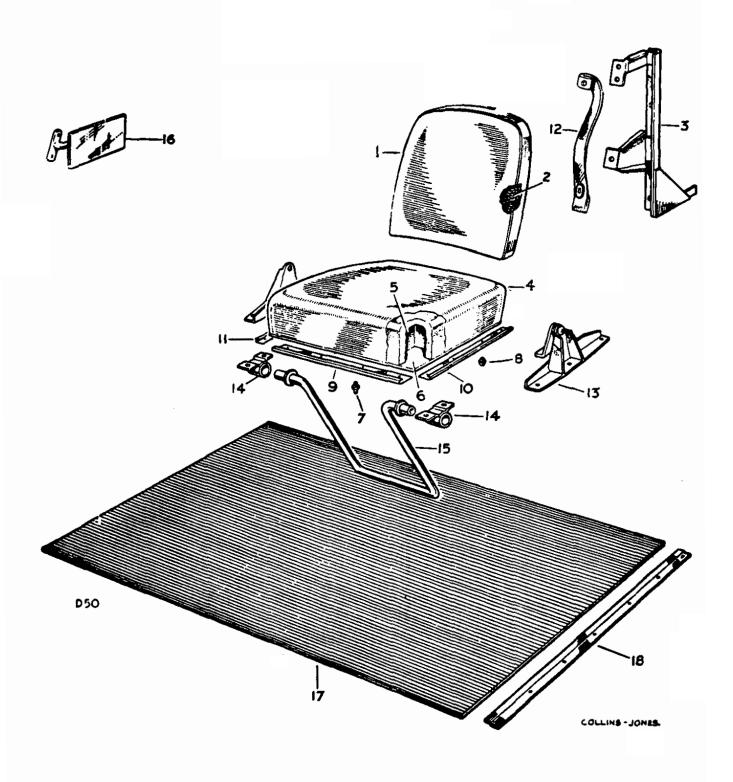

PLA'		QT	Y. PART No. REMARKS
1	Rear seat backrest complete, GREY	4	331149*
J	Rear seat backrest committee, GRET	4	320703
2	Pad for rear seat backrest	4	304054
۲.	Bolt (}" UNF x \{\}"))	20	255204
	Set bolt (}" UNF x {") Fixing backrests	4	255208
	Plain washer) to supports	24	RTC617
	Spring washer)	24	GHF331
3	Support for backrest RH	4	331478
,	Support for backrest LH	4	331479
	Bolt (1" UNF x 1))	ñ	255206
	Plain washer, small) Fixing backrest support	6	RTC617
	Plain washer, large) to body capping	6	3842
	Spring washer)	6	GHF 331
4	Rear seat cushion complete, GREY	Ą	320826
·	Rear seat cushion complete, BLACK	4	349515
	Rubber interior for seat cushion	4	303809*
6	Seat base panel	4	306316
7	Fastener stud	4	243618
	Plain washer)	Δ	3852
	Spring washer) Fixing stud	4	WM702001
	Nut (2BA)	4	RTC608
8	Rubber buffer for rear seat cushion	4	312028
	Woodscrew) Fixing base panel to	В	20034*
	Cup washer) seat cushion frame	8	7396?
Q	Front finishers for rear seats	4	307418
10	Side finishers for rear seats RH	4	307419
11	Side finishers for rear seats LH	4	307420
	Woodscrew) Fixing finishers	8	20138
	Woodscrew) front and sides	16	20147
12	Retaining strans complete for seat cushion	4	306326
	Special nut) Fixing backrest and	4	GHF713
3.0	Special bolt) strap to upper body	4	78295
13	Cushion pivot bracket complete	8	331122
14	Support tube bearing) For rear seat	8	90306199
	Support tube) cushion	24	90306200* 255208
	Bolt (}" UNF x {}")) Fixing cushion pivot Bolt (}" UNF x !}) bracket and support	24 8	BH604101
	Plain washer) tube bearings to seat:	32	RTC617
	Spring washer) cushion frame	32	GHF331
	Bolt (1 UNF x 1) Fixing cushion	36 16	255206
	Plain washer) nivot bracket	16	3900
	Spring washer) to wheelarch box	20	
	Nut (1" UNF)	20	
	Clamping bar) At centre squab	4	34 F 8 0 4
	Bolt (}" UNF x }") brackets	Å	255208
	Packing block for roof lamp	1	332985*
	Mounting pad for roof lamn	1	334111*
	- ·		


^{*} NO LONGER SERVICED

REAR SEATS AND MISCELLANEOUS FITTINGS-88IN STATION WAGON

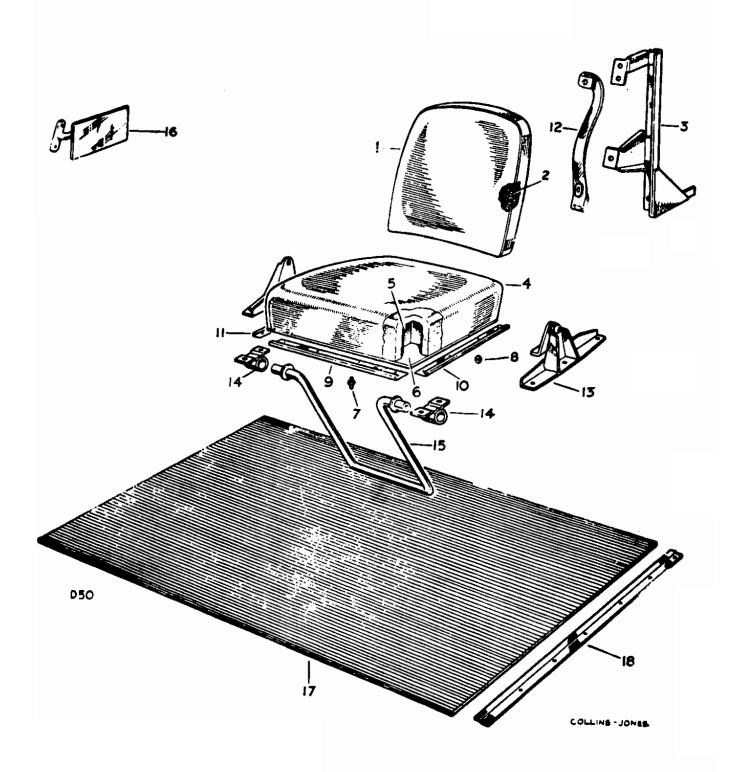


PLA REF.	-	1	2	3	4		DESCRIPTION	an	. PART No.	REMARKS
	R	ഹ	f 1	lar	תח כ	complete		1	265295	
	•••			_		rnof lan	מו	i	320608	
		-		_	_	roof lan		i	GLB382	
	D						lamp and block	ż) Alternatives
							lamps and mounting	ınad 2	GHF421)
							ranf partion	1	2654R2	•
							chassis portion	i	•	* Up to vehicle suffix 'C inclusive
	L	e a	d 1	foi	r ro	of lamp,	chassis portion	1	555879	From vehicle suffix 'D' onwards
	G	ro	mme	t	for	roof la	umo lead	1	312856	
	G	ro	mme	t	for	lead		2	233244	
	C	ab	1e	C	lip)Fixing roof	2	41379	
	Di	ri	ve	S	rev	,	lamp lead	2	AB608031	
16	I	nt	eri	01	· mi	rror	• • • • • • • • • • • • • • • • • • • •	ī	345188	
	Sı	ap	וחם	-t	bra	icket for	interior mirror	1	338275	From vehicle suffix 'D' onwards
	Di	ri	ve	S	rev	fixing	mirror	2	AD606041	
17							body floor	ĺ	331401	
18							r floor mat	ĺ	332565	
							protection strip	7	GHF400	

^{*} NO LONGER SERVICED

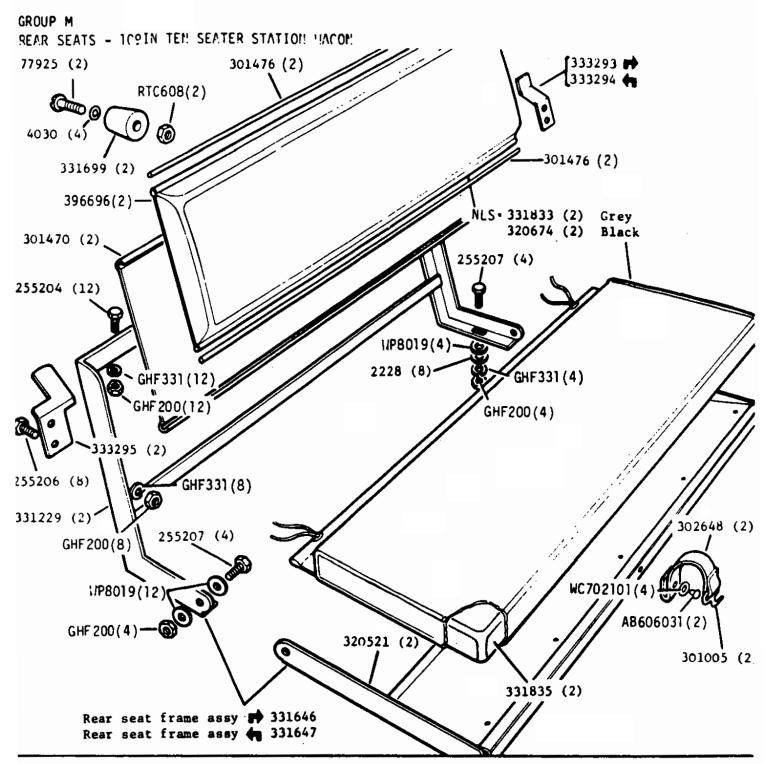

Rear seat backrest trimmed assembly, Grey 320084 (2) Rear seat backrest trimmed assembly, Black 396733(2)

GROUP M REAR SEATS - 109IN THELVE SEATER STATION WAGON

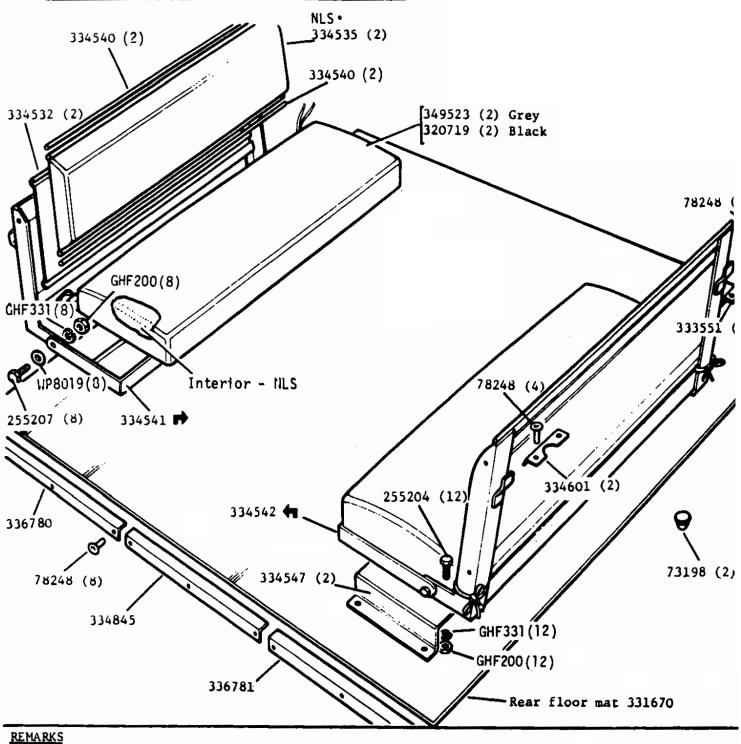

Rear seat backrest assembly, Trimmed Grey 334531 (2) NLS Rear seat backrest assembly, Trimmed Black 396698(2)

GROUP M
GRAB RAIL AND BRACKETS FOR SEATS - 109IN THELVE SEATER STATION MAGON

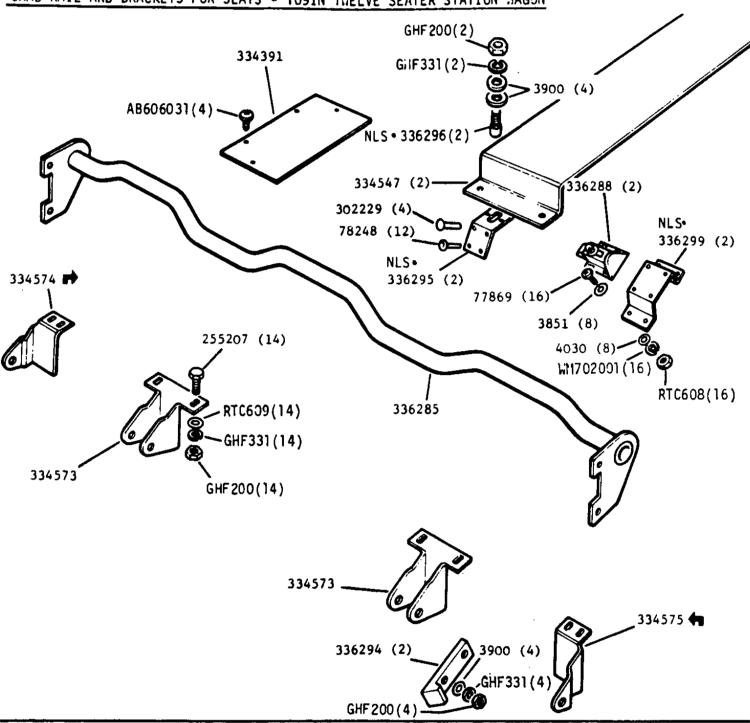



PLATE REF. 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
Engine overhaul gasket set	1 608124) 2} litre
Decarbonising gasket set	1 GEG162) Petrol
Engine overhaul gasket set	1 605106) 2.6 litre
Decarbonising gasket set	1 GEG1214) Petrol
Engine overhaul gasket set	1 525520) 21 litre
Decarbonising gasket set	1 GEG1200) Diesel
Gearbox gasket set	1 600603
Brake wheel cylinder overhaul kit, front	1 275744 88
Brake wheel cylinder overhaul kit, front	1 266684 109 4-cylinder models
Brake wheel cylinder overhaul kit, front Brake wheel cylinder overhaul kit, rear	1 600210 10º 6-cylinder models
Brake wheel cylinder overhaul kit, rear	1 266687 88 1 275744 109
Brake master cylinder overhaul kit	1 502333 88 For CB type
State waster of thise overhaut kit	master cylinder
	G1 64067720 (GMC314)
Brake master cylinder overhaul kit	1 8G8837 88 For CV type
•	master cylinder
	G1 64068893 (GMC310)
Brake master cylinder overhaul kit	1 503754 109 4-cylinder
	models. For early CB
	type master cylinder
• • • • • • • • • • • • • • • • • • • •	G1 64067722
Brake master cylinder overhaul kit	1 605127 109 4 cylinder
	models. For late CV
	type master cylinder
Draka mactan culinday ayaybayl tit	G1 64068750 (GMC312)
Brake master cylinder overhaul kit	1 90606023 109 4-cylinder
	models. For CV type
•	master cylinder G1 64068830 (GMC311)
Brake master cylinder overhaul kit	1 605127 109 6-cylinder models
Stake master by rinder byernagt kit	up to vehicle suffix "F"
	inclusive
Brake master cylinder overhaul kit	1 606415 109 6-cylinder models
• • • • • • • • • • • • • • • • • • • •	from vehicle suffix 'G'
	onwards
Clutch master cylinder overhaul kit	1 8G8837
Clutch slave cylinder overhaul kit	1 8G8600
Brake servo overhaul kit	1 600432) 2.6 litre Petrol
Brake servo poppet valve overhaul kit	1 600434) up to vehicle suffix
Brake servo non-return valve overhaul kit	1 600435) 'F' inclusive
Brake company that) Export only
Brake servo overhaul kit	1 18G8951 2.6 litre petrol from
	vehicle suffix 'G' onwards

PLA1 REF.	-	1	2	3 4	J				_	DESCI	RIP	TIÓN		an	r. PART No.	REMARKS
							_ 4	,								
	K	epa	ıır	K1	t to	r	aq.	j us	ter	นทา	t	(transmi		,	E1 E024	
	D.			l, i			^~.		4~~	uni		(transmi	brake)	1	515924	
	Γt	s ho	H	K I		יוּי	CAI	יווםנ	uer	unt	L	(r. auzm.	brake)	1	515923	
	B	عررا	h	rak	e gr	· p a	50	. +	uhe				ים מענים		27H7946	
										, tu	he			i	514578	
					t fo									i		2) litre Petrol
					kit									j	18G8246)	
					t fo										,) Diesel
	0	ver	ha	ս1 🗆	cit	fo	r	fue) pi					1	8G8845) models
					n ev									1	266752*	Cone and soring type.
	Sı	٧i٧	e1	pi	ים ר	er	hai	ا 1د	kit					1	532268	Pin and thrust washer type. Also suitable as
																conversion kit.
	Wa	ate	r	pum	าดข	er	hai	וו	kit					1	530590	21 litre Petrol and all
																Diesel models
					י סע									1	605716	2.6 litre Petrol
	Ca	arb	ur	ett	er o	ve	rha	lu£	ki:	t				1	507587	2½ litre Petrol
																For Solex carburetter
	Ca	arb	ur	etti	er n	νe	rha	เบเ	ki'	t				1	605092	21 litre petrol
	_									_				_		For Zenith carburetter
	Cá	arb	ur	etti	er c	٧e	rha	ıul	kî '	t				1	605098	2.6 litre petrol
	۲.	L					۱	L 1.							507500	For Zenith carburetter
	C a	aro	ur	ett	er g	12.5	rei	C Y	ז ו					ו	507693	2) litre petrol
	۲.	h			er g			ما⊾	: 4					,	605093	For Solex carburetter 21 litre petrol
	C	110	ur	ייייי	er y	45	KE	L K	ιι					1	5,000,000	For Zenith carburetter
	۲,	arh	1190	5 † † †	er g	36	b a t	. يا	i +					1	GS11524	2.6 litre petrol
	•	٠	٠, ١		- ' y	16:3		, ,						,	(13/73)	For SU carburetter
	Ca	arb	ur	ette	er g	a s	ket	t k	i t.					1	605857	2.6 litre petrol
									. •					•	001,	For Zenith carburetter
	P	as	tic	use	ie s	tr	jn,	. bi	ox (of 2	ð				60523R	For checking bearing
																clearances
												10 cc b	ottle,		600303	
										, po	t.t	1e	Ţ.		605765	
					d,										GBF 103	
									, }	pin	t	tin			AAII 1582	
					40 Z										GGC 102	
	Ká	i De	at	or :	seal	p	e i i	et							GAC148	

^{*} NO LONGER SERVICED


PLATE REF. 1 2 3 4	DESCRIPTION	an	. PART No.	REMA RKS
	wide, khaki-green	As read	91957*	
Cotton duck, 72"		As read	91899*	
Sheet wadding, 3		As rend	92406*	
Cotton webbing,	1/32" x 1" khaki-green	As read	91878	
Cotton webbing,	}" x 1" khaki-green	As read	91880*	
Cotton webbing,	5/64" x 1" black	As read	92088	
Seaming cord		As read	91171*	
Black canvas, 54	" wide	As read	91291*	
Grey felt		As read	91414	
Black felt, 50"	wide	As read	91819*	
Leather cloth, g		As read	91979*	
Leather cloth, b		As read	92616	
	ull black, 50" wide	As read	92625	
White leather cl		As read	91950	
Natural felt, 54		As read	91890*	
Felted mlastic,		As read	91965	
Black cloth, 72"		As read	91913*	
	er matting, 36" wide	As read	2615771	•
	Prestik', }" x }" wide	As read	14617*	
	Prestik', 3" x 1/16"	As rend	13296*	
			*	NO LONGER SERVICED

GROUP N
ELECTRICAL CABLE CLIPS

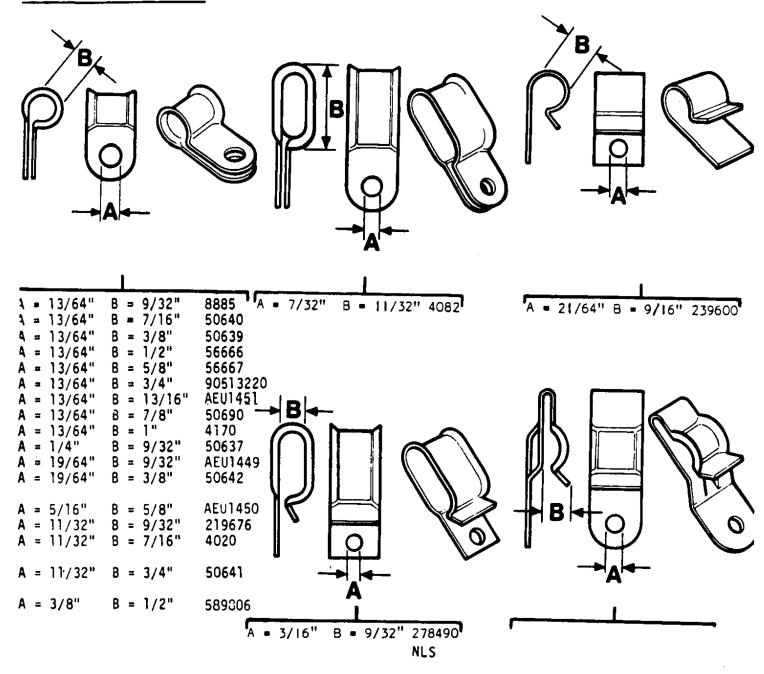


All quantities 'As required'

GROUP N
ELECTRICAL MISCELLANEOUS CLIPS

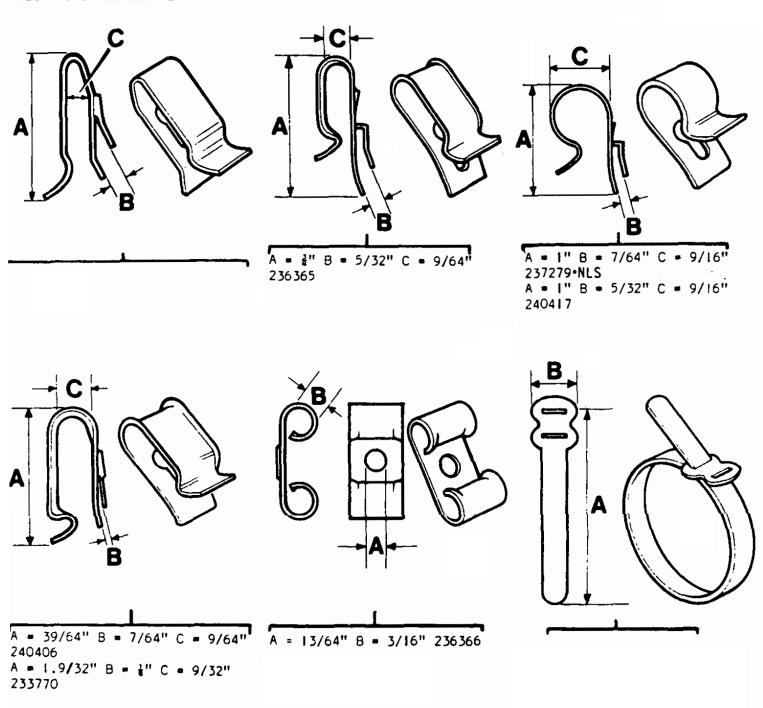


All quantities 'As required'

GROUP N
ELECTRICAL CABLE CLEATS, GROMMETS AND PLUGS

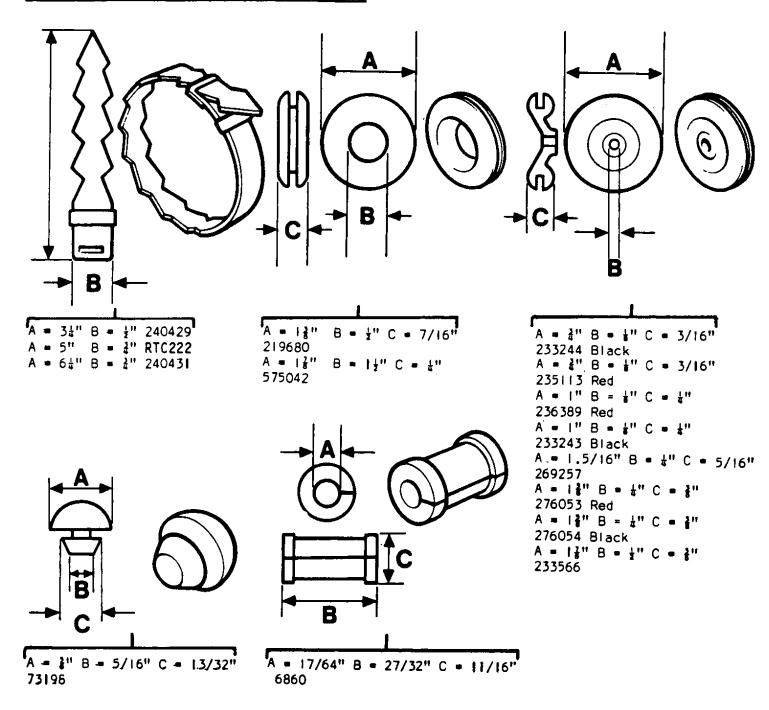

All quantities 'As required'


GROUP N ELECTRICAL 'LUCAR' CONNECTORS

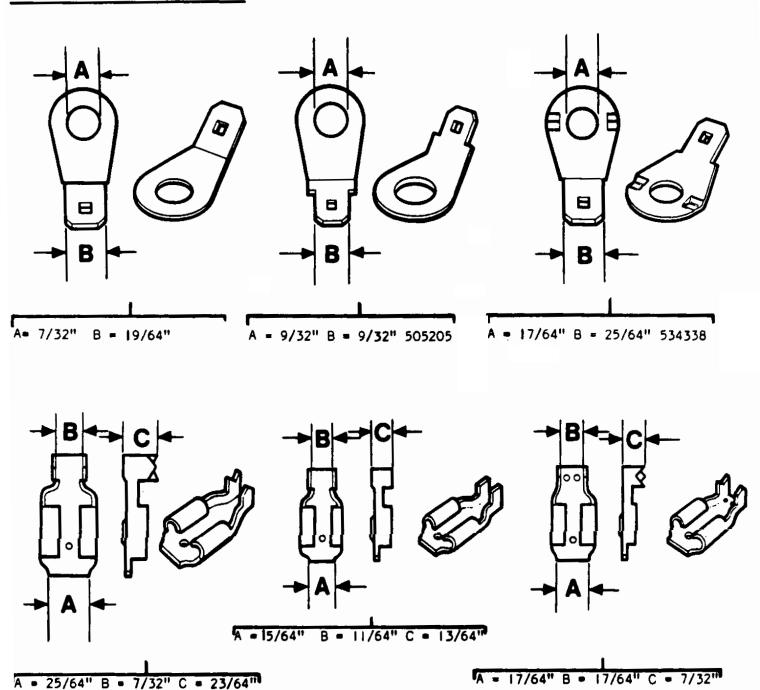

REMARKS

534341

All quantitles "As required"

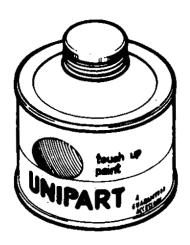

UNIPART TOUCH UP

GTU405 Pastel Green GTU406 Bronze Green GTU407 Marine Blue GTU408 Limestone GTU409 Grey



UNIPART AEROSOL

GAP405 Pastel Green GAP406 Bronze Green GAP407 Marine Blue GAP408 Limestone GAP409 Grey

GROUP N FINISHING MATERIALS - paint (one litre cans)

Supplies of re-finishing paints are available in one litre cans from International Pinchin Johnson outlets. To obtain details of the service and facilities offered, or in the event of any difficulties please contact I.P.J. direct.

For Home and European Markets:

International Pinchin Johnson Transport Paints Division

P 0 Box 359

Rotton Park Street

Ladywood

Birmingham B16 OAD

Telephone: 021-455-9866

Telex: 339266

For Overseas Markets:


International Pinchin Johnson

Export Division 380 Richmond Road Kingston-upon-Thames


Surrey England

Telephone: 01-546-1234

Telex: 27527

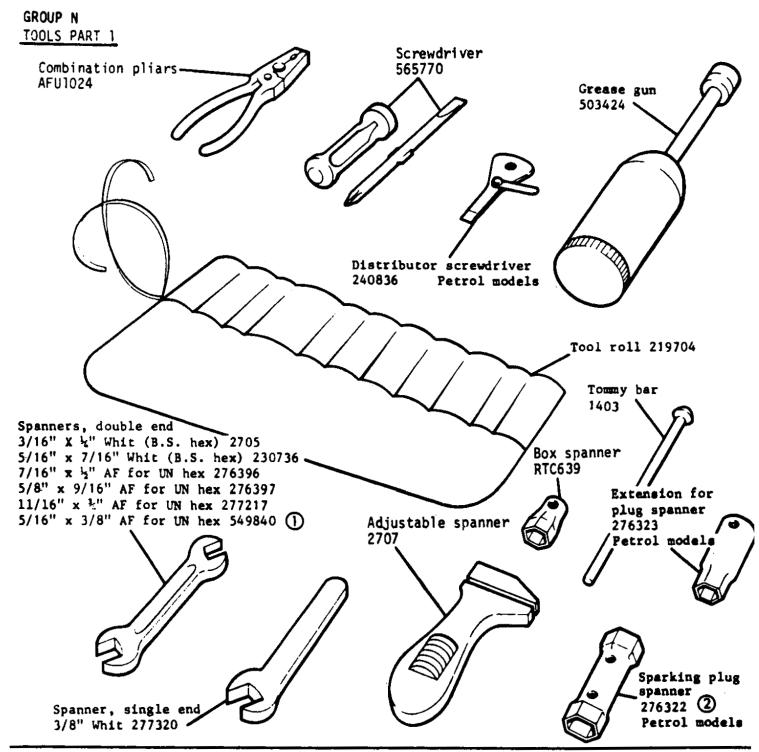

- () For distributor pump bleed screw. Diesel models.
- Also required for radiator drain plug All models

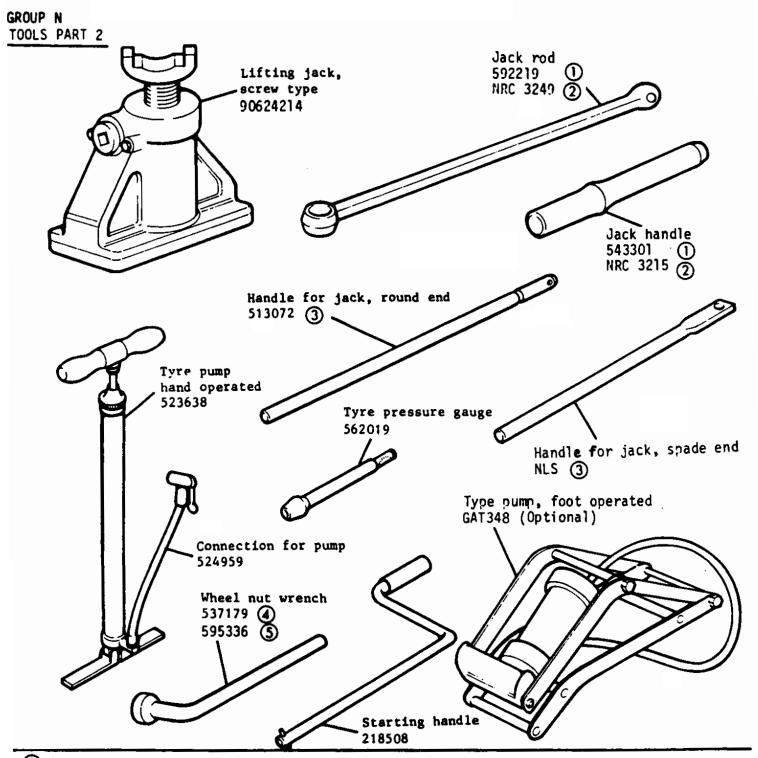

① Jack rod and jack handle - wooden handle type) Alternatives, for use ② Jack rod and jack handle - tommy bar handle type) with Jack 90624214

3 For early ratchet type jack

For wheel nuts 59/64" across flats.

5) For wheel nuts 1.1/16" across flats



SERIES IIA

PARTS CATALOGUE SUPPLEMENT

FOR

109 ONE TON

2; Litre, 4 Cylinder Petrol Model 2:6 Litre, 6 Cylinder Petrol Model

GROUP N

LAND-ROVER SERIES IIA 109 ONE TON

Vehicles to this specification are based on the normal 109 Three Quarter Ton models with 2½ litre Petrol engine or 2.6 litre Petrol engine, the majority of parts are therefore identical to normal build, the variations on the 109 ONE TON LAND-ROVER are listed on the following pages.

The equipment listed below is also fitted, see Land-Rover Optional Equipment Parts Catalogue:

Truck cab
Private locks
Towing jaw (Export only)
Attachment bracket for towing jaw (Export only)
Interior mirror (Export only)

VEHICLE UNIT SERIAL NUMBERS

				2} litre Petrol	2.6 litre Petrol
Vehicle:	Home,	RHStg	• •	23100001G	22900001G
	Export,	RHStg	• •	23200001G	22200001G
	Export,	RHStg	CKD	23300001G	22400001G
	Export,	LHStg		23400001G	22300001G
	Export,	LHStg	CKD	23500001G	22500001G

Engine: 21 litre Petrol, 8:1 compression ratio - Same as Three Quarter Ton 109,

commencing suffix letter 'A'

onwards

Engine: 2.6 litre Petrol 7.8:1 compression ratio-Same as Three Quarter Ton 109,

commencing suffix letter 'B'

onwards

Engine: 2.6 litre Petrol, 7:1 Compression ratio -Same as Three Quarter Ton 109,

commencing suffix letter 'A'

onwards

Gearbox: 21 litre Petrol, commencing 23800001A Gearbox: 2.6 litre Petrol, commencing 22900001A

SUMMARY OF SPECIAL FEATURES

GROUP N

Engine, 21 litre Petrol

inlet manifold and adaptor to suit servo vacuum pipe 9}" diaphram spring clutch

Engine, 2.6 litre Petrol

As normal build

Gearbox

Easy change type gearbox with lower ratio transfer gears

Axles, front and rear

Heavy duty type, ENV manufacture, 511 track

Differential, front and rear

ENV type to suit heavy duty axies

Propeller shafts, front and rear

To suit ENV axies

Steering unit

Lower steering ratio. Steering damper fitted between drag link and chassis frame

Chassis frame

Composite type to sult RH or LHStg. Extended shackle brackets. Additional support for fuel tank

Suspension

Heavy duty front springs, rear springs and shock absorbers. Two position shackle plates, Longer rebound check straps. Extension pads for axie buffers.

Wheels and tyres

Road wheel 6.50L x 16" (+2" offset) 9.00 x 16" tyres

Brake pipes and servo

Brake pipes to suit ENV axles and servo unit. Hydraulic servo fitted to 2½ litre Petrol models. Mechanical servo fitted to 2.6 litre Petrol models as normal build. Longer front brake hoses

Instrumente

Speedometer to suit 9.00 x 16" tyres

Bonnet

Reinforced bonnet with spare wheel carrier to suit 9.00 x 16" tyre. Provision for spare wheel lock. Side fasteners for bonnet.

Tools

Extended wheel brace

		109	OHE TON		
ENGINE	SECTION 21	LITEE	A-CYLTINEP.	PETROL	MODELS.

PLATE REF. 1 2 3 4	DESCRIPTION		REMARKS		
ENGINE ASSEMBLY, 8	1 Compression ratio	 607308N	Engine	suffix 'A'	onwards

109 ONE TON MANIFOLD SECTION, 21 LITRE, 4-CYLINDER PETROL MODELS

Plate Ref.	1	2	3	4	Description	Qty.Part No. Remarks				
	Ad	apt	or,	inlet	manifold to servo pipe	1	90513171	Not part of en	gine assembly	
	A1	1 0	the	r item	s as listed in main parts cat	alogue				

109 ONE TON FLYWHEEL AND CLUTCH SECTION, 23 LITRE, 4-CYLINDER PETROL MODELS

Plate Ref.	1 2	3	4	Description	Qty	.Part No.	Remarks
	Cluto	h p	OVER, 9 late co package		1 1 1	GCC112 GCP129 605997	Not part of engine assembly

All other items as listed in main parts catalogue

109 ONE TON CLUTCH WITHDRAWAL MECHANISM

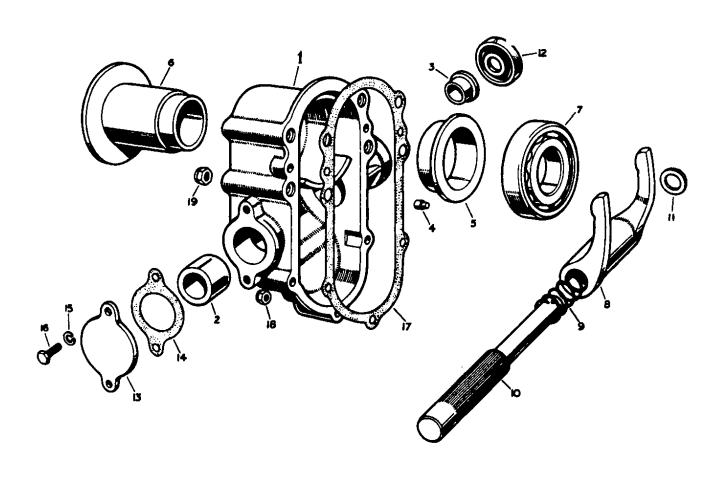


PLATE				
REF.	1 2 3 4 DESCRIPTI	ON	QTY. PART No.	REMARKS
1	CLUTCH WITHDRAWAL RACE HOUSING	- ·	1 528707	For goodbox with cooled
	CLUTCH WITHDRAWAL RACE HOUSING	a ASSEMBEL	1 591205	For gearbox with sealed clutch withdrawal unit
2	Bush for cross-shaft, large		1 214793	
3	Bush for cross-shaft, small		2 214794	
4	Dowel locating housing		2 213700	
5	Bush for withdrawal race slo	eeve	1 231075	
	Bush for withdrawal race slo	ee ve	1 591202	For gearbox with sealed
	Oil seal for bush		1 594224	_clutch withdrawal unit
6	Clutch withdrawal sleeve		1 231074	
	Clutch withdrawal race sleeve	assembly	1 591204	For gearbox with sealed
	Oil seal for sleeve	•	1 219768	clutch withdrawal unit
	Retaining bush for sleeve		1 265969	J
7	Withdrawal race thrust bearing	g	1 GHB130	
	Withdrawal race thrust bearing	g	1 268053	For gearbox with sealed
		_		clutch withdrawal unit
8	Operating fork for clutch		1 264807	
9	Spring for operating fork		.1 264806	
10	Cross-shaft for clutch operat	ion	1 231943	
11	Thrust washer for cross-shaft		1 213660	
12	Oil seal for cross-shaft		1 9021478	37
13	Cover plate for cross-shaft		1 213661	
14	Joint washer for cover plate		1 9021366	52
15	Spring washer) Fixing cover	2 GHF331	
) plate or oil seal		
16	Set bolt (1" Whit x 21/32")) housing	2 9021559	93
17	Joint washer for clutch withd	rawal housing	1 528697	
18	Self-locking nut (¾" BSF)) Fixing	3 251320	
	•) withdrawal housing		
19	Self-locking nut (5/16" BSF)) to bell housing	4 251321	

	109 0	ne ton	
CLUTCH	SLAVE	CYLINDER	SECTION

GROUP	N				CLUTCH SLAV	E CALINDER	SECTION		
PLATE									
REF.	1	2	3	4	DESCRIPTION		QTY. PART No.	REMARKS	


Support bracket for clutch slave cylinder

1 561985* 4-cylinder models


ALL OTHER ITEMS AS LISTED IN MAIN PARTS CATALOGUE

* NO LONGER SERVICED


109 ONE TON GEARBOX, MAIN CASING

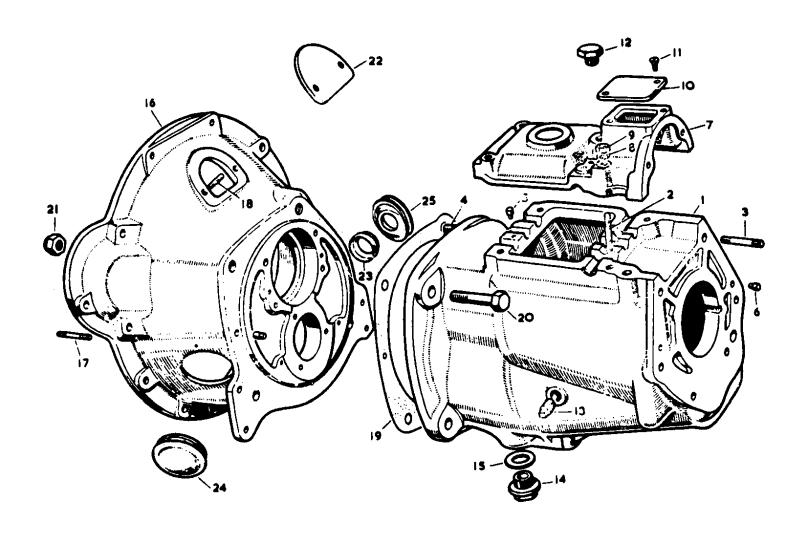

PLAT	· · · · · · · · · · · · · · · · · · ·			
REF.	1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS
	GEARBOX COMPLETE ASSEMBLY	1	COZODON	21 litre Petrol
		1		2.6 litre Petrol
,	GEARBOX COMPLETE ASSEMBLY]		2.0 litre retroi
ו	GEARBOX CASING ASSEMBLY]		
2	Stud for top cover	2	3319	
	Set bolt for top cover and gear change plate,	_	FC1404	
	front	2	561484	
•	Stud, long)For transfer	2	55778	
3	Stud, short) casing	2		
	Stud for transfer casing	וַ		
4	Stud for bell housing	1		
5	Dowel locating top cover	2		
ŕ	Dowel locating transfer casing	2	5563K	N.A
7	Top cover for gearbox	1	OUT 222	Not sumplied separately
8	Spring washer)Fixing	2		
9	Nut (3" BSF))top cover	2		
10	Inspection cover plate for selectors	1	5843	
11	Set screw (}" Whit x 7/16") fixing cover	_	50046	
3.0	plate		52246	
12	Plug for retaining spring	1		
13	Oil level and filler plug. 1" BSP	Ţ	3292	
14	Drain plug for gearbox	Ţ	540870	
15	Washer for plug]		
3.0	BELL HOUSING ASSEMBLY	1		2) litre Petrol
16	BELL HOUSING ASSEMBLY		556044	2.6 litre Petrol
17	Stud for withdrawal race housing	_	269413	
19	Joint washer, bell housing to gearbox	1		
20	Fitting bolt (3" BSF x 2"))Fixing gearbox	_	248720	
21	Self-locking nut (%" BSF)) casing to bell)housing	a	251324	
22	Top cover for bell housing	1	512237	
	Rubber seal for top cover		512238	
	Spring washer)Fixing top	2	GHF 331	
	Set bolt (}" Whit x 21/32")cover to bell)housing	2	90215593	
	Grommet for bell housing shaft.	1	553262	
	Plain washer) Fixing gearbox		WB110061	
	Nut (3" UNF)) to engine		GHF 202	
	Gearbox gasket kit	12	600603	
	dear box gasket kit		000003	

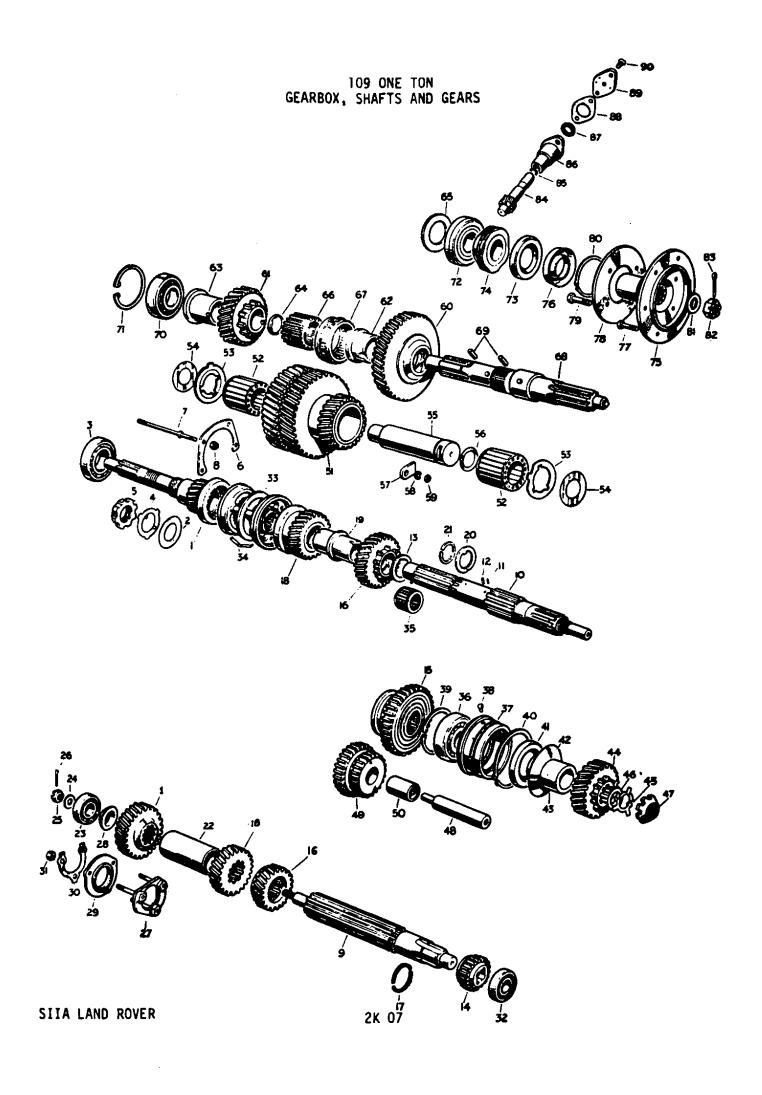


REF.	1 2 3 4	DESCRIPTION	am	. PART No.	REMARKS
ì	Primary pinion	and constant gear	1	542231	
	• .	and constant gear	i	4040 <u>9</u> 9	For gearbox with sealed clutch withdrawal unit
2	Shield for p	rimary pinion	1	RTC 1954	
3		or primary pinion	i	55714	
4		Fixing bearing	i	RTC1953	
5	•	to pinion	i	213416	
	Retaining plat	e for primary pinion bearing (5/16" BSF x 4") fixing	2	556379	
	ret	aining plate to bell housing	4	556147	
Q	Layshaft		1	556040	
10	Mainshaft		1	521851	
11		ar thrust washer	1	6405	
12		aft distance sleeve	1	RTC1979	
	Thrust washer		Ţ	267572)
13	Thrust washer		1	267573) As required
	Thrust washer		1	267574)
	Thrust washer		1	267575)
	1st sneed lays		1	511189	
15	1st speed main	snatt gear	1	511205	
		haft and mainshaft gear	ļ	600916	
18 19		haft and mainshaft gear	Ļ	245767	
19		e for mainshaft	1	571218	1
20	Thrust washer		, j	RTC1962) do magnificad
20	Thrust washer		<u> </u>	50702	As required
	Thrust washer Thrust washer		1	50703	₹"
21		•	1	231737 RTC1957	,
27	Sleeve for lay	xing 2nd and 3rd mainshaft gears	· [263878	
	Bearing for la		1	529707	
	Plain washer)	j	528692	
	Slotted nut) Fixing bearing to layshaft	i	528691	
	Split pin) Traing bearing to tayonare	i	2756	
27	Bearing plate	for lavshaft	i	528F85	
	Distance piece		i	528720	1
28	Distance piece		i	528721) As required
	Distance piece		j	529722) //2 / 2//4// 20
29		e for layshaft front bearing	i	528690	•
30	Lock washer) Fixing cap and bearing	i	528683	
31	Nut (5/16" BSF		3	NT60505	1
32	Bearing for la	yshaft, rear	ĺ	55715	
33	Synchronising	clutch	1	FRC1758	

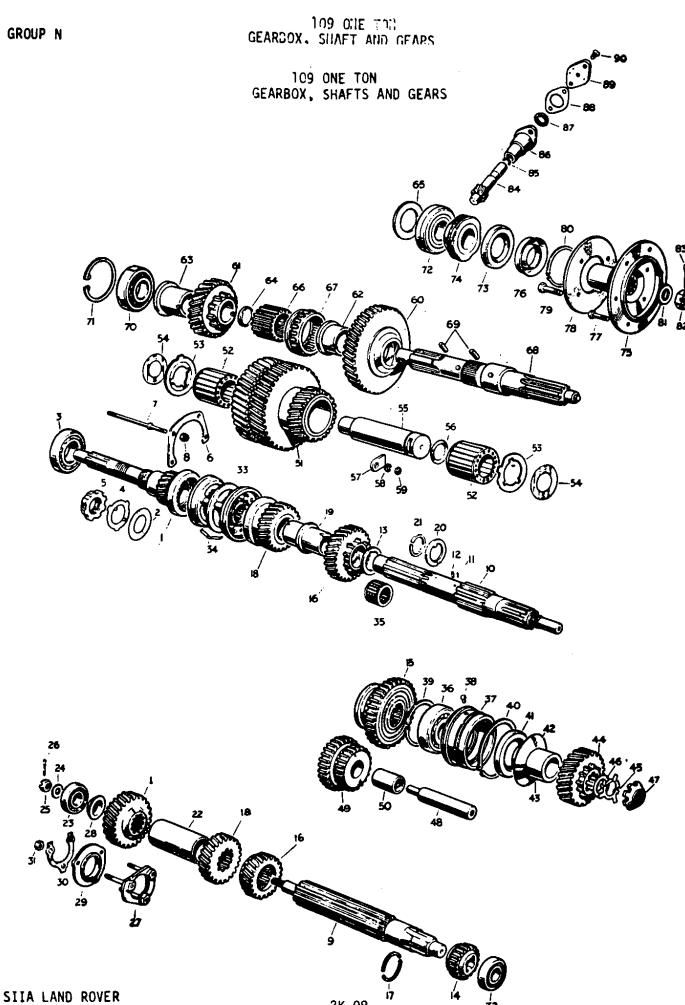

2K 08


PLA1		4	DESCRIPTION		a [,]	IY. PART No.	REMARKS
34			ing for clutch		3	RTC1956	
35			ng for mainshaft		1	6397	
36	Ball bea	aring	for mainshaft		1	1645	
37	Housing	for	mainshaft h earing, rear		1		
	'Loctite	e' co	mpound Grade AVV for housing		1		
39			ring to housing		1	9960	
40			sing to casing			RTC1984	
41	Oil seal	l for	rear of mainshaft		1	236305	
42	Oil thro	ower	for mainshaft		1		
43	Distance	e pie	ce, rear of mainshaft		1		
44	Mainshat	ft ge	ar for transfer box		1		
45	Lock was	sher)		1		
46	Shim was	sher) Fixing gear to mainshaft		1	521636	
47	Special	nut)		1	521633	
48	Shaft fo	or re	verse gear		1		
49	Reverse	whee	l assembly		1	561960	
50	Bush 1	for r	everse wheel		1	561954	
51					1	539328	
52	Roller b	ceari.	ng for intermediate gear		2	599369	
53	Thrust v	vashe	r for intermediate gear		2	521328	
54	Shim for	r int	ermediate gear	As	reqd		
55	Shaft fo	or in	termediate gear		1	594195	
56	Sealing	ring	for intermediate shaft		1	532323	
57	Retainir	ng pl	ate for shaft		1	217484	
58			r) Fixing plate		1	GHF333	
59	Nut (3"	BSF)) to casing		1	2827	
60	Low gear				1	576201	
61	High gea				1		
62			gear wheel		1		
63	Bush for	r hig	h gear wheel			90515855	
64	Thrust :	vashe	r for high gear wheel		1		
			r for low gear wheel			515853	
			for transfer change speed		1		
67			for transfer change speed]		
68			, rear drive		1	515351	
69			tput shaft		_	RTC1979	
70			output shaft, front		1	GHB159	
71	•		ng bearing to case		1	217330	
72			output shaft, rear			90217512	
73			output shaft		1	FRC1780	
74			worm complete			540004	
75			utput shaft, rear drive			236630	
76			r flange		1		
77			for brake drum		6		
78			ange for brake drum bolts		1		
79	ritting	סטו ל	for propeller shaft		4	90512701	

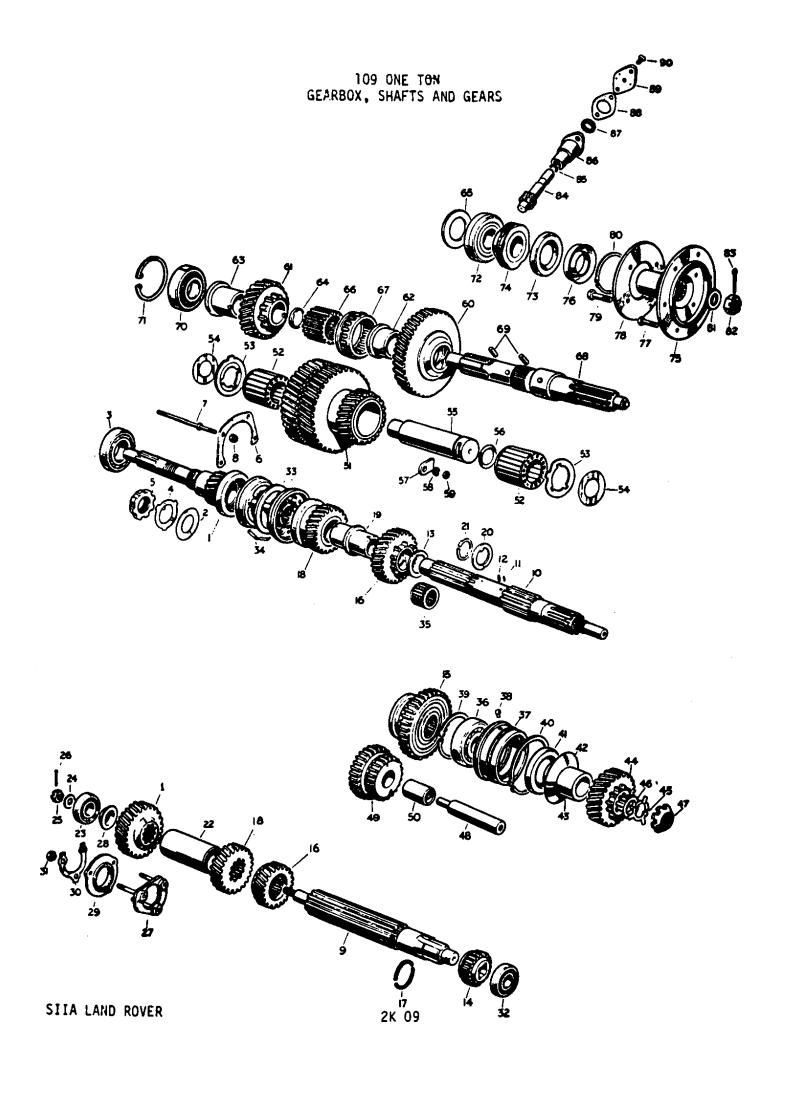

109 ONE TON GEARBOX, SHAFTS AND GEAPS


GROUP N

PLA REF.		QTY. PART No. REMARKS
80	Circlip retaining bolts and flange	1 217546
81	Plain washer)	1 3300
82	Slotted nut) Fixing flange to output shaft	1 3259
83	Split pin)	1 PS608101
84	Speedometer minion	1 FRC1536
85	Sealing ring for sleeve	1 267828
86	Sleeve pinion	1 268791
87	Oil seal for pinion	1 211502
88	Joint washer for sleeve	1 267782
89	Retaining plate for pinion	1 232565
90		2 2529

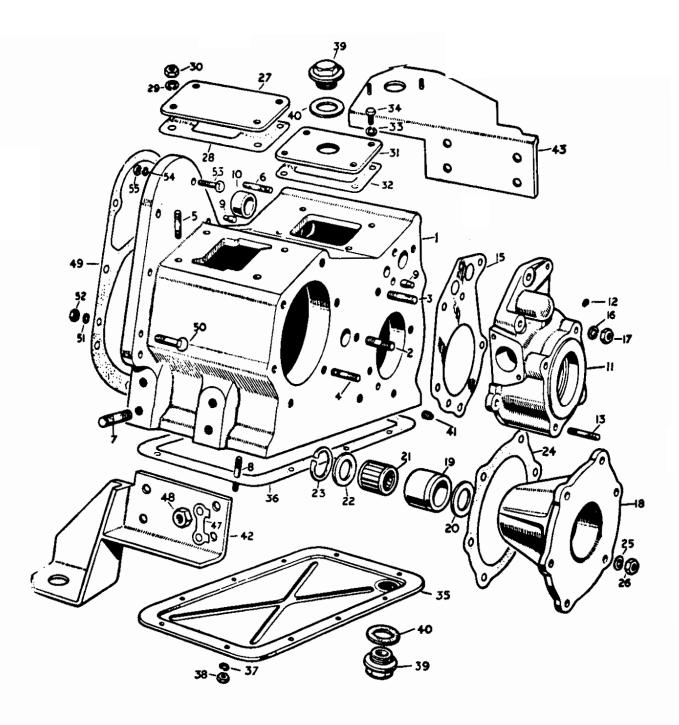

D) 4.						
PLA1		DESCRIPTION		<u> </u>	Y. PART No.	REMARKS
1	TRANSFER BOX CAS	SING ASSEMBLY		า	539787	
2		rmediate shaft		j	217778	
3	-	dometer housing, short		5	3650	
•		dometer housing, long		ĭ	237251	
4	Stud for mains			6	3650	
5	Stud for top			Ā	217978	
5		For transfer		ī	232497	
۴		shaft housing		6	3200	
7	Stud for engi			8	90217976	
8	Stud for engin			_	90212104	
Ģ				4		
וו		Speedometer housing			55636	
' '		Y FOR SPEEDOMETER PINION		1	527318	
10	Insert for pir			1	232846	
13		smission brake		4	217977	
	Shim .003")			read		
	Shim .005")			•	217622	
		pinion housing			217623	
	Shim .015")				217620	
-	Shim .040")		AS	_	549200	
76) Fixing housing		6	-	
17	Nut (#" BSF)) to transfer box		6	2827	
		E ASSEMBLY, REAR MAINSHAFT		_,		
	BEARING			1	521857	
18		BLY, REAR MAINSHAFT BEARING		Ī	5300KK	
19	Bush for ho			Ĭ.	521855	
20	Retaining plat]	521856	
21	Bearing for m			Ţ	521853	
22	Retaining plat			1	521855	
23	Circlio fixing			Ţ		
24		r bearing housing		1	622047	
25) Fixing housing to		б	GHF333	
25	Nut (≹"_BSF)			6	2827	
27	Cover plate for			1	217970	
28	Joint washer for			1	230140	
29	Soring washer) Fixing cover plate		4	GHF 332	
	Nut (5/16" BSF)) to transfer box		4	2828	
		transfer gear change		1	528235	
	Joint washer for			1	219995	
	Spring washer			4	GHF331	
	Set bolt (}" Wh			4	90215758	3
		ttom, for transfer box		1	533040	
	Joint washer for			1	FRC1516	
37	Spring washer	· ·			GHF 331	
	Nut (¼" BSF)) cover		10	3819	
39	Drain plug for			1	235592	
40	Joint washer for			1	515599	
41	Oil level and f	iller pluq. 🕍 BSP		1	3292	

109 ONE TON GEARBOX, TRANSFER CASING

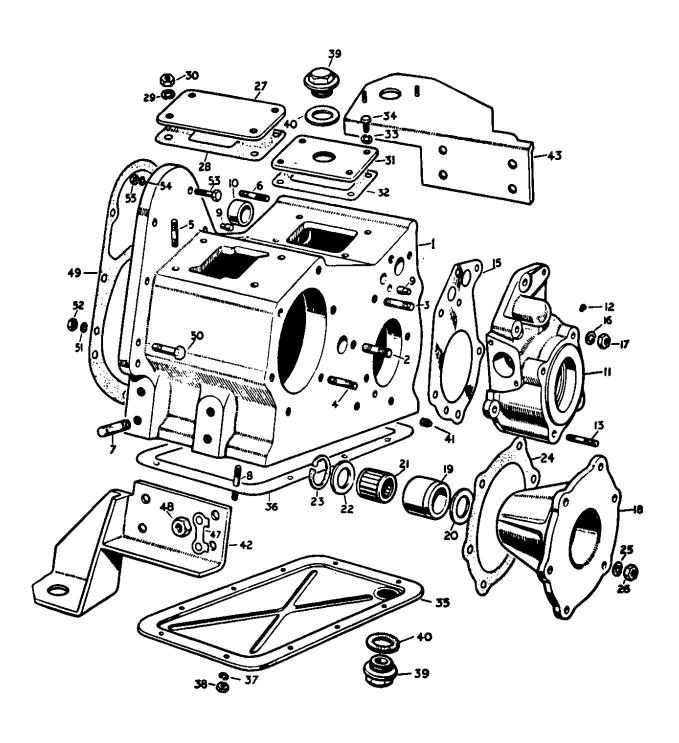


109 ONE TON GEARBOX, TRANSFER CASING


GROUP N

PLA1	Έ				
REF.	1 2 3 4 DESCRIP	TION	<u>ar</u>	Y. PART No.	REMARKS
42	Doom mounting foot 11		,	272105	
42	Rear mounting foot, LH		1	272185	
43	Rear mounting foot, RU		1	531104	
47	Locking plate) Fixing m	ounting feet	4	241839	
48	Nut (7/16" BSF)) to trans	fer box	8	2096	
49	Joint washer, transfer box t	o gearbox	1	622046	
50	Bolt (a" BSF x la" long))	•	1	250544	
51	Spring washer)	Fixing transfer	3	GHF 333	
52	Nut (å" BSF)	box to gearbox	3	2827	
	Self-locking nut (3" 3SF))	•	3	50526	
53	Bolt (5/16" BSF x 1.29/32")) Fixing	2	215170	
54	Spring washer) transfer box	2	GHF332	
55	Nut (5/16" BSF)) to gearbox) top cover	2	2823	


109 ONE TON FRONT OUTPUT SHAFT HOUSING

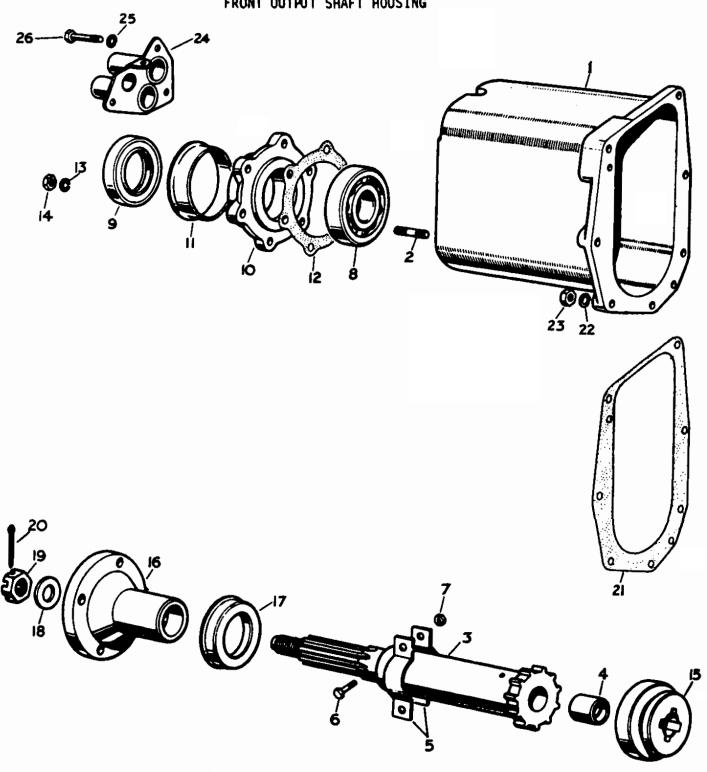

PLAT	~	OTY	. PART No. REMAIKS
]	OUTPUT SHAFT HOUSING ASSEMBLY	1	258849
2	Stud for oil seal retainer	6	217978
3	FRONT OUTPUT SHAFT ASSEMBLY]	243611
4	Bush for shaft	1	8566
5	Oil thrower for output shaft	2	243873
6	Bolt (2BA x ½")) Fixing oil thrower to	2	234603
7	Self-locking nut (2BA)) front output shaft	2	251335
8	Bearing for front output shaft	1	217325
9	Oil seal for shaft	1	FRC1780
10	Retainer for oil seal	1	236541
11	Mudshield for retainer	1	236548
12	Joint washer for retainer	1	FRC1511
13	Spring washer) Fixing	6	GHF 332
14	Nut (5/16" BSF)) retainer	6	2828
15	Locking dog, four-wheel drive	1	233241
	Flange for transfer shaft	1	539993
17	Mudshield for flange	1	236074
18	Plain washer)	1	3300
19	Slotted nut) Fixing flange to transfer shaft	1	3259
20	Split pin)	1	PS608101
21	Joint washer for transfer housing	3	622048
22	Spring washer) Fixing housing to	7	GHF332
23	Nut (5/16" BSF)) transfer box	7	2828
24	Dust cover plate for selector shafts	1	512760
	Felt seal in plate for adjusting screw	1	512791
25	Spring washer) Fixing dust	2	GHF331
26	Set bolt (½" Whit x 7/16") cover plate	1	90215769
	Set bolt $(\frac{1}{4}$ Whit $x \stackrel{1}{*}$) to housing	2	90215758
	· · · · · · · · · · · · · · · · · · ·		

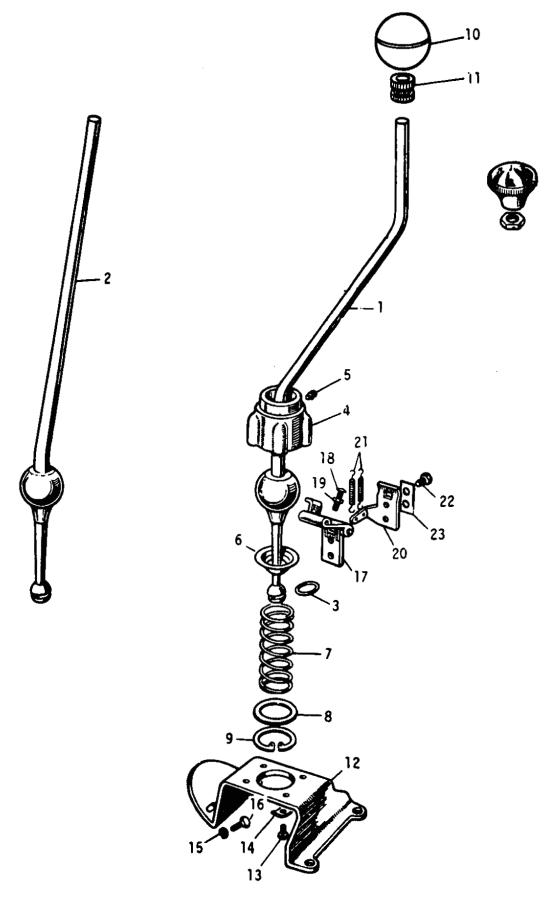

PLA	~			
REF.	1 2 3 4 DESCRIPTION	QT	Y. PART No.	REMARKS
	MAIN GEAR-CHANGE LEVER ASSEMBLY	1	FRC1836*	RHStg) 4-cylinder
	MAIN GEAR-CHANGE LEVER ASSEMBLY	i	FRC1837*	
	MAIN GEAR-CHANGE LEVER ASSEMBLY	1	622006	RHStg) 6 cylinder
	MAIN GEAR-CHANGE LEVER ASSEMBLY	1	622007*	LHStg) models
1	Gear-change lever	1	FRC1454	RHStg) 4 cylinder
	Gear-change lever	1	FRC1455	LHStg) models
2	Gear-change lever]	FRC1832	RHStg) 6 cylinder
	Gear-change lever	1	FRC1833	LHStg) models
3	'O' ring for gear-change lever	1	540354	For early type gear-change lever
	*0' ring for gear-change lever	1	FRC1387	For late type gear-change lever
4	Housing for lever	1	219714	
5	Locating pin for lever ball	1	507447	
6	Spherical seat for gear lever	1	219721	
7	Retaining spring for lever	1	219723	
8	Retaining plate for spring	1	219722	
9	Circlip fixing retaining plate	1	219797	
	Knob for lever	1	217735) Screw-on type, for early
	Locknut (3" BSF) for knob	1	3905*) type gear-change lever
10	Knob for lever	1	57F31F) Press-on type for late
11	Star tolerance ring	1	571661) type gear-change lever
12	Mounting plate for gear change	1	232608	
13	Set bolt (5/16" Whit x 13/16") Fixing housing to	_	215F47	
74	Locker)mounting plate	۵	2409	
15	Spring washer) Fixing mounting	2	GHF331	
16	Set bolt (1" Whit x 21/32") plate to bell housing	1	90215593	
17 18	Reverse stop hinge complete	;	502202 76653	
19	Adjusting screw) For Locknut (2BA)) hinge	1	2247	
20	Locknut (2BA)) hinge Bracket for reverse stop spring	i	502205	
21	Spring for reverse stop		514650	
22	Set bolt () BSF x)") Fixing hinge and	2		
) bracket to reverse	_		
23	Locker) selector shaft	1	FRC24F9	
			*	NO LONGER SERVICED

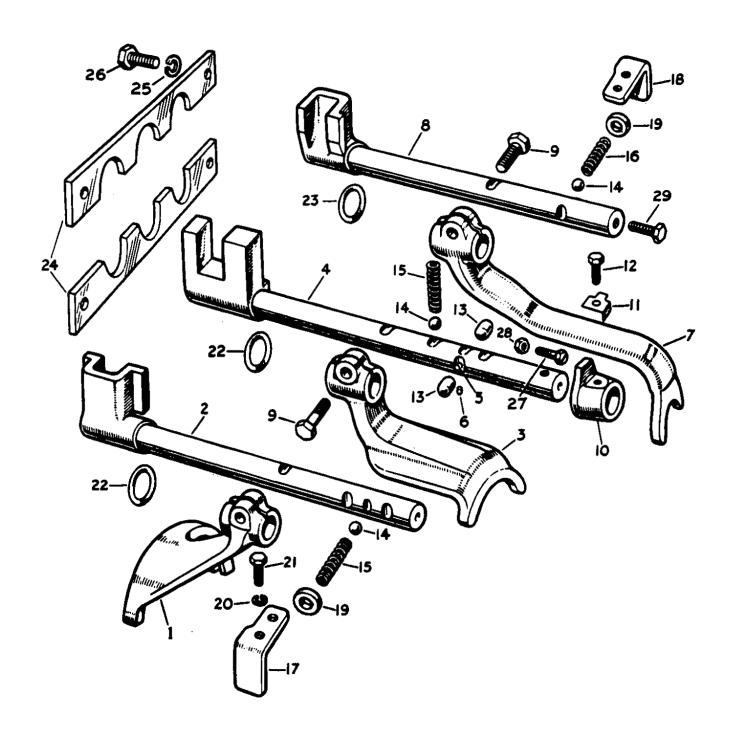


109 ONE TON
FOUR WHEEL DRIVE SELECTORS AND TRANSFER GEAR LEVER 2K 15 SIIA LAND ROVER


PLA REF		QTY. PART No.	REMARKS	
1	Selector shaft, four wheel drive	1 233416		
	Selector fork complete, four wheel dirve	1 622155		
	Bush for selector fork	2 90217521	For early	type selector
-	701 701 SETECTOR 101K	2 30217021		replaceable
4	Spring for selector fork	2 233449		· ·
5	Block for selector shaft	1 233406		
6	Special screw) Fixing block	1 233409		
7	Castel nut (5/16" BSF)) to selector	1 251601		
8	Split pin) shaft	1 2422		
	Spring spacer for selector shaft	1 522308		
9	Selector shaft, transfer gear change	1 522303		
10	Sealing ring for transfer gear change shaft	1 515572		
	Selector fork, transfer gear change	1 522334		
12	Set bolt (5/16" BSF x 1") Fixing fork	1 237160		
13	Distance tube for transfer selector shaft	1 233438		
14 15	Locating bush for selector shaft spring	1 233437		
16	Spring for gear change selector shaft	1 217445		
17	Connector, gear change to pivot shaft Block for selector shaft	1 538536 1 233406		
18	Special screw) Fixing block	1 233409		
19	Castle nut (5/16" BSF)) to selector	1 251601		
20	Split pin) shaft	1 2422		
21	Pivot shaft for selector shafts	1 549201		
22	Coupling, selector shafts to pivot	1 233407		
23	Special screw) Fixing coupling	1 549169		
24	Castle nut 5/16" BSF)) to pivot shaft	1 251601		
25	Split pin	1 2422		
26		1 GHF323		
27	Nut (BSF)) to connector	1 2827		
28	Plunger for transfer selector shaft	1 235416		
29	Spring for plunger	1 56102		
30	Plug retaining plunger	1 233441		
31	Link for selector shaft	1 539887		
	Adjusting screw for link	1 532926		
	Locknut (a UNF) for adjusting screw	1 NT606041		
32	Shakeproof washer) Fixing link to	1 77626		
33	Special nut) selector shaft	1 3764		
34 35	LEVER ASSEMBLY, FOUR WHEEL DRIVE	1 268847		
36	Bush for lever	1 230086		
37	Special bolt, h exagon head, lever to housing Locking pin, four wheel drive lever	1 540842		
38	Sealing ring for four wheel drive locking pin	1 232464 1 266992		
39	Plain washer) Fixing locking	1 2876		
40	Split pin) pin to lever	1 3958		
41	Selector rod, four wheel drive	1 571855		
42	Clevis complete for rod	1 215808		
43	Split pin for clevis	1 3958		
44	Spring for selector rod	1 561221		
45	Special bush for spring	1 234658		
46	Control knob for rod	1 232813		
47	Locknut (}" BSF) for knob and clevis	2 3819		

109 ONE TON FOUR WHEEL DRIVE SELECTORS AND TRANSFER GEAR LEVER 2K 16 SIIA LAND ROVER

PLA REF	· · -	SCRIPTION	QTY. PART No. REMARKS	
49 50 51 52 53	Transfer gear change leve Spring for transfer gear Knob for gear change leve Locknut for knob Bracket for gear change l Distance piece for bracke Bolt (5/16" UNF x 1½" lon Spring washer Nut (5/16" UNF) Bolt (5/16" UNF x 1½" lon Nut (5/16" UNF)	change lever ever t, } long g)) Fixing) bracket to) bell housing	1 576210 1 243714 1 219521 1 3764 1 219709 2 266955 2 BH605111 2 GHF332 2 GHF201 1 BH605111	


109 ONE TON FRONT AXLE AND PROPELLOR SHAFT

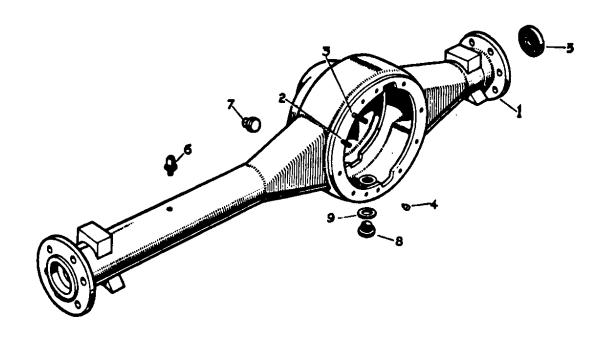

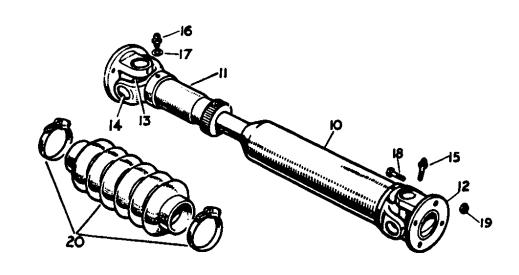

109 ONE TON FRONT AXLE AND PROPELLEP SHAFT


PLAT REF.	_	DESCRIP	PTION	an	/. PART No.	REMARKS	
1	FRONT AXLE A Front axle	SSEMBLY, 4.7 RATI SSEMBLY, 4.7 RATI casing complete (%" UNF x 1%") asher	IO, LH Stg		591314* 591315* 533570 255248 GHF333	ENV typ	e) See note at se) foot of page
5 6 7 8 9	Breather c Oil filler Drain plug	n axle casing omplete for front nlug, front, for for front axle of er for drain plug	t axle r axle ccasing casing	2 1 1 1 1	217400 515845 3294 235592 515599		
10 11 12 13 14	PROPELLER SH Splined st Splined en Flange Universal	–) propeller sha	ONT neller shaft aft	1 1 1 2 2 8		6-cylin	der models der models only
15 16 17	Grease nip Grease nip Grease nip Washer for Grease nip	ple for universa ple for universa ple for shaft sle nipple ple for shaft sle	l joint, }" BSF l joint, }" UNF meve	2 2 1 1	232557 549229 276201 232037 234532)	
) Fixing) propeller shafi ler shaft snline:	t 8	509046 509751 276484	Part of shaft	f front propeller
<u>101</u>	E: Replaceme	nt of Front Axle	Assembly, ENV ty	ype			
		axle assembly, Ri axle assembly, Li		1	FRC3399 594416) Salis	shury type
	Propel Propel 'U' bo 'U' bo Bottom Bottom Nyloc		ly, front	ting parts 1 1 3 1 1 8	591278 594361 592185 592184 598536 592177 GHF234 320903	4-cy1	vehicles: models models

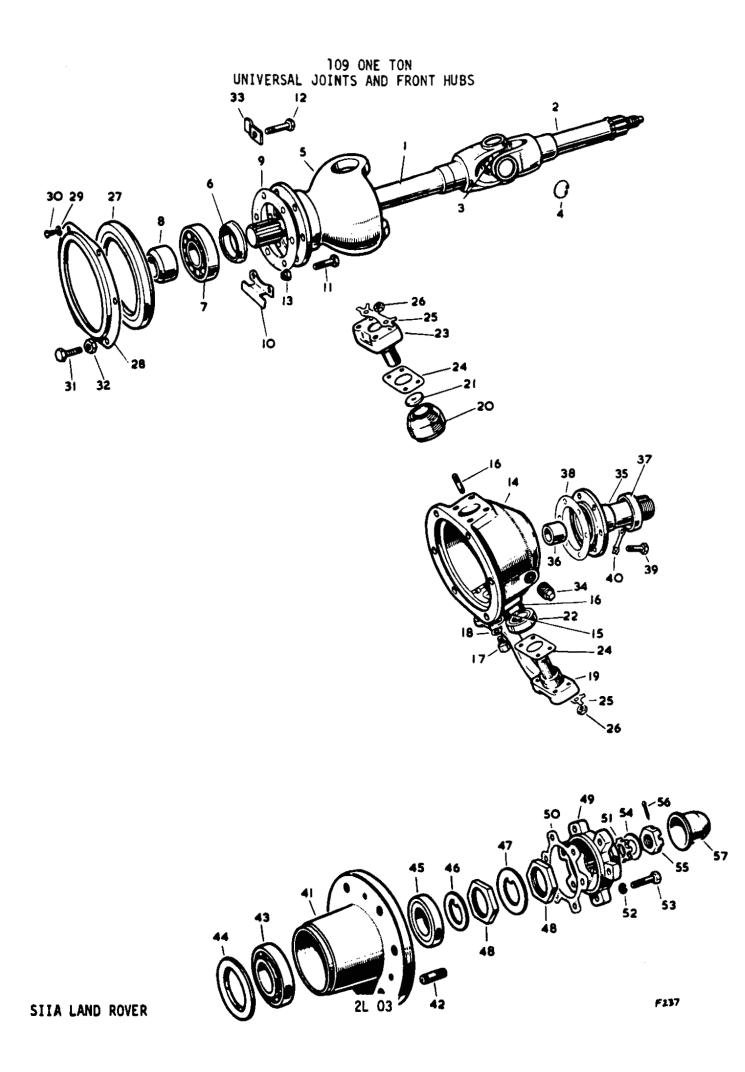

PL/ REI	ATE F. 1 2 3 4	DESCRIPTION			TY. PART No.	. 19	REMARKS
				_			
1	Half shaft complete fo			1	540972		
	Half shaft complete fo	r front axle, LH]	540973*		
3	Universal joint			2	GUJ118		
4	Circlip for universa			8	247522		
5	Housing for swivel pin			2	539741		
6	Distance piece for bea	ring		? 2	244151		
7	Bearing for half shaft			2	244150		
8	Retaining collar for b			?	90217398	3	
a	Joint washer for housi			2	GFG107		
10	Location stop for jack			1	90519206	•	
11	Bolt (2" BSF x 13")) Fixing stop and			576522		
12	Bolt (#" BSF x 1#")		t		576521		
13	Self-locking nut (}" B			12	251322		
•	HOUSING ASSEMBLY FOR S			Ţ	FRC2074		
14	HOUSING ASSEMBLY FOR S			1	FRC2075		
15		ering lever and bracket	t	4	531043		
16	Stud for steering le			4	531494		
17		x 17") for steering lev	ver		237357		
17	Drain plug for housing			2	236070		
18	Joint washer for drain			? 1	230511	nu	54.0
19	Swivel pin and steering				530988		
	Swivel pin and steering			1	530989		
	Swivel bin and steering			i	530990 530991		
	Swivel pin and steering '0' ring for steering			2	531433	Ln	Stg
20	Railko bush and housing			2	539742		
21	Thrust washer	ย		2	528702		
?2	Bearing for swivel nin	hottom		2	217268		
23	Swivel pin upper comple	-		2	576583		
2.0	Shim, .003")		As	read	530984		
24	Shim, .005") For sw	i ve1		read	530985		
_	Shim, .010") pin be		_	reqd	530986		
	Shim, .030")	g		read	530987		
25		ixing srivel pin to		8	531001		
26	Nut (7/16" BSF)) si			٦۴	594104		
27	Oil seal for swivel pi			. 2	GHS1003		
				-			

^{*} NO LONGER SERVICED


109 ONE TON UNIVERSAL JOINTS AND FRONT HUBS

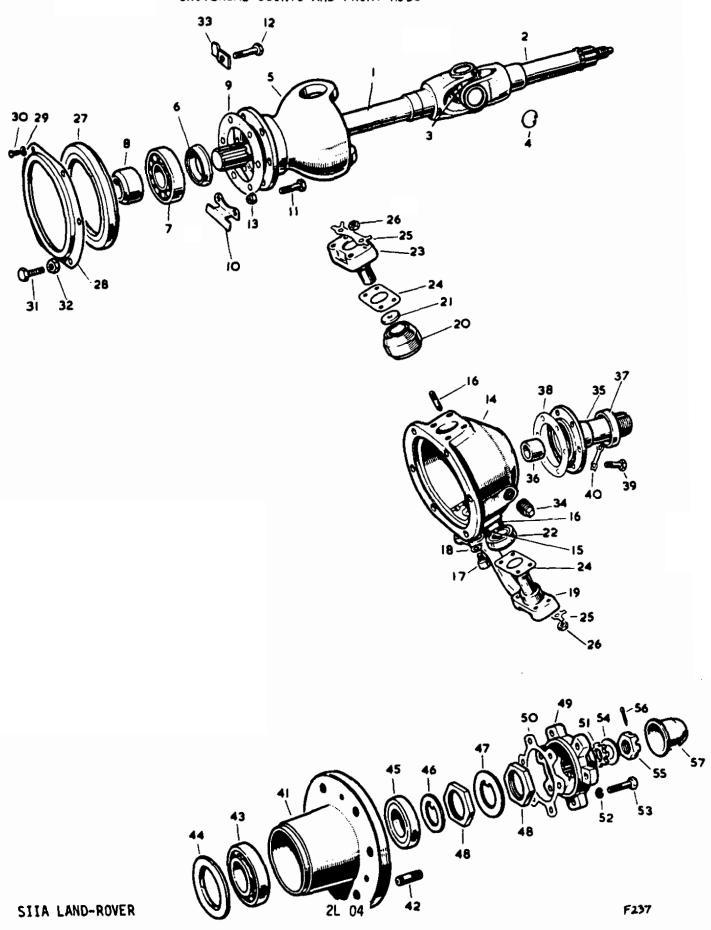

PLA	TE		·	
REF.	1 2 3 4 DESCRIPTION	a	TY. PART No.	REMARKS
		•		
	Retainer for oil seal		235958	
	Spring washer)		GHF331	
30	Set bolt (la BSF x la) Fixing	10		
	Plain washer) retainer to	10		
31	Adjustable lock stop bolt) swivel nin	2		
32	Locknut (1" BSF) for stop bolt) housing	6	381.9	
33	Lock stop plate)	2		
31	Oil filler plug for swivel pin housing	2	3202	
35	STUB AXLE ASSEMBLY	2	599827	
37	Distance biece for Inner bearing	2		
38	Joint washer, stub axle to swivel min housing	2		
39	Set holt (₹" BSF x 1")) Fixing stub axle to			
40	Locker) swivel bin housing	6		
41	FRONT HUB ASSEMBLY	2	5F1PR9)	Vehicle
	Stud for road wheel, 9/16" BSF	10	561590)	
	FRONT HUB ASSEMBLY	?	576844) Vehicle suffix
43	Stud for road wheel, 16 mm	10	576825) "H" onwards
43 44	Bearing for front huh, Inner	2	GHB162	
	Oil seal for inner bearing	2	GHS202	
45	Bearing for front hub, outer	2	GHB153	
46 47	Key washer) Locker) Fixing front hub bearing	2		
48	Locker) Fixing front hub bearing Special nut)	2	217353 90217355	
49	Driving member complete for front hub	2	571711	
50	Joint washer for driving member	7	GFG106	
51	Oil seal for stub shaft	2	549477	
	OTT SEAT TOT SCOD SHATE	ζ.	J-, J- 7 7	
52	Spring washer) Fixing driving	1 12	GHE333	
53	Set bolt (# BSF x 1.19/32") member to	12	215331	
) front hub			
	Split pin) Fixing	2	3127	
	Split ring) driving member		549474	
	Spring clip) to driving	2	549399+	
	Sintted nut) shaft.	2		
57	Hub can, front	2	219098	
	•			

^{*} NO LONGER SERVICED

109 CNE TON
REAR AXLE AND PROPELLOR SHAFT

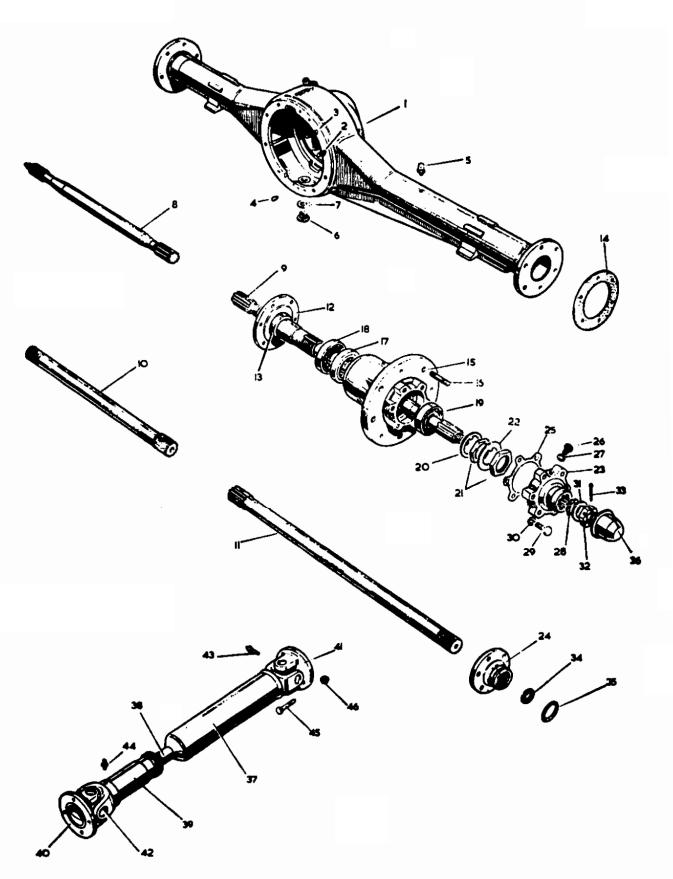


SIIA LAND ROVER

2L 05

PLAT	E 1 2 3 4	DESCRIPTION	OT	Y. PART No.	REMARKS
				-	
	REAR AXLE ASSEM	ABLY 4.7 RATIO	1	501316*	ENV type. See note at
1	Doan avla cas	sing complete	1	533567	foot of page 2L06
3		I' UNF x ll")) Fixing differentia			
J	Spring wash			GHF 333	
	Shi Hili wasi) casing	10	GH 333	
	Oil filler n	lug for rear axle casing	1	3294	
5		plete for rear axle	-	515845	
6		or rear axle casing		235592	
7		for drain plug	i	515599	
10	Rear axle sha		, i	533579	
ii	Rear axle sh		i		
12	Rear hub bear			599828	
13		ce for bearing sleeve		599698	
14		, bearing sleeve to axle casing		GFG103	
15	REAR HUB ASSI			561889) Chassis suffix 'G'
16		pad wheel, 9/16" BSF		561590	
10	REAR HUB ASSI			576844) From chassis suffix
		oad wheel, 16mm		576825	
17	Hub bearing,			GHB162) II Oliwaras
18		inner bearing		GHS202	
19	Hub bearing,			GHB163	
20	Key washer			217352	
21	Special nut) huh		9021735	ς
22	Locker) bearing		217353	•
24		er for rear hub	2		
25		for driving member		GFG106	
29		BSF x 1.19/32")) Fixing driving		215331	
30	Spring washer	r) member to rear			
34		Fixing axle shaft to		549473	
35		driving member		GHS1007	
36	Hub cap, read		2	219098	
•	nub cupy real	•	-	21050	
37	PROPELLER SHAF	T ASSEMBLY, REAR	1	533639	4-cylinder models
•		T ASSEMBLY, REAR	1	591279	6-cylinder models
38		shaft for promeller shaft	ì	601790	
39	Splined end) For propeller	i	8407	
40	Flange) shaft	2	600656	
41	Universal jo			GUJ117	
42	Circlip for		8	242522	
43		e for universal joint, 1" BSF	2) Alternatives
		e for universal joint, 1" UNF	2		5
	-	- ·			•

109 ONE TON
REAR AXLE AND PROPELLOR SHAFT

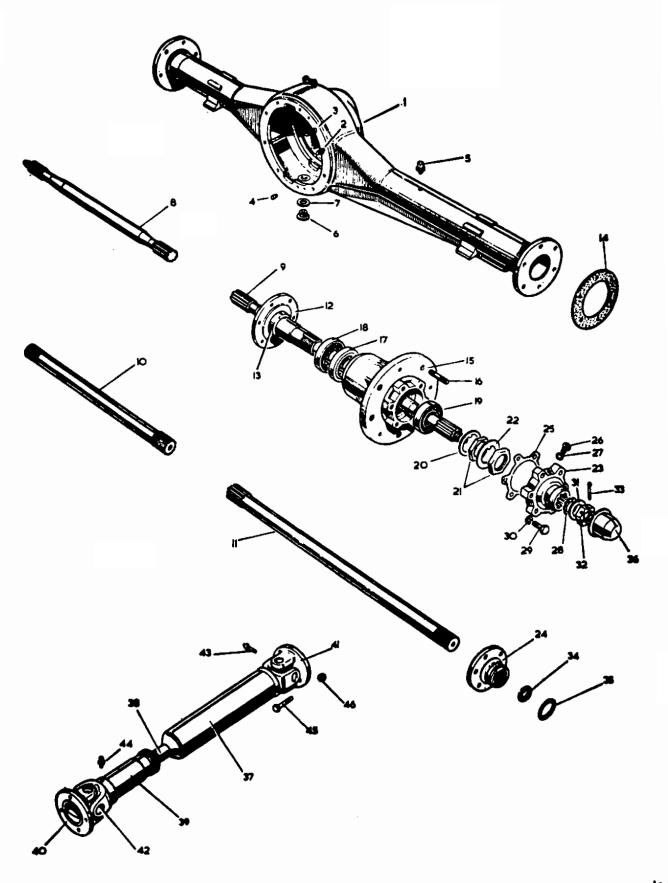

109 ONE TON REAR AXLE AND PROPELLER SHAFT


PLAT REF.	E 1 2 3	4 DESCR	RIPTION		Y. PART No	. REMARKS		
44	Grease	nipple for shaft s	ileeve	1	234532	Straight	type))
		niprle for shaft s	leeve	1	276201) Angled	j.	Alternatives
	Washer	for nipole		1	232037) type)	
45	Bolt (≱"	UNF x 1½"))	Fixing	8	509045	P ·	•	
		king nut (à UNF))	propeller shaft	8	GKF273			

NOTE: Replacement of Rear Axle Assembly, ENV type

GROUP N

Propeller shaft assembly, rear 1 591283 6 cylinder models 'U' Bolt) Fixing 4 592183 Bottom plate) rear springs 2 592179 Nyloc nut 12mm) to axle B GHF234	Use rear axle assembly	1	FRC2126 Salisbury tyne
Rebound check strap 2 598598 Brake pipe RH 1 592375	Proneller shaft assembly, rear Propeller shaft assembly, rear 'U' Bolt	1 1 4 2 8	591279 4-cylinder models 591283 6 cylinder models 592183 592179 GHF234 598508


109 ONE TON
DIFFERENTIAL, FRONT AND REAR, ENV-TYPE AXLE

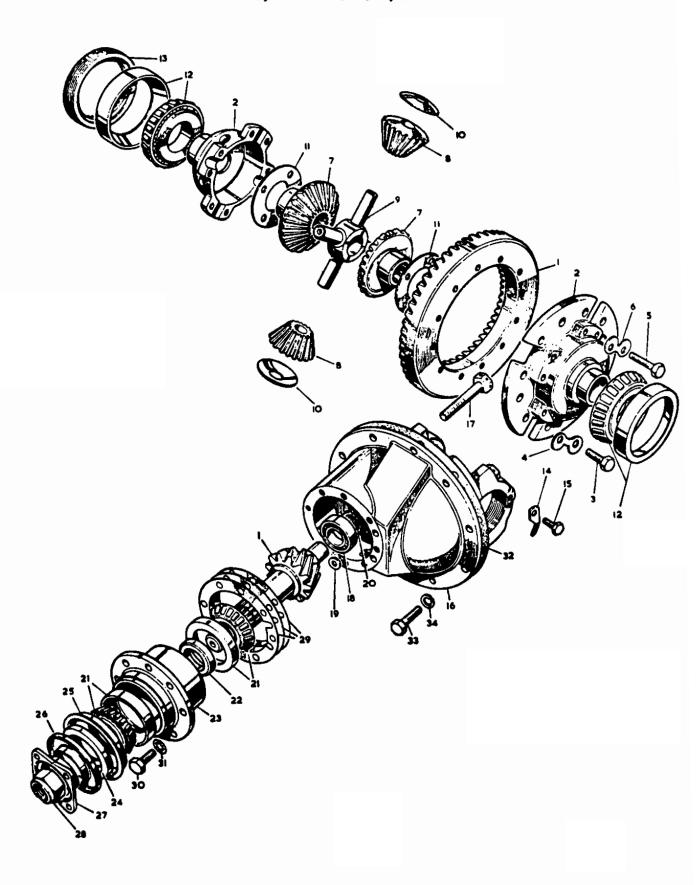

PLA REF.	-	Q	TY. PART No.	REMARKS
	DIFFERENTIAL ASSEMBLY, 4.7 RATIO	2	533568	
1	Crown wheel and bevel pinion	2	549493	
2	Differential casing	2	600901	
3	Set bolt (7/16" UNF x 1")) Fixing crown wheel		SH607081	
4	Locking plate) to differential	12	5494KO*	
•) casing	1 4	.,,-,-0	
5	Set bolt (7/16" UNF x 13")) Fixing	16	BH607141	
6	Locking plate, double type) differential		549464	
) casing halves) together			
7	Differential wheel	4	549461	
8	Differential cinion	8	549462	
9	Spindle for pinion	2	5490F3	
10	Spherical differential minion washer	8	549465	
11	Differential wheel washer	4	549465	
12	Taner roller bearings for differential	4	549457	
13	Differential bearing adjuster	4	549411*	
14	Locking plate) For hearing	4	540447*	
15	Set bolt (}" UNC x }")) adjuster		SH504041	
16	Nose piece and bearing can complete	2	600902*	
17	Special set bolt fixing bearing cap		549409	
18	Bearing for bevel pirion, nose end	2	549417	
19	Retaining washer) Fixing bearing	2	2228	
~ ~	Alum rivet (}" dia x 1}")) to nose piece	2	4560	
20	Circlip) and hevel pinion	?	549419	
21	Bearing for bevel pinion	4	549420	
	Spacer, .370") As r		549425	
22	Spacer, .373") As r		549427	
22	Spacer, .376") As r		549429	
	Spacer, .379") For As r	_	549437	
	Spacer, .382") ninion As r		549433	
	Spacer, .385") shaft As r		510435	
	Spacer, .388") bearing As r		549437	
	Spacer, .391") adjustment As r Spacer, .394") As r		549439	
		•	549441	
	· · · · · · · · · · · · · · · · · ·		549443	
	Snacer, .400") As r	eqa	549445	

^{*} NO LONGER SERVICED

109 ONE TON DIFFERENTIAL, FRONT AND REAR, ENV-TYPE AXLE

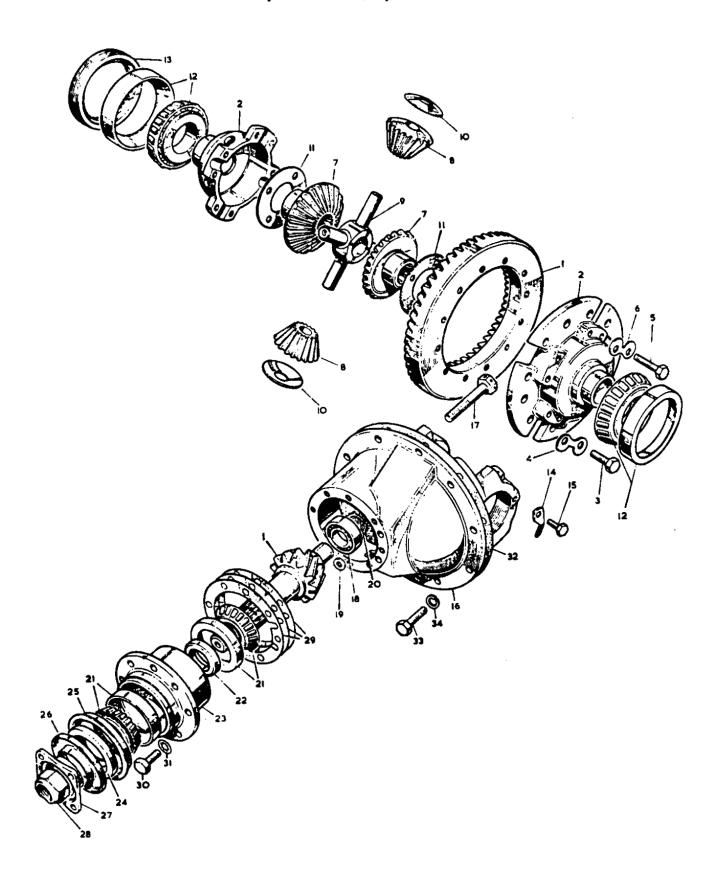

109 ONE TON
DIFFERENTIAL, FRONT AND REAR, ENV-TYPE AXLE

PLA1 REF.	_	a	TY. PART No.	REMARKS
23	Bevel minion housing committee	2	549413	
24	Oil seal for pinion	2	549412	
25	Mudshield for bevel pinion bear	ing housing 2	549454	
26	Mudshield for driving flange	2	549453*	
27	Driving flange for bevel pinion	2	549421*	
28	Special nut (%" UNF), fixing dr	iving flange to		•
		bevel pinion 2	549448*	
	Shim, .002") For differential	As read	549414*	
29	Shim, .003") bearing housing			
	Shim, .010") adjustment	As read		
30	Set bolt (* UNF x 1)) Fixing		255248	
31		ng to nose 16	GHF323	
32	Joint washer, differential to axle	e casing 2	533645*	
33	Set bolt (}" UNF x 1%")) Fixing (255248	
34	Spring washer) to axle		GHF333	

^{*} NO LONGER SERVICED


CHASSIS FRAME CHASSIS CHASSIS	ATE . 1 2 3 4	DESCRIPTION		QI	ry. PART No.	REMARKS
CHASSIS FRAME Crossmember No.3 For chassis 1 90577407 4-cylinder models 1 50578007 4 -cylinder 1 50578007 4 -cylinder 1 50578007 1 5058007 1				1	592472*	4-cylinder models
Crossmember No.3	CHASSIS FRAME			1	592543*	6-cylinder models
Crossmember No.4) frame 1 543946 models Crossmember No.4) For chassis frame 1 592594 Melded type Crossmember No.4) For chassis frame 1 592594 Melded type Crossmember No.4) For chassis frame 1 90574017 Rolted type Crossmember No.4) Fixing crossmember 4 BH605281 Self-locking nut (a" UNF) to frame 4 GH6273 ROAD SPRING COMPLETE, FRONT, DRIVER'S 1 276034 ROAD SPRING COMPLETE, FRONT, PASSENGER'S 1 256627 Main leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 253173 Shush 4 548205 Dowel and nut (5/16" UNF) 2 255461 Dowel, 8 mm 2 RTC1920 Alternatives Self-locking nut, 8 mm 2 GHF232 Shackle plate, lapin 2 537780 Shackle plate, tapped 7 537735 Shackle plate, lapin 2 537780 Shim .003" Fixing As read 504213 Shim .003" Fixing As read 504213 Shim .003" Shackle 2 Me60081 Nut (\frac{3}{2}" UNF x 5") Diece to 2 BH608401 Spring washer Shackle 2 Me60081 Nut (\frac{3}{2}" UNF x 5") Diece to 2 BH608401 Spring washer Shackle 2 Me60081 Nut (\frac{3}{2}" UNF x 5") Diece to 2 SH60840 Setf-locking nut (\frac{3}{2}" UNF) To axle 2 53774 Self-locking nut (\frac{3}{2}" UNF) To axle 2 53774 Self-locking nut, 10 mm 2 RTC1921 Sham leaf 2 537734 Second leaf 2 537734 Second leaf 2 537734 Shackle plate, plain 2 537738 Shim .003" Fixing As read 504214 Shim .003" Fixing As read 504214 Shim .003" Fixing As read 504214 Shim .003" Fixing As read 504213 Shim .003" Fixing As read 504213 Shim .003" Fixing As read 504213 Shim .003" Fixing As read 504214 Shim .003" Fixing As read 504213 Shim .003" Fixing	Crossmemher 1	lo.3) For chassis		1	90577407) 4-cvlinder
Crossmember No.4) For chassis frame	Crossmember N	lo.4) frame		1		
Crossmember No.4) For chassis frame 1 9054017 Rolted type 2 9054017 Rolted type 3 9054017 Rolted	Crossmember M	•		1		
Crossmember No.4 1 905F0017 Rolted type 6-cylind Bolt ()* UNF x 3)* Fixing crossnember 4 BH606231 BH606231		•		ĺ		,
Bolt (3" UNF x 33")				i		
ROAD SPRING COMPLETE, FRONT, DRIVER'S 276034 ROAD SPRING COMPLETE, FRONT, PASSEMGER'S 265627 Main leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 243171 Second leaf 2 265861 Second leaf 2 2658			ssmember	À		
ROAD SPRING COMPLETE, FRONT, PASSENGER'S 1 265627 Main leaf 2 243121 260000 leaf 2 243121 260000 leaf 2 243121 260000 leaf 2 243121 260000 leaf 2 243121 2600000 leaf 2 243121 260000 leaf 2 243121 260000 leaf 2 243121 2 243121 leaf 2 243121 le	Self-locking	nut (#" UNF)) to frame		_		}
Main leaf Second leaf Bush Dowel and nut (5/16" UNF) Dowel, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 8 mm Self-locking nut, 10 mm Self-l	ROAD SPRING CON	PLETE, FRONT, DRIVER'S		1	276034	
Second leaf	ROAD SPRING COM	IPLETE, FRONT, PASSENGER'S		1	255627	
Bush Dowel and nut (5/16" UNF)	Main leaf			2	243121	
Dowel and nut (5/16" UNF)	Second leaf			2	243126	
Dowel	Bush			۵	548205	
Dowel	Dowel and nut	(5/16" UNF)		2	2F54F])
Self-locking nut, 8 mm	Dowel, 8 mm	,			RTC1920) Alternatives
Shackle plate, tapped Shackle plate, plain Distance piece for front shackle plates Shim .003" Shim .005" Shim .003" Shim .005" Shim	Self-locking	nut, 8 mm				j
Shackle plate, plain 2 537780						•
Distance piece for front shackle plates				2	537780	
Shim .005"	Distance piece	for front shackle plates			504211	
Shim .005"	Shim .003") Fixing	As rec	b		
Bolt (1 UNF x 5")						
Spring washer Shackle Shift Shackle Shackle Shift Shackle Shift Shackle Shift Sh						
Nut (½" UNF)						
Bottom plate for front spring, LH 1 550802 Bottom plate for front spring, RH 1 550801 'U' bolt Fixing 1 562771 'U' bolt Front springs 3 562776 Self-locking nut (½" UNF) to axle 8 252164 ROAD SPRING COMPLETE, REAR 2 535173 Main leaf 2 537964 Second leaf 2 600310 Bush 4 548205 Dowel and nut 2 600311 Dowel, 10 mm 2 RTC1921) Alternatives Self-locking nut, 10 mm 2 RTC1921) Alternatives Self-locking nut, 10 mm 2 GHF233 Shackle plate, tanged 2 537734 Shackle plate, plain 2 537778 Distance tube for rear shackle plates 2 509218 Shim .003" Fixing As read 504213 Shim .005" distance As read 504214 Bolt (¾" UNF x 4½") tube to 2 BH608361 Spring washer Shackle 2 WM600081 Nut (¾" UNF) plates 2 NH608061 Bottom plate for rear spring 2 550786 'U' bolt Fixing rear springs 4 550791 Self-locking nut (¾" UNF) to axle 8 252164		•				
Bottom plate for front spring, RH 1 550801 'U' bolt						
"U' bolt						
*U' bolt						
ROAD SPRING COMPLETE, REAR 2 535173 Main leaf 2 600310 Bush 4 548205 Dowel and nut 2 600311 Dowel, 10 mm 2 87C1921 Self-locking nut, 10 mm 2 6HF233 Shackle plate, tanoed 2 537734 Shackle plate, plain 2 537778 Distance tube for rear shackle plates 2 509218 Shim .003" Fixing As read 504213 Shim .005" distance As read 504214 Bolt (½" UNF x 4½") tube to 2 8H608361 Spring washer shackle 2 MH608061 Bottom plate for rear soring 2 550786 U' bolt Fixing rear springs 4 550791 Self-locking nut (½" UNF) to axle 8 252164			as			
Main leaf Second leaf Second leaf Bush Dowel and nut Dowel, 10 mm Self-locking nut, 10 mm Self-locking nut, 10 mm Shackle plate, tanced Shackle plate, plain Distance tube for rear shackle clates Shim .003" Shim .003" Shim .005" Shi			J			
Second leaf Bush Dowel and nut Dowel, 10 mm Self-locking nut, 10 mm Self-locking nut, 10 mm Shackle plate, tanced Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .003" Shim .005" Shi	ROAD SPRING COM	PLETE, REAR		2	535173	
Bush Dowel and nut Dowel, 10 mm Self-locking nut, 10 mm Self-locking nut, 10 mm Shackle plate, tanced Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .003" Shim .005" Shim .005" Shim .005" Shim .005" Shim .005" Shim .005" Distance As reed South and the stance are self south and				2	537964	
Dowel and nut Dowel, 10 mm Self-locking nut, 10 mm Shackle plate, tanned Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .005"	Second leaf			2	600310	
Dowel, 10 mm Self-locking nut, 10 mm Shackle plate, tanged Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .005" Shim	Bush			Λ	548205	
Self-locking nut, 10 mm Shackle plate, tanped Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .005" Shim				2	600311)	
Shackle plate, tanged Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .005" Shim .0				2		
Shackle plate, plain Distance tube for rear shackle plates Shim .003" Shim .005" Shim .005" Bolt (\frac{1}{2}" UNF x 4\frac{1}{2}") Spring washer Spring washer Spring washer Spring blate for rear spring WM600081 Nut (\frac{1}{2}" UNF) Boltom plate for rear spring U' bolt Self-locking nut (\frac{1}{2}" UNF) Self-locking nut (\frac{1}{2}" UNF) Spring washer Spring				2	GHF233)	
Distance tube for rear shackle plates 2 509218 Shim .003"				2	537734	
Shim .003") Fixing As reqd 504213 Shim .005") distance As reod 504214 Bolt (½" UNF x 4½")) tube to 2 BH608361 Spring washer) shackle 2 WM600081 Nut (½" UNF)) plates 2 NH608061 Bottom plate for rear spring 2 550786 'U' bolt) Fixing rear springs 4 550791 Self-locking nut (½" UNF)) to axle 8 252164				2	537778	
Shim .005") distance As reod 504214 Bolt (3" UNF x 4½")) tube to 2 BH608361 Spring washer) shackle 2 WM600081 Nut (½" UNF)) plates 2 NH608061 Bottom plate for rear spring 2 550786 'U' bolt) Fixing rear springs 4 550791 Self-locking nut (½" UNF)) to axle 8 252164		or rear shackle plates		2	509218	
Bolt (3" UNF x 42")) Fixing				
Spring washer) shackle 2 WM600081 Nut (½" UNF)) plates 2 NH608061 Bottom plate for rear spring 2 550786 'U' bolt) Fixing rear springs 4 550791 Self-locking nut (½" UNF)) to axle 8 252164			As rec	bd	504214	
Nut (½" UNF)				2		
Bottom plate for rear spring 2 550786 'U' bolt) Fixing rear springs 4 550791 Self-locking nut (}" UNF)) to axle 8 252164	Soring washer	•		2		
Bottom plate for rear spring 2 550786 'U' bolt) Fixing rear springs 4 550791 Self-locking nut (}" UNF)) to axle 8 252164	Nut (¾" UNF)					
Self-locking nut (}" UNF)) to axle 8 252164	Bottom plate for					
			springs	4		
Check strap for rear axle 2 543934	Self-locking nu		-	_		
	Check strap for	rear axle		2	543934	

109 ONE TON
CHASSIS FRAME. ROAD SPRINGS AND SHOCK ABSORBERS SECTION


_	_	
GROU	IP.	N

PLATE	
REF. 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
Pad for axle buffer	4 526608
Bolt (}" UNF x 2")) Fixing pad to	
Soring washer) chassis frame	
Nut (%" UNF)	8 GHF200
Shock absorber, front	2 GSA411
Shock absorber, rear	2 GSA412
Bush for shock absorbers	12 552819
Road wheel 6.50L x 16" (13/16" offs	et) 5 569204
Tyre 9.00 x 16" Dunlop R.K. 2.A	5)Alternatives
Tyre 9.00 x 16" Avon	5
Inner tube 9.00 x 16" Dunlop	5 ')Alternatives
Inner tube 9.00 x 16" Avon	5


109 ONE TON STEERING COLUMN

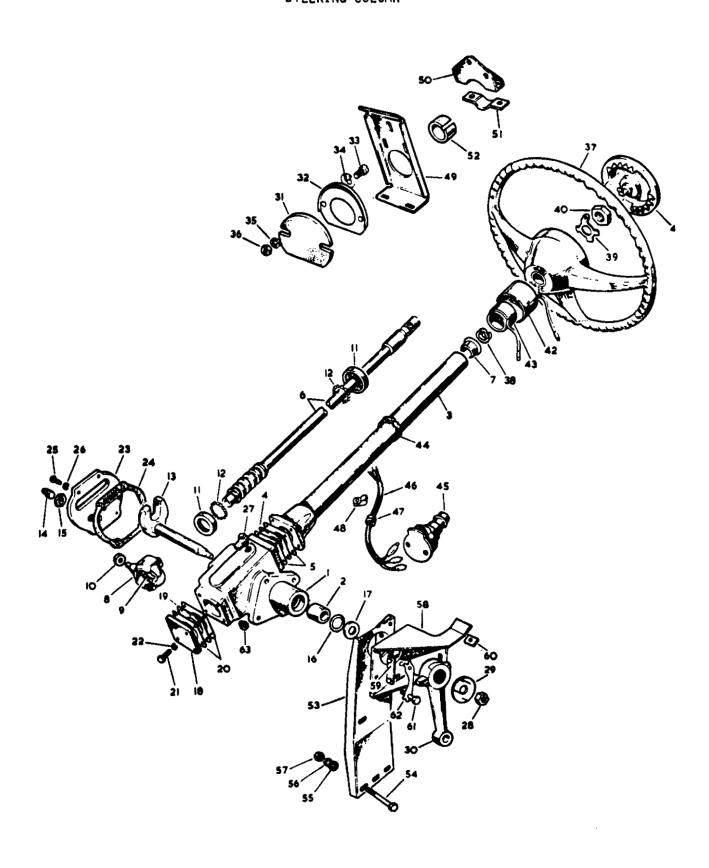

PLA1	_	DESCRIPTION		0,	TY. PART No.	REM	ARKS	
	STEERING UNIT	ASSEMBLY	,	1	552790	RH	Stg	 ·
	STEERING UNIT			1	90552791			
1	STEERING BOX			1	541899		Stg	
	STEERING BOX	ASSEMBLY		1	541900	LH	Stg	
2	Bush for r	ocker shaft		1	261850		••	
3	Outer column			1	500984			
4	Joint washer		As	read	261858			
5	Joint washer	, paper		reod				
	Joint washer		As	read	271379			
	Bolt (5/16"	UNC x 29/32")) Fixing outer		4	271380			
	Spring washe	r) column		4	GHF332			
6	Inner column	•		1	90577197	RH	l Stg	
	Inner column			1	90577198	LH	Stg	
7		for inner column		1	RTC324			
8	MAIN NUT ASS			1	600241		l Stg	
	MAIN NUT ASS			1		LH	l Stg	
		2 BA x ½")) Fixing		2				
_		r for bolt) retainer		2				
q		}") for main nut		12				
10	Roller for m			1	261869			
11	Adjustable b			2				
12		(9/32") for adjustable race		20				
13	Rocker shaft			Ţ	271372			
14		ev for rocker shaft		1	261873			
15 16		adjuster screw		1	261874			
		rocker shaft]]	271013 271014			
17 18	End plate	ocker shaft oil seal		ί	271378			
10	Joint washer	Locts	۸e	-	261858			
20	Joint washer				251857			
20	Joint washer			read				
21		UNC x 29/32")) Fixing	n 3	4				
22	Spring washe			4				
23	Side cover p			1				
24	Joint washer	for side cover plate		i	515849			
25	Bolt (5/16"	UNC x 1.1/16")) Fixing side r) cover plate		Δ				
26	Spring washe	r) cover plate		٨	GHF 332			
27	Oil filler p	lug		1	271386			
28	Special nut			1	NT512061			
20	Lock washer) drop arm		1	RTC623			
30	Steering drop	a rm:		1	595723			
31		r steering column		1	303995			
		ring column seal		j	303997			
33	Screw (2 BA x			2				
	Special washer	· ·		2				
35	_) seal to dash		2.				
36	Nut (2 BA)	,		2	RTC608			

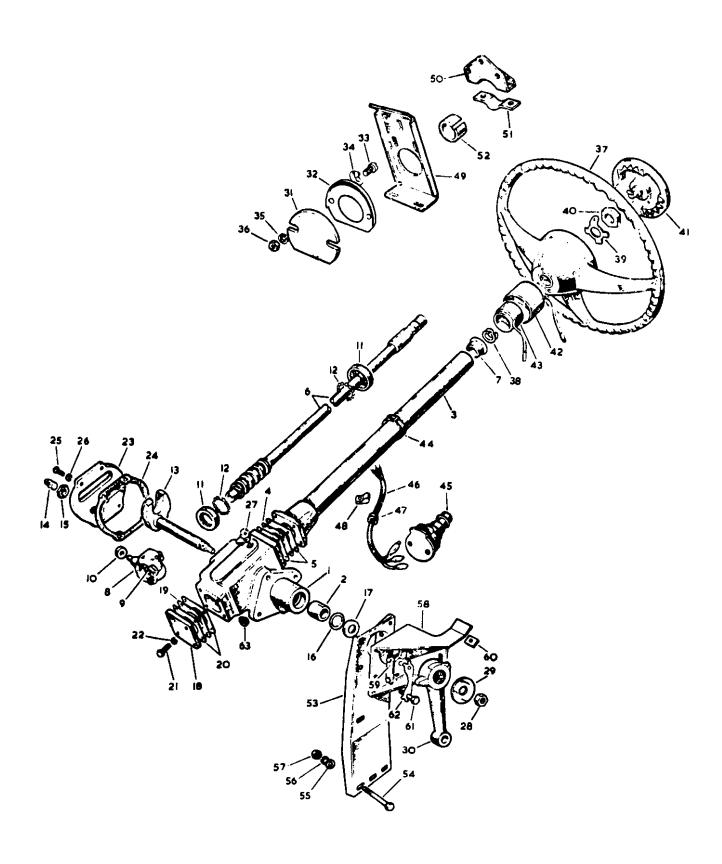

PLA		
	. 1 2 3 4 DESCRIPTION	QTY. PART No. REMARKS
37	Steering wheel	1 NRC4346
3A	Special spring washer on inner column for wheel	1 551984
39		1 552572
40	Tag washer) Fixing steering	
	Special nut) wheel	1 552804
47	Horn push and centre cover for steering wheel	1 90575201
42	Dust cover and horn contact	1 552575
	Screw (2 BA x 2")) Fixing dust cover to	2 77925
43	Plain washer) steering wheel	2 3902
44	Slip ring complete for horn contact	1 519753
45	Cable cleat on steering column	1 240431
47	Dip switch, LU type 103SA	1 RTC432
	Screw (2 BA x { "))	2 79173
	Soring washer) Fixing din switch	2 W1702001
16	Nut (2 BA)	2 RTC608
46	Lead) Dip switch to	1 560968* RH Stg
47	Lead) junction box	1 531501 LH Stg
47 48	Grommet for lead in the box floor	1 236389
40	Clip fixing dip switch lead to floor	2 50639)
	Screw)	2 77941) 5 of on LH Stg
	Spring washer) Fixing clip	2 WM702001)
49	Nut (2 BA))	2 RTC608)
49	Support bracket on dash	1 348743*
	Bolt (5/16" UNF x 3"))	4 GHF120
	Plain washer, small) Fixing	6 3930 3 PTC504
	Plain washer, large) support bracket	2 RTC604
	Spring washer) to dash	4 GHF332
EΛ	Nut (5/16" UNF))	4 GHF201
50	Clamp, upper, for steering column	1 348744*
	Bolt (5/16" UNF x 3"))	3 GHF120
	Plain washer) Fixing upner clamp	3 3830
	Spring washer) to support bracket	3 GHF332
61	Nut (5/16" UNF))	3 GHF201
51 52	Clamp, lower, for steering column	1 346715
32	Rubber strip for clamp	1 348747
	Solt (1" UNF x 2")) Fixing upper and	2 255209 2 GHF331
	Spring washer) lower clamps to	
	Nut (1" UNF)) steering column	2 GHF200
53	Support bracket, RH) For steering box	1 537535*
_	Support bracket, LH) on chassis	1 537533
54 55	Bolt (5/16" UNF x 3½"))	6 256233 6 2920
55	Plain washer, thin) Fixing	6 3830 6 WP185
56	Plain washer, thick) brackets to	6 GHF332
	Soring washer) chassis frame	
57 58	Nut (5/16" UNF))	6 GHF201 1 90577264 RH Stg
20	Stiffener bracket) For	1 90577264 RH Stg 1 537539* LH Stg
	Stiffener bracket) steering box	i bazacan un aug

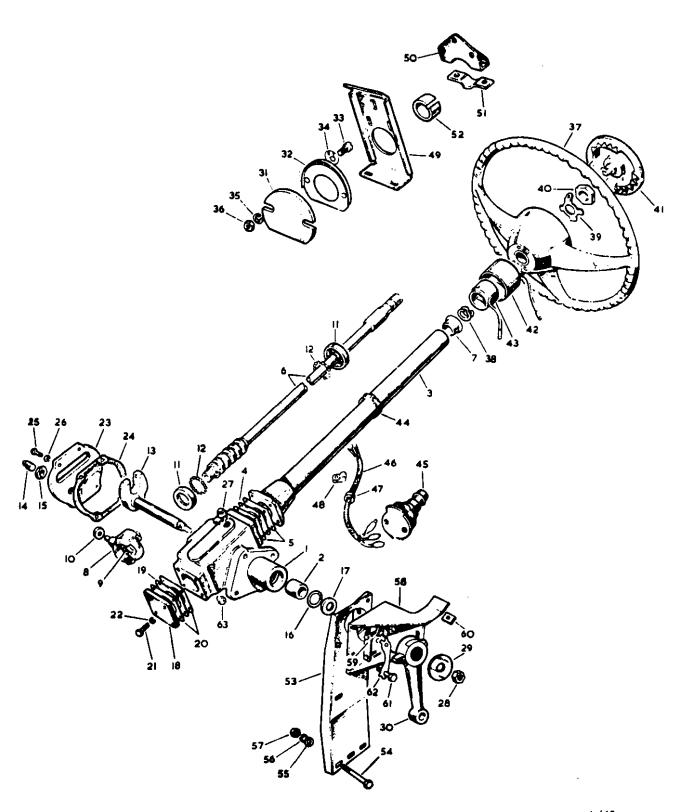


PLA REF.	_	DESCRIPTION	Q1	Y. PART No.	REMARKS
59	Bolt plate) Fixing stiffener	2	395064	
	Soring washer) bracket to front	4		RH Stg
	Nut (j" UNF)) face of toe box	A	GHF200)	- •3
	Bolt (+" UNF x 1"))	1	GHF101)	1
	Plain washer) Fixing stiffener	1	RTC609	3 off on LH Stg
	Spring washer) bracket to	Ì	GHF331	
	Nut (¾" UNF)) top face of	Ì	GHF200	
60	Shim washer) toe box	As read	504279 RF	f Sta
	Shim washer)	As read	504275 LH	
	Bolt (3" UNF x 13")	·)	2	255050	
	Set bolt (a" UNC x	3 ") ∫	1	SH506061	Except 109 LH Stg
	Set bolt (a" UNC x	?")) Fixing steering	i	SH506071	109 LH Stg
	Locking plate) box to chassis	ĺ	537543*	
61	Set boit ()" UNC x		Ì	SH506071	
62	Locking plate)	i	537544	
63	Self-locking nut(∄"	UNF))	Ź	GHF243	

^{*} NO LONGER SERVICED

QTY. PART No. REMARKS
1 608465 1 526994 1 595468 1 544581 1 595469 1 NRC5474 1 543819 4 568858 4 543818 4 NT606041 1 552388 RH Stg 1 552574 LH Stg 4 SH606071 4 GHF333 4 GHF202

^{*} NO LONGER SERVICED


109 ONE TON
BRAKE PIPES AND SERVO, 4-CYLINDER NODELS

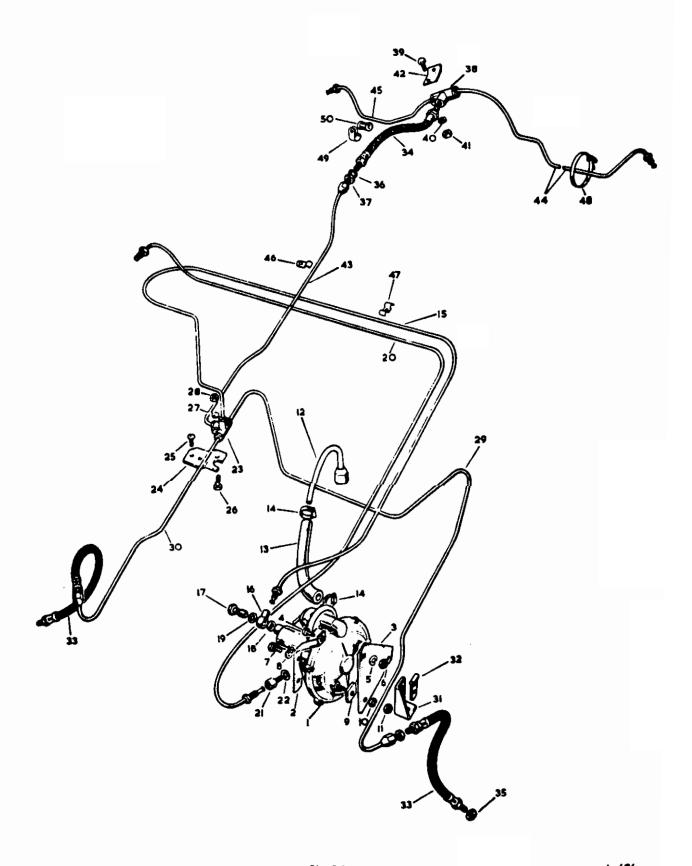

PLA'		QT	Y. PART No.	REMARKS
1	BRAKE SERVO UNIT	1	562678	
2	Support bracket) For brake	1	559646	
	Stiffening plate) serve	1	559647	
4	Bolt (5/16" UNF x (1)) Fixing support	i		
5	Soring washer) bracket to wing	i		
۴	Nut (5/16" UNF)) valance and) stiffener	i	GHF201	
7	Set bolt (5/16" UNC x %")) Fixing servo	2	SH505051	
8	Spring washer) to bracket		GHF332	
	Taper washer) Fixing servo and		559648	
10	Spring washer) stiffener plate		GHF332	
11	Nut (5/16" UNF)) to wing valance		GHF201	
	Adaptor pipe complete, inlet manifold to hose	ī		
	Hose, adaptor pipe to servo	i	562795	
	Clin fixing hose to servo and pine		GHC507	
	Pipe complete, brake servo to 4-way junction piece			
	Banjo for servo pipe	1	538614	
	Banjo bolt)	1	538615	
18	Gasket) Fixing banjo to brake servo	1	538616	
	Gasket)	1		
	Pipe complete, master cylinder to servo	1		RH Stg
	Pine complete, master cylinder to servo	1		LH Stg
21	Adantor for servo pine	1		
	Joint washer for adantor	1		
23	4-way junction piece for brake pines	1		
	Bracket for junction piece	1	594938	
25	Drive screw, fixing bracket	2	72626	·
26	Bolt (lune x lune x lune)) Fixing	1	BH604101	
27	Spring washer junction	1	GHF331	
28	Nut (!" UNF)) piece	1	GHF200	
29	Brake pine, junction piece to LH front	1	277 <u>922</u>	
30	Brake pine, junction piece to RH front	1	277923	
31	Bracket for LH front brake nine	1	90508566	*
	Bolt (5/16" UNF x ∄")) Fix	1	GHF120	
	Plain washer) bracket to	1	3830	
	Shakeproof washer) hose bracket on	1	GHF 322	
	Nut (5/16" UNF)) chassis frame	1	GHF201	
32	Clip for LH front brake nine	1	508565*	
	Bolt (2 BA x ½"))	1	234603	
	Plain washer) Fixing clip	1	3902	
	Nut (2 BA))	1	RTC608	
33	Hose complete for front wheels	2	GBH302	
34	Hose complete to rear axle	1	GBH302	
35	Joint washer for hoses	3	233220	
36	Shakenroof washer) Fixing hose	3	GHF 323	
37	Special nut (#" UNF)) to bracket	3	NT604041	
38	'T' piece on rear axle	1	537761	
39	Bolt (5/16" UNF x 3")) Fixing	1		
40	Snring washer) 'T'	1	GHF 33?	
4]	Nut (5/16" UNF)) niece	1	GHF201	

^{*} NO LONGER SERVICED

109 ONE TON
BRAKE PIPES AND SERVO, 4-CYLINDER MODELS

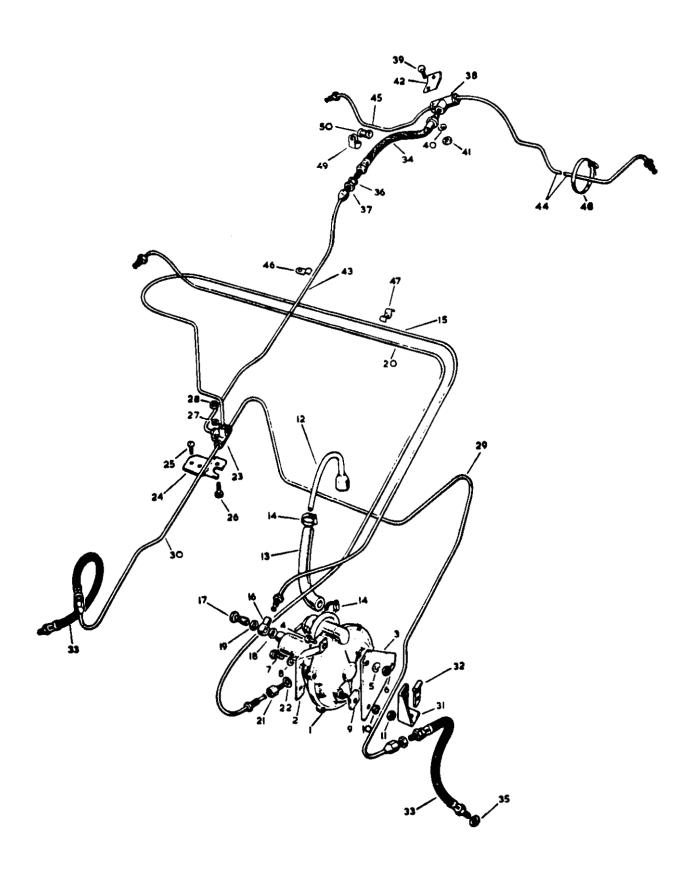

PLA	-				
AEF	. 1 2 3 4	DESCRIPTION	_ <u> </u>	TY. PART No.	REMARKS
42	Bracket for rear axle '	T' niece	1	537805	
·	Bolt (5/14" UNF x 3"))		i	SH605051	
	Spring washer)	bracket to rear	i	GHF332	
	Nut (5/15" UNF))	axle to bracket	i	GHF201	
43	Brake pine to rear hose		i	279452	
44	Brake pine, LH rear to		•	592374	
45	Brake pipe, RH rear to		i	551652	
46			read		
47	Double clin) chassi		rend		
7,	Drive screw)			72626	
	Screw (2 BA x 8"))			77758	
				2260	
	Spring washer)				
	Nut (2 BA)		• .	WM702001	
48	Clip on rear axle for L		rend		
49	Clin	n bibe 1	1	11820	
50		Siving warm bushe	4	56666 6960	
30	Rubber grommet) Fixing rear brake	4	6860	
	Bolt (2 BA x ½")) pipes to chassis frame		234603	
	Plain washer	₹		WC702101	
	Spring washer	}	4	******	
	Nut (2 BA))	4	RTCF08	
	Brake servo overhaul ki	+	1	600432	١
	Brake servo noppet valv	-	,	600434	/ \ Funant aslu
			,		Export only
	Brake servo non-return	valve overnaul kit	1	600435)

109 ONE TON
BRAKE PIPES, 6 CYLINDER MODELS SECTION

GR	ΛI	ID	N
121	u	Jr	- 13

PLATE REF. 1 2 3 4	DESCRIPTION	Qī	TY. PART No. REMARKS
Hose for wheel cy	linder. front	2	GBH302
Brake pine rear l		ī	592374
Brake pipe rear I		i	551652
'T' piece on rear		1	537761
Bracket for 'T'		ĺ	537805
_ -	(¾")) Fixing 'T' piece	į	SH605051
Spring washer) bracket to rear axle	j	GHF332
Nut (5/16" UNF)) bracket	j	GHF201

PLATE REF. 1 2 3 4	DESCRIPTION	QTY. PART No.	REMARKS:
Front exhaust pine	complete	1 GEX1564	

ALL OTHER ITEMS AS LISTED IN MAIN PARTS CATALOGUE

GROUP N

109 ONE TON INSTRUMENT SECTION

Plate 1 2 3 4	Description	Qty Part No Remarks
	and warning lights miles and warning lights kilometers	1 540119) Non-trip 1 540120*)
Speedometer	and warning lights miles and warning lights kilometers	1 540131) With trip. 1 540135) Optional

ALL OTHER ITEMS AS LISTED IN MAIN PARTS CATALOGUE

* NO LONGER SERVICED

109 ONE TON
SEAT BASE, SEATS, FRONT FLOOR, FRONT WINGS AND BONNET SECTION

GROUP N

PLATE REF. 1 2 3 4	DESCRIPTION	QTY.	PART No.	REMARKS
Donat county wat	£	,	220006.4	
Bonnet assembly, reinforced		Ţ	320864*	
Bonnet fastener		2	300692	
Bolt (%" UNF x %"))	Fixing	4	255206	
Plain washer)	bonne t	4	2215	
Spring washer)	fastener	4	GHF331	
Nut (¼" UNF))		4	GHF200	
Staple for bonnet fas	Staple for bonnet fastener		300693	
Screw (2 BA x ₹"))		6	77861	
Packing washer)		2	RTCF15	
Plain washer)	Fixing stable to		WC70210	1
Spring washer)	front wing		VM70200	
Nut (2 BA))	violiting.		RTC608	•
			334055	
			334056*	
Dowel for spare wheel lock		i	338414	
Bolt (¿" UNF x 1")		2	GHF101	
Bolt (1" UNF x 1")) and dowel		79210	
Spring washer) to bonnet		GHF331	
) ar bonnet			
	Nut (½" UNF)			
Retaining plate for snare wheel		1	338827	
Nut for spare wheel			561254	
Cover plate for redundant snare wheel hole		_	330616	
Pop rivet fixing cover plate to wheelarch box		40	7824Ŗ	

ALL OTHER ITEMS AS LISTED IN MAIN PAPTS CATALOGUE

* NO LONGER SERVICED

GROUP N

PLATE			
REF. 1 2 3 4	DESCRIPTION	QTY. PART No. REMARKS	

Wheel brace

1 569687

LAND ROVER SERIES IIA Bonneted Control Models

Numerical Index

PART NUMBER	DESCRIPTION Steel ball	REF.NO.
1035		1D 06
1384	Locking plate	1K 07 2J 07
14 03 1481	Tommy bar Ball end	1N 02
1510	Brake drum screw	1J 02
1564	Bolt 3/8in BSF X 1.11/16in	15 02 1H 06
1565	Bolt 3/8in BSF X 1.3/16in	1H 06
1643	Steel ball	1G 11
1645	Bearing	1G 04
1664	Key	2C 13
2096	Nut	1G 08
2208	Plain washer	1K 09
2215	Plain washer	2F 03
2219	Plain washer	1F 02
2228	Plain washer	1H 10
2258	Plain washer	1N 02
2260	Plain washer	2L 15
2265	Washer	īL 18
2266	Plain washer	2C 11
2284	Spring washer	2G 02
2388	Pin	1K 07
2390	Split pin	1N 08
23 92	Pin	1K 07
2393	Split pin	11 07
2422	Split pin	1G 12
2427	Split pin	1H 09
2499	Locker	1G 10
2500	Locker	1D 07
2504	Locker	1D 06
252 9	Screw 1/4 in whit X 3/4 in	1G 07
255 6	Split pin	1D 06
2630	Plain washer	2F 16
27 05	Spanner	2J 07
2707	Adjustable spanner	23 07
2719	Plain washer	21 11
2764	Plain washer	1L 18
2765	Plain washer	1N 03
2766	Split pin	1G 05
2822	Castle nut (7/16in BSF)	11 07
2827	Nut 3/8in BSF)	1G 03
2828	Nut 5/16 in BSF	1G 08
2851 287 6	Plain washer	2F 02
2974	Plain washer	1G 12
2974 2986	Pin	1K 07
2995	Rivet	2G 07
3035	Locker	1E 06 1J 13
3036	Pin Plain washon	10 13 10 03
	Plain washer	1L 18
3101	Washer	
3109	Washer	1L 18

PART	NUMBER	DESCRIPTION	REF.NO.
	3127	Split pin	2L 04
	3200	Stud	1G 08
	3236	Stud	1G 03
	3238	Stud	1G 03
	3259	Slotted nut	1G 07
	3279	Special screw	1I 04
	328 9	Plug	1G 08
	32 9 0	Plug	1F 05
	3291	Plug	1G 03
	3292	Filler plug	1H 05
	3294	Plug	1H 02
	3299	Plain washer	1J 06
	3300	Washer	1G 07
	3319	Stud	1G 03
	3359	Split pin	1L 05
	3466	Nut	2C 14
	3467	Plain washer	1N 15
	3649	Selector spring	1G 11
	3650	Stud	1G 08
	3739	Steel ball	10 05
	3748	Steel ball	1E 05
	3764	Locknut 7/6in BSF	1G 13
	3783	Nut	1C 12 1N 09
	3816	Plain washer	2F 11
	3817	Plain washer	1F 04
	3819	Nut 1/4 in BSF	2F 07
	3829 3830	Plain washer	1I 05
	3831	Plain washer Plain washer	1K 03
	3842	Plain washer	2G 02
	3852	Plain washer	2F 07
	3890	Screw	1L 18
	3895	Plain washer	2G 08
	3900	Plain washer	2F 09
	3902	Plain washer	11 04
	3905	Locknut 1/2 in BSF	1G 10
	3933	Washer	1L 18
	3947	Plain washer	2H 03
	3958	Split pin	1G 12
	3966	Plain washer	1I 05
	3972	Screw	1L 18
	3982	Plain washer	2G 02
	3996	Plain washer	2F 15
	4022	Rivet	2H 04
	4024	Nut (4 BA)	2D 04
	4030	Plain washer	1E 08
	4032	Plain washer	21 06
	4034	Plain washer	2D 10
	4035	Plain washer	2F 08
	4047	Plain washer	1C 08
	4063	Split pin	1H 14
	4075	Plain washer	2H 03
	4082	Cable clip	2J 04 1F 04
	4085	Washer	IF U4

PART !	NUMBER	DESCRIPTION	REF.NO.
	4170	Cable clip	2J 04
	4172	Packing washer	IN 10
	4203	Plain washer	21 07
	4428	Plain washer	IN 10
	4433	Plain washer	2F 03
	4514	Washer	1N 05
	4560	Rivet 1/2in X 1.1/4in	1H 10
	4574	Plain washer	1K 08
	4592	Plain washer	2F 12
	4594	Plain washer	13 10
	4870	Plain washer	2F CE
	5804	Plate	1G 11
	5832	Cap nut	1M 03
	5843	Cover plate	1G 03
	5852	Oil retainer	16 11
	5853 5854	Plate Plate	1G 11 1G 11
	6397	Race	1G 11
	6405	Peg	1G 04
	6419	Clip	1G 03
	6421	Selector fork	1G 11
	6860	Rubber grommet	1K 03
	6993	Float chamber	1M 02
	7015	Cup washer	1D 17
	728 9	Dowe1	1G 03
	7316	Joint washer	1H 0 9
	782 9	Screw (10 UNF X 3/8in)	2D 03
	8185	Washer	1G 05
	8407	Splined end	1H 07
	85 66	Bush	1F 05
	8885	Clip	1J 13
	90 9 3 9161	Washer	1E 06 1D 16
	9210	Clamp Locker	1E 06
	9225	Shield	1D 06
	9927	Dowe1	1G 04
	9938	Sealing ring	2C 05
	9960	Circlip	1G 05
	10025	Lid for float chamber	1M 02
	10713	Plug	1E 14
	11820	Clip	1K 03
	128 82	Emission pack	1M 06
	20034	Woodscrew	21 12
	20138	Woodscrew	21 12
	20147	Woodscrew	21 12
	36666 40441	Clip Washer	1K 05 2C 06
	40742	Bolt (7/6in BSF X 2.3/16in)	26 08 1H 08
	40756	Nut	1H 08
	41045	Roller bearing	1H 09
	41049	Locker	1H 08
	4137 9	Clip	1K 03
	42537	Pin	1F 02
	46032	Pressure plate	1F 02
	50216	Joint washer 2M 03	1F 05
		CM US	

PART NUMBER 50235 50301 50309 50322 50446 50453 50499	DESCRIPTION Brake catch Clip Clip Clip Fin Grooved pin Elbow	REF.NO. 1K 07 1M 04 1D 10 1D 12 1J 08 1H 03 1L 08
50526 50552 50637 50639 50640	Nut (3/81N BSF) Special drive screw Cable clip Clip Cable clip	2K 11 2E 03 2J 04 1I 05 2J 04
50641 50642 50690 50702 50703	Cable clip Clip Cable clip Thrust washer Thrust washer	2J 04 1K 04 2J 04 1G 04 1G 04
52124 52246 52278 53491 55636	Dowel Screw Washer Dished washer Dowel	1E 02 1G 03 2C 05 1M 08 1G 03
55638 55697 55705 55714	Plunger Peg Dowel Bearing	1G 11 1G 11 1G 07 1G 05
55775 55778 56102 56140 56666	Peg Stud 3/8 in whit X 1.3/4 in Selector spring Cover plate Clip	1G 11 1G 03 1G 11 1F 04 1K 03
56667 59663 68087 72085 72626	Cable clip Spring Rivet Stowage clip Drive screw No 8 X 3/8 in	2J 04 1J 04 10 04 2G 02 1K 02
72628 73198 73962 73979	Drive screw Rubber plug Cup washer Bifurcated rivet	2D 06 2F 06 2I 12 2G 02
74838 76653 77626 77700 77758	Screw 2BA X 1 in Screw 2BA X 1.1/8 in Star washer Screw 2BA X 1/2 in Screw 2BA X 5/8 in	1J 10 1G 10 1G 13 2D 02 1K 03
77784 77861 77869 77899 77925	Screw 2BA X 1/2 in Screw (2 BA X 3/4 in) Screw 2BA X 1/2 in Screw (4 BA X 1/2 in) Screw 2BA X 7/8 in	2F 10 1I 03 1N 10 2D 04 2I 14
77932 77941 77993 78114 78120	Drive screw no 6 X 1/2 in Screw Screw Shakeproof washer Screw	2G 11 1L 17 2I 06 1I 04 2I 07

PART NUMBER	DESCRIPTION	REF.NO.
7815 9	Glazing strip	2F 07
7815 9	Glazing strip	2G 09
78173	Screw (2 BA X 3/41n)	1I 04
78177	Screw 2BA X 5/8 in	1K 06
78208	Special set bolt	10 04
78210	Bolt 1/4 in UNF X 3/4 in	2F 09
78226	Rivet fixing strip	10 04
78227	Drive screw no 10 X 1/2 in	1J 10 2H 03
78233 78237	Screw 1/4 in UNF X 5/8 in	10 03
78237 78248	Spire nut Pop rivet	2F 10
782 56	Lockwasher	10 05
78257	Pop rivet	2E 06
78274	Screw 1/4 in UNF X 2 in	2G 11
78291	Screw 10 UNF X 5/8 in	2D 03
782 96	Bolt	21 12
783 16	Screw (10 UNF X 1 1/4in)	11 04
78318	Screw	1F 09
78321	Rivet	2G 03
78331	Bolt 5/16 in UNF X 5/8 in	2F 03
78352	Bolt 5/16 in UNF X 3/4 in	2F 13
78358	Screw	21 06
78382	Screw 1/4 in UNF X 2.1/4 in	2G 11
7838 4	Screw 1/4 do HNF 1 do	1L 14 2H 03
7838 9	Screw 1/4 in UNF 1 in	2F 03
783 93 78 401	Spire nut Drive screw	2F 03
78401 78402	Drive screw	2G 09
78410	Rivet	2G 03
78430	Drive screw no 8 X 3/4 in	2H 04
78438	Drive screw	10 05
78441	Screw	2I 06
78443	Drive screw	2E 02
78697	Rivet	2F 06
7875 5	Screw (1/4in UNF X 1/2in)	2D 14
78795	Special screw	10 04
78796	Special screw (1/4in UNC X 1/2in)	10 05
78808	Tapite screw 10UNF X 1/2 in	2F 07
78832	Taptite screw	2G 09
78898 78905	Screw 1/4 in UNF X 5/8 in	2D 15 1J 13
7892 4	Screw Screw 2BA X 1/4 in	2D 10
78977	Drive screw no 10 X 3/8 in	2F 10
79048	Special bolt	2F 09
79051	Nut	2G 02
79054	Screw 10 UNF X 1.3/8 in	2E 04
79175	Spire nut	2F 11
7923 9	Special nut	2E 04
79246	Spire nut	10 04
79307	Drive screw no 8 X 1/2 in	2F 03
80603	Ht wire	2C 03
91171	Seaming cord	2J 03
91291	Black canvas	2J 03
91414	Grey felt	2J 03
91819	Black felt	2J 03

DADT NUMBER	DECCRIPTION:	DEE NO
PART NUMBER	DESCRIPTION	REF.NO.
9 1878	Cottom webbing	2J 03
91890	Felt	2J 03
91913	Black cloth	2 J 03
91950	Leather cloth	2J 03
91957	Cotton duck	2 J 03
91965	Felted plastic	2J 03
91979	Leather cloth	2 J 03
92 088	Cottom webbing	2 J 03
92496	Sheet wadding	2J 03
92616	Leathercloth	2J 03
92625	Leathercloth dull black	2J 03
100897	Pinion bearing	7H 08
108353	Taper pin	1M 02
108364	Union	1M 02
108771	Retainer	1L 09
139082	Adaptor	1F 08
142001	Rim	2D 02
149996	Flame trap	1D 10
150844	Mounting pad	2D 15
210203	Stop	16 11
210204	Locker	16 11
210492	Core plug	10 13
211502	Seal	1G 07
212160	Cap	1D 08
212161	Circlip	1D 08
212309	Bush	1D 06
212430	Locker	10 02
212919	Spring for piston	1J 02 1J 02
212943	Spring for piston	11 07
213340 213416	Oil seal	1G 05
213417	Nut Stud	1G 05
213419	Plate	1G 05
213637	Shaft	1G 11
213660	Thrust washer	1F 07
213661	Cover plate	1F 07
213666	Retaining plate	1G 05
213700	Dowel	10 03
213744	Oil seal	10 07
214058	Joint washer	1D 09
214090	Shouldered stud	1G 05
214223	Switch	20 10
214228	Clip	10 12
214229	Rubber grommet	10 12
214262	Spark plug cover	2C 03
214649	Rubber cover	11 07
214662	Retainer	11 07
214685	Spring ring	11 07
214792	Bearing plate	1G 05
214793	Bush	1F 07
214794	Bush	1F 07
214795	Circlip	1G 05
214965	Circlip	2K 10
214995	Bush oil pump	1C 04

215170 Bolt (5/16in BSF X 1 19/32in) 16 08	PART NUMBER	DESCRIPTION	REF.NO.
215331	215170	Bolt (5/16in BSF X 1 19/32in)	1G 08
215599 Bolt 1/4 in whit X 1.1/4 in 16 03		Bolt (3/8in BSF X 1 19/32in)	1H 07
215703 Bolt (3/8 in whit x 1 in) 22 07		Bolt 1/4 in whit X 1.1/4 in	1G 03
215808 Clevis complete 16 12 12 12 12 13 10 10 13 16 16			2C 07
215809 Clevis complete 1J 07			1G 12
216708			1J 07
216912	216421		
216914 Gasket 1J 11	216708		
217268 Bearing for swivel pin IH 04			
217325 Bearing 16 09 217330 Circlip 16 07 217352 Key Washer 11 07 217353 Locker 11 07 217354 Bush driving shaft 11 05 217361 Wheel nut 21 03 217400 0il seal 11 02 217421 Swivel pin & bracket 11 04 217445 Spring 16 13 217453 Shim .005in 11 02 217454 Shim .005in 11 04 217455 Shim .030in 11 04 217455 Shim .030in 11 04 217476 Locker 16 04 217478 Bearing 16 03 217484 Retaining plate 16 07 217490 Bearing 16 07 217490 Bearing 16 07 217507 0il seal 11 07 217523 Plate 16 08 217526 Circlip 16 08 217526 Circlip 16 08 217526 Circlip 16 07 217564 Bolt 5/16 in BSF X 29/32 in 16 07 217568 Retainer 16 07 217568 Retainer 16 07 217568 Retainer 16 07 217568 Retainer 16 07 217622 Shim 16 08 217622 Shim 16 08 217623 Shim 217623 Shim 217624 Shim 217625 Stud 217778 Stud 217778 Stud 217778 Stud 217778 Stud 217778 Stud 217977 Stud 218244 Hainshaft gear 16 04 217978 Stud 218243 High gear 16 04 218293 Spring 11 07 218386 Bush 10 08 218453 Crossmember 27 02 218454 218403 218404 218403 218404 218403 218404 218403 218404 21840			
217330 Circlip 16 07 217352 Key washer 11 07 217353 Locker 11 07 217354 Bush driving shaft 11 05 217361 Wheel nut 21 03 217400 0il seal 11 02 217421 Swivel pin & bracket 11 04 217445 Spring 16 13 217453 Shim .005in 11 04 217454 Shim .010in 11 04 217455 Shim .030in 11 04 217455 Shim .030in 11 04 217476 Locker 16 04 217478 Bearing 16 08 217484 Retaining plate 16 07 217490 Bearing 16 08 217523 Plate 16 07 217555 Bolt 3/8 in BSF X 29/32 in 16 07 217564 Bolt 5/16 in BSF X 29/32 in 16 07 217568 Retainer 16 07 217568 Retainer 16 07 217568 Retainer 16 07 217568 Retainer 16 08 217622 Shim 16 08 217622 Shim 16 08 217623 Shim 16 08 217624 Shim 16 08 217625 Shim 16 07 217568 Retainer 16 08 217624 Shim 16 08 217625 Shim 16 08 217624 Shim 16 08 217625 Shim 16 08 217623 Shim 16 08 217624 Shim 16 08 217625 Shim 16 08 217624 Shim 16 08 217624 Shim 16 08 217624 Shim 16 08 217625 Shim 16 08 217624 Shim 16 08 217625 Shim 16 08 217624 Shim 217624 Shim 217624 Shim 217624 Shim 217624 Shim			
217352			
217353			
217354 Bush driving shaft			
217361			
217400			
217421			
217445 Spring 16 13 217453 Shim .005in 1H 04 217454 Shim .030in 1H 04 217475 Shim .030in 1H 04 217476 Locker 1G 04 217477 Nut 1G 04 217478 Bearing 1G 08 217484 Retaining plate 1G 07 217490 Bearing 1G 08 217507 0il seal 1H 08 217523 Plate 1G 08 217525 Circlip 1G 08 217526 Circlip 1G 07 217546 Circlip 1G 07 217546 Solt 5/16 in BSF X 29/32 in 1G 07 217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217624 Flange plate 11 07 217778 Stud 1G 08 217781 Lockwasher 2C 10 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217979 Stud 1G 08 217971 Stud 1G 08 217972 Stud 1G 08 217973 Stud 1G 08 217974 Stud 1G 08 217975 Felt ring 1G 04 218384 High gear 1G 07 218385 Bush 1J 06 218453 Crossmember 2F 02			
217454			
217454 Shim .010in 1H 04 217475 Shim .030in 1H 04 217476 Locker 1G 04 217477 Nut 1G 04 217478 Bearing 1G 08 217484 Retaining plate 1G 07 217507 0il seal 1H 08 217523 Plate 1G 08 217525 Circlip 1G 08 217546 Circlip 1G 08 217546 Circlip 1G 07 217565 Bolt 5/16 in BSF X 29/32 in 1G 07 217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217623 Shim 1G 08 217624 Shim 1G 08 217694 Flange plate 1I 07 217778 Stud 1G 08 217778 Stud 1G 08 217778 Stud 1G 08 217778 Stud 1G 08 217977 Stud 1G 08 217977 Stud 1G 08 217977 Stud 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 218243 High gear 1G 07 218244 Mainshaft gear 1G 07 218244 Mainshaft gear 1G 07 218244 Mainshaft gear 1G 07 218386 Bush 1J 06 218453 Crossmember 2F 02			
217455			
217476			
217477			
217478 Bearing 16 08 217484 Retaining plate 16 07 217490 Bearing 16 07 217507 0il seal 11 08 217523 Plate 16 08 217525 Circlip 16 08 217546 Circlip 16 07 217564 Bolt 5/16 in BSF X 29/32 in 16 07 217565 Bolt 3/8 in BSF X 1.2 in 16 07 217568 Retainer 16 07 217620 Shim 16 08 217622 Shim 16 08 217623 Shim 16 08 217624 Shim 16 08 217694 Flange plate 11 07 217778 Stud 16 10 217778 Stud 16 10 217778 Stud 16 08 217971 Lockwasher 20 10 217971 Lockwasher 20 10 217977 Stud 16 08 217977 Stud 16 08 217978 Stud 16 07 218244 High gear 16 07 218243 High gear 16 07 218244 Mainshaft gear 16 07 218382 Rachet 17 07 218386 Bush 17 06 218409 Plate 17 07 218386 Bush 17 06 218409 Plate 17 07 218386 Bush 17 06 218409 Plate 18 07 2184453 Crossmember 25 02			
217484 Retaining plate 16 07 217490 Bearing 16 07 217507 Oil seal 1H 08 217523 Plate 16 08 217525 Circlip 1G 08 217546 Circlip 1G 07 217564 Bolt 5/16 in BSF X 29/32 in 1G 07 217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 08 217970 Plate 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217979 Felt ring 1G 08 217985 Felt ring 1G 06 218243 High ge			
217490 Bearing 16 07			
217507 Oil seal 1H 08 217523 Plate 1G 08 217525 Circlip 1G 07 217546 Circlip 1G 07 217564 Bolt 5/16 in BSF X 29/32 in 1G 07 217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217624 Flange plate 11 07 217775 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 07 218243 High gear 1G 07 218244 Mainshaft gear 1G 07 218386 Bush 1J 06 218409 Plate			
217523			
217546 Circlip 16 07 217564 Bolt 5/16 in BSF X 29/32 in 16 07 217565 Bolt 3/8 in BSF X 1.2 in 16 07 217568 Retainer 16 07 217620 Shim 16 08 217622 Shim 16 08 217623 Shim 16 08 217694 Flange plate 11 07 217735 Knob 16 10 217778 Stud 16 08 217781 Lockwasher 2C 10 217811 Housing 16 08 217970 Plate 16 08 217977 Stud 16 08 217978 Stud 16 08 217985 Felt ring 1K 09 218243 High gear 16 07 218244 Mainshaft gear 16 04 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			1G 08
217564 Bolt 5/16 in BSF X 29/32 in 1G 07 217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218385 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02		Circlip	1G 08
217565 Bolt 3/8 in BSF X 1.2 in 1G 07 217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 07 218243 High gear 1G 07 218244 Mainshaft gear 1G 07 218382 Rachet 1X 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02	2175 46	Circlip	
217568 Retainer 1G 07 217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02	217564		
217620 Shim 1G 08 217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217622 Shim 1G 08 217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217623 Shim 1G 08 217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217694 Flange plate 1I 07 217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217735 Knob 1G 10 217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217778 Stud 1G 08 217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217781 Lockwasher 2C 10 217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217811 Housing 1G 04 217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217970 Plate 1G 08 217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217977 Stud 1G 08 217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217978 Stud 1G 08 217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
217985 Felt ring 1K 09 218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
218243 High gear 1G 07 218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
218244 Mainshaft gear 1G 04 218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
218293 Spring 1J 02 218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02			
218382 Rachet 1K 07 218386 Bush 1J 06 218409 Plate 1K 09 218453 Crossmember 2F 02	218293		
218409 Plate 1K 09 218453 Crossmember 2F 02			
218453 Crossmember 2F 02			
218508 Starting handle 2J 07			
	218508	Starting handle	2J 07

PART NUMBER	DESCRIPTION	REF.NO.
218983	Pull off spring	1J 02
219098	Hnp cab	1H 07
219466	Bearing	1G 07
219468	Gear	1G 07
219469	Thrsut washer	1G 07
219521	Knob	1G 13
219544	Pinion bearing	1H 09
219547	Shim	1H 08
219548	Shim	1H 08
219549	Shim	1H 08
219673	Special screw	1N 09
219677	Clip	10 03
219680	Grommet	2J 05
219704	Tool roll	2J 07
219709	Bracket	16 13
219714	Lever housing	16 10
219721	Seat	1G 10
219722	Plate	1G 10
219723	Spring	1G 10
219768	Seal	1F 07
219797	Circlip	1G 10
219995	Joint washer	1G 08
230007	Shim. 003	1H 04
230034	Distance piece	1D 09
230062	Washer	1D 13
230086	Bush	1G 12
230140	Joint washer	1G 08
230184	Distance piece	11 07
230250	Core plug	10 10
230251	Core plug 11/16 in dia	1D 13
230279	Pin and housing	1G 12
230294	Retainer for seal	1I 07 1C 05
230313 230438	Key Shim	16 05 1H 09
230438	Shim	1H 09
230440	Shim	1H 09
230511		1H 03
230696	Joint washer for drain plug Housing assy	1G 08
230736		2J 07
230759	Spanner Spring	11 07
230760	Washer	11 07
230858	Cone seat	1H 04
230939	Lever	1N 05
231071	Housing	1F 07
231074	Sleeve	1F 07
231075	Sleeve	1F 07
231116	Spring	ig 10
231155	Piston ring	1D 05
231190	Chain	1L 17
231218	Cover	1D 03
231219	Joint washer	1D 03
231234	Harness carrier	2C 06
231242	Washer	1H 08
231318	Pin	1K 07
231341	Stud	1G 03
231343	Screw	1D 09
231344	Spacer 2M 06	1D 09
	□ ··· ♥ ♥	

PART NUMBER	DESCRIPTION		REF.NO.
231348	Rocker shaft		1D 09
231349	Rocker shaft		10 09
231352	Special washer		10 09
2313 9 3	Return spring		1N 07
231576	Washer		1D 14
231577	Joint washer		10 11
231601	Road wheel		1H 16
231737	Thrust washer		1G 04
231883	Spring		1F 03
231888	Cover plate		1F 02
231943	Shaft		1F 07
232006	Washer		1M 03
232037	Sealing washer		10 11
232038	Joint washer		1H 07
23203 9	Joint washer		ic ii
232040	Washer		10 11
			1C 04
232044	Washer		1J 02
232074	Spring post		13 02
232107	Washer		
232415	0il thrower		1G 04
232425	Clip		1L 16
232464	Pin		1G 12
232497	Stud		1G 08
232557	Nipple		1H 07
232565	Retaining plate		1G 07
23 2566	Retaining plate		2D 10
232604	Grommet		1G 02
232608	Plate		1G 10
232647	Centre for dust co	ver	1G 02
232813	Knob		1G 12
23284 6	Pinion insert		1G 08
233017	Shakeproof washer		2D 10
233211	Spring		1J 03
233220	Washer		1K 02
233241	Locking dog		1G 09
233243	Rubber grommet		2D 10
233244	Grommet		21 13
233274	Clip		1K 05
2333 26	Spring chain tensi	oner	1C 05
233328	Retainer		1E 06
2333 98	Shaft		1G 13
233406	Selector shaft blo	ck	1G 12
233407	Coupling		1G 12
23340 9	Shouldered pin		. 1G 12
23 3416	Shaft		1G 12
23341 9	Rubber ring		1D 13
233437	Bush		1G 13
233 438	Tube		1G 13
233441	Plug		1G 13
2334 49	Spring		1G 12
233520	Banjo bolt		1D 06
2335 66	Grommet		2J 05
233625	Shackle pin		1H 15
233677	Shim		1H 08
233678	Shim		1H 09
233770	Clip		2D 07
	•		

PART NUMBER	DESCRIPTION	0CC NO
		REF.NO.
234532	Nipple	1H 07
234603	Bolt (2BA X 1/2in)	1L 10
234658	Collar	1G 12
234835	Shim	1G 07
234889	Spring	13 03
234928	T piece	1K 02
235113	Grommet	2D 11
235416	Plunger	1G 13
235438	Low gear	1G 07
235455	Shim	1G 08
235592	Plug	1G 08
235726	Chainwheel	1E 03
235731	Locker	2H 04
235770	Key	10 03
235968	Retainer	1H 05
235985	Rear outpost shaft	1G 07 1C 11
236022	Joint washer	
236060	Union	1C 08 1C 05
236067	Idler wheel	1H 03
236070	Drain plug	1H 08
236072	Mudshield	1G 07
236074	Mudshield	10 07 10 05
236173	Pistongring	10 05
236174	Piston ring	1D 05
236175	Piston ring	1D 05
236176	Piston ring	1D 05
236257 236281	Dowel Grommet	1G 02
236305	Seal	1G 04
236365	Harness clip	2J 04
236366	Clip	2D 07
236389	Grommet	11 05
236407	Union nut	10 08
236408	Olive	10 08
236541	Retainer	1G 09
236546	Mudshield	1H 08
236547	Retainer	1H 08
236548	Mudshield	1G 09
236630	Flange	1G 07
236632	Mudshield	1H 08
236658	Pedal shaft	1N 02
236665	Accelerator shaft bracket	1N 02
236891	Bowl	11 09
236895	Joint washer for bowl	1M T1
236896	Bowl only	וו או
236969	Shackle pin	1H 15
236993	Anchor for brake shoe	1J 02
236995	Locking plate	1J 02
236998	Accelerator shaft bracket	IN 02
237100	Check strap	2F 02
237119	Set bolt (2 BA X 3/8 in)	10 11
237121	Bolt 2BA X 5/8 in long	1L 13
237138	Plug	11 07
237139	Bolt 1/4 in BSF X 1/2 in	1G 10

PART NUMBER	DESCRIPTION	REF.NO.
237160	Bolt (5/16in BSF Xin)	1G 11
237161	Bolt (5/16in BSF X 5/8in)	1K 09
23717 9	Bolt (3/8in BSF X 1 1/8in)	1K 07
237251	Stud	16 08
237279	Cable clip	23 04
237324	Bolt (5/16in BSF X 7/8in)	1F 04
237339	Bolt 3/8in BSF X lin	1H 09
237340	Bolt (3/8in BSF X 1 1/4in)	1H 03
237357	Set bolt (7/16in BSF X 1.3/8in)	1H 03
238180	Relay lever assy	1J 06
238329	Link	IG 13
238542	Special screw	1J 02 1H 04
238553	Cone bearing for swivel pin top	1N 06
238793	Bearing Retainer	10 09
238871 23 9 017	Swivel pin	14 03
239272	Split ring	1G 04
239449	Bracket	1D 03
239558	Cable battery to earth	2E 03
239564	Speedometer miles	2D 10
239565	Speedometer kilometres	28 10
239600	Clip	2D 10
239673	Clip	1N 08
239688	Lead	3E 08
239716	Bracket	1N 13
240102	Acorn nut	2E 02
240234	Retainer for bowl	IM 11
240235	Screw cap for retainer	1M 11
240406	Clip	2D 07
240407	Clip	2D 10 2C 03
240408	Rubber boot	20 03 20 10
240417	Clip Cleat	2C 06
240428 24042 9	Cleat	2C 06
240431	Cable cleat	11 04
240555	Driver gear - oil pump	10 04
240708	Anchor for spring	13 07
240829	Shaft hand brake lever	1J 06
240836	Screw driver	2J 07
240908	Panel light switch	2D 10
241090	Linings with rivets	1J 02
241223	Gauze for bowl	1M 11
241283	Spring	1H 15
241380	Rubber buffer	2F 02
241387	Felt washer	20 10
241388	Thrust washer	11 07
241445	Spring	1H 15
241446	Spring	1H 15 1G 11
241598 241649	Plate Distance piece	1G 05
241650	Distance piece	1G 05
241651	Distance piece	1G 05
241690	4 way piece	1K 02
241839	Locker	1G 08

PART NUMBER	DESCRIPTION	REF.NO.
241958	Retaining ring	2K 14
242108	Plunger	1K 07
242109	Washer	1K 07
242117	Washer	13 02
242127		13 02 1H 15
	U bolt	1M 04
242319 242375	Adaptor	1M 04
242375 242399	Joint washer Filler cap for alternator	10 02
242520	Stub shafr	1H 03
242522	Circlip	1H 07
242669	Bracket	2C 10
242675	Bolt	2C 10
242742	Spring for cone bearing	1H 04
242863	Spring	1H 15
242958	Bush	2C 04
242996	Eyebolt	1F 02
243022	Plain washer	1H 14
243095	Grease cap	2C 04
243121	Main leaf	1H 15
243123	Main leaf	1H 15
243124	2nd leaf	1H 15
243126	2nd leaf	1H 15
243130	Dowel	1H 15
243131	Dowe 1	1H 15
243395	Clip=	1L 10
243611	Shaft	1G 09
243618	Stud	2 1 12
243714	Spring	1G 13
243873	0il thrower	1G 09
243958	Washer	1C 08
243959	Joint washer	1C 02
243960	Joint washer	1E 14
243967	Joint washer	1L 09
243968	Joint washer	1C 02
243970	Washer	1C 04
243971	Joint washer	1D 06
243972	Joint washer	10 13
244150	Bearing for halfshaft	1H 03
244151	Distance piece for brg	1H 03
244162	Plate	1H 15
244163	Plate	1H 15
244487	Lock washer	1C 04
244488	Sealing ring	1C 04
244700	Bulb holder	2D 02
244705	Cover band	2C 04
244706 244709	Bracket	2C 04 2C 04
244709 244711	Nut for pinion Pinion & sleeve	2C 04 2C 04
244713	Bracket	2C 04
244713 244714	Bracket Bush	2C 04
244715	Armature	2C 04
244717	Bolt	2C 04
244718	Sundry parts kit	2C 04
245003	Clamping plate	2C 02
245008	Distributor cam	2C 02
F 10000	DISCIPLICA COM	

PART NUMBER	DESCRIPTION	REF.NO.
245131	Hinge centre	2H 04
245258	Economiser union	1M 03
245261	Oil cap	1M 02
245266	Union	1M 03
245278	Union	1M 03
245279	Banjo	1M 03
245295	Union	1M 02
245384	Clip for condenser	1M 08
245766	2nd speed gear	1G 04
245767	3rd speed gear	1G 05
245940	Plunger	1D 06
246169	Seal ring	1F 02
246464	Dowel	1C 03
246565	Anchor plate	1J 03
246566	Anchor plate	1J 03
246569	Lining with rivets	1J 03
247040	Spring	1E 07
247051	Bolt (1/2in UNF X 4.9/16in)	1E 11
247070	Joint washer for cover	10 05
247078	Special set bolt	1C 09
247121	Special nut	1C 10
247127	Plug	10 02
247135	Bolt (7/16in UNF X 7/8in)	1F 02
247143	Stud	ie ii
247144	Stud	10 10
247145	Stud	1F 05
247146	Stud	1F 02
247153	Washer	1E 07
247166	Special bolt	1F 05
247175	Stud	1F 02
24717 9	Joint washer	1L 10
247186	Sealing ring inlet valve guide	10 10
247199	Special bolt	1C 05
247212	Joint washer	20 03
247213	Clamp	1L 10
247526	Flywheel housing	1F 02
247554	Joint washer	10 08
247555	Joint washer	10 08
247583	Bush	1E 04
247607	Stud	1E 07
247614	Bush valve rocker	10 06
247624	Cover for rubber washer	1C 10
247631	Engine breather filter	ic ii
247634	Tappet clearance plate	10 10
247651	Exhaust manifold	1E 14
247653	Bush	10 04
247664	Oil filter oil pump	10 04
247665	Lockwasher	1C 04
247683	Bolt	1E 11
247709	Camshaft	1C 05
247715	Bracket	18 12
247723	Bolt	1E 11
247726	Nozzle	1L 10
247737	Bush	1E 07
27/13/	מכעם	IL U/

PART NUMBER	DESCRIPTION	REF.NO.
247738	Bush	1E 07
247742	Circlip	1C 04
247755	Set bolt (9/16in UNF X 3 1/4in)	1C 02
247758	Spring washer	1C 02
247766	Mud excluder	1C 07
247771	locker	1C 03
247802	Joint washer	1L 09
247806	Driving shaft	2C 03
247811	Butterfly valve	10 13
247818	Bi-metal spring	10 13
247819	Stop pin	1C 13
247824	Joint washer	1C 13
247861	P1ug	1C 02
247912	Piston chain adjuster	1E 06
247916	Impellor	1C 09
247929	Union	1L 09
247952	Lead	1E 12
247953	Lead	1E 12
247965	Plug	10 02
248720	Bolt (1/2in BSF X 2 in)	1G 02
249473	Circlip	1H 13
250431	Wing nut	2F 02
250517	Bolt (1/4in BSF X 1 1/2in)	1I 08
250543	Bolt (3/8in BSF X 1 1/2in)	2C 07
250544	Bolt (3/8in BSF X 1 3/4in)	1G 08
250551	Bolt (3/8in BSF X 3 1/2in)	1H 15
250693	Bolt (1/4in BSF X 5/8in)	1G 11
2506 96	Bolt (1/4in BSF X lin	1H 05
250830	Core plug	1C 10
250840	Core plug	1C 02
250962	Bolt (2BA X 7/8in)	1N 08
251002	Set bolt (2BA X 7/8in)	10 11
251018	Bolt (2BA_X 9/16in)	16 11
251320	S.L. nut 1/4 in BSF	1F 07
251321	S.L. nut 5/16 in BSF	1F 07
251322	S L nut 3/8 in BSF	1J 02
251323	Nut (7/16in BSF)	1H 15
251324	Nut (1/2in BSF)	1G 02
251335	S.L. nut 2BA	1G 09
251601	Nut (5/16in BSF)	1G 12
252164	Nyloc nut 1/21n UNF	1H 14
252165	Nut (9/16in UNF)	1H 15
252210	Self locking nut (1/4in UNF)	1I 08
252220	Nut (1/4in UNF)	1N 12
252497	Stud	1D 13
252500 252503	Stud	10 07
252501 252514	Stud	1D 13
252514 252515	Stud	1C 12 1D 13
252515 252621	Stud	10 13 10 02
252621 252622	Stud Stud	1C 02
252623	Stud	10 02 10 16
252623 252627	Stud Stud	1D 03
252627 252638	Stud Stud	10 03
232030	Stud	10 03

PART NO	DESCRIPTION	REF.NO.
253003	Set bolt (1/4in UNC X 7/16in)	1D 13
253029	Bolt 5/16 in UNC X 1.1/8 in Bolt (1/4in UNC X 9/16in)	1N 11 2C 03
25320 5 253405	Set bolt (3/8in UNC X 3/4in)	1N 12
25340 6	Set bolt (3/8in UNC X 7/8in)	1N 12
253817	Bolt 7/16in UNF X 6.1/2in	1H 14
2538 26	Bolt 7/16in UNF X 7.1/4in	1H 14
253905	Bolt (3/8in UNF X 5/8in)	1E 12
254823	Nut (7/16in UNF)	2C 09
254850 254852	Special locknut 1/4 in UNF	1N 05 1K 02
254652 254911	Special nut (3/8in UNF) Nut (5/16in UNF)	1E 08
255003	Bolt 1/4in UNF X 7/16in	in 11
255029	Set bolt (5/16in UNF X 1.1/8in)	1C 13
255030	Bolt (5/6in UNF X 1 1/4in)	1F 08
255050	Bolt 3/8in UNF X 1.3/8in	1I 06
255202 355304	Bolt (1/4in UNF X 3.8in)	1J 08 1C 05
25520 4 255205	Set bolt (1/4in UNF X 1/2in) Bolt (1/4in UNF X 9/16in)	1L 12
25520 6	Bolt (1/4in UNF X 5/8in)	10 12
255207	Bolt (1/4in UNF X 3/4in)	1C 09
255208	Bolt (1/4in UNF X 7/8in)	1C 03
255211	Bolt (1/4in UNF X 1 1/4in)	1N 02
255219	Bolt 1/4 in UNF X 2.1/2 in	2I 09 IN 14
255220 255223	Self locking nut (1/4in UNF) Bolt (5/16in UNF X 1/2in)	1N 02
255227	Set bolt (5/16in UNF X 7/8in)	1C 04
255229	Bolt (5/16in UNF X 1.1/8in)	2G 10
255237	Bolt (5/16in UNF X 2 1/4in)	2C 13
255245	Bolt (3/8in UNF X 3/4in)	1N 15 1F 02
255248 255249	Bolt (3/8in UNF X 1.1/8in) Bolt (3/8in UNF X 1.1/4in)	1K 08
255288	Screw 1/2 in UNF x 1.3/8 in	2F 07
255426	Bolt (5/16in UNF X 3/4in)	2C 13
255427	Bolt (5/16in UNF X 7/8in)	1F 02
255428	Bolt (5/16in UNF X lin)	2C 13
256004 256025	Bolt (1/4in UNF X 1.5/8in) Bolt (5/16in UNF X 1.7/8in)	10 12 10 10
256025	Bolt (3/8in UNF X 1.3/8in)	1F 02
256203	Bolt 1/4iin UNF X 1.1/2 in	1N 10
256223	Bolt (5/16in UNF X 1.5/8in)	1F 10
256233	Bolt (5/16in UNF X 3.3/4in)	1C 09
256280	Bolt 1/2 in UNF X 1.5/8 in	2F 07
256295 256410	Bolt (1/3in UNF X 5in) Bolt (1/4in UNF X 2 3/4in)	2L 09 1D 12
256421	Bolt (5/16in UNF X 1.3/8in)	2C 10
256 429	Bolt (5/16in UNF X 2 3/4in)	1C 13
256801	Nut (5/16in UNC)	1N 06
257004	Bolt (10 UNF X 7/16in)	1E 08
257015 257017	Bolt (10 UNF X 3/8in)	2E 05 1M 04
257017 25701 9	Bolt (10 UNF X 1/2in) Bolt 10 UNF X 5/8 in	2E 04
257022	Bolt 10 UNF X 1 in	2F 11
257023	Nut 10 UNF	TM 04

PART NO	DESCRIPTION	REF.NO.
260140	Special screw	1L 02
260166	Banjo union	1L 04
260167	Special bolt	1L 04
260585	End plate	1M 08
260707	Screwed union	1L 02
260708	Olive	1L 02
260714	Spring washer	1L 04
260725	Needle valve	1L 04
260823	Steel ball	11 03
261238	Spring set	2C 10
261252	Rubber grommet	2D 02
261414	Seal	1L 08
261483	Brush set dynamo	2C 10
261503	Wiper arm	2D 13
261850	Bush for rocker shaft	11 02
261857	Joint washer	11 02
261858	Joint washer	11 02
261862	Main nut assy	1I 03
261865	Main nut assy	11 03
261869	Roller for main nut	11 03
261873	Adjuster screw	11 03
261874	Locknut	1I 03
262303	Spring washer	1M 08
262305	Lead washer	1M 08
262307	Terminal screw	1M 08
262309	Terminal nut	1M 09
262313	Special screw	1L 03
262342	Light unit	20 02
262468	Splined end	1H 07
262469	Flange	1H 07
262703 262860	Bush and spring Field coil	20 02
263878	Sleeve	2C 10 1G 05
264024	Plain washer	16 05 1H 14
264250	Mainshaft	1G 04
264362	Spring restrictor	1N 02
264563	Spring	1H 15
264569	Gudgeon pin	1D 05
264591	Bulb	2I 13
264767	Sealing washer	13 10
264782	Bulb holder	2D 02
264806	Spring	1F 07
264807	Fork	1F 07
265038	Banjo bolt	1D 06
265169	Gudgeon pin	10 03
265175	Circlip	1C 03
265295	Roof Tamp	21 13
265461	Dowel	1H 15
265482	Lead	21 13
265569	Bush	1F 07
265627	Spring	1H 15
265642	Plate	1H 15
265779	Dowel	10 03
265969	Bush	1F 07

PART NUMBER	DESCRIPTION	REF.NO.
266321	Valve seat insert	10 13
266661	Tensioner	10 07
266 662	Camshaft chain	1D 07
266684	Wheel cylinder kit	1J 03
266687	Wheel cylinder kit	1J 02
266694	Slave cylinder	1F 08
266752	Swivel pin kit	23 02
266900	Oil strainer	1D 06
266945	Circlip	1E 04
266955	Distance piece	1G 1:3
266956	Dust cover	1G 09
266992	Seal	1G 12
267193	Shaft hand brake lever	1J 06
267412 267451	Anchor for spring	1J 07 1C 05
267494	Spring chain adjuster Fuel sediment bowl complete	16 03 1M 11
267572	Thrust washer	1G 04
267573	Thrust washer	1G 04
267574	Thrust washer	1G 04
267575	Thrust washer	1G 04
267601	Banjo bolt	1J 11
267721	Joint washer for union	1M 12
267782	Joint washer	1G 07
267828	Sealing washer	10 10
26782 9	Drive shaft	1D 06
267837	Joint washer	1L 18
268053	Bearing Value coming com	1F 07
268 292 268 293	Valve spring cap Split cone for valve halves	1C 06 1C 06
268791	Sleeve	1G 07
268793	Body only	im 11
268847	Lever	1G 12
268849	Housing	1G 09
268883	Clip	2D 12
268887	Filter sealing ring	16 11
269132	Stop clip	1N 02
269257	Grommet	2J 05
269265	Halfshaft complete for front axle R H	1H 03
269266	Halfshaft complete for fornt axle L H	1H 03
269267	Track rod assy	11 07
269269	Track rod only	11 07
269413 269783	Stud	1G 02
269889	Distance piece Rubber washer	1J 08 1C 11
269960	Casing assy	1G 03
270105	Olive	1L 10
270115	Nut (1/4in BSP)	11 10
270235	Circlip	20 08
270251	Sundry parts kit	2C 08
27028 7	Rocker	1H 04
270297	Bracket	1L 13
270420	Battery bolt	2F 02
270520	Plate	1H 15
270521	Plate	1H 15
27065 6	Tube of silicone grease loz	10 03

PART NO	DESCRIPTION	REF.NO.
270741	Shackle pin	1H 15
271013	0 ring	11 03
271014	Washer	11 03
271367	Inner column	11 02
271368	Inner column	11 02
271372	Rocker shaft	11 03
271378	End plate	11 03
271379	Joint washer	11 02
271380	Bolt (5/16in UNC X 29/32in)	11 02
271382	Bolt (5/16in UNC X 1.1/16in)	11 03
271384	Adjustable race	11 03
271386	Plug	11 03
271614	Bush	2C 10
271872	Elbow	1L 18
271881	Peg	1E 11
271931	Lens	2D 08
272181	Side cover plate	11 03
272185	Bracket	1G 08
272309	Road wheel	1H 16
272451	Gallery pipe	1D 03
272452	Water pipe	1D 03
272474	Joint washer	1L 10
272498	Engine mounting	1C 14
272501	Engine mounting	1C 14
272506	Engine mounting	1C 14
272512	Grommet	1L 10
272539	Gasket - oil filter	10 11
272596	Sea 1	1G 11
272597	Seal	1G 11
272632	Pedal bracket	1J 08
272712	Shaft pedal	1J 08
272713	Pedal bracket cover	1J 09
272714	Bush for pedal	1J 08
27272 9	Return spring	13 10
272749	Bolt	1D 03
272784	Indicator	1F 02
272804	Bracket pedal shaft	1N 02
272819	Gasket	1J 09
272835	Joint washer	1D 09
272922	Locker	1H 09
272934	Set_bolt	1H 09
273069	Sealing washer	10 10
273077	Clutch shaft & lever	1F 09
273163	Bush	1D 05
273166	Plug	1C 02 1D 09
273306	Rocker shaft	10 09
273307	Rocker shaft	1D 09
273308	Spacing washer	10 09
273309	Spacing washer	2D 10
273370	Split rubber grommet	1H 09
273441	Diff case assy	1L 09
273521	Banjo bolt	10 04
273711	Plunger	1H 13
27 3883	Sleeve	,,,

PART NUMBER	DESCRIPTION	REF.NO.
273937	Inspection lamp socket red	20 10
273964	Ball end	1M 03
274084	Housing assy	1D 06
2740 86	Special screw	1D 06
27408 9	Nut (5/16in UNF)	1D 14
2740 91	Special nut	10 10
274093	Bolt (3/8in UNF X 29/32in)	1D 13
274100	Plate	1D 14
274104	Joint washer	10 15
274115	Bearing	10 07
274116	Bearing	1D 07
274117	Bearing	1D 07
274118	Special screw	10 07
274145	Swivel pin & steering lever R H	1H 03
274146	Swivel pin & steering lever R H	1H 03
274147	Swivel pin & steering lever L H	1H 03
274148	Swivel pin & steering lever L H	1H 03
274378	Adaptor	2D 02
274379	Headlamp rim	2D 02
274423	Brake drum	1J 07
274469	Check strap	2F 02
274609	Joint washer	1D 15
274711 274737	Camshaft	1E 06
	Distance piece	1D 12
274772	Rocker	1E 07
2747 7 3 27477 4	Rocker	1E 07 1E 07
274774 274775	Rocker Rocker	1E 07
274775	Oil feed bolt	1D 06
274963	Throttle stop	1M 02
274964	Gland washer	1M 02
274965	Spring	1M 02
274966	Gland washer	1M 02
274967	Retainer cap	1M 02
274979	Spring	1M 03
274980	Top plate	1M 03
275199	Clevis fork end	1J 06
275234	Vibration damper	1C 05
275238	Flange	2K 08
275265	Joint washer	1L 10
275266	Banjo bolt	1L 10
2755 65	Joint washer	1L 09
27567 9	Pipe	1E 12
275 7 06	Housing	1N 09
27570 9	Lever and ball end	1N 09
275713	Quadrant platé	1N 09
275714	Bush	JN 09
275715	Washer	1N 09
275744	Wheel cyl kit	1J 02
275769	011 pipe	1C 11
27583 6	011 pipe	10 03
276013	Lever	1N 09
276014	Control rod	1N 09
276015	Joint pin	1N 09
276034	Spring	1H 15

PART NUMBER	DESCRIPTION	REF.NO.
276053	Grommet	2J 05
276054	Grommet	2J 05
276133	Chainwheel	1E 06
276201	Nipple	1H 07
276317	Stop tail lamp	2D 02
276322	Plug spanner	2J 07
276323	Plug spanner extension	2J 07
276396	Spanner	2J 07
276397	Spanner	2J 07
276426	Hose	11. 08
276482	Castle nut (7/16 UNF)	11 07
276484	Rubber gaiter assy	1H 02
276511	Bracket	1F 02
276541	Joint washer	1D 07
276719	Halfshaft only R H	1H 03
276720	Halfshaft only L H	1H 03
276784	Steering tube	1I 08
277103	Accelerator shaft housing	1N 02
277105	Accelerator lever assy	1N 02
277106	Lever assy	1 N 03
277120	Bush	1N 03
277153	Pedal shaft	1N 02
277154	Accelerator cross shaft	1N 02
277217	Spanner	2J 07
277259	Filler tube complete	1L 17
277260	Filler cap	1M 10
277261	Filler tube	1M 10
277262	Extension for filler tube	1M 10
277311	Locker	1H 05
277320	Spanner	2J 07
277388	Cylinder - chain adjuster	1C 05
277450	Bell crank	1N 08
277453	Bush	IN 08
277454	Pin - bell crank	1N 08
277455	Retrun spring	1N 03
277473	Acc lever	1N 07
277475	Accelerator lever	IN 02
277478	Engine stop control	IN 08
277490 277491	Square nut (1/4in UNF)	1M 10 1M 10
277502	Locking plate	1M 10
277532	Spring Stud	1F 05
277565	Anchor	1N 08
277593	Inlet valve	10 06
277612	Acc lever	1N 08
277778	Nut	1N 07
277779	Control rod	1N 07
277840	Support bracket reservoir lank	1J 10
277921	Brake rod	1J 06
277922	Brake pipe	2L 14
277923	Brake pipe	1K 02
277929	Pipe tank to master cylinder	13 11
277930	Pipe 3/16 in clutch master cylinder to hose	10 11
277956	Dowel	10 06
_ _		

PART NUMBER	DESCRIPTION	REF.NO.
277961	Bell housing	1G 02
277999	Bracket	2C 10
278000	Steady bracket	2C 10
278002	Strap	1L 10
278010	Clip	2D 10
278020	Brake rod	1J 06 1L 10
278021	Strap	1G 07
278025	Shaft	10 04
27810 9 278161	Idler gear - oil pump Liner	10 13
278162	Packing	1C 12
278163	Joint washer	1C 12
278164	Plug	1D 13
278386	Special screw	1N 09
278490	Cable clip	2J 04
278690	Return spring	1F 10
278698	Check strap	2F 02
279014	Brake shoe starter	2C 08
279015	Driving washer	2C 08 2C 09
279019	Bolt for starter motor	1C 13
279168 279169	Spindle Weight	10 13
279169	Speedometer - miles	2D 10
279341	Speedometer - kilometres	2D 10
279412	5 way piece	1K 02
279413	Plug	1D 03
279415	Plug	1D 03
279418	Brake pipe	1K 03
279452	Brake pipe	1K 03
279648	Special set bolt	1C 10 1C 10
279650	Set bolt (1/2in UNF X 6 11/16in)	1L 08
279651	Elbow Air cleaner	1L 08
279652 279653	Hose clip	1L 08
279678	Spring	1H 15
27967 9	Spring	1H 15
279702	Plugs	1L 09
279969	Plate	1H 15
279970	Plate	1H 15
300692	Bonnet fastener	2L 17
300693	Staple	2L 17
300715	Clip	11 05 11 05
300716 300783	Rubber strip Rivet	2G 03
300784	Rivet	2G 08
30078 9	Rivet	2G 03
300816	Grab handle	2F 0 2
300824	Bonnet rest strip 35in long	10 04
300851	Turnbuckle	2F 10
300924	Staple for hood	2G 03
301005	Hook	21 14
301437	Seal Baral	2F 09 2I 14
301470 301476	Panel	2I 14
301476	Rod	F7 14

302177 Weather strip 2 302178 Filler strip 2 302186 Rivet 2 302222 Rivet 2 302229 Rivet 2 302371 Rubber washer 2	2G 02 2G 11 2G 11 2G 03 2F 12 2I 15 2G 11 2F 09 2I 14 2G 11 2G 03 2G 03
302177 Weather strip 2 302178 Filler strip 2 302186 Rivet 2 302222 Rivet 2 302229 Rivet 2 302371 Rubber washer 2	2G 11 2G 11 2G 03 2F 12 2I 15 2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
302178 Filler strip 302186 Rivet 302222 Rivet 302229 Rivet 302371 Rubber washer	2G 11 2G 03 2F 12 2I 15 2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
302186 Rivet 2 302222 Rivet 2 302229 Rivet 2 302371 Rubber washer 2	2G 03 2F 12 2I 15 2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
302222 Rivet 2 302229 Rivet 2 302371 Rubber washer 2	2F 12 2I 15 2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
302229 Rivet 2 302371 Rubber washer 2	2I 15 2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
302371 Rubber washer 2	2G 11 2G 11 2F 09 2I 14 2G 11 2G 03
	2G 11 2F 09 2I 14 2G 11 2G 03
	2F 09 2I 14 2G 11 2G 03
	2I 14 2G 11 2G 03
	2G 11 2G 03
	2G 03
	2F 13
	2G 02
	2G 02
	2G 08
	11 05
	2D 13
	2F 08
303750 Special bolt	10 04
303809 Rubber interior	2I 12
	2F 09
	2F 09
I mile mile i estable	2G 02
· · · · · · · · · · · · · · · · · · ·	2F 10
the state of the s	2G 08
	2F 05
	11 03
· · · · · · · · · · · · · · · · · · ·	11 03
	11 03
	21 12
The same of the sa	2F 05
	2H 04
	2G 04
	2G 08
	2G 04 2H 03
	2n 03 2I 12
aller and the state of the stat	21 12
	2G 03
	21 03
	2F 08
	2F 08
	2F 08
	2F 06
	2H 02
	21 12
307419 Finisher	21 12
307420 Finisher	21 12
	2H 05
	2F 13
	2I 10
	2I 10
308206 Tread plate	2G 05

PART NUMBER	DESCRIPTION	REF.NO.
310877	Rubber buffer for front apron panel	10 04
311373	Shakeproof washer	2E 02
312027	Buffer	2H 10
312028	Rubber buffer	2I 12
312856		21 13
	Gronnet	
312937	Grommet	ln 09
313385	Nut	1L 17
314203	Screw	2F 14 2I 02
314394	Spire nut	
3152 64 32004 5	Clip Special helt	21 10
320045	Special bolt	2F 10
	Rear seat backrest assy	2I 14
320276	Diesel badge	10 05
3 20333 320500	Fixing bracket for badge	10 05
320500	Circlip	2F 07
	Seat base	21 14
320604	Tailboard	2F 03
320608 320609	Lens	21 13
	Barrel lock	2H 02
320633	Anchorage kit	21 08
320634	Anchorage kit	80 15
320635	Anchorage kit	21 08
320636	Anchorage kit	21 08
320637	Anchorage kit	21 08
320638	Anchorage kit	21 08
320658	Rear body complete assembly	2G 04
320674	Cushion	21 14
320 679	Trim casing	21 03
320682	Sidelight casing	21 02
320683	Sidelight casing	21 02
320684	Sidelight casing	21 02
320685	Sidelight casing	21 02
320686	Cant rail trim	21 02
320687	Cant rail trim	21 02
320698	Seat squab	21 06
320 699	Cushion	21 06
320701 320702	Seat squab	2I 06
	Seat squab	2I 06
320703 320708	Seat backrest	21 12
32070 9	Seat squab	2I 06 2I 06
320710	Seat squab	
320711	Seat squab	21 06
320712	Cant rail trim Cant rail trim	21 04
320712	Door trim	21 04 21 05
320714	Door trim	21 05
320715	Door trim	21 05
320716	Door trim	21 05
320719	Cushion	2I 15
320726	Cushion	21 07
320743	Seat cushion	2I 07
320826	Cushion	21 12
320853	Sidescreen assy	2F 12
320854	Sidescreen assy	2F 12
320857	Rear side door assy	2F 14
050001	vear side door assy	41, 14

PART NUMBER	DESCRIPTION	REF.NO.
320858	Rear side door assy	2F 14
320863	Rear body comp assy	2G 02
320864	Bonnet assy	2L 17
320902	Ball joint assy	11 07
320903	Track rod assy	2L 02
330037	Floor plate	2F 09
330038	Floor plate	2F 09
330061	Ventilator hinge	2F 06
330069	Gearbox cover	2F 09
330113	Door lock	2F 14
330122	Capping	2F 12
330123	Capping	2F 12
330143	Cover plate	2F 05
330144	Cover plate	2F 04
330145	Body capping	2G 05
330146	Support bracket	2E 13 2F 03
330147	Fixing plate	10 05
330149 330150	Grille for radiator	10 03
330162	Support clip for grille mesh Buffer	2F 12
330163	Sealing strip	2F 12
330198	Retainer	2F 12
330202	Filler	2F 12
330203	Filler	2F 12
330208	Strengthening member	2G 02
330212	Rubber strip	2G 02
330214	Side and wheelarch	2G 02
330215	Side and wheelarch	2G 02
330237	Corner bracket	2G 03
330238	Corner bracket	2G 03
330245	Capping	2G 03
330248	End panel	2G 02
330249	End panel	2G 02
330265	Crossmember	2G 02
330267	Rear floor	2G 02 2G 02
330271	Rear mounting angle	
330279	Strengthening angle	2G 03 2G 02
330295 330296	Side panel Side panel	2G 02
330303	Stay	2G 02
330304	Stay	2G 02
330315	Rear corner capping	2G 03
330316	Rear corner capping	2G 03
330326	Sill panel	2F 11
330327	Sill panel	2F 11
330333	Fixing plate	2F 11
330336	Sill panel	2F 11
330337	Sill panel	2F 11
330347	Grommet	2F 10
330348	Retainer	2F 10
330349	Cover plate	2F 10
330366	Cowl	2G 02
330367	Cover plate	2G 02 2F 11
330380	Sill channel	2F 11
330381	Sill channel	4F 11

PART NUMBER	DESCRIPTION	REF.NO.
3303 99	Chain	2G 03
330419	Buffer	2G 03
330422	Sleeve for chain	2G 03
330426	Outer panel	2F 03
330427	Outer panel	2F 03
330436	Front panel	2F 03
330437	Front panel	2F 03
330442	Strengthening angle	2G 05
330443	Panel	2G 03
330444	Mudshield	2F 04
330445	Mudshield	2F 04
330447	Mudshield	2F 04
330448	Mudshield	2F 04
330459	Cover box	2F 04
330460	Cover box	2F 04
330468	Mounting angle	2G 04
330534	Panel Panel	2G 03
330548	Bracket for striker	2F 03
330582	Body side panel	2G 05
330585	Sill panel	2F 11
33058 6	Sill panel	2F 11
330602	Wheel housing	2G 04
330615	Tread plate	2G 05
330616	Cover plate	2G 04
330617	Rear floor	2G 04
330621	Sealing rubber	2F 07
330660	Sealing rubber	2F 12
330661	Channel	2F 12
330663	Side and wheelarch	2G 04
330667	Retainer	2F 07
330668	Retainer	2F 07
330669	Retainer	2F 07
330717	Tread plate	2G 05
330788	Retainer	2G 11
33078 9	Retainer	2G 11
330824	Nut plate	2G 05
330832	Capping	2G 03
330833	Capping	2G 03
330840	Capping	2G 05
330841	Capping	2G 05
330848	Runner	2G 09
330850	Filler piece	2F 08
330 953 330 954	Special bolt Cone bush	2F 13 2F 13
330955	Spring	2F 13 2F 13
330956	Lockwasher	2F 13
330 95 7	Nut	2F 13
330958	Rear body complete assembly	2G 04
33100 6	Seat support	21 06
331007	Seat support	21 06
331008	Seat support	21 06
331071	Clip	21 03
331083	Plug	21 06
331102	Seat slide	21 06
331103	Seat slide	21 06
2230		

PART NUMBER	DESCRIPTION	REF.NO.
331104	Seat slide	21 06
331122	Pivot bracket	21 12
331149	Seat backrest	21 12
331168	Bracket	21 02
331170	Stud	21 06
331179	Sidelight casing	21 02
331180	Sidelight casing	21 02
331186	Sidelight casing	21 02
331187	Sidelight casing	21 02
331193	Bracket	21 02
331196	Side rail	21 02
331203	Fixing strip	21 02
331216	Siderail	21 04
331229	Seat frame	2I 14 2I 07
331272	Strap	2I 07 2I 06
331273	Strap	21 02
331390	Outer bracket	21 02
331391	Centre bracket	2I 02 2I 13
331401	Rubber mat	21 06
331466	Frame	2I 12
331478	Support	21 12
331479	Support	21 05
331480 331481	Retainer	21 05
331491	Floor mat Roof trim	2 I 02
331497	Cant rail trim	21 02
331498	Cant rail trim	21 02
331508	Head cloth	21 02
331547	Side strip	21 04
331589	Cant rail trim	2 I 04
331590	Cant rail trim	2I 04
331605	Headcloth	21 04
331607	Trim panel	21 02
331610	Headcloth	21 04
331616	Cover	21 10
331638	Door trim	21 03
331646	Seat frame	2I 14
331647	Seat frame	2I 14
331669	Retainer	21 05
331670	Floor mat	21 05
331699	Buffer	2I 14
331708	Bolt (5/16in UNF)	2I 10 2I 06
331709	Bolt	2I 06
331718	Bracket	2 I 06
331719	Bracket	21 06
331818 331833	Bracket Cushion	21 14
331835	Pad	21 14
331973	Strap	21 07
331974	Strap	21 07
332028	Stiffener	2G 11
332065	Stud plate	2G 09
332081	Nut plate	2G 09
332098	Wing nut	2F 08
332146	Buffer	2G 03
	ou 16	

PART NUMBER	DESCRIPTION	REF.NO.
332147	Dovetail	2H 03
332151	Retainer	2H 04
332194	Tropical roof	2G 11
332198	Roof and tropical roof assy	2G 11
332201	Bracket	2G 09
332215	Seal	2 G 10
332216	Packing strip	2G 09
332230	Retainer	2G 09
332240	Retainer	2G 11
332280	Retainer	2G 09
332281	Retainer	2G 09
332282	Retainer	2G 09
332283	Retainer	2G 09
332284	Retainer	2G 09
3 3 2293	Special washer	2G 10
332306	Side panel assy	2G 09
332307	Side panel assy	2G 09
332 32 4	Catch	2G 09
332325	Catch	2G 09
332327	Knob and screw	2F 07
332329	Tapped plate	2G 09
332355	Strap	21 10
332376	Bracket	21 10
332400	Washer plate	2F 03
332401	Bonnet control	2F 03
332435	Window catch	2F 15
332445	Hook for chain	2G 08
332446	Hook for chain	2G 08
332451	Nut plate	2G 02
332466	Instrument panel	2D 10 2F 13
332484	Support bracket	2F 13
332485	Support bracket	2F 04
332503 332521	Stud plate	2G 02
332524	Stay Sattony bolt	2F 02
332550	Battery bolt Buffer	2F 08
332563	Seal	2H 03
332564	Rubber seal	2H 03
332565	Protection strip	2G 03
332566	Seal retainer	2H 03
332581	Stay	2F 04
332582	Mounting pad	2G 02
332588	Tie bar	2F 08
332589	Fixing plate	2F 03
332603	Bolt plate	2F 11
332625	Striker pin	2F 03
332647	Buffer	2F 06
332670	Nameplate	2G 03
332672	Bracket assy	2G 05
332674	Rubber strip	2G 05
332715	Rod	2F 08
332729	Packing piece	11 05
332733	Retainer	2F 14
332756	Seal retainer	2H 09
332942	Male dovetail	2H 03

PART NUMBER	DESCRIPTION	REF.NO.
332943	Spacer	2H 03
332983	Rear body complete assembly	2G 06
332985	Packing block	21 12
333031	Glass	2H 02
333032	Retainer	2H 02
333033	Retainer	2H 02
333034	Retainer	2H 02
333035	Retainer	2H 02
333036	Door hinge upper	2H 03
333037	Waist rail	2H 02
333041	Rod	2H 03
333080	Mounting plate	2F 13
333081	Filler	2F 15
333082	Packing strip	2F 15
333089	Sliding window	2F 15
333096	Check bracket	2F 15
333140	Striking plate	2F 13
333144	Side panel	2G 06
333145	Side panel	2G 06
333159	Mounting angle	2G 04
333161	Sill panel	2F 11
333201	Cover plate	2G 07 2G 07
333202	Cover plate	2G 07 2H 09
333203	Protection strip	2F 15
333204	Rod	26 11
333211	Roof assy	26 11 2F 16
333228	Rubber seal	2F 16
333229 333233	Sealing rubber	2F 16
333234	Sealing rubber Capping	2G 08
333235	Capping	2G 08
333243	Front extension	2G 06
333244	Front extension	2G 06
333246	Tropical roof panel	2G 11
333252	Stiffener	2G 11
333253	Protection angle	2G 03
333254	Protection angle	2G 03
333259	Bracket	2F 16
333261	Sealing rubber	2F 16
333262	Sealing rubber	2F 16
333263	Sealing rubber	2G 06
333266	Corner capping	2G 08
333267	Corner capping	2G 08
333272	Locking catch	2F 14
333293	Clip	2I 14
333294	Clip	21 14
333295	Bracket	21 14
333395	Grab rail	21 10
333435	Stud plate	2H 02
333439	Retaining plate	2H 03
333445	Buffer	2H 03
333446 333452	Clamp plate	2H 03 2G 06
333452 333487	Side and wheelarch	2G 10
33340/	Sealing rubber	20 10

333507 Support 21 10 333510 Grab rat1 21 10 333510 Grab rat1 21 10 333527 Seat squab 21 10 333528 Cushion 21 10 333551 Retainer 21 15 333560 Rear floor 26 06 333562 Side and wheelarch 26 06 333563 Panel 2	PART NUMBER	DESCRIPTION		REF.NO.
333510 Grab ret1 21 10 333527 Seat squab 21 10 333528 Cushion 21 10 333528 Cushion 21 10 333550 Retainer 21 15 333560 Rear floor 26 06 333560 Rear floor 26 06 333563 Panel 2F 10 333710 Nut plate 2F 15 333714 Nut plate 2F 15 333719 Waist moulding 2F 15 333719 Waist moulding 2F 15 333745 Sealing rubber 26 07 333835 Front ventilator 26 11 333836 Rear ventilator 26 11 333882 Gearbox cover 2F 09 333972 Sealing rubber 26 03 334055 Clamp plate 21 17 334056 Stud plate 21 17 334174 Plate 21 10 334174 Plate 21 10 334177 Nut plate 21 10 334177 Nut plate 21 10 334177 Nut plate 21 10 334177 Nut plate 21 10 334178 Grommet 2F 09 334922 Rubber strip 2F 02 334939 Cover plate 2F 10 334532 Hasp 2F 10 334533 Panel 334533 Panel 334533 Panel 334534 Frame 21 15 334534 Frame 21 15 334537 Bracket 334574 Bracket 21 15 334575 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334576 Rod 21 15 334577 Bracket 21 15 334577 B	333507	Support		2I 10
333528				
333528				
333550 Retainer 21 15				
333550 Rear floor		•		
333562 Side and wheelarch 2G O6				
333693				
333710				
333714				
333719				
333720 Waist moulding 2F 15 333745 Sealing rubber 2G 06 06 033835 Front ventilator 2G 11 333836 Rear ventilator 2G 11 333836 Rear ventilator 2G 11 3334056 Stud plate 2L 17 334056 Stud plate 2L 17 334056 Stud plate 2L 17 334111 Mounting pad 2I 12 2F 10 334174 Plate 2I 10 334174 Plate 2I 10 334177 Nut plate 2I 10 334179 Tread plate 2G 05 334189 Grommet 2G 05 334289 Grommet 2F 07 334428 Rubber strip 2F 02 334391 Cover plate 2I 15 334523 Hasp 2F 10 334521 Backrest assy 2I 15 334532 Panel 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334535 Pad 2I 15 334542 Frame 2I 15 334573 Bracket 2I 15 334573 Bracket 2I 15 334575 Bracket 2I 15 334				
333745 Sealing rubber 26 06				
338835 Front Ventilator 26 11 333836 Rear ventilator 26 11 333836 Rear ventilator 26 11 333836 Rear ventilator 26 13 333972 Sealing rubber 26 03 334055 Clamp plate 21 17 334056 Stud plate 21 17 334111 Mounting pad 21 12 22 17 334114 Plate 21 10 334174 Plate 21 10 334177 Nut plate 21 10 334177 Nut plate 21 10 334179 Tread plate 26 05 334899 Grommet 27 09 334242 Rubber strip 27 09 334242 Rubber strip 27 09 334231 Rober strip 27 10 334523 Hasp 27 10 334523 Hasp 27 10 334523 Panel 21 15 334531 Backrest assy 21 15 334531 Backrest assy 21 15 334540 Rod 21 15 334540 Rod 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334610 Retaining bracket 21 15 334617 Pad 27 11 334895 Stay 26 01 334896 Stay 26 04 334960 Check strap mounting bracket 27 08				
333836 Rear ventilator 26 11 333882 Gearbox cover 2F 69 333972 Sealing rubber 2G 63 334055 Clamp plate 2L 17 334056 Stud plate 2L 17 334111 Mounting pad 21 12 12 334121 Hinge pin 2F 67 334176 Bolt 5/16 UNF 21 10 334176 Bolt 5/16 UNF 21 10 334177 Nut plate 2G 05 334189 Grommet 2F 60 534189 Grommet 2F 60 534189 Grommet 2F 60 53422 Rubber strip 2F 60 334523 Hasp 2F 10 334523 Hasp 2F 10 334523 Hasp 2F 10 334531 Backrest assy 21 15 334532 Panel 21 15 334534 Frame 21 15 334540 Rod 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334610 Retaining bracket 21 15 334617 Bracket 21 15 334617 Bracket 21 15 334617 Pad 2F 11 334895 Sealing rubber 2G 11 334895 Stay 2G 04 334960 Check strap mounting bracket 2F 60 334960 Panel 2F 60 334966 Panel 2F 60 334968 Grab rail 2F 60 336285 Grab rail 2F 60 336285 Grab rail 2F 10 336285		Front ventilator		
333882 Gearbox cover 2F 09 333972 Sealing rubber 2G 03 334055 Clamp plate 2L 17 334056 Stud plate 2L 17 334111 Mounting pad 2I 12 12 1334121 Hinge pin 2F 07 334174 Plate 21 10 334176 Bolt 5/16 UNF 2I 10 334177 Nut plate 2I 10 334179 Tread plate 2G 05 334189 Grommet 2F 09 334242 Rubber strip 2F 09 334242 Rubber strip 2F 09 334242 Rubber strip 2F 09 334523 Hasp 2F 10 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334535 Pad 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334547 Support angle 2I 15 334547 Support angle 2I 15 334574 Bracket 2I 15 334575 Bracke				
Sealing rubber 26 03				.2F 09
334055 Clamp plate 22				
334056 Stud plate 21 17 334111 Mounting pad 21 12 12 334174 Hinge pin 2F 07 334174 Plate 21 10 334176 Bolt 5/16 UNF 21 10 334177 Nut plate 21 10 334177 Nut plate 26 05 334189 Grommet 2F 09 334242 Rubber strip 2F 02 334391 Cover plate 21 15 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 21 15 334532 Panel 21 15 334532 Panel 21 15 334534 Frame 21 15 334540 Rod 21 15 334540 Rod 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334573 Bracket 21 15 334575 Bracket 21 15 334575 Bracket 21 15 334501 Retaining bracket 21 15 334512 Sealing rubber 26 11 334612 Sealing rubber 26 11 334615 Sealing rubber 26 11 334617 Pad 2F 11 334894 Stay 32494 Stay		V .		
334111 Mounting pad 21 334121 Hinge pin 2F 334174 Plate 21 334176 Bolt 5/16 UNF 21 334177 Nut plate 21 334179 Tread plate 26 334189 Grommet 2F 334242 Rubber strip 2F 334523 Hasp 2F 334524 Hasp 2F 334525 Turnbuckle 2F 334521 Hasp 2F 334532 Panel 21 334533 Backrest assy 21 334534 Panel 21 334535 Pad 21 334540 Rod 21 334541 Frame 21 334542 Frame 21 334543 Support angle 21 334574 Bracket 21 334575 Bracket 21 334601 Retaining bracket 21 334612 Sealing rubber 26 334613 Sealing rubber 26 334617 Pad 2F 334894 Stay 26 334895 Stay 26				2L 17
334121 Hinge pin				21 12
334174 Plate 21 10 334176 Bolt 5/16 UNF 21 10 334177 Nut plate 21 10 334179 Tread plate 26 05 334189 Grommet 2F 02 334242 Rubber strip 2F 02 334391 Cover plate 21 15 334523 Hasp 2F 10 334524 Turnbuckle 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 21 15 334532 Panel 21 15 334533 Pad 21 15 334540 Rod 21 15 334541 Frame 21 15 334542 Frame 21 15 334543 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 26 11 334613 Sealing rubber 26 11 334614 Retainer 21 15 334894 Stay 26 05 334895 Stay 26 05 334959 Check strap mounting bracket 2F 08 334950 Check				
334177 Nut plate 21 10 334179 Tread plate 26 05 334189 Grommet 2F 09 334242 Rubber strip 2F 02 334391 Cover plate 2I 15 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334543 Bracket 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334614 Retainer 2G 11 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check str				
334179 Tread plate 2G 05 334189 Grommet 2F 09 334222 Rubber strip 2F 02 334391 Cover plate 2I 15 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 3345340 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334614 Pad 2F 11 334894 Stay 2F 11 334895 Stay 2G 334896 Stay 2G 334896 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 <t< td=""><td></td><td>Bolt 5/16 UNF</td><td></td><td></td></t<>		Bolt 5/16 UNF		
334179 Tread plate 26 05 334189 Grommet 2F 09 334242 Rubber strip 2F 10 334391 Cover plate 21 15 334523 Hasp 2F 10 334525 Türnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334543 Bracket 2I 15 334544 Frame 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334601 Retaining bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334614 Pad 2F 11 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay	334177	Nut plate		
334242 Rubber strip 2F 02 334391 Cover plate 2I 15 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 21 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334610 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334817 Pad 2F 11 334824 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap	334179			
334391 Cover plate 21 15 334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334602 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334816 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 05 334960 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 08	334189	Grommet		
334523 Hasp 2F 10 334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334614 Retainer 2G 11 334845 Retainer 2G 11 334894 Stay 2F 11 334895 Stay 2G 04 334960 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 15 <	334242	Rubber strip		
334525 Turnbuckle 2F 10 334531 Backrest assy 2I 15 334532 Panel 2I 15 334535 Pad 2I 15 334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334614 Pad 2F 11 334845 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 04 334960 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334960 Panel 2F 08 336147 Washer plate 2I 08	334391	Cover plate		
334531 Backrest assy 21 15 334532 Panel 21 15 334535 Pad 21 15 334540 Rod 21 15 334541 Frame 21 15 334542 Frame 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334576 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 26 11 334613 Sealing rubber 26 11 334615 Sealing rubber 26 11 334617 Pad 2F 11 334894 Stay 2F 11 334895 Stay 2G 04 334950 Check strap mounting bracket 2F 08 334950 Check strap mounting bracket 2F 08 334960 Panel 2F 10 336147 Washer plate 21 15 336285 Grab rail 21 15 </td <td>334523</td> <td>Hasp</td> <td></td> <td></td>	334523	Hasp		
334532 Panel 21 15 334535 Pad 21 15 334540 Rod 21 15 334541 Frame 21 15 334542 Frame 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334896 Stay 2G 05 334896 Panel 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 15 336285 Grab rail 21 15		Turnbuckle		
334535 Pad 21 15 334540 Rod 21 15 334541 Frame 21 15 334542 Frame 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 26 11 334613 Sealing rubber 26 11 334615 Sealing rubber 26 11 334815 Retainer 27 11 334845 Retainer 21 15 334894 Stay 26 04 334895 Stay 26 05 334896 Stay 26 05 334959 Check strap mounting bracket 25 08 334960 Check strap mounting bracket 27 08 334966 Panel 27 08 336147 Washer plate 21 08 336285 Grab rail 21 15				
334540 Rod 2I 15 334541 Frame 2I 15 334542 Frame 2I 15 334547 Support angle 2I 15 334573 Bracket 2I 15 334574 Bracket 2I 15 334575 Bracket 2I 15 334601 Retaining bracket 2I 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334817 Pad 2F 11 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15				
334541 Frame 21 15 334542 Frame 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 26 11 334613 Sealing rubber 26 11 334615 Sealing rubber 26 11 334617 Pad 2F 11 334845 Retainer 2F 11 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 21 15				
334542 Frame 21 15 334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334817 Pad 2F 11 334845 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 21 15				
334547 Support angle 21 15 334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 04 334960 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15				
334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334573 Bracket 21 15 334574 Bracket 21 15 334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334960 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail		Support angle		
334575 Bracket 21 15 334601 Retaining bracket 21 15 334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334817 Pad 2F 11 334845 Retainer 2I 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15		Bracket		
334601 Retaining bracket 21 15 334612 Sealing rubber 26 11 334613 Sealing rubber 26 11 334615 Sealing rubber 26 11 334617 Pad 2 F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 21 15				
334612 Sealing rubber 2G 11 334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334613 Sealing rubber 2G 11 334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334615 Sealing rubber 2G 11 334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334617 Pad 2F 11 334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334845 Retainer 21 15 334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 21 08 336285 Grab rail 2I 15				
334894 Stay 2F 11 334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15				
334895 Stay 2G 04 334896 Stay 2G 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15				
334896 Stay 26 05 334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15	-			
334959 Check strap mounting bracket 2F 08 334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15				
334960 Check strap mounting bracket 2F 08 334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15			cket	
334966 Panel 2F 10 336147 Washer plate 2I 08 336285 Grab rail 2I 15		Check strap mounting bra	cket	
336147 Washer plate 21 08 336285 Grab rail 21 15				
336285 Grab rail 21 15				

PART NUMBER	DESCRIPTION	REF.NO.
336294	Striking plate	21 15
336295	Reinforcing plate	2I 15
336296	Locking pin	2I 15
336299	Support bracket	2I 15
336411	Top capping	2G 08
336412	Locking plate	2G 08
336422	Cover	2F 07
336451	Channel	2F 12
336454	Channel	2F 12
336466	Radiator grille panel complete	10 04
336474	Hinge	2F 03
336476	Hinge	2F 03
336503	Distance piece	2G 11
336512	Tool tray	2F 11
336535	Pivot pin	2F 03 2F 03
336536 336567	Retainer clip Washer plate	2F 03
336577	Shoulder bracket	2I 08
336738	Tie bolt	2F 06
336764	Drain channel	2G 09
336780	Retainer	2I 15
336781	Retainer	ŽĪ 15
336782	Bolt plate assy	2G 04
336786	Front apron panel	10 04
336872	Pivot bracket	2F 11
337290	Sealing rubber	2G 03
337643	Windscreen assy	2F 07
337644	Windscreen glass	2F 07
337710	Sill panel	2F 11
337711	Sill panel	2F 11
337735	Shackle plate	2L 09 2F 11
337771	Stay	2F 11
337772 337774	Stay Bracket	2F 11
337781	Rear door	2H 02
337789	Door lock	2H 02
337801	Door lock complete	2H 02
337806	Screw retainer	2F 13
337859	Foam interior	21 07
337873	Foam interior	21 06
337880	Foam interior	21 06
337899	Foam interior	21 06
337932	Sill panel	2F 11
337933	Sill panel	2F 11
337938	Sill panel	2F 11
337939	Sill panel	2F 11
337942	Sill panel	2F 11
337943	Sill panel	2F 11 2F 03
337969	Striker pin	2F 03
338009 338013	Plastic plug	2P 00
338014	Small plug Rubber plug	2F 06
338015	Plastic plug	2F 03
338016	Large plug	2D 11
	g- pg	• •

PART NUMBER	DESCRIPTION	REF.NO.
33801/	riastic plug	2F 06
338017	Plastic plug	2F 06
338020	Plastic plug	2F 06
338021	Plug	2F 16
	Grommet	2G 03
338025	_	13 13
338027	Plastic plug	2F 06
338028	Plastic plug	10 13
338029	Plug	16 13 1K 05
338035	Clip	2F 05
338085	Plate	2F 05
338086	Plate	2F 06
338088	Cover plate	2F 06
338091	Cover plate	2F 08
338194	Fastener	2F 08
338195	Fastener	2F 08
338240	Turret nut	2I 10
338248	Seat squab	21 13
338275	Support bracket	21 10
338332	Bracket	21 10
338333	Bracket	21 10
338334	Grab rail	21 10
338339	Seat spring	21 10
338345	Support	21 10
338353	Trim board	10 04
338380	Spring clip fixing strip	2L 17
338414	Dowel	2F 05
338428	Mounting box	21 07
33843 0	Stud Rubber buffer	2G 10
338550		2G 09
338552 338553	Bracket Rubber buffer	2G 10
338554	Bracket	2G 09
338617	Tailboard hinge	2G 08
338618	Tailboard hinge	2G 08
338636	Bonnet prop rod	2G 06
338652	Bracket	2F 04
338653	Bracket	2F 04
338740	Stud	2G 10
338741	Stud	2G 10
338743	Protection strip	2G 03
338752	Gusset bracket	21 08
338754	Shoulder bracket	21 08
338780	Grommet	2F 10
338827	Retaining plate	ŽL 17
338845	Windscreen assy	2F 07
338846	Rubber cover	2D 14
338871	Sea 1	2F 09
339986	Rubber packing	21 06
339990	Door trim	21 05
339991	Door trim	21 05
340391	Washer	2G 09
345052	Instrument panel	2D 11
345077	Finisher	2F 05
345079	Cover plate	2D 14
345100	Sill gusset	21 08

PART NUMBER	DESCRIPTION	EF.NO.
345101	Sill gusset	21 08
345116	Retainer	21 10
345120	Intermediate floor	2G 06
345123	Gusset bracket	21 08
345125	Clamp plate	21 08
345140	Grommet	2F 09
345188	Interior mirror	21 13
345192	Securing bracket for panel	10 04
345426	Trim casing	21 03
345433	Door lock assy	2F 13
345434	Door lock assy	2F 13
345435	Locking catch	2F 14
345436	Locking catch	2F 14
345442	Two piece door	2G 07
345450	Handle	21 03
345498	Nut retainer	2F 13
345549	Tie bar	2F 08
345552	Bracket	2F 04
345553	Bracket	2F 04
345573	Radiator grille panel complete	10 04
345591	Finisher	2F 05
345620	Mounting panel	2F 03
345621	Mounting panel	2F 03
345623	Front panel	2F 03
345624	Front panel	2F 03
345631	Lamp surround	2F 03
345636	Plate	2F 05
345637	Plate	2F 05
345658	Capping	2G 09
345659	Capping	2G 09
345666	Grille for radiator	10 05
345830	Heat shield	2F 11
345831	Spacer	2F 11
345832	Insulation washer	2F 11
345845	Lid and hinge	2F 07
345847	Lid and hinge	2F 07
345879	Dash complete	2F 05
345882	Mounting bracket	2F 05
345883	Blanking plate	2F 05
345915	Reinforcing panel	2G 08
345930	Nut (5/16in UNF)	21 06
346241	Nut plate	2F 15
346339	Door hinge upper	2F 13
346340	Door hinge upper	2F 13
346341	Door hinge lower	2F 13
346342	Door hinge lower	2F 13 2F 08
346370 346376	Tie bar	2F 00 2F 13
346376 346377	Door hinge upper	2F 13
346377 346399	Door hinge upper Grab handle	2G 08
346426	Plug	25 00 2F 12
346460	Packing strip	2F 12
346715	Clamp lower	11 05
346804	Clamping bar	21 12
3-0004	Cramping bar	E1 16

PART NUMBER	DESCRIPTION	REF.NO.
346885	Stowage hook	21 09
347035	Side panel	2G 04
347036	Side panel	2G 04
347436	Bracket	2F 11
347463	Strengthening member	2G 05
347464		2G 05
347488	Nut plate Channel	2F 12
	- · · · · - ·	2F 15
347489	Channel	21 08
347509	Safety harness	21 09
347541	Stowage hook	2G 04
347553 347504	Bracket for buffer	2G 04 2F 13
347594	Shim	2F 03
347595	Bonnet prop	
3 47637	Retainer	2F 07 2F 07
347638	Retainer	2F 07 2G 07
347807	Toe panel	
347808	Gusset bracket	2G 07
347810	Backing plate	2G 07
348182	Protection plate for headlamp	10 04
348370	Rubber finisher	2F 05
348371	Rubber finisher	2F 05 2G 09
348393	Channel	2G 09
348394	Channel	2G 09
348396	Channel	21 07
34843 0	Stud	2E 06
34843 3	Warning label	2I 09
348447	Washer plate	21 09
348473	Shoulder bracket	21 09
348474 348535	Shoulder bracket Rubber finisher top	1N 10
348537	Rubber seal	2D 14
348541	Rubber finisher	2D 14
348678	Rubber seal	26 11
348738	Gusset bracket	21 08
348743	Support bracket	11 05
348744	Clamp	31 05
348747	Rubber strip	11 05
348748	Clamp	11 05
348800	Seat base assy	2F 10
348852	Seat base	2F 10
348854	Lid	2F 10
348855	Lid	2F 10
348859	Detachable lid	2F 10
348868	Gearbox cover	2F 09
348869	Gearbox cover	2F 09
348871	Side and wheelarch	2G 04
348872	Side panel	2G 04
348874	Rear floor	2G 04
348882	Cover plate	2G 04
348893	Floor plate	2F 09
348894	Floor plate	2F 09
349218	Bracket	21 02
3 495 03	Cushion	21 07
349506	Cushion	21 06

PART NUMBER	DESCRIPTION	REF.NO.
349515 349523	Cushion Cushion	2I 12 2I 15
349562	Seat squab	21 06
349563 349564	Seat squab Seat squab	2I 06 2I 06
349565	Seat squab	2I 06
349644	Seat squab	21 06
349645	Seat squab	21 06
349899	Clip	21 03
349931	Plastic washer	2F 03 2I 06
349943 349967	Bracket Cushion	21 00
349974	Door trim	21 05
349975	Door trim	21 05
364684	Rubber plug	2F 06
368427	Rubber grommet	2F 06
395014 395064	Wing top	2F 03 11 06
395404	Bolt plate Front panel	2G 04
395409	Front panel	2G 02
395430	Sealing strip	2F 07
395431	Sea]	2G 11
395459	Front apron panel	10 05
395529 395530	Door Door	2F 12 2F 12
3955 9 8	Sealing rubber	2F 12
395599	Sealing rubber	2F 12
395652	Door lock assy	2F 14
395653	Door lock assy	2F 14
395670	Sealing rubber	2F 12
395671 395672	Sealing rubber Sealing rubber	2F 12 2F 12
395673	Seal	2G 11
395674	Seal	2G 10
396113	Sea 1	2H 04
396124	Protection plate	10 04
396557	Squab interior	2I 10
396696 396698	Pad Rear seat backrest assy	2I 14 2I 15
396739	Rear seat backrest assy	21 14
396916	Centre seat assy	21 10
396917	Seat squab	21 10
396918	Cushion	21 10
500144 500145	Valve guide inlet & sealing ring	1C 10 1C 10
500150	Valve guide exhaust & sealing ring Lens	2D 02
500201	Filler cap	1J 10
500257	Accelerator pedal	1N 02
500419	Filter	1L 09
500432	Elbow Control of the control of the	1L 18
500446 500447	Distance tube	1M 11 1M 11
500559	Mounting rubber Lead	2E 03
500571	Cold start control	2D 10

PART NUMBER	DESCRIPTION	REF.NO.
500588	Packing washer	2H 04
500609	Spring	1D 09
500710	Joint washer	1L 17
500729	Cover	2E 02
500746	Retainer	1H 14
500792	Stud	10 08
500810	Elbow	1L 18
501070	Distance piece	2H 04
501198	Locking plate	2C 10
501211	Release lever	1F 02
501224	Riv-nut	1L 09
501245	Bush inner column	11 03
501246	Spring ring	11 03
501374	Lever	1M 03
501389	Dowe 1	1H 15
501390	Main leaf	1H 15
501391	2nd leaf	1H 15
501428	Clip	1L 16
501501	Washer	1G 04
501503	Step	2H 09
501593	Dowe 1	10 02
501616	1st lay gear	1G 04
501617	Mainshaft gear	1G 04
501690	Cable battery to switch	2E 03
501691	Cable	2E 03
501769	Suction pipe	1M 03
501864	Screw	1L 07
502029	Gudgeon pin	1E C4
502087	Dip switch	11 04
502116	Dowe 1	1F 05
502201	Shaft	1G 11
502202	Reverse hinge	1G 10
5 02205	Bracket	1G 10
502248	Washer	1H 08
502266	Thrust ring scrapper .030 0/S	1C 03
502282	Base plate	2 C 02
502283	Terminal bush & lead	2 C 02
502286	Vacuum unit	2 C 02
502287	Clip	2 C 02
502333	Overhaul kit BR M Cyl	1J 12
5024 73	Tappet guide	1E 07
502482	Distance piece	1G 04
502656	Stud	1C 06
50289 8	Special washer	1N 03
502899	Spacer for spindle	1N 03
5029 00	Spindle bell crank	1N 03
502904	Valve spring	10 08
502951	Fuel instruction plate	2 G 02
502982	Torsion spring	1N 03
503160	Cylinder liner	1C 02
503266	Shaft	1E 05
503307	C1amp	1N 11
503309	Heat shield	1N 11
5 03310	Heat shield	וו או

PART NUMBER	DESCRIPTION	REF.NO.
503424	Grease gun	2J 07
503430	Bracket accelerator controls	1N 03
503492	Elpow	1L 18
503665	Starting dog	1E 03
503754	Overhaul kit BR M cyl	10 12
503805	Spring	1G 06
503889		1L 02
	Throttle spindle	11 02
503 89 3	Joint washer	11 03
503900	Diaphram assy	11 03
503901	Special screw	1L 03
503915	Top cover	11 04
503919	Special screw	11. 05
503920	Elbow	11 05
503921	Screw	100
503981	Spring	16 02 1E 02
504006	Washer	
504007	Set bolt	1E 02
504032	Tube	1C 08
504082	Adaptor	IM 02 1J 11
504104	Gasket	13 10
504105	Clutch/brake reservoit tank	13 10
504106	Pipe	2D 02
504130	Lens	
504169	Valve guide	1D 13
504211	Distance piece	2L 09
504213	Shim	2L 09
504214	Shim	2L 09 1L 17
504233	Seal	11 06
504272	Stiffener bracket	11 06
504275	Shim washer	11 06
504279	Shim washer	1E 06
504375	Chain	14 08
504433	Washer	1D 07
504443	Washer	1K 03
504517	Brake pipe	10 02
504577	Lining with rivets	10 02 10 17
504606 504607	Tie rod	10 17
504607	Sleeve	1N 03
504619	Bell crank lever	1N 03
504620	Relay lever	1N 04
504621	Carburetter relay lever assy	14 04 1L 17
504655 504656	Cap	1L 17
504656	Tube	1L 17
504657 504672	Tube	iĽ 17
504673 504736	Joint washer	1E 10
504736 504765	Thermostat Union	1K 04
504765 504005		1D 06
504995 504997	Cap Spring	1D 06
504997 505144		2D 02
505144 505150	Side lamp	2D 02
505150	Nylon insert Cover	2E 02
505205	Lucar blade	2J 05
505244	Joint washer	1L 17
202644	OVINC MUSICI	16 17

PART NUMBER	DESCRIPTION	REF.NO.
505597	Spacing washer	1D 09
505612	Liner	1M 03
505613	Distance piece	1M 03
		1M 03
505786	Spring	10 03
505790	Seal	
506047	Stud	1D 13
506069	Rubber washer	1C 10
506679	Rubber boot	2E 02
506799	Ring gear	1F 04
506814	ADJ screw	1E 07
506816	Screw	10 07
506817	Screw	1D 08
507001	Rubber boot	2C 03
507025	Special set bolt	1C 06
507026	Tappet	1E 07
507129	Bulb	2 D 10
507447	Pin	1G 10
507687	Carburetter kit	2 J 02
507693	Gasket kit	2 J 02
507827	Tappet assy	1E 07
507829	Tappet guide assy	1C 06
508045	Rubber mounting	1L 18
508148	Brake pipe	1K 02
508175	Lock stop plate	1H 05
508565	Clip	1K 02
508581	Handbrake lever assy	1K 07
508895	Guide washer	1H 14
508945	Clip	1K 03
508962	Special washer	1N 02
509009	Lever	1L 09
509045P	Bolt	1H 02
509045P	II II	1H 07
509045P	u .	2L 06
509046	Bolt (3/8in UNF X 1.7/32in)	1H 02
509120	Hinge pin	2H 04
509218	Distance tube	2L C9
509311	Armature	2C 10
509407	Restrictor lever	1N 02
509412	Clip	1L 16
509414	Double clip	1L 16
509415	Clip	11 13
509448	Steering unit assy	11 02
509449	Steering unit assy	11 02
509769	Chain for filler cap	10 02
509856	Slave cylinder bracket	1F 09
509885	Bush	10 17
509909	Fuel pipe	1L 09
510078	Heater plug	1E 12
510078	Fan disc washer	2E 03
510176		2D 02
	Stop tail lamp	2D 02
510179 510192	Side lamp	2E 03
510192 610489	Washer Ping and	1F 05
510489 511127	Ring gear	1N 06
511127	Bearing	tu no

PART NUMBER	DESCRIPTION	REF.NO.
511189	Layshaft gear	1G 04
511205	Mainshaft gear	1G 04
511652	Joint washer	1M 03
511680	Shaft	1E 05
511690	Joint washer	1M 03
511837	Valve guide, inlet	1E 11
511838	Valve guide, exhaust	1E 11
511956 511057	Outlet pipe	1E 10 1C 09
511957 512018	Thermostat gasket Fan blade	1C 09
512106	Correction jet	1L 04
512206	Valve rocker inlet RH	10 06
512207	Valve rocker EH exhaust	10 06
512235	Banjo bolt	1F 08
512237	Cover	1G 02
512238	Joint washer	1G 02
512287	Special locknut	1M 05 1M 06
512307 512308	Adjusting screw	IM 06
512311	0-ring 0 ring	1M 06
512319	Special washer	1M 06
512352	Horn push	1I 04
512359	Dust cover	1Ĭ 04
512402	Special screw	1L 02
512412	Plug	1C 02
512458	Carburetter body	1M 02
512460 512646	Pipe	1M 03 1C 12
512646 512760	Clip Dust cover	2K 12
512791	Felt seal	2K 12
512828	Valve seat insert	1E 11
512838	Brake pipe	1K 02
512839	Pipe 3/16in clutch master cyl to hose	. 1J 11
513072	Handle for jack	2J 07
513282	Fan disc washer	2E 04 1E 05
513639 513641	Pump cover Pump body	1E 05
513679	Driving dog	2C 02
513926	Pipe	1L 10
513927	Injector pipe	1L 10
513928	Pipe	1L 10
513929	Pipe	1L 10
513991	Lever	1M 03
514147 514103	Grommet Brush sot	2D 02 2C 14
514193 514195	Brush set Bracket	2C 14
514224	Tube	1E 11
514472	Adjusting link	2C 14
514527	Stud	1E 02
514578	Red grease	2J 02
514580	Clip	1C 12
514650	Spring	1G 10
514840 514929	Lead Riv-nut	11 04 2E 02
314323	VIA-UM C	4E 02

PART NUMBER	DESCRIPTION	DEE NO
SAKI MONDEK	DESCRIPTION	REF.NO.
515060	Gronmet	2D 04
515218	Rim for light unit	2 D 03
515291	Screw	1E 12
515321	Spring retainer	10 05
515325	Plug - spring retainer	1C 05
515331	Steady strip	וו או
515365	Anchor plate	1J 07
515366	Expander unit assy	1J 06 1J 02
515405	Anchor plate	1J 02
515406	Anchor plate	1J 06
515466 515467	Dust cover	1J 06
515467	Locking plate	1J 06
515468 515470	Retaining spring	1J 06
515505	Packing plate Distance piece	וו או
515506	Bracket	iñ ii
515508	Steering box assy	11 02
515509	Steering box assy	11 02
515572	Seal	1G 13
515573	0 ring	1E 11
515597	Shield	11 NI
515599	Joint washer	1G 03
515845	Breather	1H 06
51 5848	Side cover plate	11 03
515849	Joint washer	11 03
515851	Output shaft	2K 08
515853	Thrust washer	2K 08
515923	Expander repair kit	13 06
515924	Adjuster repair kit	1J 06
515926	Brake rod	1J 06
515927	Retaining clip	1J 06 1E 10
516059	Housing	1C 02
516133	Engine bracket RH	1G 10
516316 516406	Knob Shiold	1N 13
516496 516498	Shield Cylinder liner	10 03
516599	Brake drum	10 03
516885	Large seal for oil filter	1D 15
516945	Shield	IN 13
516962	Clip	1L 07
517474	Solenoid	2C 09
517502	Bracket	1L 15
5 175 8 8	Spring	1H 15
517589	Spring	1H 15
517682	Filter	11 11
517684	Clip	JL 10
517685	Pipe	1L 10
517686	Pipe	1L 10
517689 517600	Plug	1L 09
517690 517706	Nut	1L 10 1L 09
517706 517707	Joint washer	1L 09
51 <i>7707</i> 517855	Valve	11 11
517655 517903	Plug Hose	1L 08
317303	IIO3E	12 00
	2N 04	

PART NUMBER	DESCRIPTION	REF NO.
517907	Support bracket reservoir tank	1J 10
517976	Joint wheel	11 11
517977	Rubber mat	2H 05
518100	Bolt	1D 05
		10 10
518146	Clip	1D 13
518272	Core plug	2K 08
518318	Thrust washer	
518676	Inner column	11 02
518677	Inner column	11 02
519008	Washer	2C 08
519009	Screw	2C 08
519011	Plunger spring	2C 08
519440	Special bolt	1C 03
519742	Warning light-fuel	2D 10
519743	Warning lamp-charging	2D 10
519753	Slip ring horn contact	11 04
519782	Dash harness	2E 03
51 <i>97</i> 83	Crossmember harness	2E 03
519784	Frame harness	2E 03
519838	Gauge unit	1L 18
519840	Ammeter	2D 10
521328	Thrust washer	1G 07
521330	Gear	1G 07
521583	Bush	1D 06
521600	Stud	1E 11
521633	Nut	2K 08
521634	Lockwasher	2K 08
521636	Shim	2K 08
521851	Main shaft	2K 07
521852	Distance piece	2K 08
521853	Bearing	2K 10
521855	Bush	2K 10
521856	Retaining plate	2K 10
521857	Housing	2K 10
521864	Bush	2K 08
521868	High gear wheel	2K 08
522017	Gear	2K 08
522303	Shaft	2K 15
522308	Spacer	2K 15
522318	Housing assy	1G 08
522334	Fork	2K 15
522567	Diff case	1H 09
522593	Brake drum	1J 04
522745	Bush	1C 04
522756	Fuel filter	1L 11
522882	Wheel for flasher switch	2D 06
522913	Pulley	2C 10
522939	Special bolt	1L 14
522940	Washer	1L 14
523139	Camshaft	1D 07
523181	Bracket	1E 07
523240	Split seal halves	1C 03
523637	Cold start control	2D 10
523638	Tyre pump	2J 07
	V - V - V	

PART NUMBER	DESCRIPTION	REF.NO.
523655	Exhaust silencer	1N 13
523695	Pedal bracket	1J 08
523696	Pedal & bushes	13 08
523916	Brake pedal bracket assy	1J 08
524114	Throttle chamber	1L 02
524115	Accelerator pump	1L 03
524210	Adjusting link	2C 14
524492	Connecting rod assy	1D 05
524636	Packing	10 03
524680	Shroud	1E 11
524765	Cup plug	10 02
524769	Screw	1E 05
524846	Rocker cover top assy	1C 10
524874	Housing assy for swivel pin LH	1H 03
5 24875	Housing assy for swivel pin RH	1H 03
524894	Nut pipe to filter or bowl	1M 12
524959	Pump connrction	2J 07
52 5124	Inlet valve	10 08
525131	Bracket	1E 12
525168	Clip	1L 10
525389	Washer	10 06
525390	Screw	1E 07
525428	Plug	1E 14
525497	Cup plug	10 10
525500	Set bolt (5/16in UNF X 23/4in)	10 06
52552 0	Gasket kit	2J 02
52553 0	Double ended union	IM 12
525852	Crankshaft assy. 010 U/S	10 03
525853	Crankshaft assy. 020 U/S	1C 03 1D 09
525910	Rocker	1D 09
525911	Rocker	1F 05
526161 526225	Locker	20. 14
526225 526259	Stud Rivet	20 08
526258 52636 0		2E 03
52644 0	Dynamo harness Frame harness	2E 03
526608	Pad	2L 09
526753	Road wheel	1H 16
526994	Track rod only	11 07
527109	Water outlet pipe	10 09
527164	Comnecting rod assy	10 03
527167	Crankshaft assy lid	10 03
527169	Con rod assy	1E 04
527240	Inlet valve	1E 07
527269	Plug	10 02
527272	Special screw	1L 03
527349	Suction pipe	1C 12
527351	Cylinder liner	JC 02
528004	Gudgeon pin bush	1C 03
528041	Accelerator pump	1L 03
528235	Plate	1G 08
528683	Locker	1G 05
528685	Plate	1G 05
528690	Plate	1G 05

PART NUMBER	DESCRIPTION	REF.NO.
528691	Nut (3/4 UNF)	1G 05
528692	Washer	1G 05
528697	Joint washer	1F 07
528701	Bearing	1G 05
528702	Thrust washer	1H 04
528703	Layshaft	1G 04
528707	Housing	1F 07
528720	Distance piece	1G 05
528721	Distance piece	1G 05
528722	Distance piece	1G 05
528865	Stud	1G 03
528 9 00	Frame harness	2E 03
528963	Cable-coil to distributor	2E 03
529141	Clamp plate	1M 09
529221	Bearing	2C 14
529394	Baffle plate	1C 08
529823	Sump	1E 09
529963	Dash harness	2E 03
529964	Frame harness	2E 03
529969	Gauge unit	1L 18
529970	Gauge unit	1L 18
529972	Lead	1E 12
530034	Starter switch	2D 10
530085	Cable battery to starter	2E 03
530135	Stud	1C 13
530175	Drive shaft assy	1C 04
530178	Thrust washer	1C 04
530179	Retaining ring	1C 04
530343	0il thrower	1D 04
530354	Dowe1	1D 03
530476	Thermostat bypass	1E 10
530478	Pump casing	1E 10
530481	Sealing plate	1D 07
530585	Hose for radiator bottom	10 05
5305 9 0	Water pump kit	2J 02
530746	Bypass pipe	10 09
530884	Coil complete	80 Mf
530885	Spring for armature	1M 08
530890	Pulley	1E 10
530966	01ive Olive	1L 10
530984	Shim .003	1H 04
530985	Shim .005	1H 04
530986	Shim .010	1H 04
530987	Shim .030	1H 04
530988	Swivel pin & steering lever	1H 03
530989	Swivel pin & steering lever	1H 03
530990	Swivel pin & steering lever	1H 03
530991	Swivel pin & steering lever	1H 03
530992	Swivel pin & bracket	1H 04
531001	Locker	1H 04
531040	Relay lever upper	11 07
531043	Stud 7/16in	1H 03
531104	Engine bracket	1G 08
531332	Steady strip for shroud	10 03

DADT 40000	DCC CD LOTTON	DEE NO
PART NUMBER	DESCRIPTION	REF.NO.
531388	Control rod	1N 03
531389	Control rod	1N 03
531390	Control rod	1N 03
531391	Control rod	1N 08
531392	Bell crank	1N 08
531394	Linkage clip	1N 03
531395	Cross shaft lever	1N 03
531433	0 ring	1H 03
531439	Control rod	1N 04
531494	Stud 7/16in	1H 03
531501	Lead	11 04
531586	Gasket for head lamp	2D 03
531591	Lead	2E 06
531684	Stop tail lamp	2D 05
531695	Battery cable	2E 03
531873	Valve rocker	10 09
531874	Valve rocker	1D 09
531888	Anchor plate	1J 05
531889	Anchor plate	1J 05
531893	Spring	1J 05
531895	Stud	1E 11
531896	Stud	1E 11
531897	Clamp	1L 10
531906	Brake pipe	1K 03
532268	Swivel pin kit	2ა 02
532319	Swivel pin kit	1H 05
532323	0 ring	1G 07
532329	Swivel pin kit	1H 05
532387	Sealing ring	10 11
532552	Bracket	20 13
532566	Terminal	2C 14
532568	Bracket	20 08
532571	Bracket	2C 08
532572	Bush	20 08
532574	Bush	20 08
532577	Locker	2C 08
532578	Solenoid	2C Q8
532579	Base	2C 08
5325 80	Nut	2C 08
532587	Seal	1E 09
532806	Front flasher lamp	2D 08
532807	Rear flasher lamp	2D 09
532809	Stop tail lamp	2D 08
532810	Number plate lamp	2D 08
532848	Rivet	1L 14
532878	Bulb holder	2D 05
532879	Lamp base	2D 05
53288 0	Lens	2D 05
532881	Stop tail lamp	2D 05
532926	Screw	2K 15
5329 63	Swivel pin & bracket	1H 04
532979	Low gear	1G 07
533040	Bottom cover plate	1G 08
	•	

PART NUMBER	DESCRIPTION	REF.NO.
533080	Intermediate gear cluster	1G 07
533354	Plug	1G 03
533358	Plug	1H 08
533567	Axle casing	1H 06
533568	Differential assy 4.7 ratio	1H 10
533570	Axle casing	2L 02
533579	Axle shaft	1H 06
533580	Axle shaft	1H 06
533639	Prop shaft	1H 07
533640	Propeller shaft	2L 02
533645	Joint washer	1H 11
533731	Housing assy	1G 08
533777	Diff wheel	1H 09
533786	Thrust washer	1H 09
533787	Thrust washer	1H 09
533788	Thrust washer	1H 09
533794	Diff pinion	1H 09
533858	Casing assy	1G 08
533860	Washer	2C 14
534021	Spring dowel	1N 06
5340 9 8	Locker	1F 04 -
534200	Rubber strip	1M 09
534338	Lucar blade	2J 05
534341	Lucar connector	2J 05
534797	Olive	1L 16
534797	II	1M 12
535168	Carburetter lever ball end	1N 04
535173	Road spring rear	2L 09
535286	Relay lever	11 07
535708	Stud & dowel kit	1D 03
535989	Valve spring	30 df
536006	Head lamp complete RH stg	2D 03
536094	Flasher lamp	2D 06
536111	Head lamp complete LH stg	2D 03
536112	Head lamp complete LH stg	2D 03
536113	Head lamp complete LH stg	2D 03
536116	Adaptor & leads - headlamp	2D 03 2D 03
536117	Sidelamp	2D 03
536148	Flasher lamp	2D 03
536151	Lens for sidelamp	2D 05
536152	Lens	1D 05
536269	Piston assy	10 05
536270	Piston assy	1D 05
536272 536273	Piston assy	1D 05
536273 536275	Piston assy	1D 05
536275 536514	Piston assy Exhaust manifold	1E 14
536577	Plug	1E 12
536646	Plate	10 13
536679	Strap	2C 14
536796	Sliding rod	1M 03
536803	Pin	1F 10
536872	Valve rocker	1D 09
536873	Valve rocker	1D 09

Sa6913	PART NUMBER	DESCRIPTION	REF.NO.
Saring Nut wrench 2j 07	536913	Barrel lock	20.10
S37269			
S37269			
Sa72214		• - •	· - · -
S37284			
S37297 Olive Support bracket LH Support bracket LH Support bracket RH Support bracket Su			
S37533 Support bracket LH			
\$37535			
S37539 Stiffener bracket			
S37541 Steering unit assy			
S37543			
537544			
S37601			
S37603 Clutch shaft & lever IF 09	537601	Push rod for slave cylinder	
S37686			1F 09
S37687 Plate S37777 Bracket accelerator controls S377734 Shackle plate 2L 09 S37735 Shackle plate 42L 09 S37740 Shackle plate 42L 09 S37740 Shackle pin Shackle pin Shackle pin Shackle pin Shackle pin Shackle pin Shackle plate 2L 09 S37780 Shackle plate 2L 09 S37780 Shackle plate Shackle plate 2L 09 S37780 Shackle plate plain 2L 09 S37791 Control rod Shackle plate Shackle	537685		1ห 15
537707 Bracket accelerator controls 1N 03 537734 Shackle plate 2L 09 537735 Shackle plate 2L 09 537740 Shackle pin 1H 15 537741 Shackle pin 1H 15 537742 Shackle plate 2L 09 537780 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537864 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538073 Cover 1E 08 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1E 03 538435 Throttle chamber 1D 02 538489 Screw fixing air bottle cover 1M 08 <td< td=""><td>537686</td><td>Plate</td><td>าห 15</td></td<>	537686	Plate	าห 15
537734 Shackle plate 2L 09 537740 Shackle plate tapped 2L 09 537741 Shackle pin 1H 15 537742 Shackle pin 1H 15 537780 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537805 Bracket 1K 02 538038 Joint washer 1E 08 538038 Joint washer 1E 08 538068 Banjo 1F 08 538103 Thrust washer 1E 03 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throtle chamber 1L 02 538485 Body 1M 08 538496 Screw fixing air bottle cover 1M 08	537687	Plate	1H 15
537735 Shackle plate tapped 2L 09 537740 Shackle pin 1H 15 537741 Shackle pin 1H 15 537778 Shackle plate 2L 09 537780 Shackle plate 2L 09 537791 Control rod 1N 07 53792 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537954 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1E 03 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538498 Union inlet & outlets 1M 08 53		Bracket accelerator controls	JN 03
537740 Shackle pin 1H 15 537741 Shackle pin 1H 15 537742 Shackle pia 1H 15 537778 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537864 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538039 Joint washer 1E 08 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538435 Throttle chamber 1L 02 538485 Body 1M 08 538496 Screw for valve assy 1M 08 538498 Union inlet & outlets 1M 08		Shackle plate	2L 09
537741 Shackle pin 1H 15 537742 Shackle pin 1H 15 537778 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537864 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538030 Jr 08 1F 08 538031 Thrust washer 1E 03 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1E 03 538435 Throttle chamber 1E 03 538498 Screw for valve assy 1M 08 538499 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538508			
537742 Shackle pine 1H 15 537778 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 11 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538508 Washer for terminal screw 1M 08			
537778 Shackle plate 2L 09 537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 11 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538030 Jr 08 1F 08 538130 Thrust washer 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Screw for valve assy 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538507 Cover black 1M 08 538509			
537780 Shackle plate plain 2L 09 537791 Control rod 1N 07 537792 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 11 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw			
537791 Control rod 1N 07 537792 Control rod 1N 07 537805 Bracket 1K 02 537877 Split bush 1I 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538434 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538497 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538507 Cov			
537792 Control rod IN 07 537805 Bracket IK 02 537877 Split bush II 07 537964 Main leaf 2L 09 538038 Joint washer IE 08 538039 Joint washer IE 08 538068 Banjo IF 08 538073 Cover IE 06 538130 Thrust washer IE 03 538131 Thrust washer IE 03 538132 Thrust washer IE 03 538133 Thrust washer IE 03 538134 Thrust washer IE 03 538435 Throttle chamber IL 02 538485 Body IM 08 538499 Screw fixing air bottle cover IM 08 538498 Union inlet & outlets IM 08 538502 Special screw IM 08 538503 Spring washer IM 08 538508 Washer for terminal screw IM 08 538509 Cover black IM 08 538510 Lucar connector IM 08			
537805 Bracket 1K 02 537877 Split bush 1I 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538499 Screw for valve assy 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538501 Lucar connector 1M 08			
537877 Split bush 11 07 537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Screw for valve assy 1M 08 538498 Sorew fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
537964 Main leaf 2L 09 538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538435 Throttle chamber 1L 02 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538507 Cover black 1M 08 538508 Washer for terminal screw 1M 08 538510 Lucar connector 1M 08			
538038 Joint washer 1E 08 538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Screw for valve assy 1M 08 538499 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538039 Joint washer 1E 08 538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538504 Spring washer 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538068 Banjo 1F 08 538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538143 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538499 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538073 Cover 1E 06 538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538498 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet å outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538130 Thrust washer 1E 03 538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538131 Thrust washer 1E 03 538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538504 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538132 Thrust washer 1E 03 538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08		··· • • • · · · · •	
538133 Thrust washer 1E 03 538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538134 Thrust washer 1E 03 538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538435 Throttle chamber 1L 02 538485 Body 1M 08 538489 Screw for valve assy 1M 08 538493 Bolt 1M 08 538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08		and the second s	
538485 Body IM 08 538489 Screw for valve assy IM 08 538493 Bolt IM 08 538496 Screw fixing air bottle cover IM 08 538498 Union inlet & outlets IM 08 538499 Joint washer diaphragm to body inner IM 08 538502 Special screw IM 08 538503 Spring washer IM 08 538506 Screw IM 08 538508 Washer for terminal screw IM 08 538509 Cover black IM 08 538510 Lucar connector IM 08			
538489 Screw for valve assy IM 08 538493 Bolt IM 08 538496 Screw fixing air bottle cover IM 08 538498 Union inlet & outlets IM 08 538499 Joint washer diaphragm to body inner IM 08 538502 Special screw IM 08 538503 Spring washer IM 08 538506 Screw IM 08 538508 Washer for terminal screw IM 08 538509 Cover black IM 08 538510 Lucar connector IM 08			
538493 Bolt IM 08 538496 Screw fixing air bottle cover IM 08 538498 Union inlet & outlets IM 08 538499 Joint washer diaphragm to body inner IM 08 538502 Special screw IM 08 538503 Spring washer IM 08 538506 Screw IM 08 538508 Washer for terminal screw IM 08 538509 Cover black IM 08 538510 Lucar connector IM 08			
538496 Screw fixing air bottle cover 1M 08 538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538498 Union inlet & outlets 1M 08 538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538499 Joint washer diaphragm to body inner 1M 08 538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538502 Special screw 1M 08 538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538503 Spring washer 1M 08 538506 Screw 1M 08 538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538506 Screw TM 08 538508 Washer for terminal screw TM 08 538509 Cover black TM 08 538510 Lucar connector TM 08			
538508 Washer for terminal screw 1M 08 538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538509 Cover black 1M 08 538510 Lucar connector 1M 08			
538510 Lucar connector 1M 08			
	538511	Insulating sleeve for terminal	

PART NUMBER	DESCRIPTION	REF.NO.
538536	Connector	1G 12
538612	Gasket	1K 04
538613	Adaptor	1K 04
538614	Banjo	1K 04
538615	Banjo bolt	1K 04
538616	Gasket	1K 04
538628	Bush	2C 13
538629	Bracket	2C 13
538631	Coil	2C 13
538632	Bolt	2C 13
538671	Joint washer	1E 10
539572	Weight	20 02
539573	Vacuum unit	2C 05
539703	Cross shaft	1H 09
539706	Pinion bearing	1H 09
539707	Pinion bearing	1H 08
539711	Shim	1H 09
539713	Shim	1H 09
539715	Shim	1H 09
539717	Shim	1H 09
539 718	Shim	1H 08
539720	Shim	1H 08
539722	Shim	1H 08
539724	Shim	1H 08
539741	Housing for swivel pin bearing	1H 03
539741	Housing for swivel pin bearing	2L 03
539742	Railko bush	1H 04
539745	Washer	1H 08
539756	Clip	2C 05
539787	Casing assy	1G 08
539828	Gear	2K 08
539887	Link	2K 15
53995€	Housing	2K 10
539993	Flange	1G 09
540004	Worm	1G 07
540114	Speedo/warning lights MPH	2D 11
540115	Speedometer & warning lights kilometres	2D 11
540117	Speedometer & warning lights miles	2D 11
540118	Speedometer & warning lights kilometres	2D 11
540119	Speedometer miles	2L 16
540120	Speedometer kilometres	2L 16
540131	Speedometer miles	2L 16
540135	Speedometer kilometres	2L 16
540354	0 ring	1G 10
540842	Shouldered bolt	1G 12
540870	Piug	1H 02
540972	Half shaft	2L 03
540973 543305	Half shaft	2L 03
541195	Housing	1F 04
541229	Plate	1L 10
541291	Breather pipe	1D 10
541313	Bracket	2C 13
541492	Distributor	2C 05
541494	Stud	1M 04
541520	Stop tail lamp	2D 05

PART NUMBER	DESCRIPTION	REF.NO.
541521		2D 05
	Lens	2D 05
541522	Stop tail lamp	1E 12
541523	Lead Flaching indicaton accu	2D 06
541755	Flashing indicator assy	1F 04
541760	Flywheel assy	1E 09
541860	Tube	11 02
541899	Steering box assy	
541900	Steering box assy	11 02
541910	Crankshaft std	1D 04
541921	Oil seal	10 04
542036	Special screw	2D 05
542037	Bulb holder	2D 03 2D 03
542 038	Special screw	2D 03
542040	Bulb holder	20 05
542041	Special screw	2D 03
542042	Special screw	2D 04
542043	Lens	2D 05
542044	Lens Bulb holder	2D 05
542045	Bulb holder	2D 05
542046 542048		2D 06
542048	Lens Bulb holder	2D 03
542049 542073	Mud excluder	1D 09
542231	Primary pinion	1G 05
542231 542396	Oil pump body	10 06
542425	Rocker cover	10 10
542492	Oil seal	10 03
542494	Oil seal	1E 03
542515	Tab washer	1J 06
542600	Side cover assy	10 08
542601	Stud	10 08
542622	Key	1D 04
542623	Key	1D 04
542762	Boss	1N 06
542776	Pin	1N 06
542783	Spiral pin	1N 06
542845	Nut	1M 12
542846	Olive	1M 12
542861	Spring	1N 05
543108	Main leaf	1H 15
543209	Air cleaner	1M 12
543254	Bracket	1D 17
543265	Brake lever	1K 08
543275	Distance piece	1K 08
54 3281	Pin	1K 08
543291	Plunger rod	1K 08
543292	Plunger rod	1K 08
543301	Jack handle	2J 07
543498	Anchor	1N 07
543546	Ratchet	1K 08
543629	Hose for radiator bottom	10 05
543764	Hose	1L 17
543765	Hose	1L 17
543766	Pipe	1L 18

PART NUMBER	DESCRIPTION	REF.NO.
		1L 18
543767	Pipe	1L 17
543782	Hose	1L 18
543803	Bolt (5/16 UNF X 11/2in)	1L 18
543808	Plate	
543818	Cup washer	2L 13
543819	Cup washer	2L 13
543934	Check strap	2L 09
543946	Crossmember	2F 02 11 07
543972	Housing for relay shaft	11 07
544337	Special bolt	2L 13
544347	Rubber sleeve	1L 09
544389	Distance plate	11 11
544391	Pipe	1N 08
544451	Bracket	2F 08
544573	Licence holder	2L 13
544581	Drag link tube Elbow	วัน 18
544658 544674	Elpow	1L 18
544686	Packing piece	1F 08
544848	Cowl for fan	10 02
544980	Clutch shaft & lever	1F 09
545149	Rim for headlamp	2D 03
545159	Rim for headlamp	2D 03
545218	Main harness	2E 03
545571	Bearing	1N 05
546026	ratchet	1E 06
546177	Adaptor	1E 13
546180	Carburetter	1L 02
546197	Locker	1F 04
546203	Breather filter	1D 14
546210	Clip	1D 14
546282	Sleeve	1L 12
546287	Pulley	2C 13
546324	Starting dog	1D 04
546333	Lockwasher	1D 04
546440	Filler cap	1E 09
546488	Joint washer	11 18
546518	Flywheel assy	1F 05
546519	Flywheel assy	1F 05
546583	Guide tube	10 11
546584	Adaptor	10 11
546798	Tappet push rod	1C 06
546799	Push rod	1E 07
547346	Stop tail lamp	2D 05
547605	Breather filter	10 14
548043	Turret nut 1/2 in UNF	2F 07
548169 548305	Spring 51-44-10 bush	1J 05
548205	Flexible bush	1H 15 1L 09
548262	Pipe Biret aboft	16 12
549168 540160	Pivot shaft Shouldened helt	1G 12
549169	Shouldered bolt	16 08
549200 549201	Shim Pivot shaft	2K 15
549201 54 9229	Pivot shaft	1H 07
347663	Nipple	111 07

PART	NUMBER	DESCRIPTION	REF.NO.
	549230	Shim	1H 09
	49232	Shim	1H 09
	49234	Shim	1H 09
	549236	Shim	1H 09
	549238	Shim	1H 09
	549240	Shim	1H 09
	549242	Shim	1H 09
	549244	Shim	1H 09
	549246	Shim	1H 09
	549248	Shim	1H 09
	549250	Shim	1H 09
į	549 252	Shim	1H 09
!	549399	Clip	2L 04
	5 49 409	Special bolt	1H 10
	549411	Differential bearing adjuster	1H 10
	549412	Oil seal for pinion	JH 10
	549413	Bevel pinion housing complete	1H 10
	549414	Shim .002	1H 10
	549415	Shim .003	1H 10
	549416	Shim .010	1H 10
	549417	Bearing for bevel pinion nose end	1H 10
	549419	Circlip	1H 10
	549420	Bearing for bevel pinion	1H 10 1H 10
	5 49 421	Driving flange for bevel pinion	1H 10
	5 49 425 5 49 427	Spacer .370	1H 10
	549427 549429	Spacer .373 Spacer .376	1H 10
	5 49 423	Spacer .379	1H 10
	5 49 433	Spacer .382	1H 10
	5 49 435	Spacer .385	1H 10
	5 49 437	Spacer .388	1H 10
	549439	Spacer .391	1H 10
	549441	Spacer .394	1H 10
	549443	Spacer .397	1H 10
į	549445	Spacer .400	1H 10
ļ	5 49 448	Special nut (7/8 UNF)	1H 10
ļ	549453	Mudshield for driving flange	1H 10
	549454	Mudshield for bevel pinion bearing housing	1H 10
	549457	Taper roller bearing for differential	1H 10
	549460	Locking plate	1H 10
	549461	Differential wheel	1H 10
	549462	Bifferential pinion	1H 10
	549463	Spindle for pinion	1H 10
	549464 549465	Locking plate double type	1H 10
	549465 E40466	Differential wheel washer	1H-10
	549466 549473	Spherical differential pinion washer	1H 10 1H 07
	549473 549474	Circlip Split ring	2L 04
	54947 4 549475	Nut	2L 04
	549477	Oil seal	2L 04
	549493	Crown wheel and pinion	1H 10
	549495	Axle shaft	1H 06
	549496	Axle shaft	1H 06
	549610	Adaptor	2C 02
	549611	Distributor drive coupling	2C 03

PART NUMBER	DESCRIPTION	REF.NO.
549761	Mechanical fuel pump	1L 08
549840	Spanner	2J 07
549909	Plug	1E 05
550198	Exhaust valve	18 07
550263	Inlet manifold	1E 14
550281	Washer	2C 15
550324	Pump	1L 09
5503 24	Fan	20 15
550471	Pipe pump to carburetter	1L 16
550732	Master cylinder	1J 14
550786	Plate	1H 15
550791	U bolt	2L 09
550801	Bottom plate	2L 09
550802	Bottom plate	2L 09
551227	Wheel box	2D 14
551318	Cable	2E 06
551319	Cable	2E 06
551331	Strip	IN 13
551346	Cable	2E C6
551347	Cable	2E 06
551430	Special washer	2D 06
551436	Special screw	2D 05
551508	Switch	2D 11
551595	Red_rear_reflector	2D 05
551638	Cable	2E 06
551652	Brake pipe	1K 03
551702	Steering unit assy	11 02
551703	Steering unit assy	11 02
551714	Shroud for fan cowl	10 03 11 04
551984 552057	Special spring washer	1F 08
552057	Hose pipe to clutch slave cylinder	1N 03
552097 552120	Bell crank lever assy	2H 05
55212 9	Hinge centre	2H 05
552132 552133	Support bracket Anchor bracket	2H 05
552174	Tank	1L 18
552175	Tank	iL 18
552223	Torsion spring	1N 03
552388	Mounting bracket	2L 13
552407	Brake rod	1J 06
552435	Pipe tank to pump	1L 16
552436	Pipe tank to pump	1L 16
552438	Pipe	1L 11
552517	Inlet pipe	1D 12
552520	Bracket - acc pedal	1N 05
552524	Bracket	1N 05
552526	Control rod	1N 06
552555	Nylon spacer	JN 09
552572	Tag washer	11 04
552574	Mounting bracket	2L 13
552575	Dust cover	11 04
552578 553563	Cross sheft	1K 1C 1K 10
552583 552675	Ratchet Return nine nylen tank to numn	1K 10
552675	Petrol pipe nylon tank to pump	11% 12

PART NUMBER	DESCRIPTION	REF.NO.
552678	Clip	1K 06
552681	Clip	1M 12
552682	Cold start control complete	2D 11
552683	Cold start control complete	2D 11
552688		1N 08
	Engine stop-control	1N 08
552689 552703	Engine stop-control Lever knob	1N 09
552720	Heat shield	1N 14
552746	Shaft hand brake lever	1J 06
552784	Bracket assy	1N 06
552790	Steering unit	2L 10
552804	Special nut	11 04
552805	Distancr piece	1K 10
552818	Rubber pad	1H 14
552819	Bush	1H 14
552856	Plunger	1K 08
552 857	Washer	1K 08
552858	Support plate	1K 10
552975	Bracket-acc pedal	1N 05
5529 80	Shaft & lever	1N 06
552989	Shaft & lever	1N 06
553000	Prop shaft	1H 02
553001	Prop shaft	1H 07
553002	Prop shaft	1H 07
553084	Block	1G 06
553164	Gearbox complete	2K 06
553262	Grommet	1G 02
553412 554055	Joint washer	1H 08 2C 13
554070	Dynamo fan Rocker shaft	10 06
554073	Rocker shaft	1E 07
554145	Suction pipe	10 12
554163	Joint washer	1C 12
554175	Adaptor	10 12
554260	Clip	1E 12
554383	Elbow	1L 08
554418	Hose	1L 08
554434	Bracket	1E 02
554525	Lever	1L 09
554541	Cover assy	1E 08
554602	Rocker bracket	1C 06
554620	Scraper ring	1D 05
554621	Set bolt (1/21n UNF X 5 3/16)	1C 10
554727	Sealing ring	1E 11
554728	Seal assy	1E 11
554789 554700	Scraper ring	1D 05
554790 554701	Scraper ring	1D 05
554791 554792	Scraper ring	1D 05
554831	Scraper ring Union nut	1D 05 1D 10
554832	Level rod tube	וו פו
554833	Bracket	10 11
554834	Level rod	10 11
554843	Cover assy	1E 08
554852	Clip	וֹם מוֹ

PART NUMBER	DESCRIPTION	REF.NO.
554917	Bracket	1D 10
554924	Front cover assy	10 10
554925		1D 15
	Adaptor	
555661 555663	Socket-inspection lamp-black	2D 11
555662	Socket-inspection lamp-red	2D 11
555702	Outer casing	2D 14
555754	Outer casing	2D 14
555762	Socket	2E 05
555776	Dash harness	2E 05
555778	Switch	2D 11
555798	Dynamo harness	2E 05
555800	Lead	2E 05
555835	Fuel gauge	2D 11
555837	Warning light lens	2D 11
555844	Gauge unit	1L 18
555845	Gauge unit	1L 18
555846	Gauge unit	1L 18
555847	Gauge unit	1L 18
555877	Switch	2D]]
555879	Lead	21 13
55£010	3rd speed gear	1G 05
556039	Bell housing	2K 06 2K 07
556040 556044	Layshaft Rell barrier	2K 07
556044	Bell housing	2K 07
556147 556204	Bolt (5/16 BSF X 4in)	1H 07
556204 556270	Plug	1G 03
556379 556440	Retaining plate	16 03 1H 02
556449 556450	Prop shaft Prop shaft	1H 07
556508	Bleed screw	1F 10
556570	Plug	1G 03
556855	Nut (3/8 UNF)	2L 02
557432	Pipe pump to carburetter	1L 16
557498	Plug	1D 15
557523	Locker	1E 06
557693	Inlet adaptor	1M 04
557694	Hose	1M 04
557782	Banjo	1D 06
557967	Exhaust valve	10 06
558168	Hot plug	1E 11
558190	Washer	1L 09
558302	Oil pipe	1D 06
559058	Dash & dynamo harness	2E 05
559140	Cable	2E 08
559141	Lead	2E 08
559150	Cable	2E 08
559159	Speedometer & warning lights-miles	2D 11
559160	Speedometer - kilometres	2D 11
559163	Cable	2E 08
559563	Pin	1K 08
559579	Cowl for fan	10 02
559580	Shroud for fan cowl	10 03
559646 550647	Bracket	2L 14 2L 14
559647	Plate	EL 14

PART NUMBER	DESCRIPTION	REF.NO.
559648	Taper washer	2L 14
559846	Adaptor pipe	2L 14
559884	Petrol pipe nylon filter bowl to carburetter	1M 12
559885	Petrol pipe nylon	1M 12
560103	Pin	1M 04
560233	Special bolt 5/16 in UNF X 1.3/8 in	1J 09
560404		2D 11
56 0405	Nameplate	2D 11
	Nameplate	20 11 20 11
560407	Nameplate	2D 11
56 0410	Nameplate	
560411	Nameplate	2D 11
560412	Nameplate	2D 11
560532 560533	Dynamo harness	2E 07
56 0533	Lead	11 04
560555	Rear crossmember harness	2E 07
560557	Frame harness	2E 07
560566	Cable	2E 08
560567	Cable	2E 08
560744	Gauge panel complete	2D 11
560746	Water temperature gauge	2D 11
560749	Windtone horn	2E 07
560752	Cable-inner	2D 12
560753	Cable-outer	2D 12
560756	Warning light-blue	2D 11
560775	Switch	1K 02
560874	Terminal eyelet	2C 08
560875	Insulating boot	2C 08
560887	Wheelbox for wiper	2D 15
560898	Frame & cross member harness	2E 05
560899	Dash harness	2E 05
560901	Frame & crossmember harness	2E 05
5609 03	Frame & crossmember harness	2E 05
560904	Dash harness	2 E 05
56091 0	Dash harness	2E 07
560941	Wiper blade	2D 14
560955	Headlamp-bulb type-LH stg	2D 03
560965	Cable	2E 06
560966	Outer casing	2D 15
56 0967	Nut plate	2D 15
56 0968	Lead	11 04
560969	Engine harness	2E 05
56 0975	Frame & crossmember harness	2E 05
560976	Frame & crossmember harness	2E 05
560977	Frame & crossmember harness	2E 05
560992	Cable	2E 06
561195	Stud	1H 06
561196	Stud 3/8in UNF X 1.3/4in	1H 06
561197	Shim	1G 07
561221	Spring	1G 12
561242	Slave cylinder bracket	1F 09
561254	Wheel nut	1H 16
561368	Oil catcher	1J 06
561484	Bolt 3/8in whit X 1.29/32 in	1G 03
561590	Stud for road wheel	1H 06

DADT 444000	DESCRIPTION	255	
PART NUMBER	DESCRIPTION	REF.N	10.
561661	Connecting tube	<u>je</u> i	
561762	Slave cylinder bracket	1F 0	
561856	Joint washer	10 0	
561877	Housing	16 0	
561886	Stud	/ ነዘ ር	
561889	Hub assy	1H C	
561922 563054	Slave cylinder bracket)F 0 16 0	
561954 561960	Bush	1G C	
561962	Reverse wheel assy Shaft	1G (
561985	Support bracket	2K (
562019	Pressure gauge	2J (
562637	'U'bolt	1H 1	
562641	Main leaf	1H 1	15
562654	Bracket	10 (
562663	Bridge plate	2F (
562666	Pipe	1K (
562670	Bracket	<u> 1N (</u>	
562675	Servo bracket	1K	
562678	Servo unit]K (
562717	Spring	IN (
562719 562734	Support bracket 'U' bolt	า้า	
562735	Check strap	2 F 1	
562748	Sedimentor	וֹנ	
562758	Heat shield exhaust manif		
562763	Support bracket	IN '	
562771	'U' bolt	ŽĹ (
562776	'U' bolt	ŽĹ (
562781	Heat shield	1N 1	14
562791	Pipe complete	2L 1	
562793	Pipe complete	2L	
562795	Hose	2L	
562875	Shaft		
562905	Pipe	ŢĶ.	
562908	Pipe	1K (
562912	Exterior mirror complete	2F (
562919 562928	Hose	2F	
562932	Casing support Pipe 3/16in	้าง	
562940	Gasket	i ัง	
562943	Adaptor	IF (
562944	Cowl for fan	10 (
562947	Clip	1F (
562953	Battery bolt	2F (
562978	Pipe tank to master cylin	der ly '	
562979	Drive_screw	10	
563037	Impellor	וַם וֹחַ	
563038 563047	Joint washer	10 10	
563047 563050	Water pipe	10	
563050 563121	Wedgelok screw	וֹם	
563121 563145	Plug Chain wheel	10	
563146	Fuel pump	iί	
999179	i adi bamb		-

PART NUMBER	DESCRIPTION	REF.NO.
563154	Adaptor	1D 12
563165	Pipe	1L 12
563166	Pipe	11 12
563167	Pipe	11 12
563168	Pipe	11 12
563181	Bracket	1M 04
56 3190	Fuel filter	1L 12
563195	Union	1L 13
56 3318	Switch	2D 11
564157	Joint washer	10 12
564162	Adjusting link	2C 13
564163	Timing pointer	1D 10
564164	Tube	1D 12
564165	Connector	1D 12
564202	Cylinder head	1D 13
564206	Bracket	1 D 13
564215	Crankcase sump	10 1 0
564226	Control ring	1E 04
564231	Piston assy	1E 04
564233	Piston assy	1E 04
564267	Pulley	1D 12
564270	Hub	1D 12
564 308	Clamp	1E 14
564332	Injector complete	1L 12
564334	Oil pump assy	1D 06
564 335	Oil pump assy	1D 06
56 4362	Timing pointer	1C 08
564 375	Crnakshaft pulley	1C 03
564394	Flywheel housing	1F 02
564446	Adaptor	1M 07
564447	Washer	1M 07
564456	Spring	10 04
564463	Chain wheel	1D 04 1E 08
564467	Baffle plate	1E 08
564470	Timing pointer	11 12
56449 5	Distributor pump	10 10
564574 664690	Stud	1M 12
564 580	Union for petrol pipe	1M 12
564 581 5646 02	Petrol pipe nylon	1M 07
5646 03	Suction pipe Pipe	1M 07
564704	Front bumper	2F 02
564718	Overflow bottle	10 03
564719	Cap for overflow bottle	10 03
564720	Hose radiator to overflow bottle	10 03
564724	Flexible pipe overflow bottle outlet	10 03
564741	Spring washer	10 02
564785	Pipe tank to master cylinder	13 11
564786	Brake pipe	1K 02
564792	Ext shaft and lever	1N 05
564793	Ext shaft and lever	1N 05
564794	Control rod	IN 06
564797	Control rod	IN 06
564 813	Pedal shaft	1J 13

PART NUMBER	DESCRIPTION	REF.NO.
564816	Pedal bush	1J 13
564825	Spring washer	11 07
564898	Pipe	1L 13
564899	Pipe	1L 13
564902	Pipe	1L 13
564905	Pipe	1L 14
564907	Pipe	1L 13
564909	Valve	il iz
564911	Bracket	1N 08
564936	Pipe tank to sedimentor	1L 08
564937	Pipe	IL 14
564944	Packing piece	1J 09
564962	Pipe	1L 13
564963	Pipe tank to sedimentor	1L 08
564999	Joint washer	10 02
565770	Screw driver	2J 07
566462	Lever assy	2K 13
566761	Plate	2C 13
566813	Clip	1D 14
566851	Flywheel assy	1F 05
566957	Breather pipe	1 0 10
567959	Mounting clip	2D 06
568005	Terminal sleeve	2D 02
568301	Carbon ring & seal unit	1C 09
568333	Chain wheel	1C 03
568363	Bracket	1D 13
568364	Joint washer	1M 07
568365	Joint washer	1M 07
568380	Adaptor	1M 07
568391	Hose	1D 14
568392	Clip	10 14
568431	Ring gear	1F 05
568457	Adaptor	10 11
568474	Chai nwheel	16 05
568475	Push rod	1D 08
568542	Cover	1E 08
568550 568575	Valve spring	10 06
568575	Olive	1M 12
568588	Piston ring	1E 04 1C 13
568664	Stud	1C 13
568667 568686	Front cover assy Valve guide, inlet	10 10
568687	Valve guide, exhaust	10 10
568688	Valve guide, inlet	וֹב וֹז
568689	Valve guide, exhaust	וֹבַ וֹוֹ
568725	Cover assy	1D 14
568766	Lead	20 03
568786	Exhaust valve	1D 08
568802	Support for fuel tank	1M 10
568858	Stem rubber	2L 13
568866	Return spring	1J 10
568883	Trunnion	1J 08
568893	Pedal and bracket assy	1J 09
568894	Pedal and bracket assy	1J 08
568895	Pedal & bush	1J 13
	AN 3.3	

PART NUMBER	DESCRIPTION	REF.NO.
568896	Pedal and bushes	1J 08
568916	Cowl for fan	10 02
568917	Shroud for fan cowl	10 03
568922	Steady strip for shroud	10 03
568947	Pipe 1/4in	10 11
569 028	'U' bolt	1H 15
569047	Joint washer for plug	10 05
569 054	Brake pedal bracket assy	1J 08
569 055	Pedal bracket	1J 08
569 057	Pesal bracket	1J 08
569058	Bracket	1J 08
569084	Brake pedal bracket assy	1J 08
569 085	Pedal bracket	1J 08
569 086	Pedal & bushes	1J 08
569096	Spacer	13 09
569117	End stop	1J 09
569147	Pipe tank to master cylinder	าง าา
569149	Pipe tanktto master cylinder	10 11
569 201	Switch protector plate	1J 09
569 204	Road wheel	2L 09
569212	Shroud for fan cowl	10 03
569 223	Brake pipe	1K 02
569 243	Housing & quadrant	1N 10
56924 5	Lever for control	1N 10
569 250	Lever-cross shaft	1N 10
569291	Return spring	าง 13
569338	Servo unit	1J 13
569433	Pipe	1K 06
569434	Pipe	1K 06
569462	Mounting bracket	1F 08 1I 05
569 522	Packing piece	11 US 1J 13
569 584	Switch lever	16 13 1L 14
569585	Mounting bracket	1J 13
569 601	Pedal bracket	10 13
569 606	Bracket	1J 13
569 609	Nylon bush	13 13
569 652 569 653	Pedal & bracket assy	1N 10
569 654	Mounting panel LH Mounting panel RH	in 10
569 687	Wheel brace	2L 17
569 689	Casing support	2F 02
569 690	Road whee!	1H 16
569701	Return spring	13 10
569702	Pipe 1/4 in	13 14
569746	Bush 1.187in O/D	1H 15
569769	Pipe	1K 06
571059	Oilseal	1G 03
571145	Peg	1G 11
571164	Cap for pivot pin	16 03
571218	Distance piece	1G 04
5 71235	Driving member	1H 07
571661	Tolerance ring	1G 10
571711	Driving member	1H 07
571770	Inner member	2K 0B
571855	Selector rod	1G 12

PART NUMBER	DESCRIPTION	REF.NO.
571916	Set screw 5/16in BSF	1H C8
571922 574044	Washer	1H 07
574044	Fan blade	10 12
574048	Stud	10 13
574144	Conversion set	2C 06
574217	Rubber boot	2E 02
574654	Clip	1E 12
574656	Connecting tube	1E 14
574658	Breather filter	1E 12
574661	Inlet manifold	1E 14
57487 i	Hose	1E 10
574878	Rubber sleeve for suction pipe	1M 07
575014	Spring washer	2E 04
575042	Grommet	2J 05
575047	Outer casing	2D 14
575081	Switch	2D 10
575082	Clip	2C 08
575099	Headlamp RH stg	2D 03
575101	Headlamp-LH stg	2D 03
575103	Light unit LH stg	2D 03
575114	Self-cancelling flasher switch	2D 06
575119	Sidelamp	2D 03
575123	Flasher lamp	2D 06
575125	Flasher lamp	2D 06
575166	Mechanical stop switch	11 13
575861	Switch	2D 11
576103	Wheel nut	2H 03
576159	Pin	1H 08
576201	Low gear wheel	2K 08
576207	Bearing	1G 05
576209	Outer_member	2K 08
576210	Transfer gear lever	1G 13
576217	Propeller shaft	2L 02
576236	Shim	1H 09
57,6237	Shim	1H 09
576238	Shim	1H 09
576239	Shim	1H 09
576302	Gearbox complete	2K 06
576316	Knob	16 10
576521	Bolt (3/8 BSF X 1 3/8)	1H 03
576522	Bolt (3/8 BSF X 11/21n)	1H 03
576583	Swivel_pin_complete	1H 04
576686	Layshaft cluster	1G 06
576703	Fork	1G 11
576704	Fork	1G 11
576707	Reverse gear	1G 06
576714	Bell housing	1G 02
576717	Bolt 5/16 in BSF X 2 in	1G 03
576718	Frt cover G/box	1G 03
576720	Pivot pin clutch release	1G 03
576723	Clip	1F 10
576724	Joint washer G/box front cover	1G 03
576725	Mainshaft	1G 05
576727	Selector shaft	1G 11

PART NUMBER	DESCRIPTION	REF.NO.
576729	Selector shaft	16 11
576730N	Gearbox assy	1G 03
576734	Bush	16 06
576735	Thrust washer	1G 06
576751	Push rod slave cylinder	1F 10
576761N	Gearbox assy	1G 03
576762	Bell housing	1G 02
576767 576769	Half shaft	1H 13 - 1H 13
576768 576925	Half shaft	1H 06
57682 5 576 836	Stud for road wheel Bearing housing	1G 06
576844	Hub and stud assy	1H 06
5768 9 5	Lock TAB	1H 08
5769 07	Distance piece for bearing	1G 06
576 973	Brake drum	10 03
576974	Brake drum	1J 04
577002	Battery frame	2F 02
577016	Bracket	1K 06
577137	Shaft hand brake lever	1J 06
577138	Washer plate	1J 06
577166	Brake pipe	1K 02
577331	Hand control housing	1N 10
577332	Distance tube	1N 10
577342	Cowl for fan	10 02
577348	Bracket	1E 02
577354	Washer	1J 06
577383	Radiator block assy (less cowl)	10 02
577414	Crossmember	2F 02
577609	Radiator block	10 02
577874	Steady strip for shroud	10 03 11 07
577898 577073	Clip for ball joint	2F 02
577973 570243	Check strap Lead coil to distributor	2E 06
579243 587001	Shield	2C 05
587095	Shield	וו או
567104	Hose flame trap to carb	10 10
587105	Hose	iD 10
587338	Set bolt 7/16 in UNF X 55/32 in	10 13
587339	Plain washer	10 13
587401	Manifold assy	1D 16
587405	Plain washer	10 13
5874 6 3	Outlet pipe	1D 12
587622	Support plate	1F 10
587628	Cup plug	10 02
587726	Stud	10 12
587923	Plug	1D 09
589283	Lens for sidelamp	2D 04
589284 590403	Lens for sidelamp	2D 04
5894 01	Sidelamp	2D 04
5894 03	Sidelamp Front flacker lamp	2D 04 2D 06
589409 599414	Front flasher lamp	2D 06
589414 589448	Rear flasher lamp	2D 05
589806	Lens for stop/tail lamp Cable clip	2J 04
307000	capie ciih	20 04

PART NUMBER	DESCRIPTION	REF.NO.
591039	Brake drum	1J 02
5912 0 2	Bush	1F 07
591204	Sleeve assy	1F 07
591205	Housing	1F 07
591231	Slave cylinder	1F 10
591278	Front propshaft	2L 02
591279	Rear propshaft	1H 07
591283	Rear propshaft	1H 07
591362 501363	lst mainshaft gear	16 06
591363 501364	Second speed gear	1G 05
591364 591378	Synchro cone Axle shaft	1G 05
591379	Axle shaft	1H 06 1H 06
591429	Rear output shaft	1G 07
591440	Gearbox assembly	1G 03
591441	Gearbox assembly	1G 03
591519	Spring pin	1G 06
591527	Shaft for reverse gear	1G 06
591544	Rear axle assy	1H 06
591661	Brake drum	1J 02
592177	Bottom plate	2 L 02
592179	Bottom plate	1H 15
592182	U-bolt	1H 15
592183 502184	U-bolt	2L 06
592184	U-bolt	2L 02
592185 592310	U-bolt	2L 02
592219 592374	Jack rod	2J 07
592375	Brake pipe Brake pipe	1K 03 1K 03
592472	Chassis frame	2L 09
592508	Clutch pipe	10 11
592509	Clutch pipe	ij 14
592515	Jump hose	1F 10
592549	Brake pipe	1K 02
592594	Crossmember	2F 02
533664	Bracket	1F 10
594018	Shim	1G 05
594019	Shim	1G 05
594020	Shim	1G 05
594021 594104	Shim	1G 05
594195	Nut (7/16 BSF)	1H 04
594224	Gear shaft Seal	1G 07 1F 07
594361	Front propshaft	2L 02
594416	Front axle assh LH strg	2L 02
594484N	Differential assy	1H 08
594683	Chassis frame 109 in 4 cyl SW	2F 02
594697	Chassis frame 109 in 6 cyl	2F 02
594698	Chassis frame 109 in 6 cyl SW	2F 02
594753	Hose clip	1L 08
594776	Bleed pipe	1F 10
594793	Clip for hose top	1M 10
594822	Adaptor	1F 10
594938	Bracket junction piece	1K 02

PART NUMBER	DESCRIPTION	REF.NO.
595123	Drop arm	11 03
595336	Wheel nut wrench	2J 07
595468	Strg drag link and damper brkt assy	2L 13
595469	Drag link and damper brkt	2L L3
596000	Inlet manifold	10 12
596069	Plug	10 12
596097	Stud 5/16 in UNF X 113/16 in long	1D 16
596495	Elbow	1M 07
597501	Piston assembly 020 0/5	10 03
597503	Piston assembly 040 0/S	10 03
597563	Banjo bolt	וֹנ זוֹ
598064	Hub for fan	1C 09
598086	Cylinder head assy	10 10
598089	Cylinder head assy	10 10
598110	Carburetter	1M 05
598214	Oil pump shaft	1D 06
598231	0il filler cap	1D 10
598354	Joint washer	10 11
598473	Exhaust manifold	1C 13
598531	Carrier bracket overflow bottle	10 03
598536	Bottom plate	2L 02
598539	Exhaust silencer	1N 13
598598	Check strap	2L 06
598652	Bell crank lever and bush	IN 06
598854	Check strap	2 F 02
599423	Chassis frame 109 in 4 cyl	2F 02
599698	Distancr piece	1H 06
599826	Stub axle assy	1H 05
599827	Stub axle assy	2L 04
599828	Bearing sleeve assy	1H 06
599869	Roller bearing	1G 07
600024	Screw	2D 03
600025	Spring for screw	2 D 03
600026	Fibre washer	2 D 03
600174	Thrust washer	1D 04
600175	Thrust washer	1D 04
600176	Thrust washer	10 04
600177	Thrust washer	1D 04
600178	Thrust washer	1D 04
600179	Thrust washer	1D 04
600202	Anchor plate	1J 04
600203	Anchor plate	1J 04
600206	Pipe	13 04
600210	Wheel cylinder kit	1J 04
600212	Spring	1J 03
600226	Adaptor & leads	2D 03
600241	Main nut assy	2L 10
600242	Main nut assy	2L 10
600243	Flywheel assy	1F 02
600245	Stud kit for cylinder block	10 02
600303	Loctite compound	2J 02
600310 600311	2nd leaf - rear	2L 09
600329	Dowel & nut-rear	2L 09 2C 02
600329	Terminal bush & Lead Bush	2C 02
000007	AR3II	20 02

PART NUMBER	DESCRIPTION	REF.NO.
600349	Grommet	20 08
600351	Throttle butterfly	1M 02
600401	Oil container	1M 12
600423	Special screw	2D 04
600432	Servo overhaul kit	1K 05
600432	Servo overhaul kit	2J 02
600432	Servo overhaul kit	2L 15
600434	Poppet valve overhaul kit	1K 05
600435	Non return valve overhaul kit	1K 05
600468	Outer column	11 02
600476	Springs set	2C 02
600603	Gearbox gasket set	2G 03
600613	Element for air eleaner	1M 12
600638	Contact set	2D 13
600645	Filler cap	1G 03
600656	Flange	1H 07
600851	Special screw	2D 02
600901	Diff casing	1H 10
600902	Nose piece	1H 10
600916	2nd speed gear	1G 04
600984	Outer column	11 02 2J 06
601313 601316	Sealing pellet	
601469	Cylinder block assy	1C 02 1E 11
601521	Cylinder head assy Screw	1M 03
601543		2D 07
601594	Grommet Washer	1M 02
601680	Serve kit major	1K 05
601689	Pivot pin	20 08
601720	Lens	2D 09
601721	Lens	2D 02
601754	Spring set	2C 04
601790	Splined stub shaft	1H 07
601834	Carburetter body	1L 06
601835	Throttle spindle	1L 06
601836	Throttle lever	1L 06
601837	Throttle stop	1L 06
601838	Special nut	1L 07
601840	Relay lever	1L 06
601841	Split pin	1L 06
601842	Lever	1L 06
601843	Plain washer	1L 06
601844	Butterfly for throttle	1L 06
601845	Special screw	1L 06
601846	Special screw	1L 06
601850	'0' ring	1L 06
601851	Emulsion block	1L 06
601852	Ball for piston	1L 06
601853	Circlip	1L 06
601854	Plug for pump jet	1L 06
601855 6018 56	Pump discharge valve	1L 06
601857	Accelerator pump	1L 06 1L 06
601858	Special washer Float	1L 06
601859		1L 06
001033	Spindle for float	11. 00

PART NUMBER	DESCRIPTION	REF.NO.
601860	Top cover	1L 07
601861	Lever & swivel	16 07
601862	Spring	11. 07
601863	Circlip	11 07
601865	Spindle and pin	1L 07
601866	Spring	11 07
601867	Butterfly for choke	1L 07
501869	Plain washer	1L 07
601870	Bracket & clip	1L 07
601872	Special screw	1L 07
601873	Shakeproof washer	1L 07
601874	Spindle & lever	1L 07
6 01875	Spacing washer	1L 07
6 01876	Pump lever	1L 07
6 01877	Washer	1M 06
601878	Retaining ring	1L 07
6 0187 9	Diaphragm	1L 07
6018 80	Gasket	1L 07
601881	Spring	1L 07
601882	Cover	1L 07
601883	Screw	<u>1</u> L 07
601884	Spring washer	1L 07
601885	Spindle & pin	1L 07
601886	Special screw	1L 06
601887	Spring_washer	1L 06
601888	Screw & washer]L 06
601891	Split pin=	1L 07
601892	Plain washer	1L 07
601893	Link	1L 06
601894	Split pin	11 06
601895	Main jet	1L 06
601896	Enrichment jet	1L 06
601897	Slow running jet	1L 06
601899	Screw & washer	1L 06
601900 601054	Needle valve	1M 02
601954 6019 9 9	Washer Rim light unit	2D 03
602915	Drain tap	10 02
603887	Clip fixing hose	10 03
603888	Clip	1K 06
603896	Clip	1L 17
603897	Hose clip for air cleaner connection	
605010	Plug	il 14
605011	Seal	IL 14
605012	Plug	1L 12
605013	Seal	1L 12
605047	Control ring	1E 04
605048	Control ring	1E 04
605049	Control ring	1E 04
605050	Control ring	1E 04
605056	Cover	2C 15
605061	Spring set	2C 15
605062	Bearing	2C 15
605 063	Bracket	2C 15
605070	Headlamp	2D 02

PART NUMBER	DESCRIPTION	REF.NO.
605092	Carb overhaul kit	1L 05
605093	Carb gasket kit	1L 05
605106	Gasket kit	1D 03
605127	Overhaul kit Br M cylinder	1J 12
605157	Cylinder block assy	1D 03
605162	Jet housing	JM 02
605169	Gasket small	1D 15
605183	Joint washer for gauge unit	1M 10
605238	Plastigauge strip	2J 02
605280	Knob	2D 10
605322	Spring washer	1M 08
605484	Valve guide kit	1E 13
605539	Piston ring	1E 04
605540	Piston ring	1E 04
605541	Piston ring	1E 04
605542	Piston ring	1E 04
605560	Sedimentor	1L 14
605612	Cover	2C 09
605615	Pivot pin	2C 09
605621	Armature	2C 09
605622	Sundry parts	2C 0S
605653	Spindle	20 09
605683	Main jet	1L 07
605684	Main jet	1L 07
605685	Main jet	1L 07
605686	Main jet	1L 07 1L 07
605687	Slow running jet	2D 10
605698	Lamp switch	2D 10
605699 605705	Knob Nut	2C 09
605716	Water pump kit	2J 02
605761	Valve guide oil control kit	10 11
605765	Coolant inhibitor	2J 02
605793	Adaptor	1M 05
605794	Spindle	1M 05
605795	Lever	1M 05
605796	Throttle stop	1M 05
605797	Washer	1M 05
605799	Nut	1M 05
605800	Butterfly	1M 05
605801	Screw	1M 05
605802	Spring	1M 05
605803	Cover	1M 06
605804	Spindle	1M 06
605805	Spring	1M 06
605806	Washer	1M 06
605807	Screw	1M 06
605808	Lever	1M 06
605809	Washer	1M 06
605810	Washer	1M 06
605811	Screw	1M 06
605813	Bracket	1M 05
605815	Screw	1M 06
605816	Screw	1M 05
605817	Spring	1M 05
	2N 17	

PART NUMBER	DESCRIPTION	REF.NO.
•		1M 05
605818	Screw	
605820	Pin	1M 05
605821	Spring	1M 05
605822	Clip	1M 05
605827	Jet orifice	JM 06
605828	Spring	1M 06
605830	Carrier	IM 06
605833	Float	1M 06
605834	Spindle	1M 06
605835	Gasket	IM 06
605836	Float chamber	1M 06
605837	Screw	1M 06
605838	Screw	1M 06
605839	Washer	1M 06
605840	Washer	1M 06
605842	Retaining ring	1M 05
605843	Screw	1M 05
605844	Air cvalve	1M 05
605845	Screw	1M 05
605846	Top cover	1M 05
605847	Screw	1M 05
605848	Damper & cap	1M 05
605849	Washer	1M 05
605850	Bush	1M 05
605852	Washer	1M 06
605857	Gasket kit	2J 02
605904	Spindle & gear	2D 14
605933	Gearbox casing	2K 06
605997	Lining for clutch plate	1F 03
606098	Carburetter kit	2 J 02
606099	Primary pinion	1G 05
606138	Enrichment jet	1L 06
606187	Mirror	2E 03
606207	Seal for centre bolt	1M 11
606220	Circlip	20 04
606253	Fuse box	2E 02
606301	Washer	1M 06
606309	Wiper motor	20 14
606314	Spark plug	2C 03
606318 606319	Enrichment jet (150)	1L 06
606329	Emulsion block	1L 06
606330	End cap	13 09
606331	Spacer End cap	1J 09
606332	Spacer	1J 09 1J 09
606404		
606415	Sealing washer Overhaul kit Br M cylinder	1J 13 1J 14
606486	Spring	15 14 1M 05
606487	Needle	1M 05
606499	Bulbholder	2D 03
606501	Bulb holder	2D 03 2D 06
606502	Bulb holder	2D 09
606504	Bracket	2C 06
606505	Cover	2C 09
606507	Bracket	2C 09
	2N 17	20 00

PART NUMBER	DESCRIPTION	REF.NO.
606508	Pivot pin	2C 09
606577	Lamp switch	2D 10
606583	Vacuum unit	2C 02
606679	Gasket	1L 07
606700	Linkng c/w rivets	1J 04
606880	Pr pinion & const gear	1G 05
606881	Gear box casing	1G 03
606895	Bush	2C 02
606988	Exhaust manifold kit	10 13
607125N	Gearbox assy	1G 03
607127N	Gearbox assy	1G 03
607141	Field coil	2C 15
607162	Gear carrier casing	1H 12
607163	Bolt	1H 12
607164	Diff case less gears	1H 12
607165	Bolt 12mm X 50mm	1H 12
607166	Diff pinion	1H 12
607167	Diff pinion	1H 12
607168	Thrust washer	1H 12 1H 12
607169 607172	Thrust washer	1H 12
607173	Plug Bolt	1H 12
607175	Gasket	1H 12
607176	Washer for diff pinion	1H 12
607177	Shim	1H 12
607178	Shim	1H 12
607179	Shim	1H 12
607180	Pinion bearing	1H 12
607181	Pinion bearing	1H 12
607182	Oil thrower	1H 12
607183	Gasket	1H 12
607185	Flange	1H 12
607186	Bracket	1H 12
607187	Bearing	1H 12
607188	Shim	1H 12
607189	Shim	1H 12
607190	Shim	1H 12
607191	Shim	1H 12
607197	Spacer	1H 12
607247	Rear axle assy less hub brake & shafts	1H 12
607747	Bracket	2C 09
607808	Steady post and bush kit	1J 03 1M 06
607815 607908N	Bush for jet orifiche	2K 06
607909N	Gearbox assy Gearbox assy	2K 06
607932	Pinion retaining kit	2C 04
607950	Bracket	20 13
608004	Screw and washer	2D 04
608005	Screw and washer	2D 04
608111	Vacuum unit	2C 02
608124	Engine overhaul gasket kit	1C 02
608172	Bush kit	2C 04
608174	Bracket, drive end	2C 04
608246	Drain plug	1H 12
608255 S	Piston assy	1C 03
	2N 19	

PART NUMBER	DESCRIPTION	REF.NO.
608283	Inner and outer members	1G 06
608304	Bush kit for bracket	2C 09
608327	Cylinder block	1C 02
608388	Bolt kit	2C 08
608421	Spring set	2C 05
608457	Crown wheel and pinion	1H 09
608464	Ball joint assy	1I 07
608465	Strg track rod assy	1I 07
622006	Gear lever assy	1G 10 1G 10
622007 622042	Gear lever assy Oil seal	1G 10
622045	Gasket for bell housing	1G 02
622046	Joint washer transfer box to gearbox	1G 08
622047	Joint washer for bearing housing	16 08
622048	Joint washer for output shaft	1G 09
622155	Selector fork	1G 12
622195	Rear axle casing assy	1H 06
622197	Rear axle casing assy	1H 06
622199	Front axle casing	1H 02
622281	Bolt 1/4 in BSF X 13/32 in	1G 11
623065	Horn	2D 13
624077	Spring bottom plate	1H 15
624078	Spring bottom plate	1H 15 1H 15
624079 624080	Spring bottom plate	1H 15
624084	Spring bottom plate Spring bottom plate	1H 15
624252	Handbrake lever assy	1K 08
626262	Handbrake lever assy	1K 10
850641	Plain washer M10	1C 14
AAU 1053	Swivel for stop lever	1L 09
AAU 1054	Clamp bolt	TL 03
AAU 1130	Sidelamp	2D 08
AAU 1484	Needle valve	1M 06
AAU 1582	Brake cleaning fluid	2J 02
A AU 1909	Outer casing	2D 15
AAU 2003	Socket for control rod	1N 03
AAU 2825	Spring washer	1H 12
AAU 3381 AAU 4071	Oil seal Heater / sealing switch	1H 12 2D 10
AAU 4071 AAU 8469	Lining with rivets	1J 04
AAU 8470	Lining with rivets	1J 05
AAU 8471	Lining with rivets	1J 03
AAU 9902	Seal, bottom	1L 09
AAU 9902	11 11	וֹנ וֹנ
AA U 99 03	Seal, top	1L 12
AAU 9903	ıı tı	1L 14
AB 604021	Drive screw	1N 10
AB 604031	Drive screw	2F 07
AB 604031	84 H 11 H	2G 09
AB 604031 AB 604041	Drive screw	2I 09 2F 13
AB 604041	n ii	2F 14
AB 604041	I) it	2H 02
AB 604041	u u	21 02
· •		21 04

PART NUMBER	DESCRIPTION	REF.NO.
AB 604041	Drive screw	21 10
AB 606021	Drive screw	1C 10
AB 606031	Drive screw	10 02
AB 606031	11 (1	2F 12
AB 606031	II II	2F 15
AB 606031	и в	2G 02
AB 606031	10 U	2H 02
AB 606031	U 11	2H 07
AB 606031		21 06
AB 606031	11 11	2I 07
AB 606031	u u	2I 14
AB 606031	II II	21 15
AB 606071	Drive screw	2F 12
AB 606071	H H	2F 15
AB 606081	Drive screw	21 10
AB 608031	Drive screw	1L 10
AB 608031 AB 608031	 N	2G 02
AB 608031	н н	2G 05 2G 07
AB 608031	Н Н	2I 09
AB 608031	11 11	21 13
AB 610031	Drive screw	1D 14
AB 610051	Drive screw	1L 14
AB 610051	H H	21 03
AB 610051	II II	21 05
ABU 5794	Headlamp	2D 02
AC 606081	Drive screw	21 13
AD 604031	Drive screw	2G 04
AD 606041	Drive screw	21 13
AEU 1022	Lining package	1F 03
AEU 1058	Lens	2D 06
AEU 1058	1	2D 07
AEU 1061	Headlamp	2D 02
AEU 1061	11 A Au - 3 9	2D 03
AEU 1147	Centre seal, lower	1M 11
AEU 1367	Retention kit	2C 04 2C 02
AEU 1428	Brush and spring	2C 02
AEU 1429 AEU 1449	Vacuum unit	1L 16
AEU 1449	Clip	2J 04
AEU 1449 AEU 1450	Clip	2J 04
AEU 1451	Clip	2J 04
AEU 1581	Clip	1F 09
AEU 1586	End cover bracket	2C 04
AFU 1024	Combination pliars	2J 07
AFU 1088	Drive screw	2D 02
AUA 573	Joint washer	1M 08
AUB 617	Filter	TM 08
AUB 654	Sealing ring	80 MI
AUB 656	Diaphragm	1M 08
AUB 657	Sealing ring	1M 08
AUB 676	Sealing washer	1M 08
AUB 795 AUB 849	Joint washer	1M 08 1M 08
AUB 6062	Joint washer Valve assy	1M 08
AUU UUUL	20 02	in vo

DART NUMBER	DECCD IDTT ON	_
PART NUMBER	DESCRIPTION	REF.NO.
AUB 6106	Contact set, fuel pump	1M 08
AUB 6179	Condenser	1M 08
AUC 1123	Float	1M 02
AUC 1152	Pin	1M 02
AUC 1167 AUC 1358	Spring	1M 02
AUC 1358 AUC 1557	Screw Aluminium washer	1M 02
AUC 1928	Fibre washer	1M 03 1M 03
AUC 2001	Jet bearing	1M 02
AUC 2002	Jet screw	1M 02
AUC 2006	Jet spring	1M 02
AUC 2014	Gasket	1M 02
AUC 2027	Gland spring	1M 02
AUC 2028	Slow running valve	1M 02
AUC 2029	Gland washer	1M 02
AUC 2030 AUC 2057	Brass washer	1M 02
AUC 2057 AUC 2110	Special screw Rolt	1M 02 1M 02
AUC 2139	Filter and spring	1M 03
AUC 2175	Special screw	1M 02
AUC 2451	Spring	1M 03
AUC 8155	Jet complete	1M 02
AUD 247	Carburetter	1M 02
AUD 2285	Lever for float	1M 02
AUF 503	Fuel pump	1M 08
AXE 2070 BAU 1689	Locker	10 09
BH 505201	Clip Bolt 5/16 in UNC X 2.1/21n	1L-16 1M-07
BH 505241	Bolt 5/16 in UNC X 3in	1M 07
BH 604091	Bolt 1/4in UNF X 1.1/8in	1D 12
BH 604101	Set bolt	10 12
BH 604101	N II	1K 02
BH 604101	19	1K 04
BH 604101	N 61 10 to	1K 06
BH 604101	 U 11	1N 02
BH 604101		1N 03 1N 05
BH 604101 BH 604101	II II	1N 07
BH 604101	a v	1N 09
BH 604101	11 ()	1N 10
BH 604101	स स	2I 12
BH 604101	11 N	2L 14
BH 604111	Set bolt 1/4in UNF X 1.3/8 in	1D 07
BH 604161 BH 604181	Bolt 1/44 HNC V 2 1/44	11 08
BH 604201	Bolt 1/4in UNF X 2.1/4in Bolt 1/4in UNF X 2.1/2in	1D 12
BH 604221	Bolt	1C 09 1C 09
BH 605101	Set bolt	1C 05
BH 605101	11 11	1E 06
BH 605101	11 41	1L 09
BH 605101	0 4	1L 11
BH 605111	Bolt 5/16in UNF X 1.3/8in	2C 14
BH 605161	Bolt 5/16in UNF X 2in	1C 07
BH 605201 BH 605221	Bolt 5/16in UNF X 2.1/2 in	2F 15
OU DOSEE!	Set bolt 5/16in UNF X 2.3/4in	10 13

PART NUMBER	DESCRIPTION	REF.NO.
BH 605241	Set bolt 5/16in UNF X 3in	10 07
BH 605261	Bolt 5/16in UNF 3.1/41in	1C 07
BH 605281 BH 605281	Set bolt	1C 07 1E 08
BH 606141	Bolt 3/8in UNF X 1.3/4in	1F 02
BH 606201	Bolt 3/8in UNF X 2.1/2in	1L 18
BH 606281	Bolt 3/8in UNF X 3.1/2in	1D 17
BH 606321 BH 607141	Bolt 3/8in UNF X 4 in Bolt 7/16in UNF X 1.3/4in	1J 06 1H 10
BH 607161	Set bolt 7/16in UNF X 2in	2C 08
BH 607241	Bolt 7/16in UNF X 31n	10 15
BH 607281	Bolt 7/16in UNF X 3.1/2in	10 15
BH 608361 BHA 4602	Bolt 1/2 in UNF X 4.1/2in	2L 09
BHA 4602 BHA 4790	Voltage regulator instruments Mounting strap	2E 04 2D 15
BHA 5252	Thermostat switch	าั๋่ง กัก
BHA 5252	4 "	1D 13
BLS 108	Ball	1G 06
BMK 1903 BTB 657	Locknut	1J 09 1K 02
BX 605111	T _. - piece Bolt	2C 10
BX 605111	11	2C 14
BX 605161	Special bolt	1C 13
BX 605281	Bolt	11 07
BX 607181 C 3964	Bolt Circlip	1I 07 1D 05
CCN 112	Circlip	1J 06
CCN 122	Circlip	1G 07
CD 31709B	Key blank	2H 07
ERC 545	Distributor complete	2C 05
ERC 1027 ERC 1029	Special nut for conn rod Conn rod nut	1D 05 1C 03
ERC 1561	Thrust plate	1C 05
ERC 2060	Support plate	1F 10
ERC 2250	Indicator	1F 05
ERC 2337S	Piston assy	1D 05
ERC 2339S ERC 2342S	Piston assy Piston assy	1D 05 1E 04
ERC 2533	Control rod and joint	1N 04
ERC 2686	Lifting bracket	10 11
ERC 2686	11 U	1E 12
ERC 2886 ERC 3978	Carburetter Spindle & bearing	1L 06 1C 09
ERC 3978	n n n	10 09 10 12
ERC 3978	н н н	1E 10
ERC 4110	Distributor	2C 02
ERC 4182	Vibration damper	1D 04
ERC 4199 ERC 4387	Oil level rod Lifting bracket	1C 08 1D 13
ERC 4480	Leak off pipe	1L 13
ERC 4935	Insert	1D 03
ERC 5086	Seal	1C 02
ERC 5086		1E 02
ERC 6105 FRC 1387	Drive shaft assy C-ring	1C 04 1G 10
1110 1007	20 03	10 10

PART	NUMBER	DESCRIPTION	REF.NO.
FRC	1454	Gear lever	1G 10
FRC	1455	Gear lever	1G 10
FRC	1511	Joint washer	1G 09
FRC FRC	1516 1516	Joint washer	1G 08 2K 1C
FRC	1536	Speedo spindle	1G 07
FRC	1758	Synchro clutch	1G 05
FRC	1780	Oil seal	1G 07
FRC	1832	Gear lever	1G 10
FRC	1833	Gear lever	1G 10
FRC FRC	1836 1837	Gear lever assy Gear lever assy	1G 10 1G 10
FRC	2060	Front axle assy	1H 02
FRC	2061	Front axle assy	1H 02
FRC	2074	Housing assy for swivel pin	1H 03/2L 03
FRC	2075	Housing assy for swivel pin	1H 03/2L 03
FRC	2135	Front axle assy	1H 02
FRC FRC	2136 2138	Rear axle assy	1H 06 1H 02
FRC	2216	Front axle assy Pinion housing	1H 08
FRC	2469	Locker	1G 10
FRC	2469	"	2K 13
FRC	3234	Brake spring	1J 06
FRC	3395	Front axle assy	1H 02
FRC	3398	Front axle assy	2L 02
FRC FRC	4396 4398	Front axle assy Rear axle assy	1H 02 1H 12
FRC	4835	Copper washer	1H 08
GAC	148	Radiator seal pellet	2J 02
GAP	405	Aerosol paint pastel green	2J 06
GAP	406	Aerosol paint bronze green	2J 06
GAP	407 409	Aerosol paint marine blue	2J 06 2J 06
GAP GAP	408 409	Aerosol paint limestone Aerosol paint grey	2J 06
GAT	348	Foot pump	2J 07
GBF	103	Brake fluid	2J 02
GBH	134	Brake hose	1K 02
GBH	302	Brake hose	1K 02
GBS GBS	728 729	Brake shoe set	1J 02 1J 03
GBS	729	Brake shoe set Brake shoe set	13 03 13 04
GBS	552	Brake shoe assy	13 06
GBS	79 3	Brake shoe set	1J 05
GBY	2205	Activator 12volt	2E 02
GBY	2235	Activator 6volt	2E 02
GCC GCC	112 127	Clutch cover	1F 03 1F 05
GCC	181	Clutch assy Clutch cover	1F 03
GCL	110	Ignition coil	2E 02
GCP	109	Clutch plate	1F 03
GCP	129	Clutch plate	1F 03
GCS	101	Contact points	2C 02
GCS GCS	107 125	Contact set Contact set	2C 05 2C 02
GDC	101	Distributor cap	2C 02
		20 03	20 00

PART	NUMBER	DESCRIPTION	REF.NO.
GDC	103	Distributor cap	2C 02
GDC	107	Distributor cap	20 02
GDC	115	Distributor cap	2C 05
GDC	226	Distributor cap	2C 02
GEG	162	Decarb gaskets	2J 02
GEG	240	Engine overhaul gasket set	10 02
GEG	339	Cylinder head gasket	1D 13
GEG	393	Cylinder head gasket	1E 11
GEG	431	Joint washer top rocker cover	10 10
GEG	432	Joint washer for rocker cover	1D 14
GEG	433	Joint washer for rocker cover	1D 10
GEG	452	Joint washer for rocker cover	1E 12
GEG	537	Joint washer sump	10 08
GEG	538	Joint washer for sump	10 10
GEG	639	Joint washer	1C 13
GEG	640	Joint washer for exhuast manifold	1D 16
GEG	661	Joint washer	1C 13 1E 14
GEG	685	Manifold gasket	10 14 10 11
GEG	723	Gasket	1E 02
GEG	1200	Decarb gasket set	1D 03
GEG	1214	Decarb gasket set	10 10
GEG GEU	3308 101	Cylinder head gasket	2C 10
GEU	104	Dynamo complete	2C 13
GEU	105	Dynamo complete	2C 12
GEU	419	Dynamo complete Starter motor	2C 04
GEU	419	ii ii	2C 06
GEU	430	Starter motor	2C 09
GEU	437	Starter motor	2C 08
GEU	603	Voltage regulator box	2E 02
GEU	605	Voltage regulator box	2E 02
GEU	607	Voltage regulator box	2E 07
GEU	701	Wiper motor	2D 13
GEU	708	Windscreen wiper motor	2D 15
GEU	714	Windscreen wiper motor	2D 14
GEX	1369	Front exhaust pipe	1N 11
GEX	1370	Intermediate exhaust pipe	1N 12
GEX	1372	Front exhaust pipe	IN 11
GEX		Intermediate exhaust pipe	1N 12
GEX		Intermediate ex pipe	1N 12
GEX		Front exhaust pipe	וו או
GEX		Intermediate ex pipe	1N 12
GEX		Front exhaust pipe complete	IN 14 IN 14
GEX		Intermediate exhaust pipe	1N 14
GEX		Tail pipe complete	1N 11
GEX		Front exhaust pipe	2L 16
GEX GEX		Front exhaust pipe Exhaust silencer	1N 13
GEX		Exhaust silencer	1N 13
GEX		Exhaust silencer	în 14
GEX		Flexible mounting	1N 12
GEX		Clamp	1N 14
GEX		Saddle	IN 12
GEX		Bracket	1N 12
CEX		Packing plate	1N 13
		00.04	

PART	NUMBER	DESCRIPTION	REF.NO.
GEX	7516	Packing plate	1N 14
GEX	75 17	Saddle	1N 12
GEX	7517	fl Clama aloko	1N 13
GEX	7518 7510	Clamp plate	1N 12 1N 13
GEX GEX	7518 7518	ti ti	IN 13 IN 14
GEX	7519	Clamp plate	1N 12
GEX	7519	11 11	1N 13
GEX	7521	Bracket	IN 12
GEX	7521))	1N 13
GEX	7522	Distance piece	IN 12
GEX	7522 7522	r ii	IN 13 IN 14
GEX GEX	7522 7523	Mounting plate	IN 14 IN 12
GEX	7523	nouncing place	1N 13
GEX	7523	ii II	in 14
GEX	7524	Clamp	1N 12
GFB	110	Fan belt	1C 09
GFB	124	Fan belt	1E 10
GFB GFE	189	Fan belt Element for filter	1D 12 1D 15
GFE	111 130	Oil filter element	1D 15 1C 11
GFE	144	Oil filter element	וֹכ וֹז
GFG	103	Axle flange gasket	1H 06
GFG	106	Axle flange gasket	1H 07
GFG	107	Axle flange gasket	1H 03
GFG	108	Joint washer	1H 05
GFS	435	Fuse	2E 02
GFU GFU	103 116	Flasher unit Flasher unit	2D 06 2D 05
GGB	101	Brushes set	20 03 20 13
GGB	102	Dynamo brushes	2C 10
GGC	102	Tube hylomar 4oz	1H 08
GGE	804	Horn	2D 13
GHB	130	Bearing	1F 07
GHB	159	Bearing	2K 08
GHB GHB	162 163	Hub bearing inner Hub bearing outer	1H 06 1H 06
GHC	406	Clip	11. 30 1L 17
GHC	507	Hose clip	2L 14
GHC	811	Clip top and bottom radiator hoses	10 06
GHC	913	Clip	1E 10
GHC	1217	Clip	1D 12
GHF	101	Bolt	1I 06 1J 09
GHF GHF	101 101	 II	1J 14
GHF	101	n	1N 12
GHF	101	(1	in 13
GHF	101	и	1N 14
GHF	101	# 	1N 15
GHF	101	#1 *I	2G C2
GHF GHF	101	n O	2H 03 2H 08
GHF	101 101	ù	2L 12
GHF	101	tt	ŽL 17

PART	NUMBER	DESCRIPTION		REF.NO.
GHF	103	Set screw		1C 04
GHF	103	a n		1C 08
GHF	103	(1 11		1C 09
GHF	103	H B		1E 05
GHF	103	11 11		1E 09
GHF	103	# 11		1E 10
GHF	103	# #		1F 08
GHF	103	11 11		1F 10
GHF	103	11 11		1N 03
GHF	103	н и		1N 09 1N 12
GHF	103	0 0		1N 12
GHF GHF	103 103	u p		1N 14
GHF	103	11 11		2F 15
GHF	103	11 #		2G 05
GHF	103	o n	•	21 08
GHF	103	#1 ti		21 09
GHF	104	Bolt		1D 17
GHF	104	11		1J 09
GHF	104	n		1N 14
GHF	104	11		10 04
GHF	104	"		2D 13
GHF	105	Screw		10 14
GHF	105	t) 		1D 18
GHF	105	ii ti		1E 15 1L 14
GHF	105	14		IN 03
GHF	105	H		2F 02
GHF	105 105	и		2H 04
GHF GHF	105	ti		2H 05
GHF	105	ų		2H 10
GHF		Bolt		1F 04
GHF		Set bolt		10 08
GHF	120	11 11		10 11
GHF	120	ii (1		1D 10
GHF	120	11 11		1E 09
GHF	120	a it		1E 12
GHr	126	11 11		1F 10
GHF	120	4 11		11 05
GHF		81 11 82 86		1K 02
GHF		11 H		1K 04 1K 05
GHF	120	11 11		1K 05
GHF GHF		и и		1L 18
GHF		u n		1M 12
GHF				in 11
GHF		H 11		10 04
GHF		0 H		2E 03
GHF		11 &		2E 05
GHF		11 44		2E 08
GHF		14 11		2F G2
GHF		и		2F 03
				84.00
GHF		# II		2G 05
GHF	120	. " "	20. 05	21 10

P ART	NUMBER	DESCRIPTION		REF.NO.
GHF	120	Set bolt		2L 11
GHF	120	u ti		2L 14
GHF	161	Set bolt		10 09
GHF	161	11 (1		1E 10
GHF	200	Nut		10 09
GHF	200	II		10 12
GHF	200	H		10 10
GHF	200	#		10 11
GHF	200	#		1D 12
GHF	200	1) 1)		1E 10
GHF	200	u		1F 02
GHF	200	#		1F 05
GHF	200	0		11 05
GHF GHF	200 200	41		11 06
GHF	200	ıı .		1J 06
GHF	200	u		1J 10 1J 14
GHF	200	Ji		1K 02
GHF	200	II .		1K 04
GHF	200	11		1K 06
GHF	200	н ,		îL 11
GHF	200	H		1L 12
GHF	200	н		1L 13
GHF	200	II		1L 16
GHF	200	11		1M 09
GHF	200	H		1M 10
GHF	200			1M 12
GHF	200			1N 02
GHF	20 0	15 11		IN 03
GHF	200	11		1N 04
GHF	200	11		30 AF
GHF GHF	200 200	n '		1N 07
GHF	200	**		80 NF 90 NF
GHF	200	u		IN 10
GHF	200	11		וו או
GHF	200	11		1N 12
GHF	200	ti		in 13
GHF	200	si .		1N 14
GHF	200	u		1N 15
GHF	200	II		10 03
GHF	200	a		10 04
GHF	200	41		2D 13
GHF	200			2D 14
GHF	200	11		2E 03
GHF	200	u u		2E 04
GHF GHF	200 200			2E 06
GHF	200	41		2E 07
GHF	200	ti		2F 02 2F 03
GHF	200	11		2F 03 2F 04
GHF	200	4		2F 05
GHF	200	u		2F 08
GHF	200	ti		2F 09
			20.05	2. 00

PART	NUMBER	DESCRIPTION	REF.NO.
GHF	200	Nut	2F 10
GHF	200	11	2F 11
GHF	200	N N	2F 13
GHF	200	"	2F 14
GHF GHF	200 200	ıı	2F 16 2G 02
GHF	200	11	2G 02 2G 03
GHF	200	41	2G 04
GHF	200	Ħ	2G 06
GHF	200	11	2G 07
GHF	200		2G 08
GHF	200	11 11	2G 09
GHF GHF	200 200	"	2G 10 2G 11
GHF	200	u	2G 11 2H 02
GHF	200	**	2H 03
GHF	200	II .	2H 07
GHF	200	ч	2H 08
GHF	200		21 06
GHF	200	# #	21 08
GHF	200	 	21 09
GHF GHF	200 200	n	2I 11 2I 12
GHF	200	ti	21 14
GHF	200	u	21 15
GHF	200		2L 09
GHF	200	и	2L 11
GHF	200		2L 12
CHE	200 200	## ##	2L 14 2L 17
GHF GHF	200 201		2L 17 1C 05
GHF	202	"	10 12
GHF	207	11,	2C 05
GHF	214	Nut 10 mm	1C 14
CHF	221	Nyloc nut 1/4in UNF	IN 12
GHF	222	Nyloc nut 5/16 in UN	F 16 13
GHF	223	Nyloc nut 3/8in UNF	1L 18 1H 14
GHF GHF	224 224	Self lock nut	11 07
GHF	224	t1 41 M	1J 06
GHF	232	S.L. nut m8	1H 15
GHF	233	Self lock nut	1C 14
GHF	233	13 13 M Si N M	1H 15
GHF	233		2L 09
GHF GHF	234 242	S.L. nut 12mm Nut	1H 15 1F 06
GHF	242	11	11 06
GHF	242	u	1J 09
GHF	242	N	1J 14
GHF	242	#I	1L 08
GHF	242	II	1L 09
GHF GHF	242 242	0	1L 12 1N 03
GHF	242	II	1N 09
ur ii	-76		

PART	NUMBER	DESCRIPTION	REF.NO.
GHF	242	Nut	2C 10
GHF	242		20 11
GHF	242	ti .	2C 14
GHF	242	u	2F 06
GHF	242	tt	2H 05
GHF	242	II .	2H 10
		Philidas nut 3/8in UNF	11 06
GHF	243		
GHF	273	Nut	1H 07
GHF	273		2L 06
GHF	300	Plain washer	1L 11
GHF	301	Plain washer	1C 13
GHF	301		1L 09
GHF	302	Plain washer	21 06
GHF	321	Shakeproof washer	1C 11
GHF	322	Shakeproof washer	1D 09
GHF	323	Shakeproof washer	1G 12
GHF	331	Spring washer	1C 03
GHF	332	Spring washer	10 11
GHF	333	Spring washer	10 12
GHF	342	Fibre washer	11 07
GHF	400	Drive screw	2F 12
GHF	400	11 81	2F 15
GHF	400	0 0	2G .03
GHF	400	R B	2G 09
GHF	400	II II	21 13
GHF	421	Drive screw	2 E 02
GHF	421	A D	2E 04
GHF	421	H II	2E 07
GHF	421	11 #	2G 03
GHF	421	11 6	29 06
GHF	421	u u	26 69
GHF	421	и и	2G 11
GHF	421	H tt	2H 03
GHF	421	4 a	2H 09
GHF	421	a n	21 02
GHF	421	0 0	21 03
GHF	421	11 11	21 04
GHF	421	11	21 05
GHF	421	11 11	21 06
GHF	421	11 B	21 07
GHF	421	ii B	21 10
GHF	421	II W	21 13
GHF	423	Drive screw	2D 06
GHF	423	K N	2E 02
GHF	423	83 88	2E 07
GHF	423	11 11	2F 03
GHF	423	H B .	2F 10
GHF	423	11 41	2G 11
GHF	423	11 11	2H 10
GHF	424	Drive screw	2h 16 2h 06
GHF	713	Spire nut	IN 15
GHF	713	Spire nuc	2I 12
GHF	1083	Plastic rivet	21 07
GHS	202	Oil seal	1H 05
una	202	A11 2601	111 05

PART	NUMBER	DESCRIPTION	REF.NO.
GHS	202	Oil seal	1H 06
GHS	202	ti ii	1H 13
GHS	202	II II	2L 04
GHS	202	U µ	2L 05
GHS	1002	Oil seal	1H 07
GH\$	1003	H 4i	1H 05
GHS	1007	0 ring	1H 07
GHT	127	Distributor lead set	2C 06
GHT	130	Distributor lead set	2C 03
GHT GLB	173 207	Distributor lead set	2C 03
GLB	380	8ulb Bulb	2D 02 2D 02
GLB	382	Bulb	2D 06
GLB	410	Bulb	2D 02
GLB	411	Bulb	2D 02
GLB	414	Bulb	2D 02
GLB	415	Bulb for headlamp	2D 02
GLB	643	Bulb	2D 06
GLB	987	Bulb	2D 10
GLB	989	Bulb	2D 02
GLR GLU	303 104	Pedal pad	1N 05
GLU	133	Light unit sealed beam Light unit sealed beam	2D 03 2D 03
GLU	513	Light unit bulb type	20 02
GLU	517	Light unit	2D 02
GMC	309	Brake master cylinder	1J 13
GMC	310	Brake master cylinder	13 09
GMC	311	Brake master cylinder	1J 09
GMC	312	Brake master cylinder	1J 0 9
GMC	314	Brake master cylinder	1J 09
GPS	102	Oil pressure switch	10 11
GRA GRA	101 102	Rotor arm	2C 02
GRA	123	Rotor arm Rotor arm	2C 05 2C 02
GRC	118	Radiator cap	10 02
GRH	366	Hose for radiator top	10 05
GRH	369	Hose for radiator bottom	10 06
GRH	371	Hose for radiator bottom	10 05
GRH	439	Hose for radiator top	10 06
GRH	585	Hose radiator top	10 05
GRH	586	Hose radiator bottom	10 05
GSA GSA	195 196	Front shock absorber Front shock abosrber	1H 14 1H 14
GSA	199	Rear shock absorber	17 14 1H 14
GSA	200	Rear shock absorber	1H 14
GSA	411	Shock absorber	2L 09
GSA	412	Shock absorber	2L 09
GSB	101	Brush set	2C 08
GSB	103	Starter brushes	2C 04
GSB	112	Brush set	2C 04
GSC GSC	111 113	Condenser	2C 02
GSD	133	Condenser	2C 02 2D 10
GSD	138	Speedo cable complete Speedometer cable complete	2D 10 2D 12
GSU	102	Needle valve and seat	1M 02
200	. • •	20.07	02

PART	NUMBER	DESCRIPTION	REF.NC.
GSU	320	Oil cap	1M 02
GSU	524	Carb gasket kit	2J 02
GSU	551	Joint washer	1M 02
GTG	109	0 ring	10 09
GTG	110	Jointwasher	1E 10
GTG	118	Joint washer	1D 12
GTG	119	Joint washer	10 09
GTR	111	Water temp transm	10 11
GTS	109	Thermostat	1E 10
GTS	114	Thermostat	10 12
GTU	405	Touch up paint pastel green	2J 06
GTU GTU	406 407	Touch up paint bronze green	2J 06 2J 06
GTU	407	Touch up paint marine blue Touch up paint limestone	2J 06
GTU	409	Touch up paint grey	2J 06
GUJ	116	Universal joint	1H 07
GUJ	117	Universal joint	1H 07
GUJ	118	Universal joint	1H 03
GWB	127	Wiper blade	2D 13
GWB	128	Wiper blade	2D 13
GWB	195	Wiper blade	20 15
GWC	301	Wheel cylinder	1J 04
GWC	302	Wheel cylinder	1J 04
GWC	303	Wheel cylinder	10 03
GWC	304	Wheel cylinder	1J 03
GWC GWC	305 306	Wheel cylinder	1J 02
GWC	306 1307	Wheel cylinder	1J 02 1J 02
GWC	1307	Wheel cylinder Wheel cylinder	1J 02
GWP	305	Pump assy	10 12
GWP	312	Water pump assy	10 09
HB	913	Bolt	2H 04
JS	370	Bracket cover kit	2C 09
JS	499	Diaphragm	1M 05
JS	657	Centre seal upper	וו או
JS	660	Element & seal	1M 11
MRC	1023	Bracket	20 13
MRC	1201	Strap	21 10
MRC MRC	12 10 2 178	U-bolt	2H 03
MRC	2237	Nut and retainer Corner bracket	2F 13 2G 03
MRC	2238	Corner bracket	2G 03
MRC	2244	Cover panel	2G 03
MRC	2245	Cover panel	2G 02
MRC	2381	Seal retainer	2F 16
MRC	23 82	Seal retainer	2F 16
MRC	2440	Bonnet	2 F 03
MRC	2479	Bonnet	2F 03
MRC	2595	Wing top	2F 03
MRC	3067	Mudshield	2F 04
MRC	3068	Mudshield	2F 04
MRC MRC	3069 3070	Mudshield Mudshield	2F 04
MRC	3141	Mudshield Frame	2F 04 2F 16
MRC	4350	Safety harness	21 09
, = 10		20 07	 03

PART NUMBER	DESCRIPTION		REF.NO.
MRC 4753	Check bracket		2F 15
MRC 5740	Sealing rubber		2F 12
MRC 6483	Fixed window		2F 12
MRC 6484	Sliding window		2F 12
MRC 6485	Fixed window		2F 15
MRC 6490	Glass		2G 09
MRC 6493	Glass		2G 09
MRC 6499	Side light		2G 11
MRC 6526	Windscreen glass		2F 07
MRC 6950	Frame		2F 16
N 5			2C 06
N 8	Sparking plug		2C 03
N 12Y	Sparking plug		2C 03
NC 112041	Sparking plug		11 07
NC 112041	Castle nut		11 07 11 08
ND 604041	11 11		1D 06
NH 607041			2F 12
NH 608041	Nut		2F 06
NH 608061	14		
	41		1E 11
NH 608061	11		2L 09
NR 605090	11		1N 11
NR 605090			1N 14
NRC 62	Drain plug		1L 18
NRC 76	Bracket		1L 18
NRC 236	Rear crossmember		2F 02
NRC 1269	Steering relay		11 07
NRC 1655	Clutch pipe		1F 10
NRC 2029	Mounting washer		10 14
NRC 2052	Suspension rubber		1E 15
NRC 2053	Suspension rubber		1C 14
NRC 2054	Suspension rubber	r	1C 14
NRC 2130	Jump hose		1F 10
NRC 2340	Rear step		2H 05
NRC 2938	Engine bracket		1C 02
NRC 3215	Jack handle		2J 07
NRC 3249	Jack rod		2J 07
NRC 3448	Protection plate		2F 02
NRC 3449	Protection plate	LH	2F 02
NRC 3812	Crossmember		2F 02
NRC 4346	Steering wheel		11 04
NRC 4346			2L 11
NRC 4354	Chassis frame		2F 02
NRC 4355	Chassis frame		2F 02
NRC 4356	Chassis frame		2F 02
NRC 4609	Drag link		11 08
NRC 4642	Chassis frame		2 F 02
NRC 5347	Pipe		1J 03
NRC 5829	Fuel tank		1L 18
NRC 5830	Fuel tank		1L 18
NRC 5830			1M 10
NRC 6474	Steering damper		2L 13
NT 605061	Locknut		1C 06
NT 605061	u		1D 06
NT 605061	и н		1D 08
NT 605061	" ()		1D 09
NT 605061	u 0		1D 17
NT 605061	"	20 08	1E 07
NT 605061		20 00	1G 05

PART NUMBER	DESCRIPTION	REF.NO.
NT 605061	-Locknut	1G 06
NT 605061	0	1J 03
NT 605061	## ## ## ## ## ## ## ## ## ## ## ## ##	1J 04
NT 605061	** !!	1J 09
NT 605061 NT 605061	 H	1L 09 1L 11
NT 605061	U	1L 11 2I 06
NT 605061	II	2K 07
NT 606041	Special nut	1F 08
NT 606041	0 11	1F 10
NT 606041	(())	1K 02
NT 606041	# # # # # # # # # # # # # # # # # # #	1K 04
NT 606041	11 16 12 1 7	1K 06
NT 606041 NT 606041	,,	2H 09
NT 612061	Special nut	2L 14 11 03
NT 612061	" "	2L 10
PFS 510	Captive nut	21 05
PRC 1716	Resistor	2E 02
PRC 1716	41	2E 05
PRC 2068	Lead	2E 03
PS 105281	Split pin	11 07
PS 105281 PS 608101		11 08
PS 608101	Split pin	1G 07 1G 09
PS 608101	u H	1H 05
PS 608101	ti R	1H 07
PS 608101	11 H	1H 08
PS 608101	11 11	2K 09
PS 608101	11 11	2K 12
PZJ 602	Screw	2D 02
RTC 162 RTC 165	Tab washer fixing throttle lever	1M 05
RTC 166	O ring for carburetter Lockwasher fixing throttle lever	1M 06 1L 06
RTC 202	Flexible drive cable for wiper	2D 14
RTC 222	Cable cleat	20 05
RTC 223	Strap	1M 12
RTC 253	Filler cap	1J 13
RTC 254	Drive for starter	20 09
RTC 324	Bearing	11 03
RTC 376 RTC 428	Wiper arm	2D 13
RTC 430	Dynamo Switch for panel lights	2C 12 2D 11
RTC 432	Dip switch	11 04
RTC 434	Voltage regulator box	2E 02
RTC 445	Headlamp	2D 02
RTC 465	Drive screw 7/8 in	2D 02
RTC 466	Spring set for brushes	20 10
RTC 600	Split pin	2H 04
RTC 604 RTC 605	Plain washer fixing support bracket Plain washer	1I 05
RTC 605	Nipple for suction pipe	1I 07 1C 12
RTC 60B	Nut 2BA	1L 09
RTC 609	Plain washer fixing door check rod	2F 15
-		

PART N	IUMBER	DESCRIPTION	REF.NO.
RTC	610	Plain washer]J 10
RTC	611	Plain washer for brake pedal pivot	1J 13 2G 07
RTC RTC	612 613	Plain washer Plain washer	2G 05
RTC	614	Split pin	2F 08
	615	Plain washer	2L 17
	617	Plain washer	2D 14
RTC	618	Plain washer	2D 13
RTC	621	Washer fixing squab	21 06
RTC	622	Plain washer	2G 04 1I 03
RTC	623	Lockwasher fixing drop arm	2C 11
RTC RTC	626 631	Shim washer fixing dynamo Plain pin	1H 09
RTC	636	Plug for rocker shaft	1D 09
RTC	639	Box spanner	2J 07
RTC	€40	Spring for plun-er rod	1K 07
RTC	643	Shim kit	2C 08
RTC	772	Cylinder head assy	1E 11 1H 12
	773	Bolt 12m	20 15
	819 822	Wiper arm Wiper arm	2D 15
	840	Plain washer	10 05
	844	Cover	1H 12
	845	Flitch plate	1H 12
	1123	Pinion and barrel assy	2C 08
	1215	Gearbox assy	1G 03
	1392	Crown wheel and pinion	1H 12 1G 04
	1412 1421	Bearing for gearbox Rear door complete assy	2H 02
RTC	1443	Gearbox assy	1G 03
RTC	1720	Crankshaft bearing set std	1D 04
RTC	1443 1720 172010 172020	Bearins set	1D 04
RTC	172020	Bearing set	1D 04
RTC	1721	Conn rod bearing set std	1D 05 1D 05
RTC	172110	Bearing set	1D 05
RTC RTC	172120 1729	Bearins set Main bearing set standard	10 03
RTC	172910	Bearing set	10 03
RTC	172920	Bearing set	1C 03
RTC	1730	Conn rod bearing set standard	1C 03
RTC	173010	Bearing set	1C 03
RTC	173020	Bearing set	10 03
RTC RTC	1813N	Engine assy Retaining ring kit	1E 02 2C 08
RTC	18 69 1920	Dowel m8	1H 15
RTC	1921	Dowel m10	1H 15
RTC	1954	Washer shield for primary pinion	1G 05
RTC	1956	Detent spring	1G 05
RTC	1957	Ring	1G 04 1G 11
RTC RTC	1958	Selector fork 3rd and 4th speed	16 11 1K 07
RTC	1961 1962	Pin Thrust washer	1G 04
RTC	1963	Locker	10 05
RTC	1964	Screw	1D 09
RTC	1975	Seal	10 12
		60.00	

PART NUMBER	DESCRIPTION	REF.NO.
RTC 1979	Peg for distance sleeve	1G 04
RTC 1981	Lay shaft	1G 04
RTC 1982	Locker	1G 05
RTC 1983	Nut (1/2in BSF)	1G 05
RTC 1984 RTC 1997N	Seegar circlip 3.1/2in external Engine assy	1G 04
RTC 2038	Carb conversion kit	1E 02 1L 02
RTC 2051	Wing top	2F 03
RTC 2052	Wing top	2F 03
RTC 2352N	Engine assembly	10 02
RTC 2379N	Engine assembly	1C 02
RTC 2388N	Engine assy	1D 03
RTC 2407N	Engine assy	1D 03
RTC 2410 RTC 241020	Piston ring set	1C 03
RTC 241020 RTC 241040	Piston ring set Piston ring set	1C 03 1C 03
RTC 2411	Piston ring set	1D 05
RTC 241120	Piston ring set	1D 05
RTC 241140	Piston ring set	1D 05
RTC 2415	Piston ring set	1E 04
RTC 241520	Piston ring set	1E 04
RTC 241540	Piston ring set	1E 04
RTC 2547 RTC 2554	Drag link assy	11 08
RTC 2646	Oil pump assy Control mechanism	1E 05 2F 07
RTC 2664	Short engine	1E 02
SH 504041	Set bolt 1/4in UNC X 1/2in	1H 10
SH 505051	Bolt	1K 04
SH 505051	(1	ון או
SH 505061	Set bolt 5/16in UNC X 3/4in	1D 13
SH 505071 SH 506061	Bolt 5/6in UNC X 7/8in Set bolt 3/8in UNC X 3/4in	2C 11
SH 506071	Set bolt 3/8in UNC X 7/8in	1D 13 1I 06
SH 507101	Bolt 7/6in UNC X 1.1/4in	10 15
SH 604101	Screw	1N 12
SH 604101	Screw	1N 13
SH 604121	Screw	2H 03
SH 604121	Screw	2H 08
SH 605041 SH 605051	Special bolt 5/6 in UNF X 1/2 in	1J 04
SH 605051	Screw	11 05 1J 13
SH 605051	u .	1K 02
SH 605051	H	2C 10
SH 605051	91	2C 14
SH 605051	ii	2F 08
SH 605051	H H	2G 09
SH 605051	 4	2I 10
SH 605051 SH 605051	n .	2L 15 2L 16
SH 605121	Screw	2I 10
SH 605201	Bolt 5/16 in UNF X 2 1/2 in	IN 07
SH 606071	Set bolt	1C 05
SH 606071	și ti	10 07
SH 606071	# N	1E 06
SH 606071	(I II	1K 07
	20.09	

PART NUMBER	DESCRIPTION	REF.NO.
SH 606071	Set bolt	1K 08
SH 606071	II II	1K 09
SH 606071	(I I	1K 10
SH 606071	W II	2F 08
SH 606071	11 11	2H 04
SH 606071	н п	2H 09
SH 606071	# #	2L 13
SH 606141	Bolt 3/8 in UNF X 1 3/4 in	1K 10
SH 607081	Bolt 7/61n UNF X lin	1H 10
SH 607101	Screw	10 11
SH 607101	II	1G 06
SH 608071	Set bolt 1/2in UNF X 7/8in	1D 03
SH 608081	Set bolt 1/2in UNF X 1in	10 02
SH 608091	Screw	10 02
SH 608091 UFS 1254R		1E 02 2F 10
UL 2806	Screw 1/4 in UNF X 1/2 in Bolt 5/16 in X 3/4 in	2F 03
WB 106041	Plain washer	11 08
WB 106041	11 11	1N 02
WB 106041	11 11	1N 03
WB 106041	11 (1	1N 05
WB 106041	11 41	1N 07
WB 106041	11 11	1N 09
WB 106041	It II	1N 10
WB 106041	u u	1N 15
WB 106041	11 11	2C 03
WB 106041	11 11	2C 05
WB 108051	Plain washer	17 09
WB 108051	и и	13 14
WB 108051	H H	2C 11
WB 110061	Plain washer	1D 13
WB 110061	11 4	1F 04
WB 110061 WB 110061	N II	1G 02 1J 06
WB 110061	II H	1K 07
WB 110061	11 11	1K 08
WB 110061	H H	1K 09
WB 110061	H W	1K 10
WB 110061	H H	1L 14
WB 110061	H H	1N 03
WB 110061	H IP	IN 15
WB 110061	II N	2H 04
WB 110061	0 0	2H 05
WB 110061	4 4 4	2H 06
WB 110061	n n	2H 09
WB 110061	11 11	2H 10
WB 110061 WB 110061	D #4	2I 06 2K 06
WB 116101	Plain washer	1K 07
WB 116101	# 11	1K 08
WB 116101	1) H	1K 09
WB 116101	11 11	1K 10
WB 116101	tt tt	1L 18
WC 110061	Plain washer	1C 14

PART NUMBER	DESCRIPTION	RE	EF.NO.
WC 112081	Plain washer	1	1I 07
WC 112081	31 11		1I 08
WC 112081	II II		2F 06
WC 702101 WC 702101	Plain washer		1K 03 1L 14
WC 702101	11 11		IN 09
WC 702101	и н		1N 15
WC 702101	11 16		10 03
WC 702101	st 11		2F 05
WC 702101	· · ·		2F 07 2 F 09
WC 702101 WC 702101	11 H		2F 11
WC 702101	0 4		2G 02
WC 702101	11 44		2E 05
WC 702101	u H		2G 07
WC 702101	H 11		2H 02
WC 702101			2H 07 2I 14
WC 702101 WC 702101	и н		2L 15
WC 702101	11 11		2L 17
WCX 600	Suppressor and cover	:	2 C 03
WD 110061	Plain washer		1C 14
WD 110061	0 1 1		1D 18
WD 110061 WD 110061	a b		1E 15 1M 10
WD 110061	tt ti		2H 04
WE 702101	Shakeproof washer		1E 12
WE 702101	u u		1K 03
WE 702101	41 41		2G 11
WF 702101	Shakeproof washer		11 04
WL 110001 WL 600050	Spring washer Spring washer		1C 14
WM 600071	Spring washer		10 11
WM 600081	Spring washer		10 02
WM 702001	Spring washer		10 11
WM 704001	Spring washer		11 04
WP 185	Plain washer		11 05 1N 02
WP 8019 WS 600041	Plain washer Spring washer		2G 05
WS 600061	Spring washer		2H 04
WS 600061	" "	:	2H 05
WS 600061	H H		2H 06
WS 600061	II II		2H 10
WS 600091 WZX 1712	Spring washer Diaphragm		2G 08 1M 08
1H 9077	Switch		2D 11
7H 3006	Clutch spring		1F 03
7H 3006	11		1F 05
7H 5007	Main spring		2C 04
7H 5007 7H 5483	licht unit		2C 06 2D 02
7H 5483 13H 1515	Light unit Banjo bolt		1L 14
13H 3735	Stoplight switch		ij 08
13H 5952	Switch		2E 04

PART NUMBER	DESCRIPTION	REF.NO.
17H 2475 17H 2475	Key blank	2D 10 2D 11
18G 8246	Overhaul kit for fuel pump	1L 08
18G 8951	Overhaul kit br servo	1J 14
18G 8953	Non return valve	13 13
24G 1345	Barrel lock	2D 10
27H 1330	Washer for bowl	1L 09
27H 3793 27H 5932	Brush set dynamo	2C 12 2C 08
27H 7946	Spring set Blue grease	2J 02
27H 8207	Headlamp	2D 08
37H 575	Seal for element small	IL 11
37H 770	Seal, centre bolt	1L 09
37H 770	Seal, centre bolt	1L 11
37H 770 37H 770	Seal, centre bolt	1L 12 1L 14
37H 1581	Seal, centre bolt Element, fuel filter	1L 09
37H 1581	II II II	1L 11
37H 1581	и — и	1L 12
37H 2736	Shaft and gear	2D 15
37H 3694	Ferrule	2D 14
37H 3694		2D 15 2D 06
37H 5452 37H 6109	Bulb holder Lens	2D 08
37H 6134	Adjuster unit assy	13 07
37H 6836	Sundry parts kit	2C 10
37H 6836	н о п	2C 12
37H 6836	11 11 11 11	20 13
37H 6836	11 11 11 40 11 40	2C 14
37H 6836 37H 6928		2C 15 2D 08
37H 7618	Lens Sealing ring	2C 09
37H 7847	Wiper arm	2D 14
37H 7848	Wiper arm	2D 14
37H 8531	Bracket	20 09
37H 8863	Hose	3K 04
37H 88 63 47H 5394	Oiler	1K 06 2C 14
47H 5531	Special nut	2D 02
57H 5398	Cover	2E 02
7H 3082	Clutch spring	1F C3
SG 2039	Repair kit for fule pump	1L 08
8G 8600	Overhaul kit cyl sl cyl	1F 10 1J 12
8G 8837 8G 8844	Overhaul kit master cyl Fuel pump repair kit	10 12
8G 8845	Fuel pump overhaul kit	il ii
90 212104	Stud for bottom cover	1G 08
90 213172	Sealing ring for plug cover	2C 03
90 213636	Shaft for selector fork	1G 11
90 213662	Joint washer for clutch housing	1F 07 1F 07
90 213663 90 214684	Joint washer for clutch housing Spring ring fixing cover	11 07
90 214787	Oil seal	1F 07
90 215593	Bolt fixing cover plate	1F 07
90 215594	Set botl 1/4 whit X 3/4 long	1G 08
	20 11	

PART NUMBER	DESCRIPTION	REF.NO.
90 215647	Set bolt 5/16 whit X 13/16 long	1G 10
90 215758	Set bolt 1/4 whit X 1/2 long	1G 08
90 215769	Bolt 1/4 whit X 7/16 in	1G 11
90 216909	Banjo for brake pipe	13 11
90 217279	Horn push	11 04
90 217355	Special nut fixing hub bearing	1H 07
90 217389	Reverse wheel	1G 04
90 217391	Selector fork reverse	1G 11
90 217398	Retaining collar for bearing	1H 03
90 217448	Bush for shaft guide	1G 08
90 217488	Thrust washer for gearbox	1G 07
90 217512	Bearing for gearbox	1G 07 1G 12
90 217521 90 217584	Bush for selector fork Selector fork	16 12 16 13
90 217636	Clip for reservoir tank	13 10
90 217787	Oil seal for clutch housing	1F 07
90 217843	Bush for housing	1G 08
90 217976	Stud for engine mounting	1G 08
90 217983	Housing for handbrake mounting	1K 09
90 217984	Spherical bearing handbrake mounting	1K 09
90 218402	Cross shaft for handbrake	1K 09
90 218408	Pin	1K 09
9 0 218410	Distance piece handbrake mounting	1K 09
90 302859	Sealing washer	2F 13
90 306199	Support tube bearing	21 12
90 306200	Support tube	21 12
90 306465	Rubber buffer for grille panel	10 04
90 500411	Lens for stop tail lamp	2D 02
90 500514	Bezel for side lamp	2D 02
90 500610	Spring valvr rocker	1D 09
90 502106 90 502209	Correction jet 185	1L 04 1E 05
90 502710	Spinule for idler gear Swivel pin and steering lever	1H 03
90 502713	Swivel pin and steering lever	1H 03
90 502714	Swivel pin and bracket	1H 04
90 503916	Joint washer top cover on carburetter	1L 04
90 508035	Stowage clip	2G 02
90 508152	Stud 3/8 in	1H 03
90 508153	Special stud for steering lever	1H 03
90 508339	Bracket for engine tie rod	10 17
9 0 5 08544	Bush fixing fuel tank	7L 18
90 508545	Eush fixing fuel tank	1L 18
90 508566	Bracket for brake pipe	1K 02
90 509556	Control rod pedal shaft top cross shaft	1N 02
90 509730	Connection hose	1L 15
90 509970 96 516730	Grommet for brake pedal bracket	12 08
90 510730 90 510912	Side cover and dil filler pipe Fan disc washer	1E 08
90 511833	Valve guide exhaust	2E 03 1D 03
90 511958	Joint washer thermostat housing	10 03
90 512205	Valve rocker inlet LH	10 06
90 512208	Valve rocker exhaust RH	10 06
90 512305	Fan disc washer fixing earth lead	1E 12
90 512322	Steering wheel	11 04

PART NUMBER	DESCRIPTION	REF.NO.
90 512413	Core plu- for cylinder head	1E 11
90 512646	Clip for suction pipe	10 12
90 512651 90 512701	Shakeproof washer fixing brake hose	1F 08 1G 07
90 513171	Bolt for flange Adaptor	1K 04
90 513220	Clip for cable	2J 04
90 513454	Washer for flange	1H 08
90 513591	Oil filter	1D 15
90 513940	Clip fixing brake pipe	1K 03
90 514146	Gasket for stop tail lamp	2D 02
90 514148	Bezel for sidelamp	2D 02
90 514149	Screw fixing bezel	2D 02
90 514150	Lens for sidelamp	2D 02
90 514152	Lens for stop tail lamp	2D 02
90 514451 90 515086	Front cover assembly	1E 08 1F 05
90 515090	Flywheel housing Fan blade	1E 10
90 515323	Piston chain adjuster	10 05
90 515552	Injector complete	11 10
90 515855	Bush for high gear wheel	2K 08
90 516028	Oil seal for front cover	1D 09
90 516914	Joint washer for filler cap	10 02
90 517026	Linning park for clutch plate	1F 06
90 517429	Roller for cam follower	1D 09
90 517567	Clamp for tail pipe	1N 13
90 517878	Locking plate fixing steering box	11 06
90 518100	Special bolt for conn rod	10 05
90 518145 90 518466	Filter for breather pipe	10 10 1E 11
90 518682	Stud for cylinder head Filter for fluid reservoir	15 10
90 518719	Rocker cover assembly	1E 12
90 519054	Bearing front for camshaft	1E 06
90 519055	Bearing centr and rear for camshaft	1E 06
90 519064	Dowel for rear amin oil seal	10 03
90 519206	Locating stop for jack	1H 03
90 519775	Ignition and lighting switch	20 10
90 519841	Fuel guage	2D 10
90 519857	Fan disc washer	2E 08
90 519865 90 519866	Feed lead for flasher switch	2D 06
9C 519874	Self cancelling switch Fuel gauge	2D 06 2D 10
90 519875	Gauge unit for fuel tank	1L 18
90 519897	Fan disc washer	2E 05
90 520940	Piston ring compression 010 0/S	1E 04
90 520941	Piston ring compression 020 0/S	1E 04
90 520942	Piston ring compression 030 0/S	1E 04
90 520943	Piston ring compression 040 0/S	1E 04
90 520978	Piston ring compression std	1E 04
90 545107 90 552 522	Headlamp	2D 03
90 552 522 90 552 791	Lever for accelerator	1N 05 2L 10
90 552971	Steering unit assy Fuel tank	1M 10
90 560577	Cable fuel pump feed	2E 08
90 560612	Guage unit for fuel tank	1M 10
_	•	

PART	NUMBER	DESCRIPTION	REF.NO.
90	562714	Shaft for accelerator pedal	1N G5
	564216	Extension piece for oil pump	10 06
	564217	Stud for oil strainer	10 06
	564334	Oil pump assy	1D 06
	564812	Pivot pin for brake pedal	1J 13
	564832	Gasket brake pedal and bracket	1J 13
	566617	Union fuel pipe connection	1L 12
	568489	Banjo bolt for fuel pipe	1L 13
	568525	Stop lever for distributor pump	1L 12
	568526	Swivel clamp for stop lever	1L 12
	569017	Crossmember no 4	2L 09
	569251	Control for engine speed control	1N 10
90	569611	Brake pedal and bushes	1J 13
90	569612	Gasket for mounting bracket	1J 13
90	571227	Spacer for clutch plate	1F 06
90	574103	Special set bolt	10 13
90	574104	Special set bolt	1D 13
	574655	Hose breather filter to manifold	1E 12
	574691	Plug for manifold	1E 14
	575015	Nut for terminal post	2E 04
	575150	Number plate lamp	2D 02
	575183	Engine harness	2E 05
	575201	Horn push and centre cover	11 04
	576693	Oil filler cap complete	1G 03
	577060	Knob for lever	1N 1C
	577064	Fuel filter	1K 11
	577065	Lever for control	1N 10
	577082	Clip outlet pipe to bottle	10 03
90	577143	Support plate	2 F 02
	577165	Brake pipe	1K C2
90	577193	Inner column. RH steering	11 02
90	577194	Inner column LH steering	11 02
90	577197	Inner column RH stg	2L 10
9 0	577198	Inner column LH stg	2L 10
	577264	Stiffener bracket for steering box	11 C6
	577434	Bush 1.5in 0/D	. 1H 15
	577473	Wheel nut 16 mm	1H 16
90	577611	Plug for servo unit	1J 13
	600400	Oil container	1L 08
90	601847	Spring for throttle stop	1L 06
90	601848	Volume control screw	1L 06
90	601849	Spring for control screw	1L 06
90	601890	Pin fixing relay lever	1L 07
90	601898	Ventilation screw for choke	1L 07
	605057	Bearing for dynamo	2C 12
90	605561	Sedimentor complete	1L 14
	605617	Bracket for starter	2C 09
	605812	Shakeproof washer for carburetter	1M 06
	605851	Retaining ring for carburetter damper	1M 05
	606023	Overhaul kit Br M cyl	13 12
	606500	Bulbholder	2D 04
90	606892	Brake servo conversion kit	1J 12
	607170	Cross shaft	1H 12
90	607193	Bolt fixing diff case	1H 12

PART NUMBER	DESCRIPTION	REF.NO.
90 607607	Contact breaker base plate	2C 02
90 607809	Pr pinion and constant gear	1G 05
90 608175	Armature	2C 04
90 608178	Sundry parts kit	2C 04
90 608241	Roller for fuel pump diaphragm	1M 08
90 608307	Gear and con rod for wiper motor	2D 14
90 608462	Long strg tube assy	11 08
90 608545	Locknut	1H 12
90 624083	Spring bottom plate	1H 15
90 624214	Lifting jack	2J 07
90 624436	Joint washer	11 07